

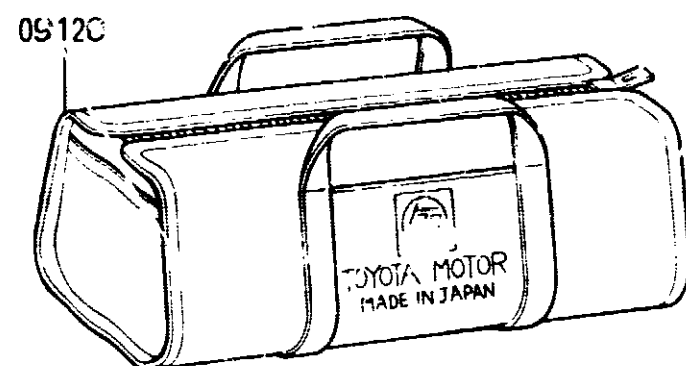
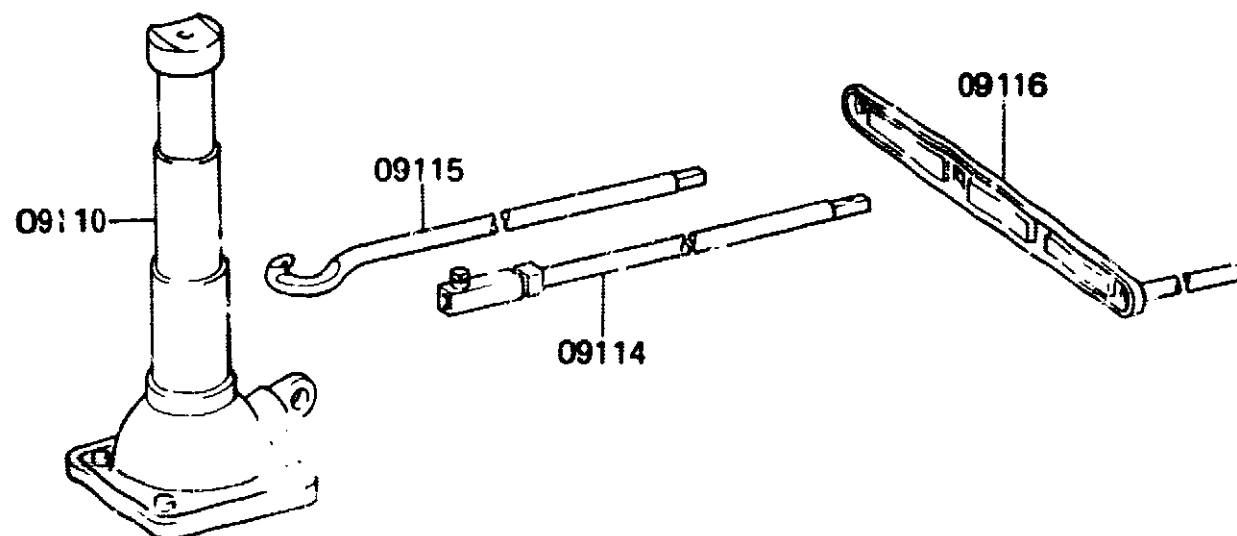
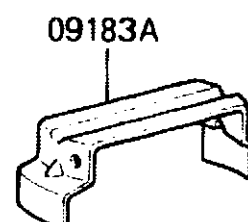
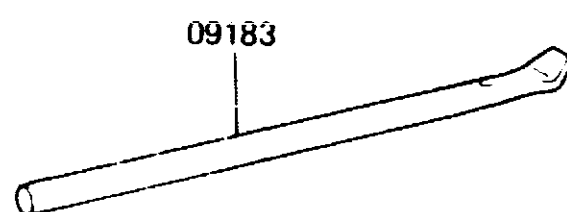


(8411-)

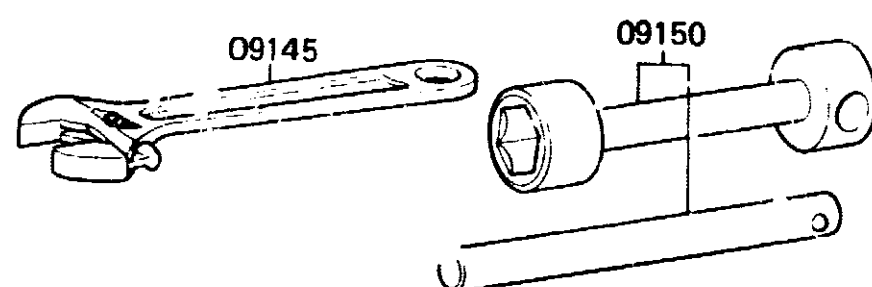

*W/ SUN ROOF

*09135A

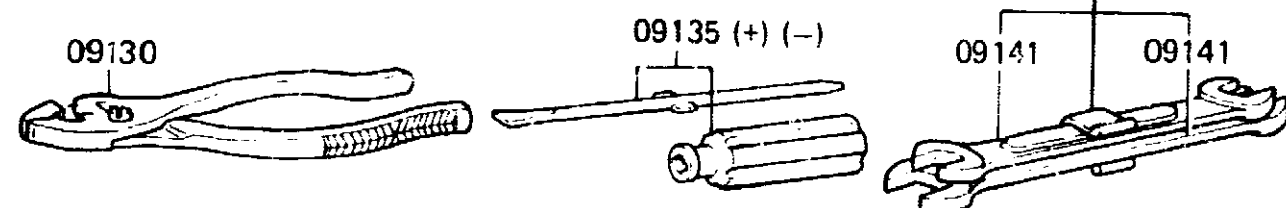


MT 0909

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	PART NUMBER	QTY	REV. REF. CODE	
					FROM	UP TO
FIG.	09-01 STANDARD TOOL					
8411-	+	+				
	09110	JACK ASSY.				
	+	+				
BJ70			09111-60050-	1	81	
8411-8510	+	+				
	09114	EXTENSION SUB-ASSY, JACK HANDLE				
	+	+				
BJ70			* 09114-60040-	2	81	100
			(09114-60050-			
8510-	+	+				
	09115	ROD SUB-ASSY, JACK HANDLE				
	+	+				
BJ70			09114-60050-	2	101	
8411-	+	+				
	09115	ROD SUB-ASSY, JACK HANDLE				
	+	+				
BJ70			09115-61030-	1	81	
8411-	+	+				
	09116	LEVER, JACK HANDLE				
	+	+				
BJ70			09116-35041-	1	81	
8411-8703	+	+				
	09120	BAG, TOOL				
	+	+				
BJ70			09120-60050-	1	81	
C 8703-	+	+				
	09130	PLIERS				
	+	+				
BJ70			99913-12000-	1	81	
C 8703-	+	+				
	09135	DRIVER, SCREW				
	+	+				
BJ70			99915-10700-	1	81	
8411-	+	+				
	09135A	BIT, SCREW DRIVER				
	+	+				
BJ70			09135-00012-	1	81	
8411-8608	+	+				
	09140	SPANNER SET				
	+	+				
BJ70			09140-27010-	1	81	140
C 8411-8703	+	+				
	09141	SPANNER				
	+	+				
BJ70			10X12	1	81	
C 8411-3703	+	+				
	09141	SPANNER				
	+	+				
BJ70			14X17	1	81	
C 8703-	+	+				
	09141	SPANNER				
	+	+				
BJ70			8X10	1		
C 8703-	+	+				
	09141	SPANNER				
	+	+				
BJ70			12X14	1		

(8411-)

GENUINE TOYOTA PARTS

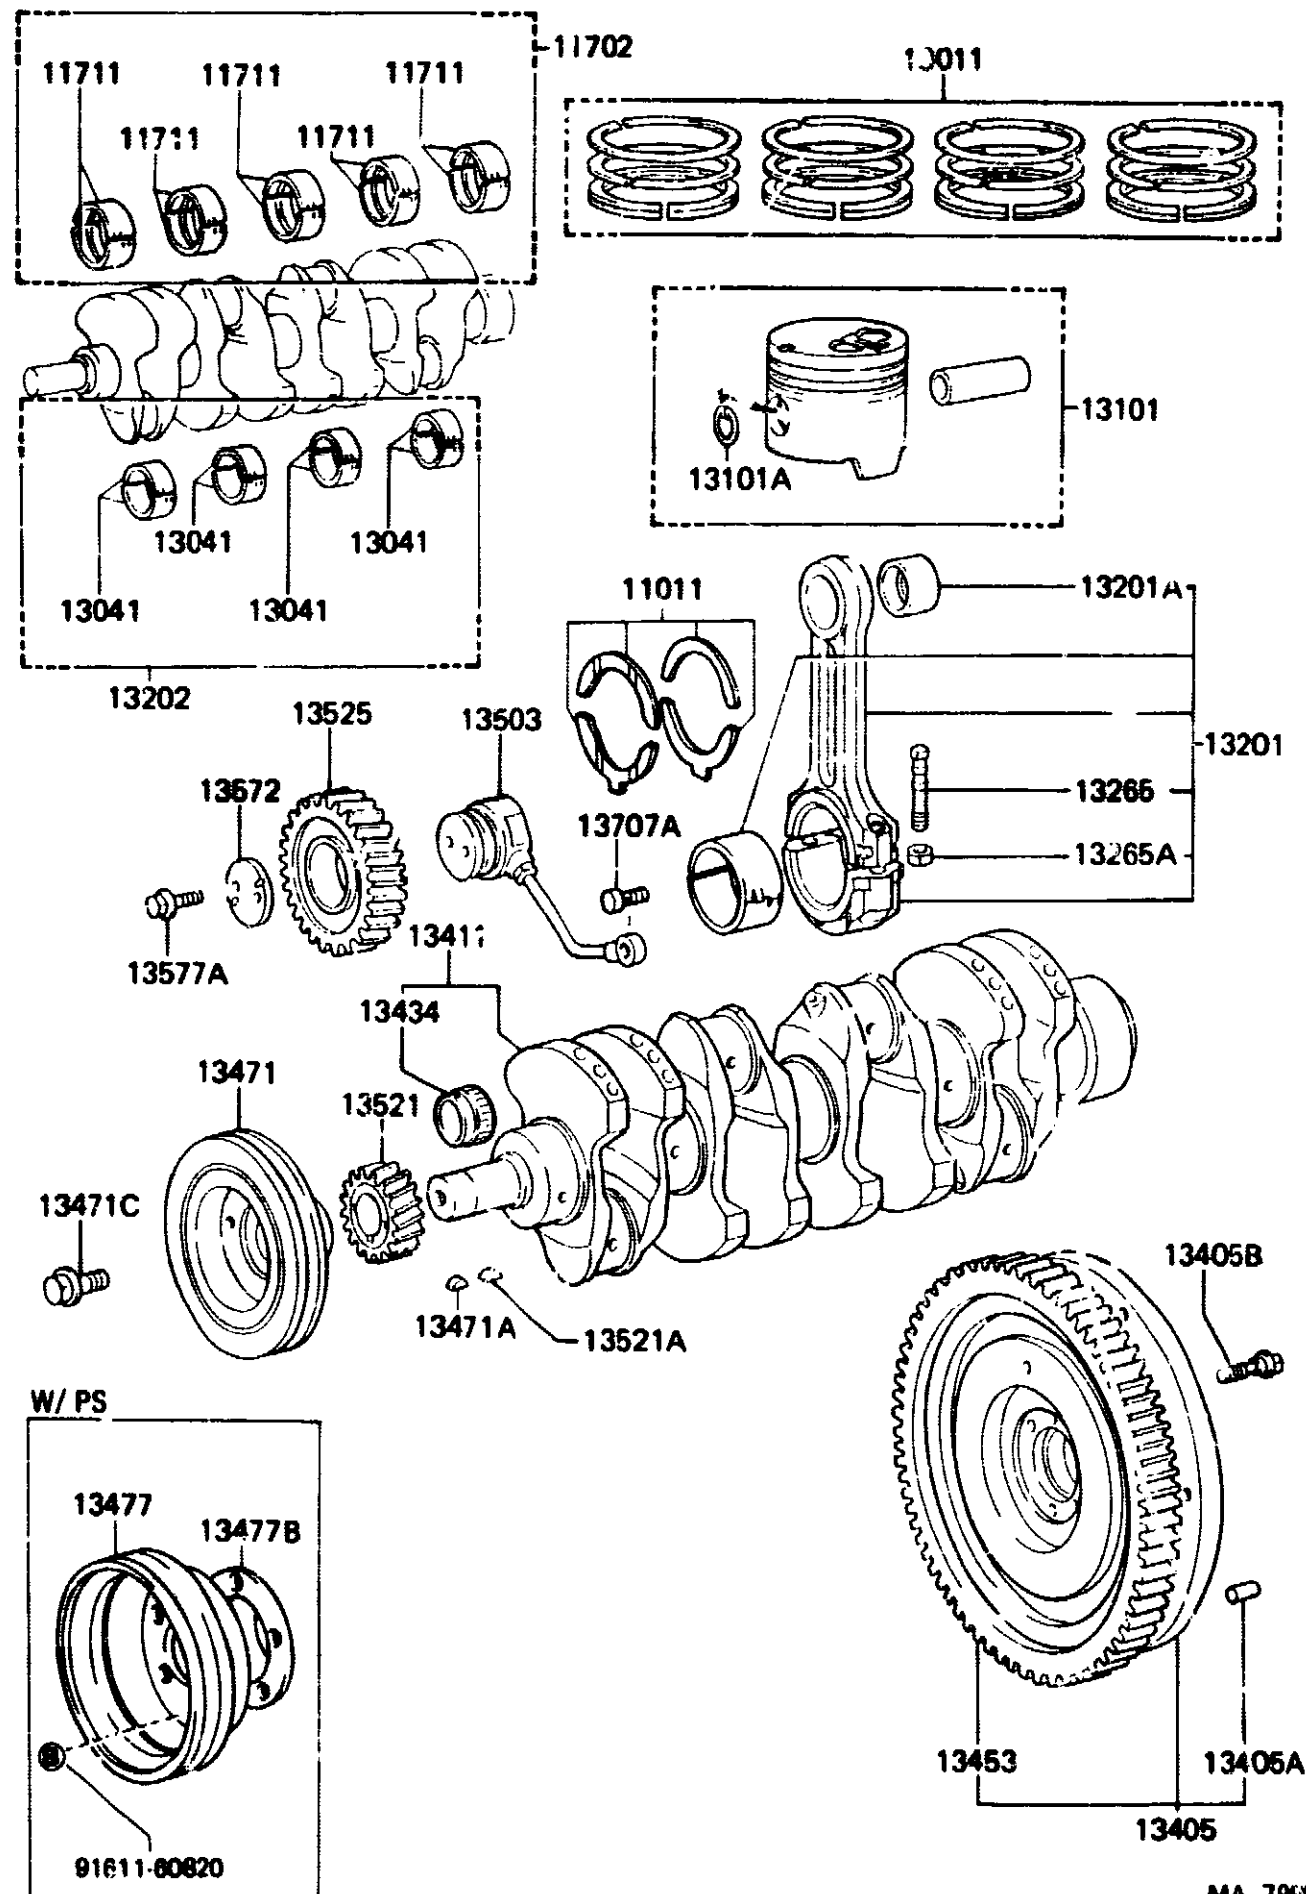


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	13-01 CRANKSHAFT & PISTON						
		WASHER SET, CRANKSHAFT THRUST					
8411-8506	3B..BJ70	STD		11011-56010- (11011-56020-	1	81	
8411-8506	3B..BJ70	O/S 0.125		11012-56010-	1	81	
8411-8506	3B..BJ70	O/S 0.25		11013-56010-	1	81	
8506-	3B..BJ70	STD		11011-56020-	1		
8506-	3B..BJ70	O/S 0.125		11012-56020-	1		
8506-	3B..BJ70	O/S 0.25		11013-56020-	1		
		BEARING SET, CRANKSHAFT					
8411-	3B..BJ70	U/S 0.25		11704-56020-	1	81	
8411-	3B..BJ70	U/S 0.50		11705-56020-	1	81	
8411-	3B..BJ70	U/S 1.00		11707-56020-	1	81	
		BEARING, CRANKSHAFT					
8411-	3B..BJ70	MARK 1"		11701-56010-01	5	81	
8411-	3B..BJ70	MARK 2"		11701-56010-02	5	81	
		RING SET, PISTON					
8411-	3B..BJ70	STD		13011-58011-	1	81	
		BEARING, CONNECTING ROD					
8411-	3B..BJ70	MARK 1"		13041-58010-01	4	81	
8411-	3B..BJ70	MARK 2"		13041-58010-02	4	81	
		PISTON SUB-ASSY, W/PIN					
8411-8605	3B..BJ70			13101-58012-	4	81	146
8605-	3B..BJ70			13101-58013-	4	147	
		RING, HOLE SNAP (FOR PISTON PIN)					
8411-	3B..B.			90521-34002-	3	81	
		ROD SUB-ASSY, CONNECTING					
8411-	3B..BJ70			13201-59035-	4	81	

(8411-)

IP : Idle Pulley
VP : Vane Pump
WP : Water Pump
AL : Alternator
CK : Crankshaft
CC : Cooler Compressor

AP : Air Pump


	PNC		
——	16361A		
----	44310A		

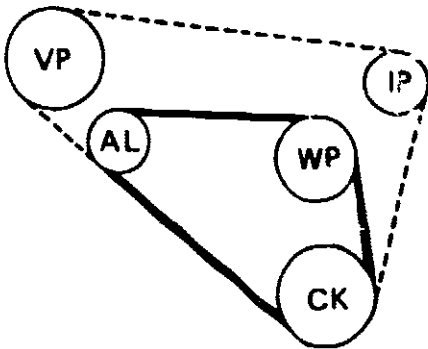

PROD. DATE	M O D E L S	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	FIG. 16-05 V-BELT	+-----+ 16361A BELT, V (FOR FAN AND ALTERNATOR) +-----+ 3B..BJ70		99343-01195-	1	81	
1-		+-----+ 44310A BELT, V (FOR VANE PUMP) +-----+ BJ70		99343-11510-	1	81	

GENUINE TOYOTA PARTS

(8411-)

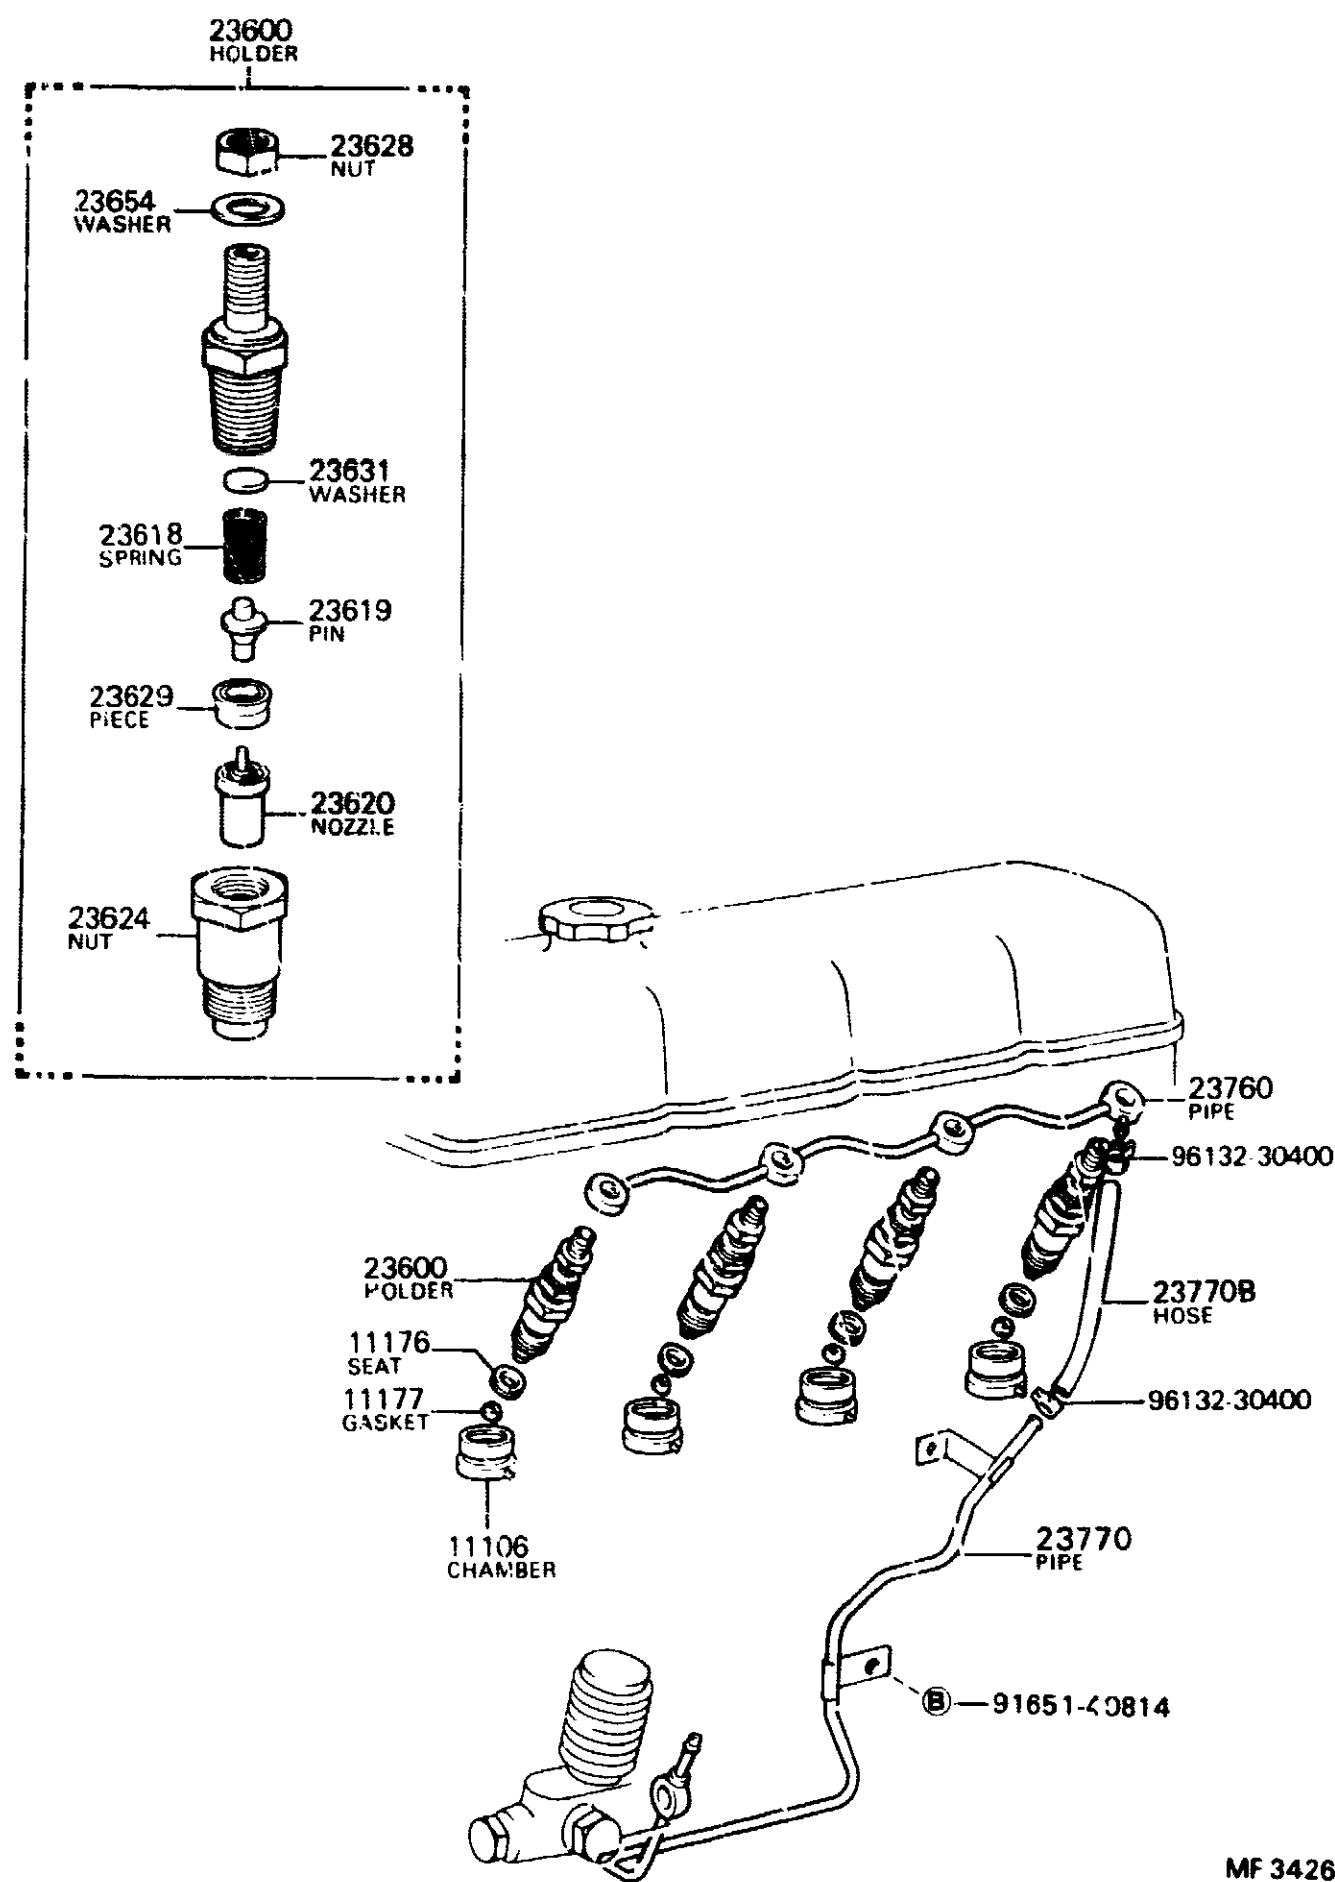

MF 3426

PROD. DATE	MODELS	DESCRIPTION	R / 2	PART NUMBER	QTY	REV. REF. CODE
						FROM UP TO
FIG.	22-01 INJECTION NOZZLE					
8411-8502	3B..BJ70	CHAMBER SUB-ASSY, COMBUSTION		11106-58010-	4	81
8502-8503	3B..BJ70			# 11106-58011- (11106-58010-	4	
8503-	3B..BJ70			11106-58010-	4	
8411-	3B..BJ70	SEAT, INJECTION NOZZLE		11176-56010-	4	81
8411-	3B..BJ70	GASKET, INJECTION NOZZLE SEAT		11177-56010-	4	81
8411-	3B..BJ70	HOLDER AND NOZZLE SET, NOZZLE		23600-68010-	4	81
8411-	3B..BJ70	SPRING, NOZZLE HOLDER PRESSURE		23618-56010-	4	81
8411-	3B..BJ70	PIN, NOZZLE HOLDER PRESSURE		23619-46010-	4	81
8411-	3B..BJ70	NOZZLE ASSY		23620-68010-	4	81
8411-	3B..BJ70	NUT, NOZZLE RETAINING		23624-56020-	4	81
8411-	3B..BJ70	NUT (FOR RING PACKING SETTING)		23628-46010-	4	81
8411-	3B..BJ70	PIECE, DISTANCE (FOR NOZZLE)		23629-46010-	4	81
8411-	3B..BJ70	WASHER (FOR NOZZLE HOLDER PRESSURE SPRING)		23631-46010-	33	81
8411-	3B..BJ70		T=1.00	23632-46010-	33	81
8411-	3B..BJ70		T=1.05	23633-46010-	33	81
8411-	3B..BJ70		T=1.10			

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE FROM UP TO
FIG.	41-01	REAR AXLE HOUSING & DIFFERENTIAL				
8608-	BJ70	GASKET KIT, DIFFERENTIAL CARRIER		04412-60030-	1	141
8411-	BJ70	CARRIER SUB-ASSY, DIFFERENTIAL, REAR		41101-60040-	1	81
8411-	BJ70	CARRIER ASSY, DIFFERENTIAL, REAR		41110-60100-	1	81
8411-	BJ70	BOLT (FOR REAR DIFFERENTIAL CARRIER SET)				
8411-	BJ70	L=40.5, S=1 2.5 & 16		90116-10074-	8	81
8411-	BJ70	L=53.5, S=1 2.5 & 18		90116-10075-	2	81
8411-	BJ70	L=35.5, S=1 2.5 & 15		90116-10076-	10	81
8411-	BJ70	BOLT, REAR DIFFERENTIAL BEARING CAP		90105-12053-	4	81
8411-8412	BJ70	FINAL GEAR KIT, DIFFERENTIAL, REAR		41201-69155- (41201-69156-)	1	81
8412-	BJ70			41201-69156-	1	
8411-	BJ70	BEARING, TAPERED ROLLER (FOR REAR DRIVE PINION REAR)		90366-40004-	1	81
8411-	BJ70	BEARING, TAPERED ROLLER (FOR REAR DRIVE PINION FRONT)		90366-30011-	1	81
8411-	BJ70	SEAL, OIL (FOR REAR DIFFERENTIAL CARRIER)		90311-38134-	1	81
8411-	BJ70	WASHER, PLATE (FOR REAR DIFFERENTIAL DRIVE PINION)				
8411-	BJ70	T=1.05		90201-40551-	1	81
8411-	BJ70	T=1.10		90201-40552-	1	81
8411-	BJ70	T=1.15		90201-40553-	1	81


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE FROM UP TO
8411-	BJ70	WASHER, PLATE (FOR REAR DIFFERENTIAL DRIVE PINION)		90201-40554-	1	81
8411-	BJ70	T=1.20		90201-40555-	1	81
8411-	BJ70	T=1.25		90201-40556-	1	81
8411-	BJ70	T=1.30		90201-40557-	1	81
8411-	BJ70	T=1.35		90201-40558-	1	81
8411-	BJ70	T=1.40		90201-40559-	1	81
8411-	BJ70	T=1.45		90201-40560-	1	81
8411-	BJ70	T=1.50		90201-40561-	1	81
8411-	BJ70	T=1.55				
8411-	BJ70	FLANGE SUB-ASSY, DRIVE PINION COMPANION, REAR		41204-60030-	1	81
8411-	BJ70	NUT (FOR DRIVE PINION COMPANION FLANGE REAR)		90179-22011-	1	81
8411-	BJ70	WASHER, PLATE (FOR DRIVE PINION COMPANION FLANGE REAR)		90201-22007-	1	81
8411-	BJ70	SLINGER, REAR DIFFERENTIAL DRIVE PINION OIL		41214-26010-	1	81
8411-	BJ70	BOLT (FOR REAR RING GEAR SET)		41226-35010-	12	81
8411-	BJ70	SPACER, REAR DIFFERENTIAL DRIVE PINION BEARING		41231-60020-	1	81
8411-	BJ70	DEFLECTOR, DUST (FOR REAR DIFFERENTIAL)		41252-35010-	1	81
8411-	BJ70	BEARING, TAPERED ROLLER (FOR REAR DIFFERENTIAL CASE)		90368-45066-	2	81
8411-	BJ70	CASE, REAR DIFFERENTIAL		41311-36010-	1	81

PROD. DATE	MODELS	DESCRIPTION	P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8510-	45291 CONTINUED BJ70	SEAL, MAIN SHAFT UPPER DUST		45282-22010-	1	101	
8411-	45635 BJ70	SUPPORT, INTERMEDIATE LINK JOINT PROTECTOR		45635-60020-	1	81	
8411-	45636B BJ70	PROTECTOR, INTERMEDIATE LINK JOINT		45636-60061-	1	81	
8411-	45804 BJ70	LEVER SUB-ASSY, STEERING TILT		45804-22010-	1	81	
8411-	45807 BJ70	BRACKET SUB-ASSY, STEERING COLUMN UPPER SUPPORT		45082-60020-	1	81	
8411-	45813 BJ70	COLLAR, TILT STEERING SUPPORT, NO. 1		45813-22010-	1	81	
8411-	BJ70	OD=17.996-18.003		45813-22020-	1	81	
8411-	BJ70	OD=18.003-18.010		45813-22030-	1	81	
8411-	BJ70	OD=18.010-18.017		45813-22040-	1	81	
8411-	BJ70	OD=18.017-18.024		45813-22050-	1	81	
8411-	BJ70	OD=17.989-17.996		45813-22050-	1	81	
8411-	45814 BJ70	COLLAR, TILT STEERING SUPPORT, NO. 2		45814-22010-	1	81	
8411-	BJ70	OD=17.982-18.000		45814-22020-	1	81	
8411-	45815 BJ70	SHIM, TILT STEERING SUPPORT		45815-22060-	1	81	
8411-	BJ70	T=0.2		45815-22070-	1	81	
8411-	BJ70	T=0.5		45815-22080-	1	81	
8411-	BJ70	T=0.8		45815-22090-	1	81	
8411-	BJ70	T=1.4		45815-22100-	1	81	
8411-	BJ70	T=1.8					

PROD. DATE	MODELS	DESCRIPTION	P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	45819 BJ70	RETAINER, TILT LEVER		45819-22011-	1	81	
8411-	45819A BJ70	COLLAR (FOR TILT LEVER RETAINER)		90387-08002-	1	81	
8411-	45821B BJ70	REINFORCE, TILT STEERING SUPPORT, NO. 1		45821-22010-	1	81	
8411-	45826A BJ70	SPRING, TENSION (FOR STEERING TILT LEVER)		90507-14001-	1	81	
8411-	45826B BJ70	PIN (FOR STEERING TILT LEVER)		72538-12010-	1	81	
8411-	45890A BJ70	PAWL ASSY, TILT STEERING		45890-22050-	1	81	
8411-	45892 BJ70	BOLT, TILT STEERING SUPPORT STOPPER		45898-22010-	1	81	
8411-	45897 BJ70	BOLT, STEERING LOCK SET		45897-14010-	1	81	
8411-	45899A BJ70	COVER, TILT STEERING SUPPORT STOPPER		45899-22020-	1	81	

(8411-)


GENUINE TOYOTA PARTS

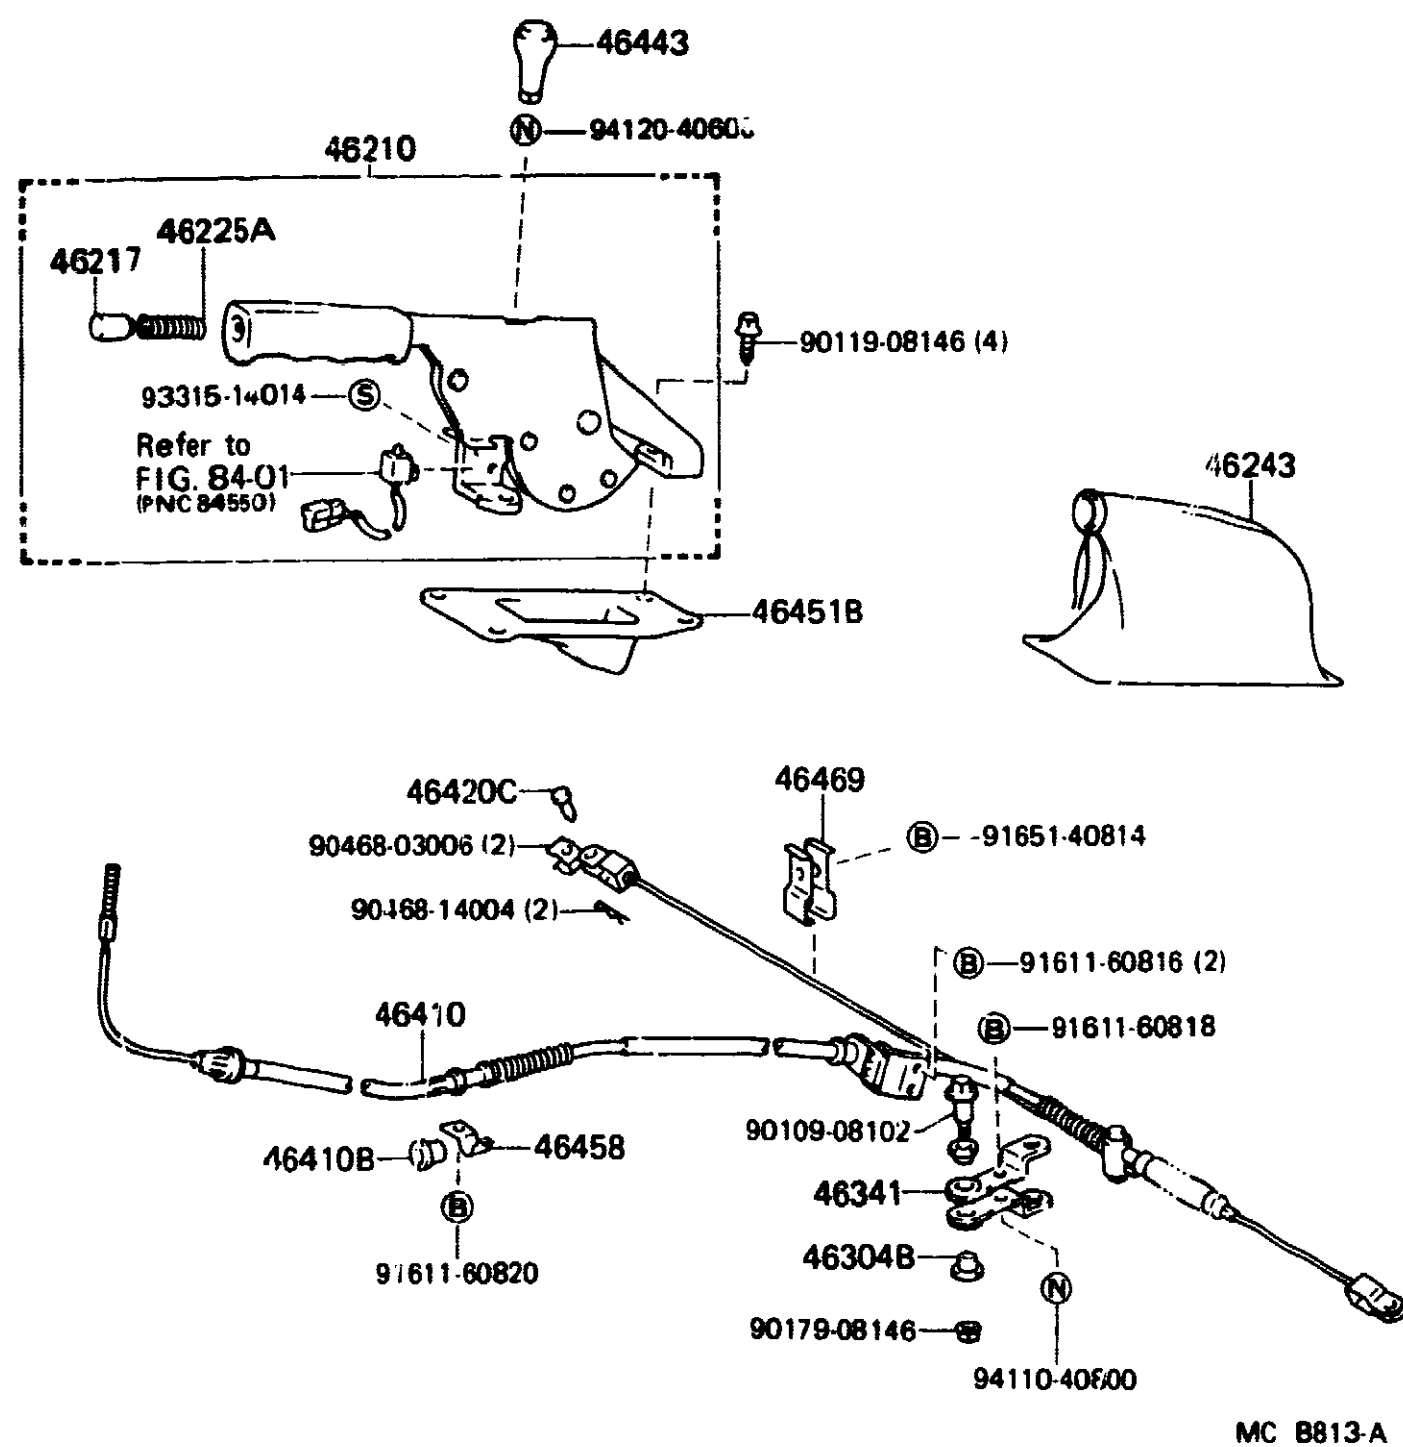

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	46-01 PARKING BRAKE & CABLE						
	46210	LEVER ASSY, PARKING BRAKE					
8411-	BJ70	GRAY		46210-60060-03	1	81	
8411-	BJ70	BROWN		46210-60060-06	1	81	
	46217	KNOB, PARKING BRAKE RELEASE ROD					
8411-	BJ70	GRAY		46217-10020-33	1	81	
8411-	BJ70	BROWN		46217-10020-56	1	81	
	46225A	SPRING, COMPRESSION (FOR PARKING BRAKE PAWL ROD)					
8411-	BJ70			90501-10745-	1	81	
	46243	COVER, PARKING BRAKE LEVER					
8411-	BJ70	BLACK		46243-60060-01	1	81	
8411-	BJ70	BROWN		46243-60060-06	1	81	
	46304B	BUSH (FOR PARKING BRAKE EQUALIZER)					
8411-	BJ70			90385-12029-	2	81	
	46341	EQUALIZER, PARKING BRAKE					
8411-	BJ70			46341-35030-	2	81	
	46410	CABLE ASSY, PARKING BRAKE, NO.1					
8411-	BJ70			46410-60230-	1	81	
	46410B	GROMMET (FOR PARKING BRAKE FRONT CABLE)					
8411-	BJ70			90480-17158-	1	81	
	46420C	PIN, W/HOLE (FOR PARKING BRAKE CABLE)					
8411-	BJ70			90240-08042-	2	81	
	46443	CAP, CABLE ADJUSTING					
8411-	BJ70			46443-12020-	1	81	
	46451B	BRACKET, PARKING BRAKE CABLE SUPPORT					
8411-8510	BJ70			46451-60070-	1	81	100
8510-8608	BJ70			46451-60060-	1	101	140

(8411-)

ILLUST. NO. 20F3

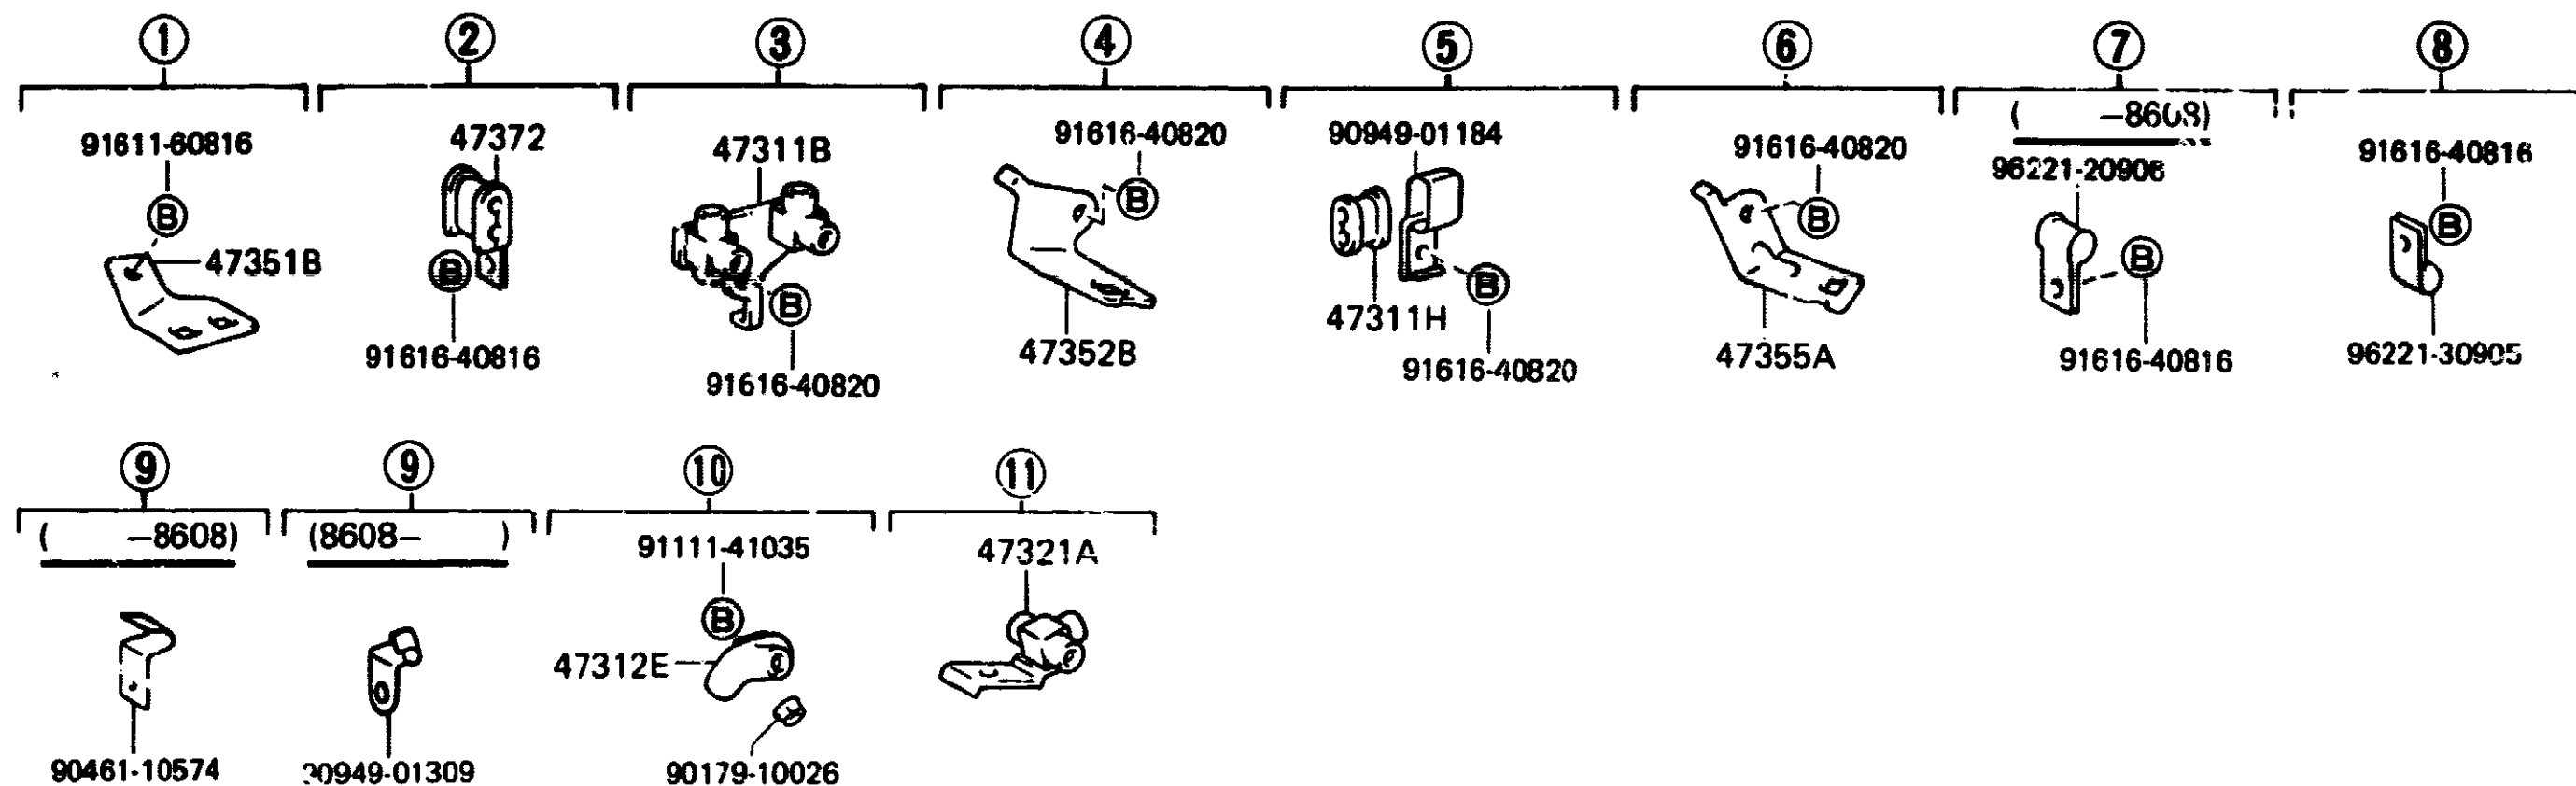

MC B860-B

CONTENTS

(PART NUMBER - LOCATION)

04044 - 17168	-----	A14
17172 - 33318	-----	B14
33321 - 45450	-----	C14
45451 - 55791	-----	D14
55792 - 67848	-----	E14
67861 - 77305	-----	F14
77310 - 90041	-----	G14
90043 - 90501	-----	H14
90502 - 99915	-----	I14

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
04044-60080-	1-J9	11302-56030-	1-K1	13781-56010-	1-D2
-60120-	1-J9	11312-56031-	1-K1	13811-56030-	1-D2
04111-58050-	1-E1	11323-56030-	1-K1	13812-56030-	1-D2
04112-58040-	1-E1	11345-48010-	1-K1	13901-56020-	1-D2
04161-56080-	1-I2	11355-56052-	1-K1	13951-56010-	1-D2
04311-60040-	1-H5	-56053-	1-K1	13952-56010-	1-D2
-60050-	1-H5	11381-56031-	1-K1	13953-56010-	1-D2
04313-60060-	1-K5	11383-56031-	1-K1	13958-56010-	1-D2
04318-60020-	1-J5	11391-56020-	1-K1	15077-56010-	1-F2
04331-60080-	1-L5	11400-58040-	1-D1	15104-56050-	1-E2
-60081-	1-L5	11401-59305-	1-H1	15115-56030-	1-E2
-60160-	1-L5	11452-56050-	1-I1	15121-56030-	1-E2
04371-36030-	1-K7	11459-56040-	1-I1	15122-56030-	1-E2
04412-60030-	1-A8	11461-58020-	1-I1	15131-24010-	1-E2
04434-60020-	1-E11	11475-58010-	1-I1	15132-76011-	1-E2
04443-60200-	1-G10	11476-58010-	1-I1	15133-20010-	1-E2
-60300-	1-G10	11701-56010-01	1-A2	15134-20010-	1-E2
04445-60030-	1-J9	-56010-02	1-A2	15184-15010-	1-I2
04446-35010-	1-B9	11704-56020-	1-A2	15193-56020-	1-E2
04455-60020-	1-J9	11705-56020-	1-A2	15301-56040-	1-I1
04474-60010-	1-J10	11707-56020-	1-A2	15403-56041-	1-E2
04476-60050-	1-J10	11802-56020-	1-C2	15600-41010-	1-Q2
04477-60010-	1-B11	-56021-	1-C2	15605-58010-	1-I1
04479-30030-	1-H10	12101-56060-	1-I1	15609-58010-	1-Q2
04481-60020-	1-H11	12157-10010-	1-B8	15691-56030-	1-Q2
-60030-	1-H11	12180-13030-	1-G1	15701-56011-	1-H2
04482-60040-	1-H11	-70010-	1-G1	15708-58020-	1-I1
04483-60060-	1-L11	12251-56040-	1-M1	15710-56041-	1-H2
04484-60010-	1-L11	12311-58031-	1-L1	15725-56011-	1-H2
04491-60010-	1-H10	-58032-	1-L1	16100-59105-	1-I2
04493-60090-	1-D10	12315-58020-	1-L1	16104-52011-	1-I2
04495-60010-	1-J10	12361-58030-	1-L1	-52013-	1-I2
09111-60050-	1-A1	-58060-	1-L1	16117-56040-	1-I2
09114-60040-	1-A1	12371-58020-	1-L1	16119-56040-	1-I2
-60050-	1-A1	12511-56040-	1-L1	16131-56040-	1-I2
09115-60030-	1-A1	13011-58011-	1-A2	16141-76010-	1-I2
09116-35041-	1-A1	13041-58010-01	1-A2	16171-61071-	1-I2
09120-60050-	1-A1	-58010-02	1-A2	16198-41170-	1-I2
-60100-	1-A1	13101-58012-	1-A2	16210-56040-	1-I2
09135-00012-	1-A1	-58013-	1-A2	16261-56012-	1-L2
09140-27010-	1-A1	13201-59035-	1-A2	16271-56020-	1-J2
09150-60010-	1-B1	13204-58011-	1-B2	16331-58010-	1-L2
09163-00030-	1-B1	13205-58011-	1-B2	16333-56060-	1-L2
-60010-	1-B1	13207-58011-	1-B2	16341-56020-	1-L2
11011-56010-	1-A2	13265-58010-	1-B2	16343-56020-	1-L2
-56020-	1-A2	13401-58020-	1-B2	16361-38010-	1-L2
11012-56010-	1-A2	13405-56031-	1-B2	16371-56040-	1-J2
-56020-	1-A2	13453-56020-	1-B2	16381-56030-	1-L2
11013-56010-	1-A2	13470-56170-	1-B2	-58020-	1-L2
-56020-	1-A2	13477-60030-	1-B2	16400-58160-	1-L2
11101-58013-	1-F1	13478-60010-	1-B2	16401-71010-	1-L2
11106-58010-	1-A4	13504-56030-	1-B2	16405-58020-	1-L2
-58011-	1-A4	13508-56010-	1-B2	16417-24200-	1-L2
11115-58040-	1-F1	13511-56030-	1-C2	16418-24200-	1-L2
11122-56021-	1-F1	13519-56010-	1-B2	16470-58040-	1-L2
11176-56010-	1-A4	13521-56030-	1-B2	16571-58040-	1-L2
11177-56010-	1-A4	13523-56040-	1-C2	16572-58040-	1-L2
11203-56040-	1-H1	13571-56020-	1-C2	16582-68010-	1-M2
-56041-	1-H1	13572-56020-	1-B2	16611-68020-	1-L2
11211-56031-	1-G1	13711-58010-	1-C2	16711-58020-	1-M2
11213-56012-	1-G1	13715-58011-	1-C2	17111-56130-	1-B3
11293-58010-	1-G3	13741-56021-	1-D2	17141-56050-	1-B3
11295-46010-	1-G1	13751-56020-	1-D2	17167-56022-	1-B3
11301-56031-	1-K1			17168-58021-	1-B3

NOTICE

FRAME NUMBER AND VEHICLE IDENTIFICATION NUMBER

1. FRAME NUMBER BJ70-0012345

FRAME NUMBER IS GIVEN ON THE DASH COWL IN THE ENGINE ROOM. FUNCTION IN TOYOTA PARTS CATALOG IS LISTED IN THE REVISION REFERENCE CODE LIST TO IDENTIFY

REV. REF. CODE	ENGINE NO. OR FRAME NO.
1	BJ70-0012345

ENGINEERING CHANGE PERIOD AS BEFORE. SO, IN LOCATING PARTS CATALOG, TAKE A LOOK AT FRAME NUMBER ON CORRESPONDING VEHICLE.

2. NAME PLATE

NAME PLATE IS ATTACHED TO THE DASH COWL IN THE ENGINE ROOM. MODEL COLUMN

ENGINE TOYOTA MOTOR CORPORATION	
3B	JT3BJ70VXF10012345 (b)
MODEL C/TM/TH	BJ70LV-MRK (a)

INDICATES FULL MODEL CODE, SO, FOR MODEL INFORMATION, REFER TO THE NAME PLATE AS BEFORE.

PROCEDURE TO DETERMINE FRAME NUMBER FROM NAME PLATE IS :

$$(a) + (b) = BJ70-0012345$$

3. VEHICLE IDENTIFICATION NUMBER JT3BJ70VXF10012345

VEHICLE IDENTIFICATION NUMBER IS GIVEN TO VIN PLATE ON LEFT HAND OF DASH BOARD, CERTIFICATION REGULATION PLATE ON LEFT DOOR PILLAR, AND NAME PLATE.

NOTICE

FRAME NUMBERING IS STARTED FROM DIFFERENT STARTING FRAME NUMBER PER EACH ASSEMBLY LINE.

WHEN REFERRING TO STARTING FRAME NUMBER ON REVISION REFERENCE CODE LIST, BEAR FOLLOWING MATTER IN YOUR MIND.

Starting Frame Number Per Each Assembly Line.

Assembly Line	TOYOTA MOTOR Honsya Plant (A11)
Applicable Model	
BJ70-	0000001 ~

REV. REF. CODE	ENGINE NO. OR FRAME NO.	REV. REF. CODE	ENGINE NO. OR FRAME NO.	REV. REF. CODE	ENGINE NO. OR FRAME NO.
81	BJ70-0000001				
96	BJ70-0002806				
97	BJ70-0002807				
100	BJ70-0004200				
101	BJ70-0004201				
114	BJ70-0003997				
115	BJ70-0003998				
126	3B-0707773				
127	3B-0707774				
140	BJ70-0005765				
141	BJ70-0005766				
142	BJ70-0004937				
143	BJ70-0004938				
146	B-787901				
147	B-787902				
150	FULL DETAILS OF REVISION REFERENCE CODE ARE NOT DETERMINED. THEY WILL APPEAR ON THE NEXT ISSUE.				
151	FULL DETAILS OF REVISION REFERENCE CODE ARE NOT DETERMINED. THEY WILL APPEAR ON THE NEXT ISSUE.				

GUIDE TO CONTENTS

1. MODELS COVERED & CHARACTERISTICS C 15 (included in each fiche)

2. MARK & ABBREVIATION B 16, C 16 (included in each fiche)

3 INDEX

ILLUSTRATED INDEX D 16 thru K 16 (included in each fiche)

FIGURE NUMBER INDEX L 16, M 16 (included in each fiche)

4. ILLUSTRATIONS & TEXT From A 1 (included in each fiche)

The contents (illustrations & text) have been divided
into groups by function in the following sequence:

Engine

Fuel

Power train - Chassis

Body

Electrical

5. APPENDICES

PART NAME  LOCATION LIST A 12 thru F 13 (included in the fiche No. 2 of 2)

PART NUMBER  LOCATION LIST A 14 thru I 14 (included in each fiche)

REVISION REFERENCE CODE LIST A 15 (included in each fiche)

PRODUCTION FRAME NUMBER
REFERENCE LIST B 15 (included in each fiche)

Note : SST (Special Service Tools) are not included in this parts catalog.

For related part number information can be noted in SST List, Service Bulletin
and Repair Manual.

FIG. 13-01

GENUINE TOYOTA PARTS

1-B2

GENUINE TOYOTA PARTS

M74-15-0592

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	13201A	BUSH (FOR CONNECTING ROD SMALL END)		90999-73088-	4	81	
	3B..BJ70						
8411-	13202	BEARING SET, CONNECTING ROD					
	3B..BJ70	U/S 0.25		13204-58011-	1	81	
8411-	3B..BJ70	U/S 0.50		13205-58011-	1	81	
8411-	3B..BJ70	U/S 1.00		13207-58011-	1	81	
8411-	13265	BOLT, CONNECTING ROD					
	3B..BJ70			13265-58010-	8	81	
8411-	13265A	NUT, HEXAGON (FOR CONNECTING ROD BOLT)					
	3B..BJ70			90179-12044-	8	81	
8411-	13405	FLYWHEEL SUB-ASSY					
	3B..BJ70			13405-56031-	1	81	
8411-	13405A	PIN, STRAIGHT (FOR FLYWHEEL)					
	3B..BJ70	L=22, OD=10		90250-10192-	3	81	
8411-	13405B	BOLT, FLYWHEEL SET					
	3B..BJ70	X13-1.5PX30-20		90105-13004-	6	81	
8411-	13411	CRANKSHAFT					
	3B..BJ70			13401-58020-	1	81	
8411-	13434	SPLINE, OIL PUMP DRIVE					
	3B..BJ70			13519-56010-	1	81	
8411-	13453	GEAR, FLYWHEEL RING					
	3B..BJ70	N=110		13453-56020-	1	81	
8411-	13471	PULLEY, CRANKSHAFT					
	3B..BJ70			13470-56170-	1	81	
8411-	13471A	KEY, CRANKSHAFT (FOR CRANKSHAFT PULLEY SET)					
	3B..BJ70			95161-10416-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	13471C	BOLT (FOR CRANKSHAFT PULLEY SET)					
	3B..BJ70			90105-16003-	1	81	
8411-	13477	PULLEY, CRANKSHAFT, NO.2					
	3B..BJ70	W/POWER STEERING		13477-60030-	1	81	
8411-	13477B	PLATE, CRANKSHAFT PULLEY, NO.2					
	3B..BJ70	W/POWER STEERING		13478-60010-	1	81	
8411-	13503	SHAFT SUB-ASSY, IDLE GEAR					
	3B..BJ70			13504-56030-	1	81	
8411-	13521	GEAR OR SPROCKET, CRANKSHAFT TIMING					
	3B..BJ70			13521-56030-	1	81	
8411-	13521A	KEY (FOR CRANKSHAFT TIMING GEAR)					
	3B..BJ70			95161-10519-	1	81	
8411-	13525	GEAR, IDLE, NO.1					
	3B..BJ70			13508-56010-	1	81	
8411-	13572	PLATE, IDLE GEAR THRUST					
	3B..BJ70			13572-56020-	1	81	
8411-8606	13577A	BOLT, HEXAGON (FOR IDLE GEAR BOLT LOCK)					
	3B..BJ70			90119-10208-	2	81	
8606-	3B..BJ70			90105-10194-	2		
8411-	13707A	UNION (FOR OIL PIPE, NO.1)					
	3B..BJ70			90044-01010-	1	81	

*○-○P×○-○=Outside diameter-Pitch×Bolt length-Thread length


FIG.17-01 MANIFOLD

1-B3

M74-13-0016

GENUINE TOYOTA PARTS

(8411-)

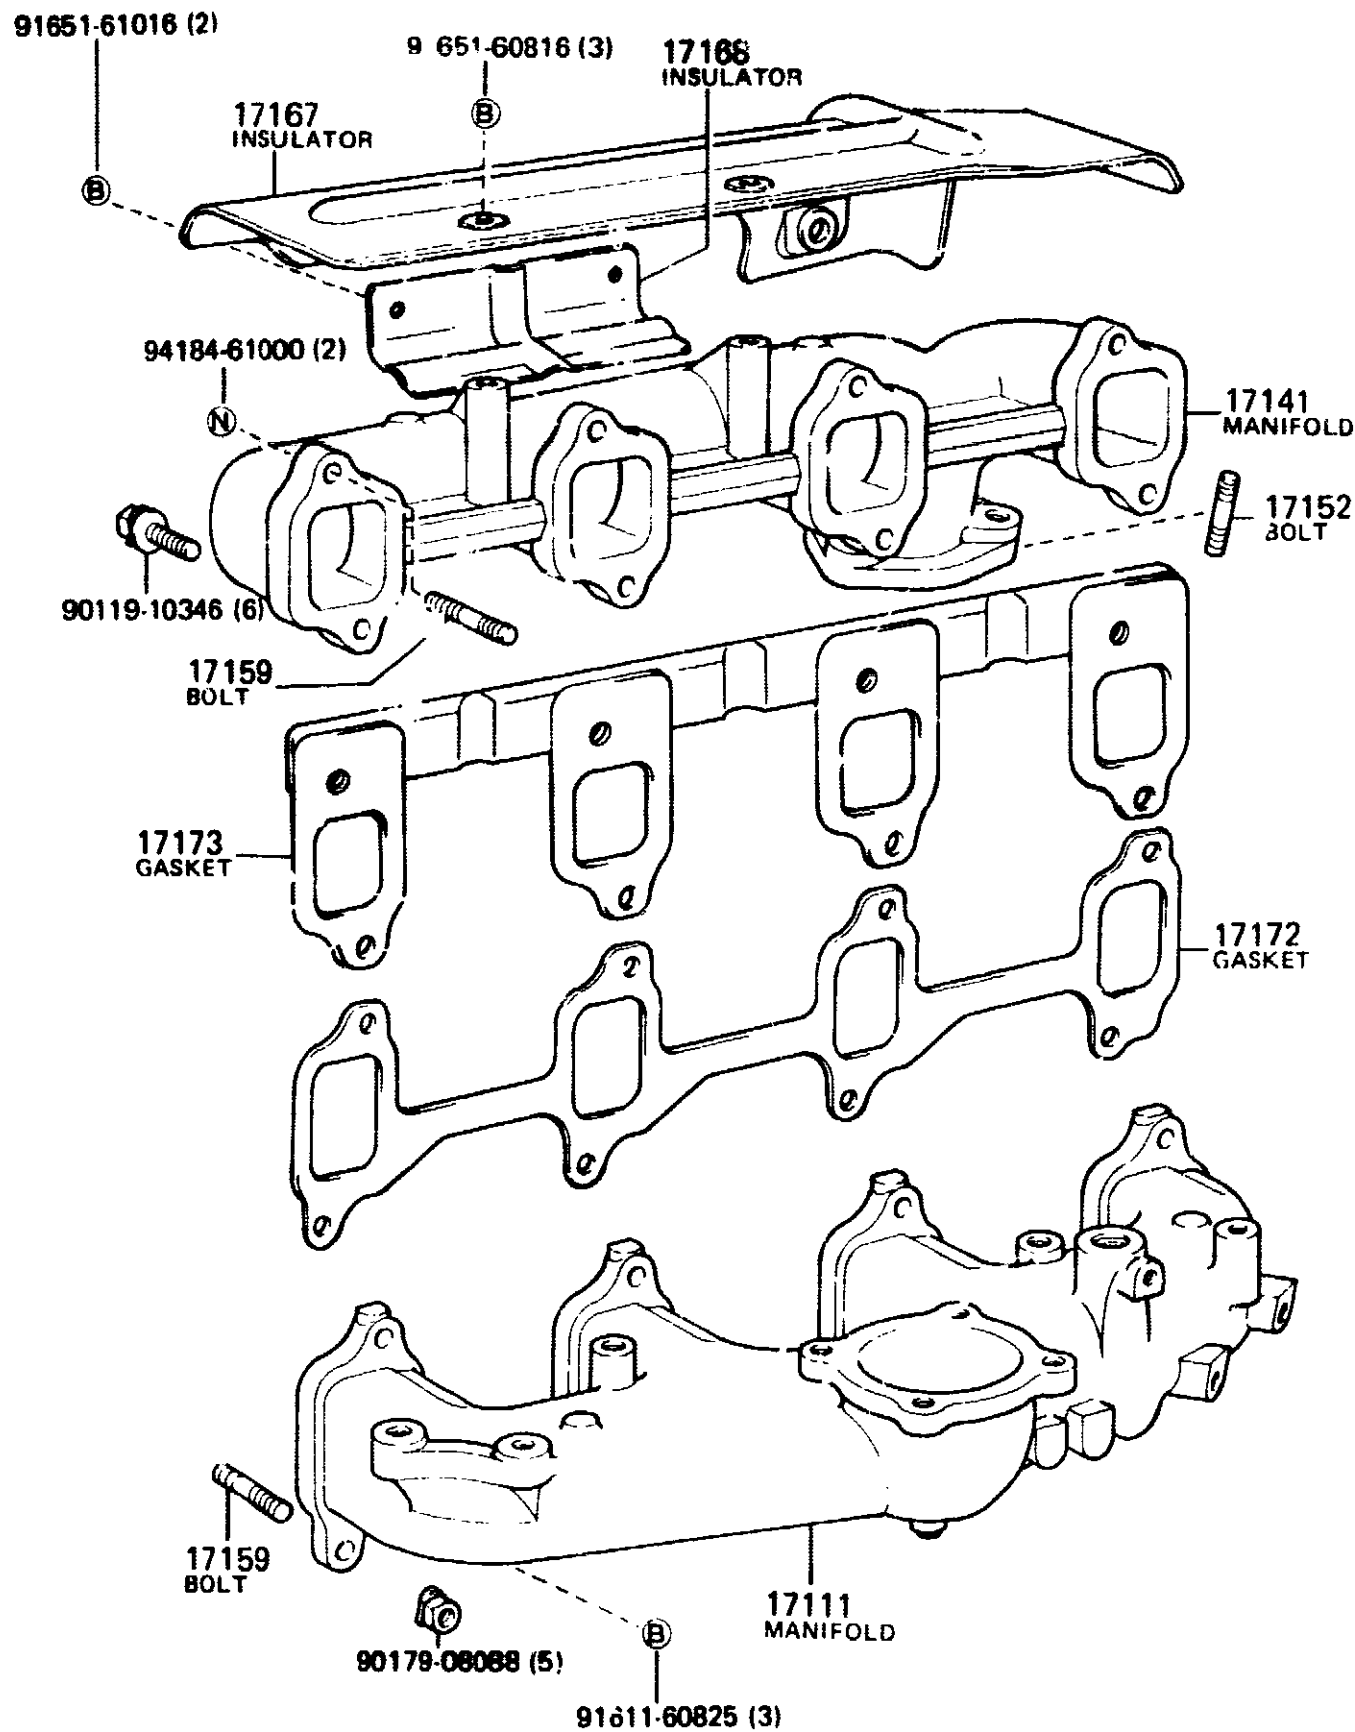


MA 7966-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	17-01 MANIFOLD						
8411-	17111 MANIFOLD, INTAKE			17111-56130-	1	81	
8411-	17141 MANIFOLD, EXHAUST			17141-56050-	1	81	
8411-8705	17152 BOLT, STUD (FOR MANIFOLD TO EXHAUST PIPE)			90116-10056- (90116-10087-	3	81	
8705-	17159 BOLT, STUD (FOR MANIFOLD TO CYLINDER HEAD)			90116-10098-	2	81	
8411-	17172 GASKET, MANIFOLD TO CYLINDER HEAD			17172-56022-	1	81	
8411-	17173 GASKET, EXHAUST MANIFOLD TO HEAD			17173-58010-	1	81	
8411-	17167 INSULATOR, EXHAUST MANIFOLD HEAT, NO.1			17167-56022-	1	81	
8411-	17168 INSULATOR, EXHAUST MANIFOLD HEAT, NO.2			17168-58021-	1	81	
8411-	17111 MANIFOLD			17111-56130-	1	81	
8411-	17141 MANIFOLD			17141-56050-	1	81	
8411-	17152 BOLT, STUD (FOR MANIFOLD TO EXHAUST PIPE)			90116-10056- (90116-10087-	3	81	
8411-	17159 BOLT, STUD (FOR MANIFOLD TO CYLINDER HEAD)			90116-10098-	2	81	
8411-	17172 GASKET, MANIFOLD TO CYLINDER HEAD			17172-56022-	1	81	
8411-	17173 GASKET, EXHAUST MANIFOLD TO HEAD			17173-58010-	1	81	


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
		1 23631 CONTINUED WASHER (FOR NOZZLE HOLDER PRESSURE SPRING)					
8411-	3B..BJ70	T=1.15		23634-46010-	33	81	
8411-	3B..BJ70	T=1.20		23635-46010-	33	81	
8411-	3B..BJ70	T=1.25		23636-46010-	33	81	
8411-	3B..BJ70	T=1.30		23637-46010-	33	81	
8411-	3B..BJ70	T=1.35		23638-46010-	33	81	
8411-	3B..BJ70	T=1.40		23639-46010-	33	81	
8411-	3B..BJ70	T=1.45		23641-46010-	33	81	
8411-	3B..BJ70	T=1.50		23642-46010-	33	81	
8411-	3B..BJ70	T=1.55		23643-46010-	33	81	
8411-	3B..BJ70	T=1.60		23644-46010-	33	81	
8411-	3B..BJ70	T=1.65		23645-46010-	33	81	
8411-	3B..BJ70	T=1.70		23646-46010-	33	81	
8411-	3B..BJ70	T=1.75		23647-46010-	33	81	
8411-	3B..BJ70	T=1.80		23648-46010-	33	81	
8411-	3B..BJ70	T=1.85		23649-46010-	33	81	
8411-	3B..BJ70	T=1.90		23651-46010-	33	81	
8411-	3B..BJ70	T=1.95		23652-46010-	33	81	
		1 23654 CONTINUED WASHER (FOR RING PACKING)					
8411-	3B..BJ70			23654-46010-	4	81	
		1 23760 CONTINUED PIPE ASSY, NOZZLE LEAKAGE					
8411-	3B..BJ70			23760-56022-	1	81	
		1 23770 CONTINUED PIPE ASSY, NOZZLE LEAKAGE, NO.2					
8411-8510	3B..BJ70			23770-56050- (23770-56051-)	1	81	100
C 8510-8612	3B..BJ70			23770-56051-	1	101	150
C 8612-	3B..BJ70			23770-56052-	1	151	
		1 23770B CONTINUED HOSE, FUEL					
8411-	3B..BJ70	*H,L=110		95332-04020-	1	81	

*H,L=Cut hose to length as specified in remarks

(8411-)

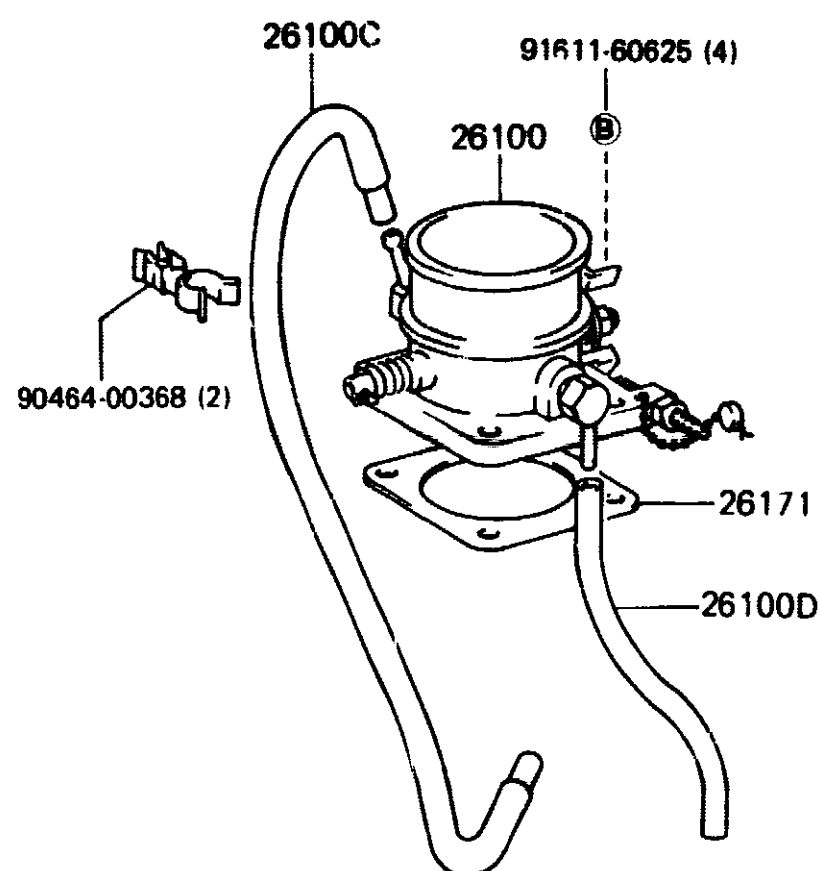

26100

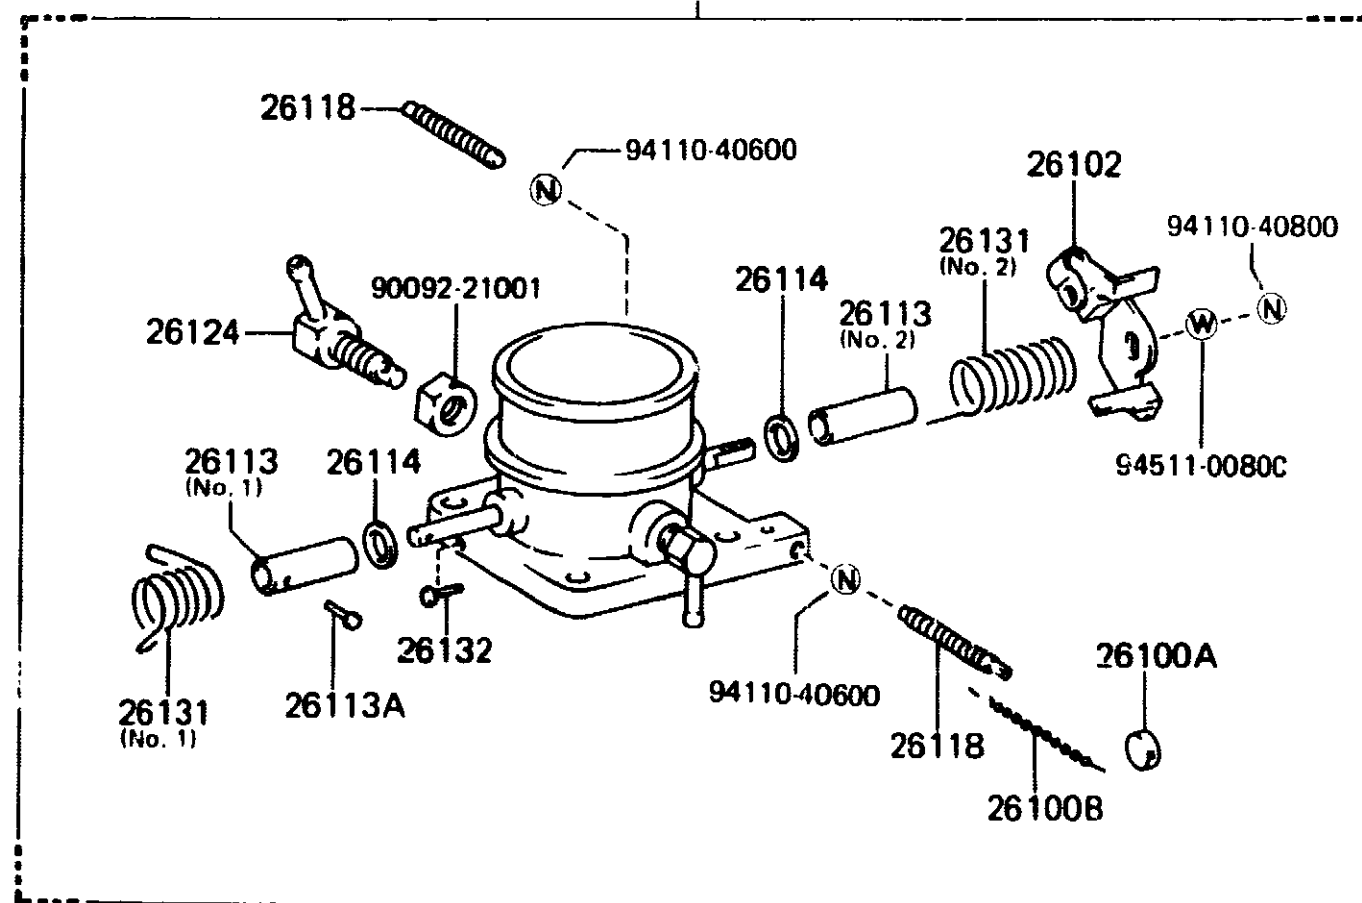




MF 3515-B

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	26-06 VENTURI						
8411-	26100	VENTURI ASSY		26100-58022-	1	81	
8411-	3B..PJ70						
8411-	26100A	SEAL, LEAD		22354-77050-	1	81	
8411-	3B..BJ70						
8411-	26100B	WIRE, SEAL		22355-36010-	1	81	
8411-	3B..BJ70						
8411-	26100C	HOSE, VACUUM NO.1 (VENTURI TO GOVERNOR)		90447-12016-	1	81	
8411-	3B..BJ70						
8411-	26100D	HOSE, VACUUM NO.2 (VENTURI TO GOVERNOR)		90447-12001-	1	81	
8411-	3B..BJ70						
8411-	26102	LEVER SUB-ASSY, THROTTLE SHAFT ADJUSTING		26111-58022-	1	81	
8411-	3B..BJ70						
8411-	26113	COLLAR, THROTTLE VALVE SHAFT					
8411-	3B..BJ70	NO.1		26113-58021-	1	81	
8411-	3B..BJ70	NO.2		26113-68012-	1	81	
8411-	26113A	PIN, THROTTLE VALVE SHAFT					
8411-	3B..BJ70			26132-56010-	1	81	
8411-	26114	WASHER, THROTTLE VALVE SHAFT ADJUSTING					
8411-	3B..BJ70	T=0.1		26114-76010-	2	81	
8411-	3B..BJ70	T=0.2		26115-76010-	2	81	
8411-	3B..BJ70	T=0.5		26116-76010-	2	81	
8411-	26118	SCREW, STOP PLATE ADJUSTING					
8411-	3B..BJ70			26118-48014- (22325-77020-)	2	81	
8411-	26124	CONNECTOR, VENTURI PIPE					
8411-	3B..BJ70			26124-58020-	1	81	

GENUINE TOYOTA PARTS


(8411-)

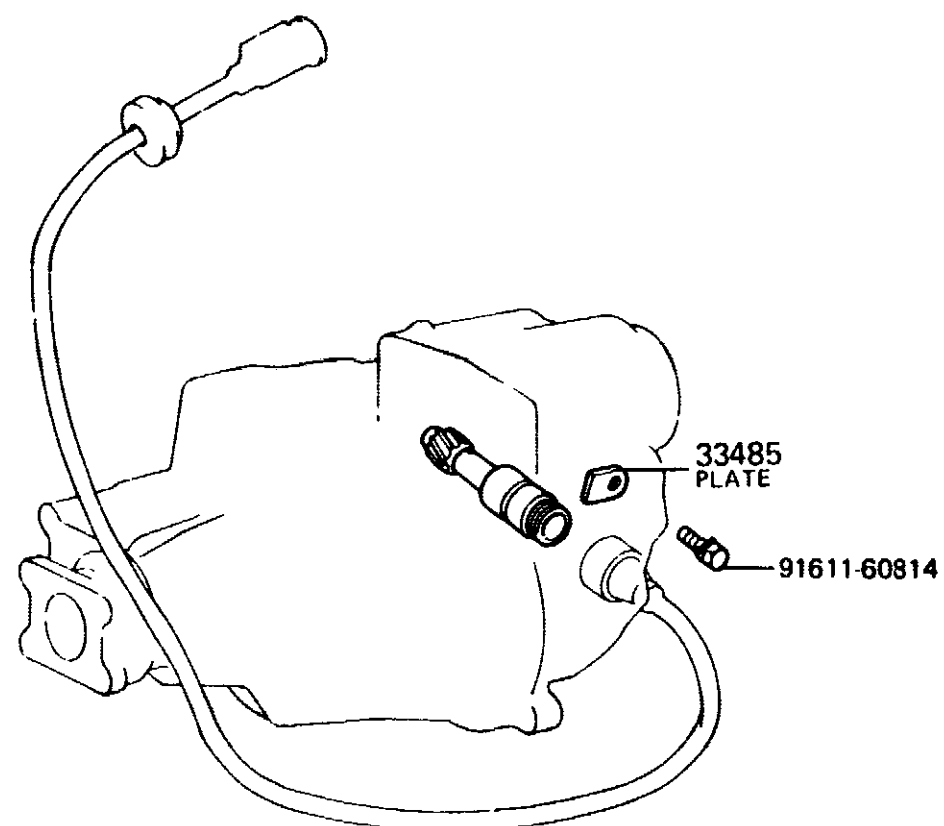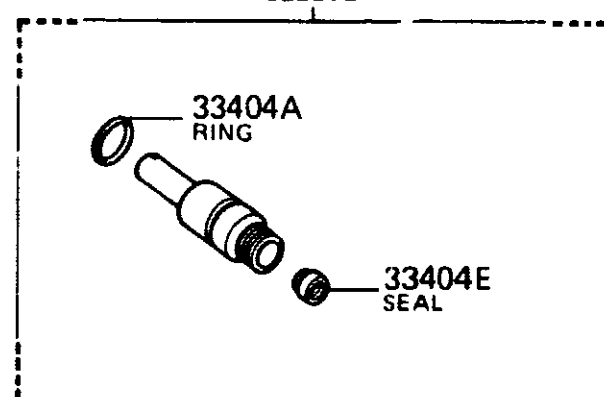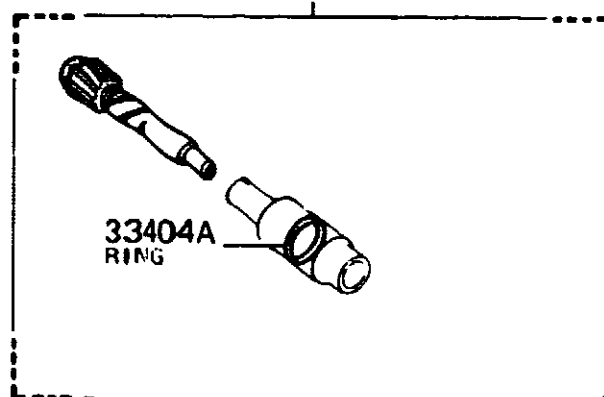33403
GEAR33404
SLEEVE

MC B696

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	33-04 SPEEDOMETER DRIVEN GEAR (MTM)						
8411-	BJ70	GEAR SUB-ASSY, SPEEDOMETER DRIVEN (MTM)		33403-69075-	1	81	
8411-	BJ70	SLEEVE SUB-ASSY, SPEEDOMETER SHAFT (MTM)		33404-30040-	1	81	
C 8411-8607	BJ70	RING, O (FOR MTM SPEEDOMETER SHAFT SLEEVE)		90301-18018-	1	81	
C 8607-	BJ70			90301-18004-	1		
8411-	BJ70	SEAL, TYPE S OIL (FOR SPEEDOMETER SHAFT SLEEVE)		90310-09001-	1	81	
8411-	BJ70	PLATE, SPEEDOMETER SLEEVE LOCK (MTM)		33485-30020-	1	81	

(8411-)

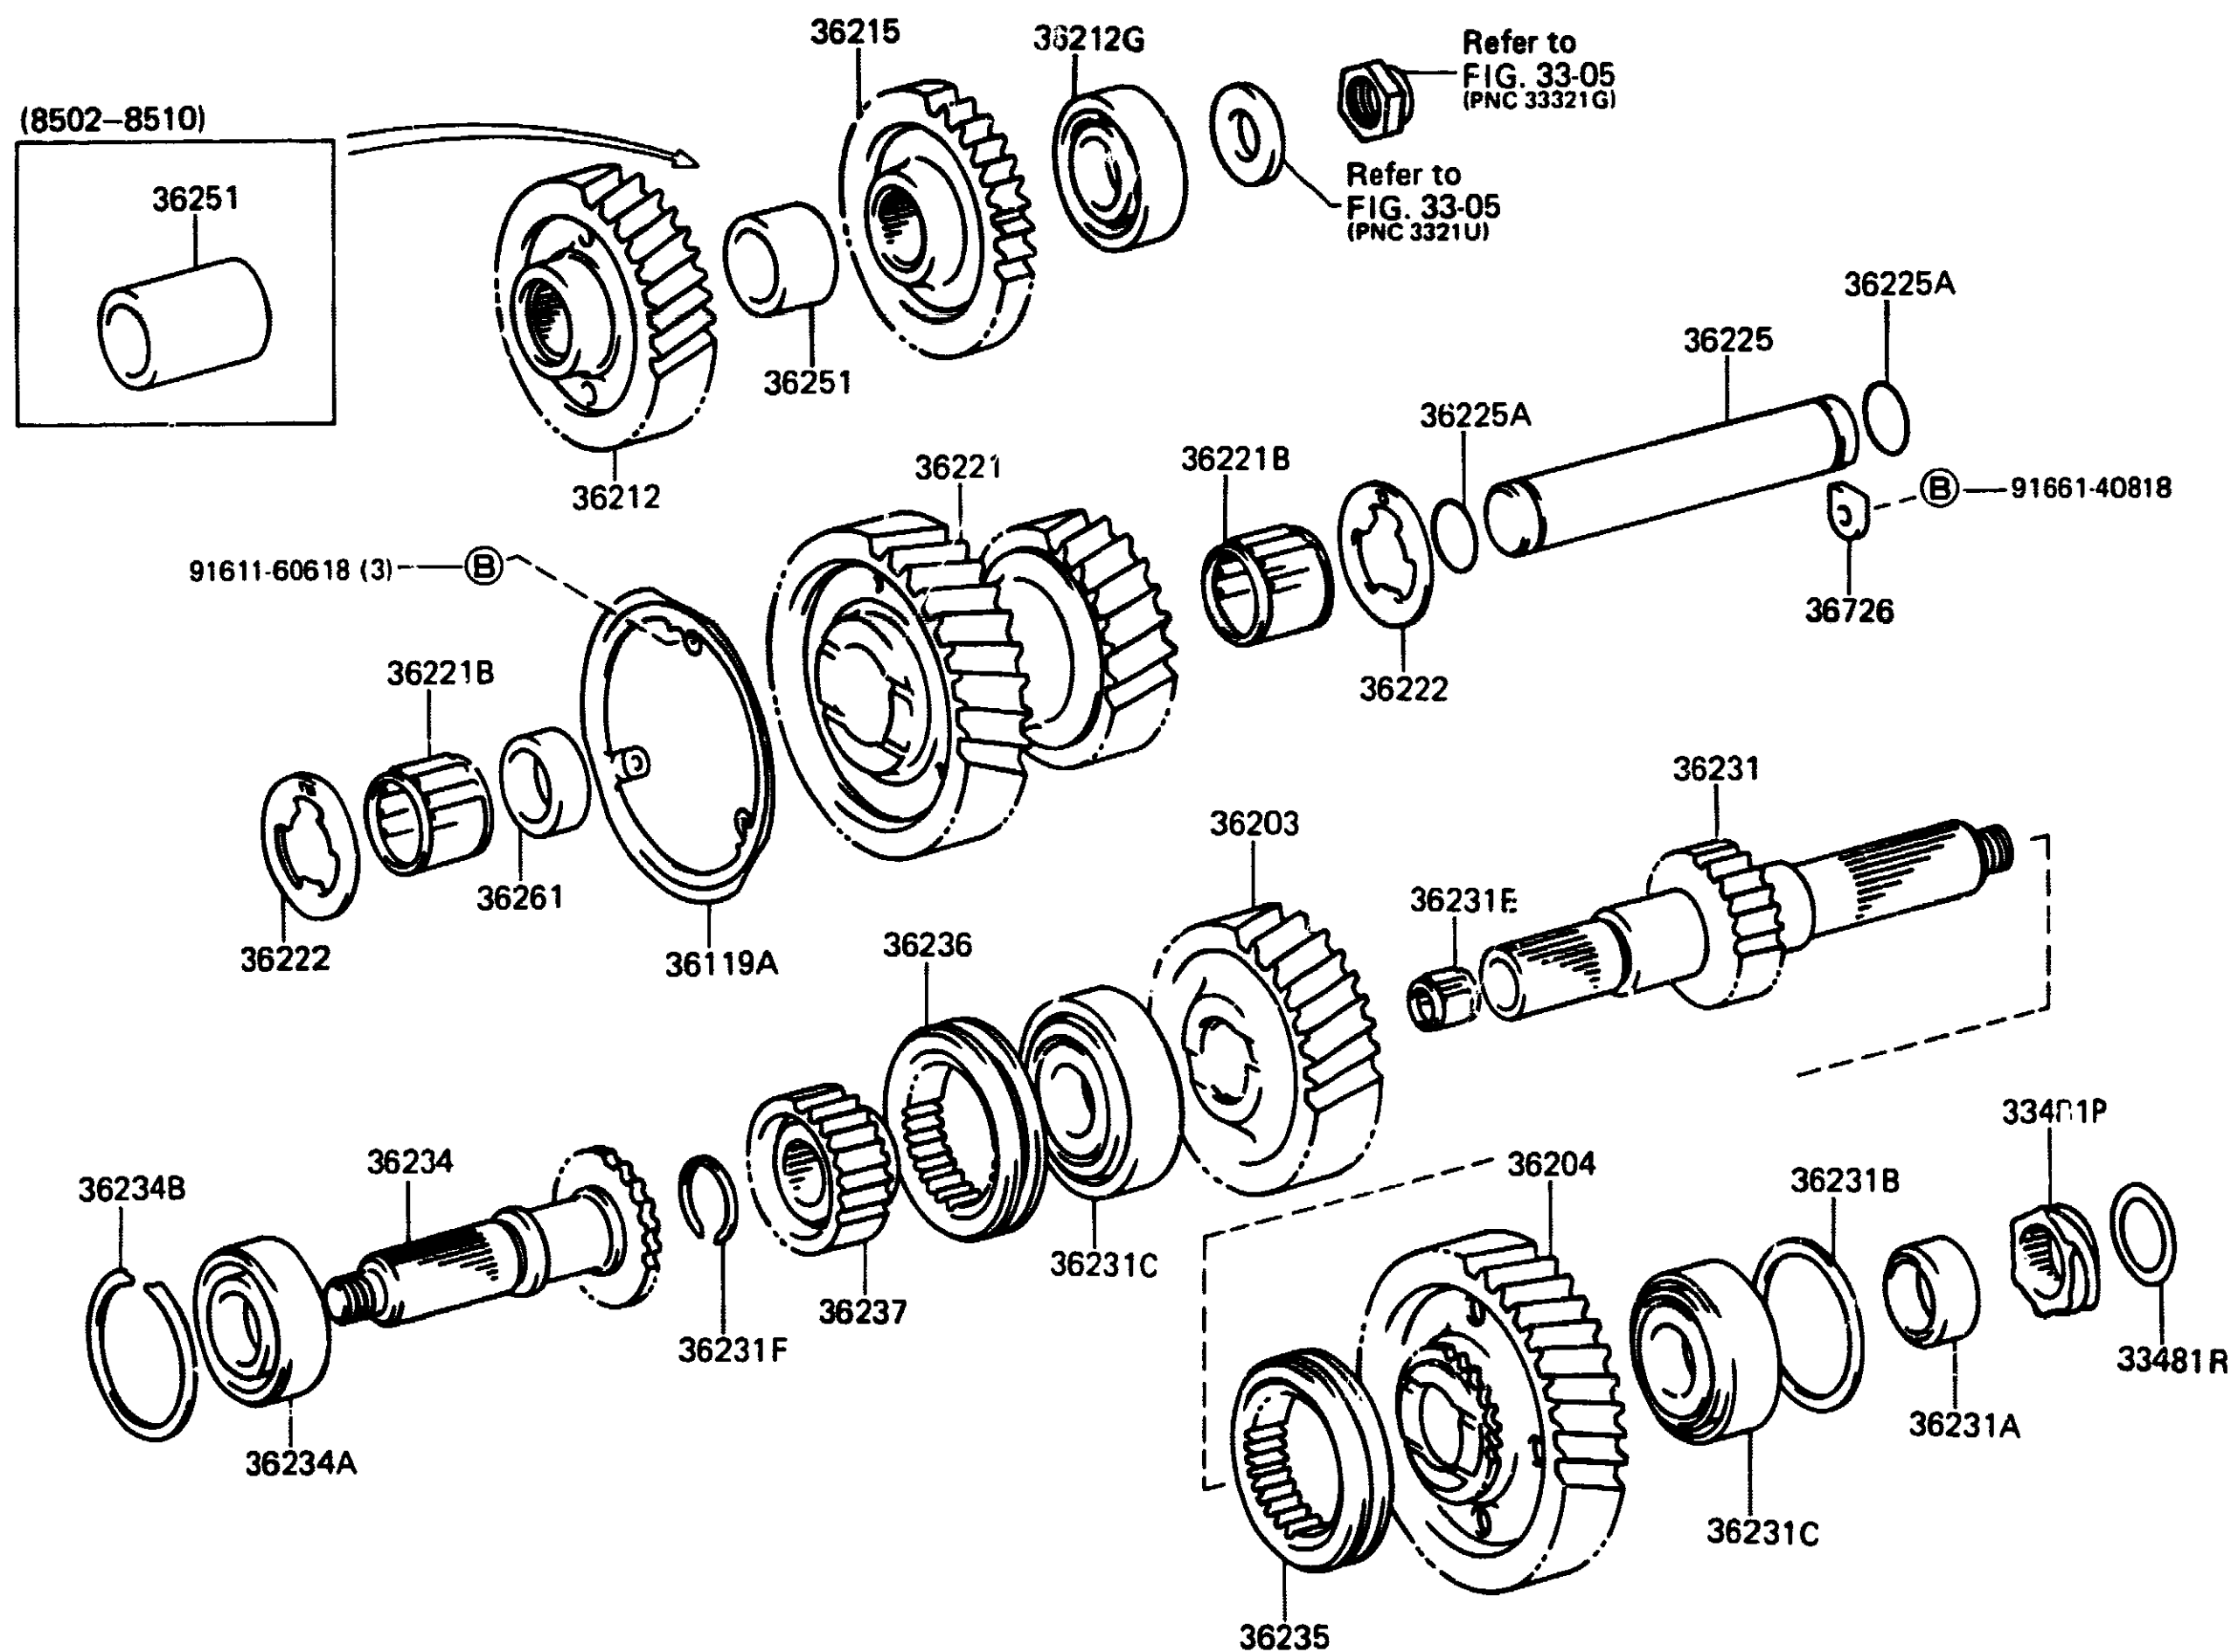


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	41315 BJ70	NUT, REAR DIFFERENTIAL BEARING ADJUSTING		41315-30010-	2	81	
8411-	41316 BJ70	LOCK, REAR DIFFERENTIAL BEARING ADJUSTING NUT		41316-30010-	2	81	
8411-	41331 BJ70	GEAR, REAR DIFFERENTIAL SIDE		41331-35020-	2	81	
8411-	41341 BJ70	PINION, REAR DIFFERENTIAL		41341-55012-	2	81	
8411-	41342 BJ70	SHAFT, REAR DIFFERENTIAL PINION		41342-55010-	1	81	
8411-	41343 BJ70	PIN, DIFFERENTIAL PINION SHAFT		41343-55010-	1	81	
8411-	41344 BJ70	SPACER, DIFFERENTIAL PINION SHAFT		41344-35010-	1	81	
8411-	BJ70	H=29.8		41345-35010-	1	81	
8411-	BJ70	H=30.2		41346-35010-	1	81	
8411-	BJ70	H=30.6		41347-35010-	1	81	
8411-	BJ70	H=29.0		41348-35010-	1	81	
8411-	BJ70	H=29.4					
8411-	41351 BJ70	WASHER, REAR DIFFERENTIAL PINION THRUST		41351-35011-	2	81	
8411-	41361 BJ70	WASHER, REAR DIFFERENTIAL SIDE GEAR THRUST NO. 1		41361-60010-	2	81	
8411-	BJ70	T=1.55-1.65		41361-60020-	2	81	
8411-	BJ70	T=1.70-1.85		41361-60030-	2	81	
8411-	BJ70	T=1.85-1.95		41361-60040-	2	81	
8411-	BJ70	T=2.00-2.10					

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	42109 BJ70	COVER SUB-ASSY, REAR AXLE HOUSING		42109-60050-	1	81	
8411-8608	42110 BJ70	HOUSING ASSY, REAR AXLE		42110-60250-	1	81	140
8608-	BJ70			42110-60251-	1	141	
8411-	42110A BJ70	PLUG (FOR REAR AXLE HOUSING FILLER)		90341-18006-	1	81	
8411-	42110B BJ70	GASKET (FOR REAR AXLE HOUSING FILLER PLUG)		12157-10010-	1	81	
8411-	42110D BJ70	GASKET, DRAIN PLUG (FOR REAR AXLE HOUSING)		12157-10010-	1	81	
8411-	42110E BJ70	PLUG SUB-ASSY, DRAIN (FOR REAR AXLE HOUSING)		90341-18057-	1	81	
8411-	42137 BJ70	COLLAR, REAR AXLE HOUSING SIDE		42137-55010-	2	81	
8411-	42181 BJ70	GASKET, REAR DIFFERENTIAL CARRIER		42181-36010-	1	81	
8411-	42183 BJ70	GASKET, REAR AXLE HOUSING COVER		42183-35010-	1	81	
8411-	42306A BJ70	UNION (FOR REAR AXLE BREATHER HOSE)		90404-10018-	1	81	
C 8411-8702	42306B BJ70	HOSE (FOR REAR AXLE BREATHER)		XH, L=480 95332-06060-	1	81	
C 8702-	BJ70			XH, L=480 95333-06060-	1		
8411-	42306C BJ70	CLIP, HOSE (FOR REAR AXLE BREATHER HOSE)		96132-30600-	1	81	

*H, L=Cut hose to length as specified in remarks

(8411-)


GENUINE TOYOTA PARTS

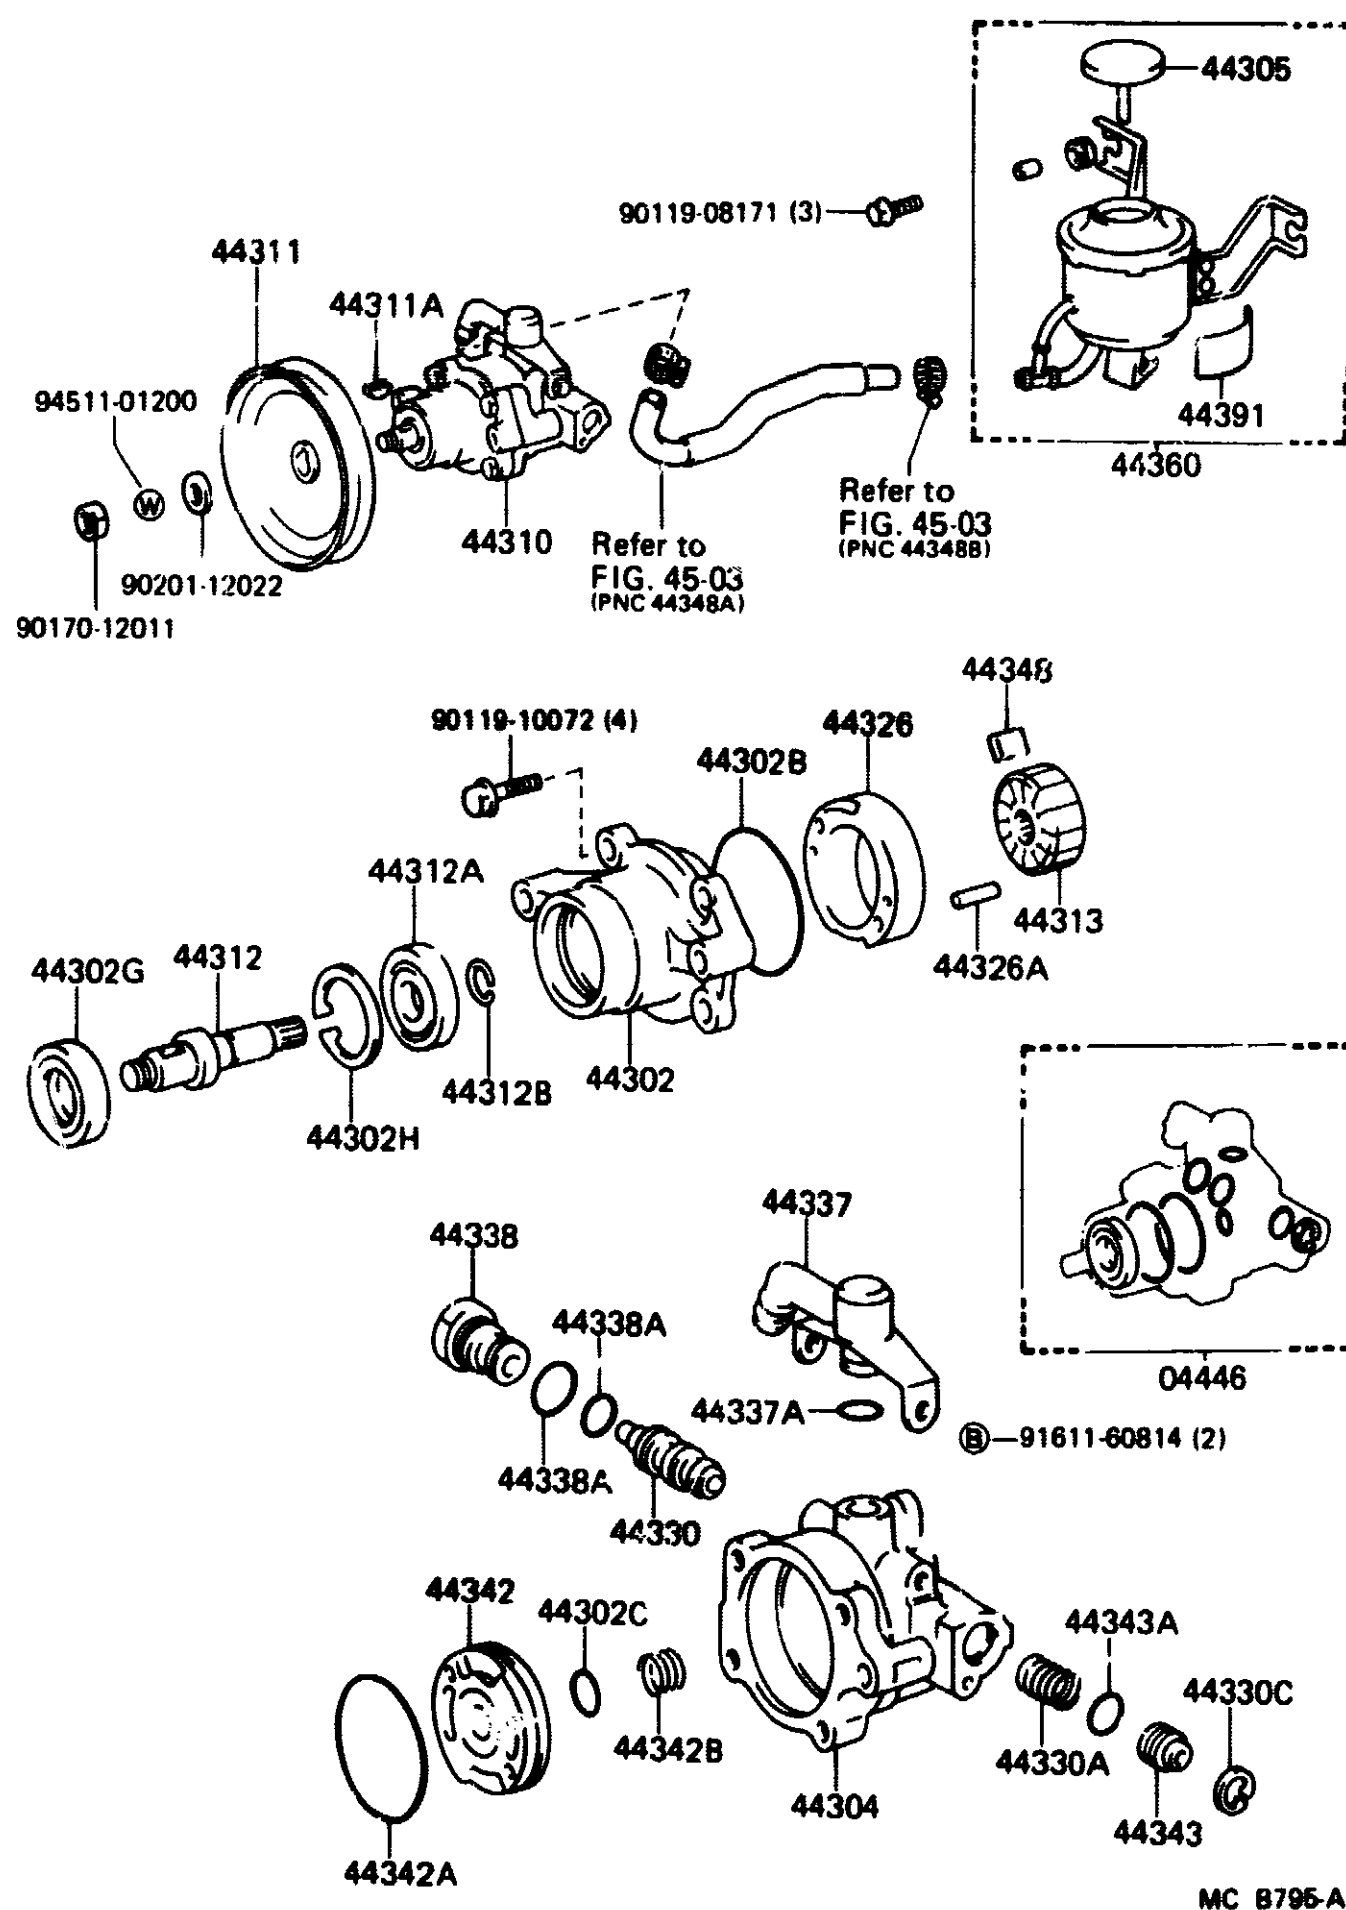

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	45-02 VANE PUMP & RESERVOIR						
8411-	BJ70	GASKET KIT, POWER STEERING PUMP		04446-35010-	1	81	
8411-	BJ70	HOUSING SUB-ASSY, PUMP, FRONT		44302-14010-	1	81	
8411-	BJ70	RING, O (FOR PUMP HOUSING)		90301-60001-	1	81	
8411-	BJ70	RING, O (FOR PUMP HOUSING)		96711-19016-	1	81	
8411-	BJ70	SEAL, TYPE T OIL (FOR PUMP HOUSING)		90311-24001-	1	81	
8411-	BJ70	RING, HOLE SNAP (FOR PUMP HOUSING OIL SEAL)		90521-44002-	1	81	
8411-8610	BJ70	HOUSING SUB-ASSY, PUMP, REAR		44304-60020-	1	81	
8610-	BJ70			44304-60021-	1		
8411-	BJ70	CAP SUB-ASSY, RESERVOIR		44305-30020-	1	81	
8411-	BJ70	PUMP ASSY, VANE		44320-60100-	1	81	
8411-	BJ70	PULLEY, VANE PUMP		44311-60050-	1	81	
8411-	BJ70	KEY, VANE PUMP PULLEY		90180-05008-	1	81	
8411-	BJ70	SHAFT, VANE PUMP		44312-12010-	1	81	

(8411-)

ILLUST.NO. 30F3

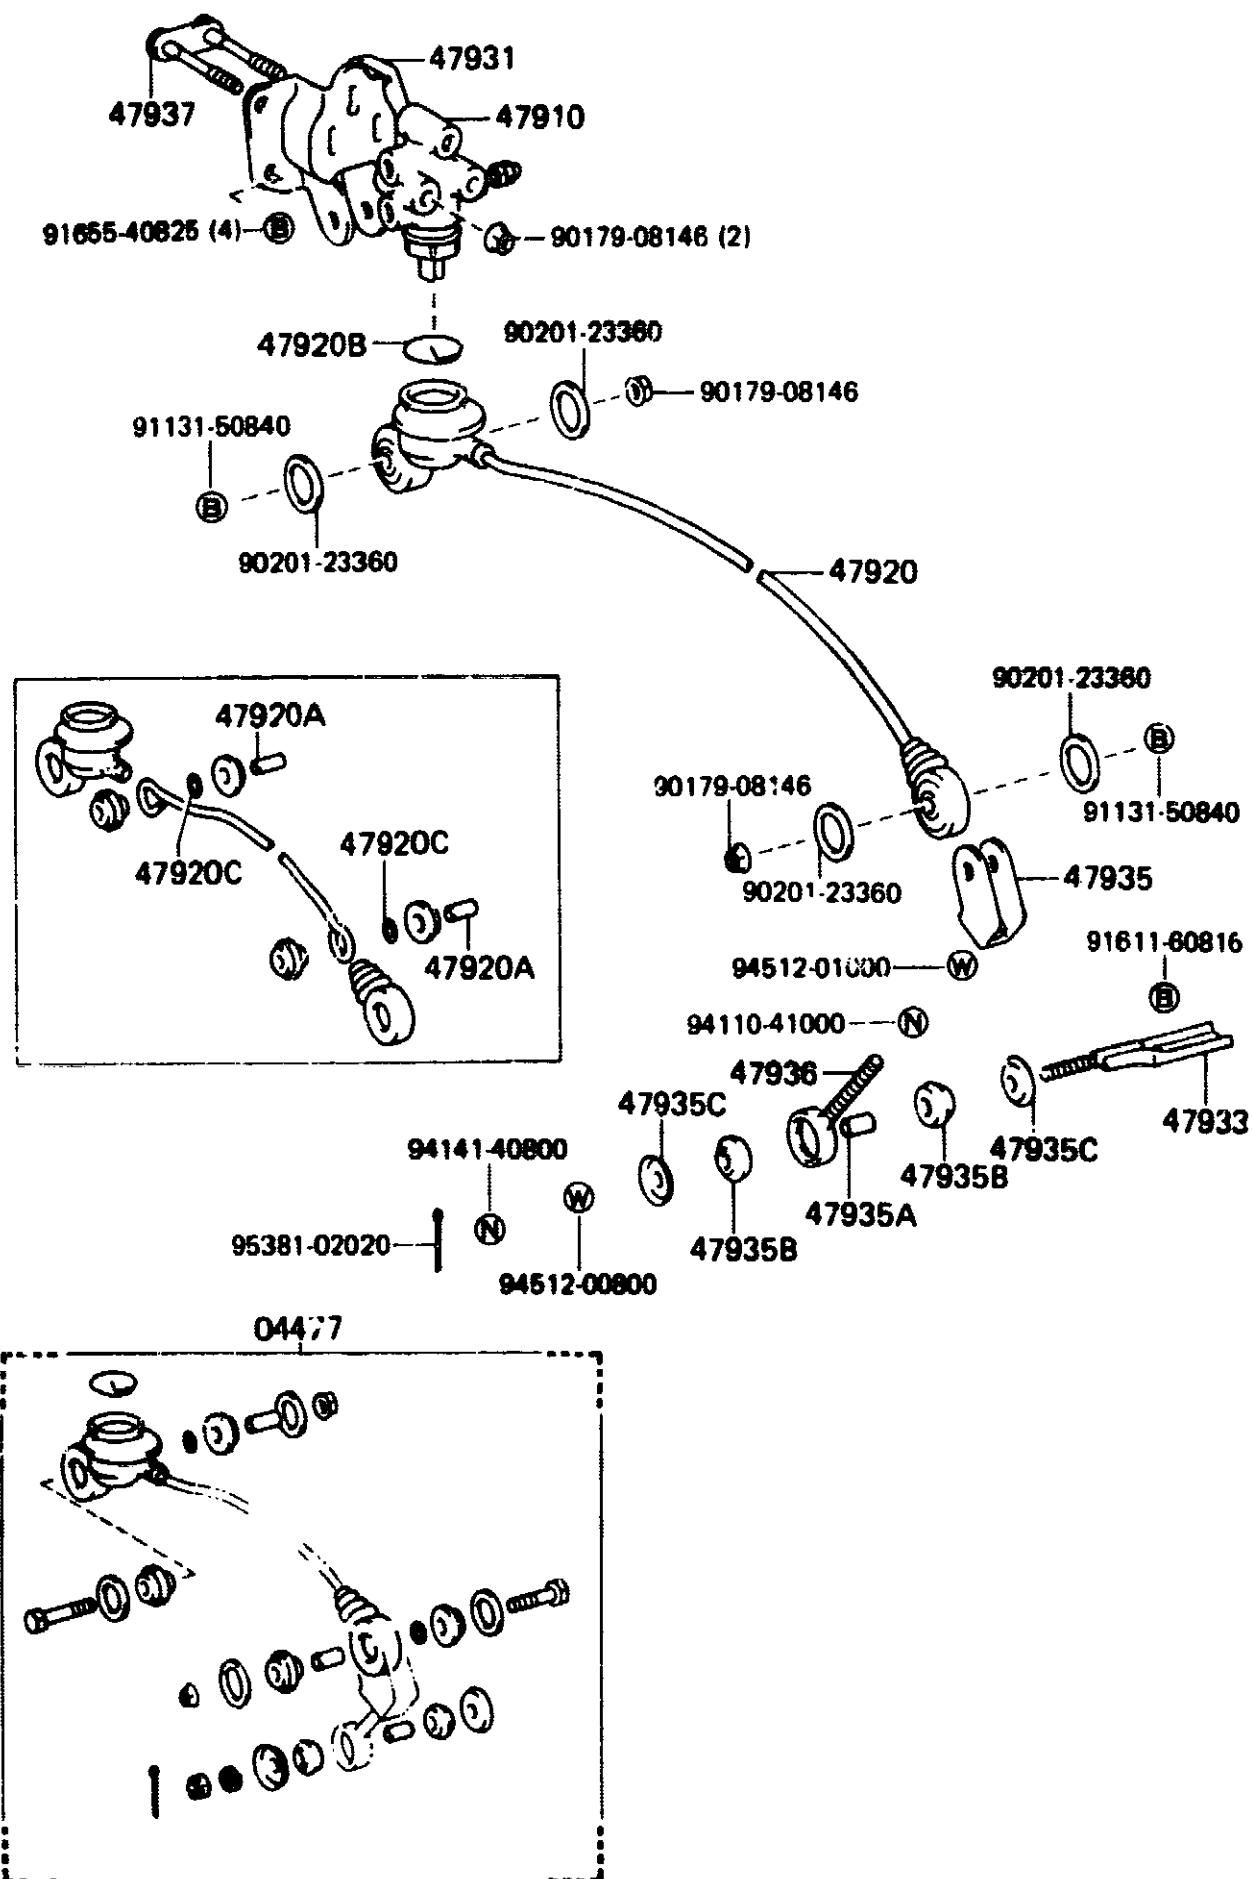

MC B861-B

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	47-08 BRAKE TUBE & CLAMP						
8411-	BJ70	04477 BUSH & BOOT KIT, LOAD SENSING SPRING		04477-60010-	1	81	
8411-	BJ70	47311 TUBE, FRONT BRAKE, NO.1		47312-60490-	1	81	
8411-	BJ70	47311B WAY, NO.1 (FOR FRONT BRAKE TUBE)		90413-10174-	1	81	
8411-	BJ70	47311G HOSE, FLEXIBLE (FOR BRAKE TUBE)		96940-33005-	1	81	
8411-	BJ70	47311H GROMMET (FOR BRAKE TUBE)		90480-01069-	5	81	
8411-8608	BJ70	47312 TUBE, FRONT BRAKE, NO.2		47313-60140-	1	81	140
8608-	BJ70			47313-60141-	1	141	
8411-	BJ70	47312E WAY, NO.2 (FOR FRONT BRAKE TUBE)		90413-10042-	1	81	
8411-8608	BJ70	47313 TUBE, FRONT BRAKE, NO.3		47314-60160-	1	81	140
8608-	BJ70			47314-60161-	1	141	
8411-	BJ70	47313A HOSE, FLEXIBLE (FOR FRONT)		96940-39855-	2	81	
8411-8608	BJ70	47314 TUBE, FRONT BRAKE, NO.4		47315-60320-	1	81	140
8608-	BJ70			47315-60321-	1	141	
8411-	BJ70	47315 TUBE, FRONT BRAKE, NO.5		47316-60190-	1	81	

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
17172-56022-	1-B3	22189-46010-	1-E4	22694-77130-	1-I4	26124-58020-	1-B5	28521-57060-	2-C9	31473-60100-	1-K5
17173-58010-	1-B3	-48031-	1-E4	22697-56041-	1-I4	26131-58023-	1-C5	-57061-	2-C9	-60110-	1-K5
17401-58060-	1-D3	-48032-	1-E4	22698-77131-	1-I4	-58024-	1-C5	28571-56120-	2-G9	31476-60050-	1-K5
17403-58060-	1-D3	-48033-	1-E4	22699-56130-	1-I4	26132-56010-	1-B5	-56130-	2-G9	31478-30010-	1-H10
17430-58180-	1-D3	-48034-	1-E4	22703-56040-	1-I4	-56011-	1-C5	28579-56030-	2-G9	-1-K10	
17567-61030-	1-D3	-48035-	1-E4	-77140-	1-I4	26171-56020-	1-C5	28590-56090-	2-G9	1-K5	
17571-56071-	1-D3	-48036-	1-E4	22811-56011-	1-C4	27020-56190-	1-I3	-56100-	2-G9	31481-60420-	1-F5
17700-58160-	1-F3	22195-48030-	1-F4	23300-56040-	1-A5	-56240-	1-I3	28610-54090-	2-C9	-60440-	1-F5
17705-61090-	1-F3	22197-77140-	1-I4	23303-56031-	1-A5	-56390-	1-I3	-54180-	2-C9	31484-60050-	1-F5
17791-56170-	1-G3	22303-47010-	1-H4	23311-56040-	1-A5	-56400-	1-I3	-58020-	2-C9	31488-60070-	1-J5
17801-68020-	1-F3	22308-56041-	1-H4	23312-56021-	1-A5	27036-56390-	1-I3	-64020-	2-C9	33030-60500-	1-L5
17841-68010-	1-F3	-56130-	1-H4	23319-48010-	1-A5	27310-56110-	1-I3	28611-64010-	2-C9	-60620-	1-L5
17845-61011-	1-F3	22318-48030-	1-H4	23323-56010-	1-A5	-56180-	1-I3	28621-57011-	2-C9	33046-60010-	1-E6
17881-58090-	1-F3	22319-77010-	1-H4	23338-54010-	1-A5	27312-57060-	1-I3	-57021-	2-C9	33102-60080-	1-G6
17882-58060-	1-F3	22320-58022-	1-H4	23351-54010-	1-A5	27313-57060-	1-I3	28624-57010-	2-C9	33111-60070-	1-M5
17885-58070-	1-F3	-58031-	1-H4	23353-54010-	1-A5	27315-57060-	1-J3	28631-57010-	2-C9	-60080-	1-M5
19000-58340-	1-C1	22323-58010-	1-H4	23600-68010-	1-A4	27330-56390-	1-J3	-57020-	2-C9	33118-36020-	1-A6
-58380-	1-C1	22326-58010-	1-H4	23618-56010-	1-A4	-64030-	1-J3	28800-45030-	2-E8	33119-36020-	1-A6
19850-68050-	1-H3	22329-77021-	1-H4	23619-46010-	1-A4	27333-57060-	1-I3	-45050-	2-E8	33122-60010-	1-G6
-68060-	1-H3	-77130-	1-H4	23620-68010-	1-A4	27350-56110-	1-J3	-61010-	2-E8	33124-36010-	1-M5
19871-56020-	1-H3	22333-56040-	1-H4	23624-54020-	1-A4	27351-56013-	1-J3	-61030-	2-E8	33131-60030-	1-A6
22100-58022-	1-C4	22336-68010-	1-H4	23628-46010-	1-A4	27353-56390-	1-J3	28897-38010-	2-E8	-60050-	1-A6
-58032-	1-C4	22354-77050-	1-B5	23629-46010-	1-A4	-57070-	1-J3	-45040-	2-E8	33132-36010-	1-A6
22102-77021-	1-D4	22355-36010-	1-B5	23631-46010-	1-A4	27356-54170-	1-J3	-54020-	2-E8	-60020-	1-A6
22103-48030-	1-D4	22361-76010-	1-H4	23632-46010-	1-A4	27371-56070-	1-J3	29300-56070-	1-M3	33142-60020-	1-M5
22104-77020-	1-D4	22362-76010-	1-H4	23633-46010-	1-A4	27372-56070-	1-J3	29311-76010-	1-M3	-60030-	1-A7
22105-58010-	1-D4	22363-76010-	1-H4	23634-46010-	1-B4	27373-57070-	1-J3	29331-56070-	1-M3	33151-60010-	1-A6
22106-46010-	1-D4	22364-76010-	1-H4	23635-46010-	1-B4	-57120-	1-J3	29369-56070-	1-M3	33201-36030-	1-H6
22114-48030-	1-D4	22378-76010-	1-H4	23636-46010-	1-B4	27388-57070-	1-J3	31111-60130-	1-M5	33202-60030-	1-H6
22115-77020-	1-D4	22408-68010-	1-H4	23637-46010-	1-B4	27410-56390-	1-J3	-60140-	1-M5	-60031-	1-H6
22116-46010-	1-D4	22442-77130-	1-H4	23638-46010-	1-B4	-57070-	1-J3	-60180-	1-M5	33203-60010-	1-H6
22131-77020-	1-D4	-77131-	1-H4	23639-46010-	1-B4	27411-57060-	1-J3	-60190-	1-M5	33211-36011-	1-G6
22142-77020-	1-D4	22449-48030-	1-I4	23641-46010-	1-B4	27412-57060-	1-I3	31126-60030-	1-D5	33212-36020-	1-G6
22143-77020-	1-D4	22457-58010-	1-H4	23642-46010-	1-B4	27441-56090-	1-J3	31204-60080-	1-D5	33213-60050-	1-G6
22144-46010-	1-E4	22501-77021-	1-J4	23643-46010-	1-B4	27700-57050-	1-J3	31210-36100-	1-D5	-60051-	1-G6
22145-46010-	1-E4	22510-56040-	1-J4	23644-46010-	1-B4	-57060-	1-J3	31231-60080-	1-D5	33214-60021-	1-G6
22146-56010-	1-E4	22512-77020-	1-J4	23645-46010-	1-B4	27790-13010-	2-C9	31232-60020-	1-D5	33222-36030-	1-H6
22147-77020-	1-E4	22513-77020-	1-J4	23646-46010-	1-B4	-57010-	2-C9	31236-60030-	1-D5	33223-36020-	1-H6
22148-46010-	1-E4	22515-77021-	1-J4	23647-46010-	1-B4	28011-54010-	1-K3	31250-36280-	1-D5	33225-36030-	1-H6
22149-76010-	1-E4	22518-56010-	1-J4	23648-46010-	1-B4	28100-56180-	1-K3	-36281-	1-D5	33226-60010-	1-H6
22150-67010-	1-D4	-56011-	1-J4	23649-46010-	1-B4	-56181-	1-K3	-60090-	1-D5	33241-60050-	1-H6
22155-76010-	1-E4	-56012-	1-J4	23651-46010-	1-B4	-56190-	1-K3	31301-60100-	1-F5	33242-60030-	1-H6
22156-76010-	1-E4	-56013-	1-J4	23652-46010-	1-B4	28115-56180-	1-K3	-60101-	1-F5	33243-60070-	1-H6
22157-48023-	1-E4	-77020-	1-J4	23654-46010-	1-B4	28118-77090-	1-K3	31321-14020-	1-C10	-60071-	1-H6
-48024-	1-E4	22519-48010-	1-J4	23701-56030-	1-C4	28119-77090-	1-K3	31401-60070-	1-H5	33244-60010-	1-H6
22161-76010-	1-E4	22521-77021-	1-J4	23702-56030-	1-C4	28120-47040-	1-K3	-60011-	1-H5	-60011-	1-H6
22162-76010-	1-E4	22522-77020-	1-K4	23703-56020-	1-C4	-77090-	1-K3	31402-20010-	1-H5	33245-60031-	1-H6
22163-76010-	1-E4	22524-77021-	1-K4	23704-56020-	1-C4	22130-54010-	1-K3	-30030-	1-H5	-60032-	1-H6
22164-76010-	1-E4	22525-77020-	1-K4	23741-56010-	1-C4	28139-47070-	1-K3	31404-36020-	1-H5	33251-60021-	1-I6
22165-76010-	1-E4	22526-77020-	1-K4	23760-56022-	1-B4	-77110-	1-L3	31410-60290-	1-H5	-60022-	1-I6
22166-76010-	1-E4	22527-56010-	1-K4	23770-56050-	1-B4	28140-77090-	1-L3	31426-30011-	1-H5	-60022-	1-I6
22173-46010-	1-E4	22528-77020-	1-K4	-56051-	1-B4	29150-56180-	1-L3	31430-60030-	1-J5	-60022-	1-I6
22174-47010-	1-E4	22529-67010-	1-K4	-56052-	1-B4	-56181-	1-L3	31436-60040-	1-J5	33261-60010-	1-I6
22177-56042-	1-E4	22535-46010-	1-K4	23801-56060-	1-C4	-56190-	1-L3	31437-60060-	1-J5	-60010-	1-I6
22178-56011-	1-H4	22610-58010-	1-L4	23802-56040-	1-C4	28160-47040-	1-L3	31440-60040-	1-J5	33280-60010-	1-I6
22181-56040-	1-E4	22611-46010-	1-F4	23930-58050-	1-A5	-77090-	1-L3	31449-60010-	1-J5	33306-36020-	1-D6
22182-46010-	1-E4	22614-56020-	1-L4	26100-58022-	1-B5	28165-77790-	1-L3	31451-60070-	1-H5	-60010-	1-D6
22183-46010-	1-E4	22615-56040-	1-L4	26111-58022-	1-B5	28222-77090-	1-L3	31453-22010-	1-H5	33309-60040-	1-L6
22184-46010-	1-E4	22616-56030-	1-L4	26113-58021-	1-B5	28228-56080-	1-L3	-35010-	1-H5	-60070-	1-L6
22185-46010-	1-E4	22626-56050-	1-L4	-68012-	1-B5	28229-56080-	1-L3	31454-30030-	1-H5	33311-60080-	1-D6
22186-46010-	1-E4	22680-48062-	1-H4	26114-76010-	1-B5	28234-77090-	1-L3	31458-60010-	1-J5	-60110-	1-D6
-48010-	1-E4	22686-48061-	1-I4	26115-76010-	1-B5	28300-54070-	2-C9	31459-60070-	1-H5	-60111-	1-D6
22187-46010-	1-E4	22692-56041-	1-I4	26116-76010-	1-B5	-56020-	2-C9	31470-60120-	1-K5	33318-36012-	1-D6
22188-46010-	1-E4	22693-77130-	1-I4	26118-48014-	1-B5	28521-57051-	2-C9	-60130-	1-K5	-60010-	1-D6

B15**LAND CRUISER** Hardtop U.S.A.**PRODUCTION FRAME NUMBER REFERENCE LIST**

Applica- ble Model	Production Date	8401	8402	8403	8404	8405	8406	8407	8408	8409	8410	8411	8412
	Assembly Line												
RJ70	TMC Honsya Plant											0000001	0000476

Applica- ble Model	Production Date	8501	8502	8503	8504	8505	8506	8507	8508	8509	8510	8511	8512
	Assembly Line												
BJ70	TMC Honsya Plant	0000904	0001213	0001629	0001992	0002310	0002708	0003042	0003477	0003752	0004000	0004197	0004378

Applica- ble Model	Production Date	8601	8602	8603	8604	8605	8606	8607	8608	8609	8610	8611	8612
	Assembly Line												
BJ70	TMC Honsya Plant	0004511	0004751	0004944	0005125	0005312	0005472	0005611	0005770	0005908	0006049	0006268	0006607

Applica- ble Model	Production Date	8701	8702	8703	8704	8705	8706	8707	8708	8709	8710	8711	8712
	Assembly Line												
BJ70	TMC Honsya Plant	0006142											

MARK & ABBREVIATION LIST


(1) Abbreviations

Mark	Definition	Mark	Definition	Mark	Definition	Mark	Definition
..	Among	ACV	Air Control Valve	GS	Japan Storage Battery Company Limited	LH	Left-hand
.	And	AI	Air Injection	GT	GT type	LHD	Left-hand Drive
+	And (Plus)	ARAKAWA	Arakawa Auto Body Company Limited	GTS	GT-S type	LPB	Less Passive Belt
-	Excluded (Minus)	ASCO	Aisin Sasaki Company Limited	HA	High Altitude Specification	LT	LT type
#	All series	ASSY	Assembly	HAC	High Altitude Compensator	LSD	Limited Slip Differential
X	All series (All)	ASV	Air Switching Valve	HDX	Hi-deluxe type	LWR	Lower
1SR	First	ATM	Automatic Transmission	HLF	0.5 ton	M	Meters
2D	2-door	B-	Brownish	HT	Hardtop	-M	 Metallic
2DS	2-door Sedan	BN	Bench seat	HVY	Heavy	MARUKO	Maruko Keihoki Company Limited
2WD	2-door Station Wagon	BRIDGESTONE	Bridgestone Company Limited	ID	Inside Diameter (mm)	MATSUSHITA	Matsushita Electric Industrial Company Limited 
2FC	2-speed Automatic Transmission, Floor Shift	BRK	Brake	IKI	Ichikoh Industries Limited	M/C	Master Cylinder
2HC	2-speed Automatic Transmission, Column Shift	BSTR	Booster	IM-FB	Imitation Fabric	MM	Millimeters
2ND	Second	BVSV	Bimetal Vacuum Switching	IN	Inches	MTM	Manual Transmission
3D	3-door	CBR	Carburetor system	ISO	International Organization for Standardization	MURAKAMI	Murakami Kaimeido Company Limited 
3DS	3-door Sedan (Hatch-back)	CBU	Completely Built Unit	IV	Incomplete Vehicles	N	Number of teeth
3FC	3-speed Automatic Transmission, Floor Shift	CITIZEN	Rhythm Watch Company Limited	IV1	Chassis & Windshield	NACHI	Fujikoshi Limited
3H	3-speed Manual Transmission, Column Shift	CM	Centimeters	IV3	Chassis & Cab	NIHON	Nihon Thermostat Company Limited
3HC	3-speed Automatic Transmission, Column Shift	CM2	Centimeters square	JECO	Jeco Company Limited <i>JECO</i>	NOK	Nippon Oilseal Industry Company Limited
3RD	Third	CND	For Canada	JKC	Jidnsha Kiki Company Limited	NSK	Nippon Seiko Company Limited
3QT	0.75 ton	CP	Coupe	KAYABA	Kayaba Industry Company Limited	OD	Outside Diameter (mm)
4D	4-door	CR-PLATED	Chrome Plated	KCAL	Kilo Calorie	O/S	Oversize
4DS	4-door Sedan	CTR	Center	K-FB	Knit Fabric	P	Pitch
4DW	4-door Station Wagon	CVT	Continuously Variable	K-TY	Knit Tape Yarn	P-	Purplish
4F	4-speed Manual Transmission, Floor Shift	CW	Co. ding	KG	Kilograms	P & B	Proportioning & By-pass Valve
4HC	4-speed Automatic Transmission, Floor Shift	D-	Dark	KG/CM2	Kilograms per centimeter square	PCV	Positive Crankcase Ventilation System
4H	4-speed Manual Transmission, Column Shift	DENSO	Nippondenso Company Limited 	KM	Kilometers	PF	Perforated foam coated vinyl leatherette
4TH	Fourth	DIFF	Differential	KOBE	Shinkobe Electric Machinery Company Limited	PIC	Pickup
5D	5-door	DLX	Deluxe type	KOITO	Koito Manufacturing Company Limited	PS	Power Steering
5DS	5-door Sedan (Hatch-back)	DSL	Diesel	KOKI	Toyoda Machine Works Company Limited (Toyoda Koki)	PTO	Power Take-off
5F	5 speed Manual Transmission, Floor Shift	DUNLOP	Dunlop Rubber Company (Japan) Limited	KOYO	Koyo Seiko Company Limited	P/V	Proportioning Valve
5TH	Fifth	DX	DX type (Deluxe type)	KUZEH	Kuzeh Company Limited	R	Ratio
6F	6-speed Manual Transmission, Floor Shift	EDIC	Electronic Diesel Injection Control	KW	Kilowatts	RB	With Roll over
&	And	EFI	Electronic Fuel Injection System	L	Length (mm)	RCB	Regular Cab
A	Amperes	EGR	Exhaust Gas Recirculation System	L-	Light	REP	Repair
ABV	Air By-pass Valve	EGR-VM	EGR Vacuum Modulator	LB	Liftback	RH	Right-hand
		ESC	Electronic Skid Control	LB	Pounds	RHD	Right hand Drive
		EXCL/	Exclude	LE	LE type	RR	Rear
		FR	Fabric	LG	LG type	S	Screw Length (mm)
		FR	Front				
		FUJI-THOMSON	Fuji-Thomson Company Limited				
		G	Grams				
		G-	Greenish				
		GL	GL type				

(U.S.A. 1/2)

(8411-)

GENUINE TOYOTA PARTS

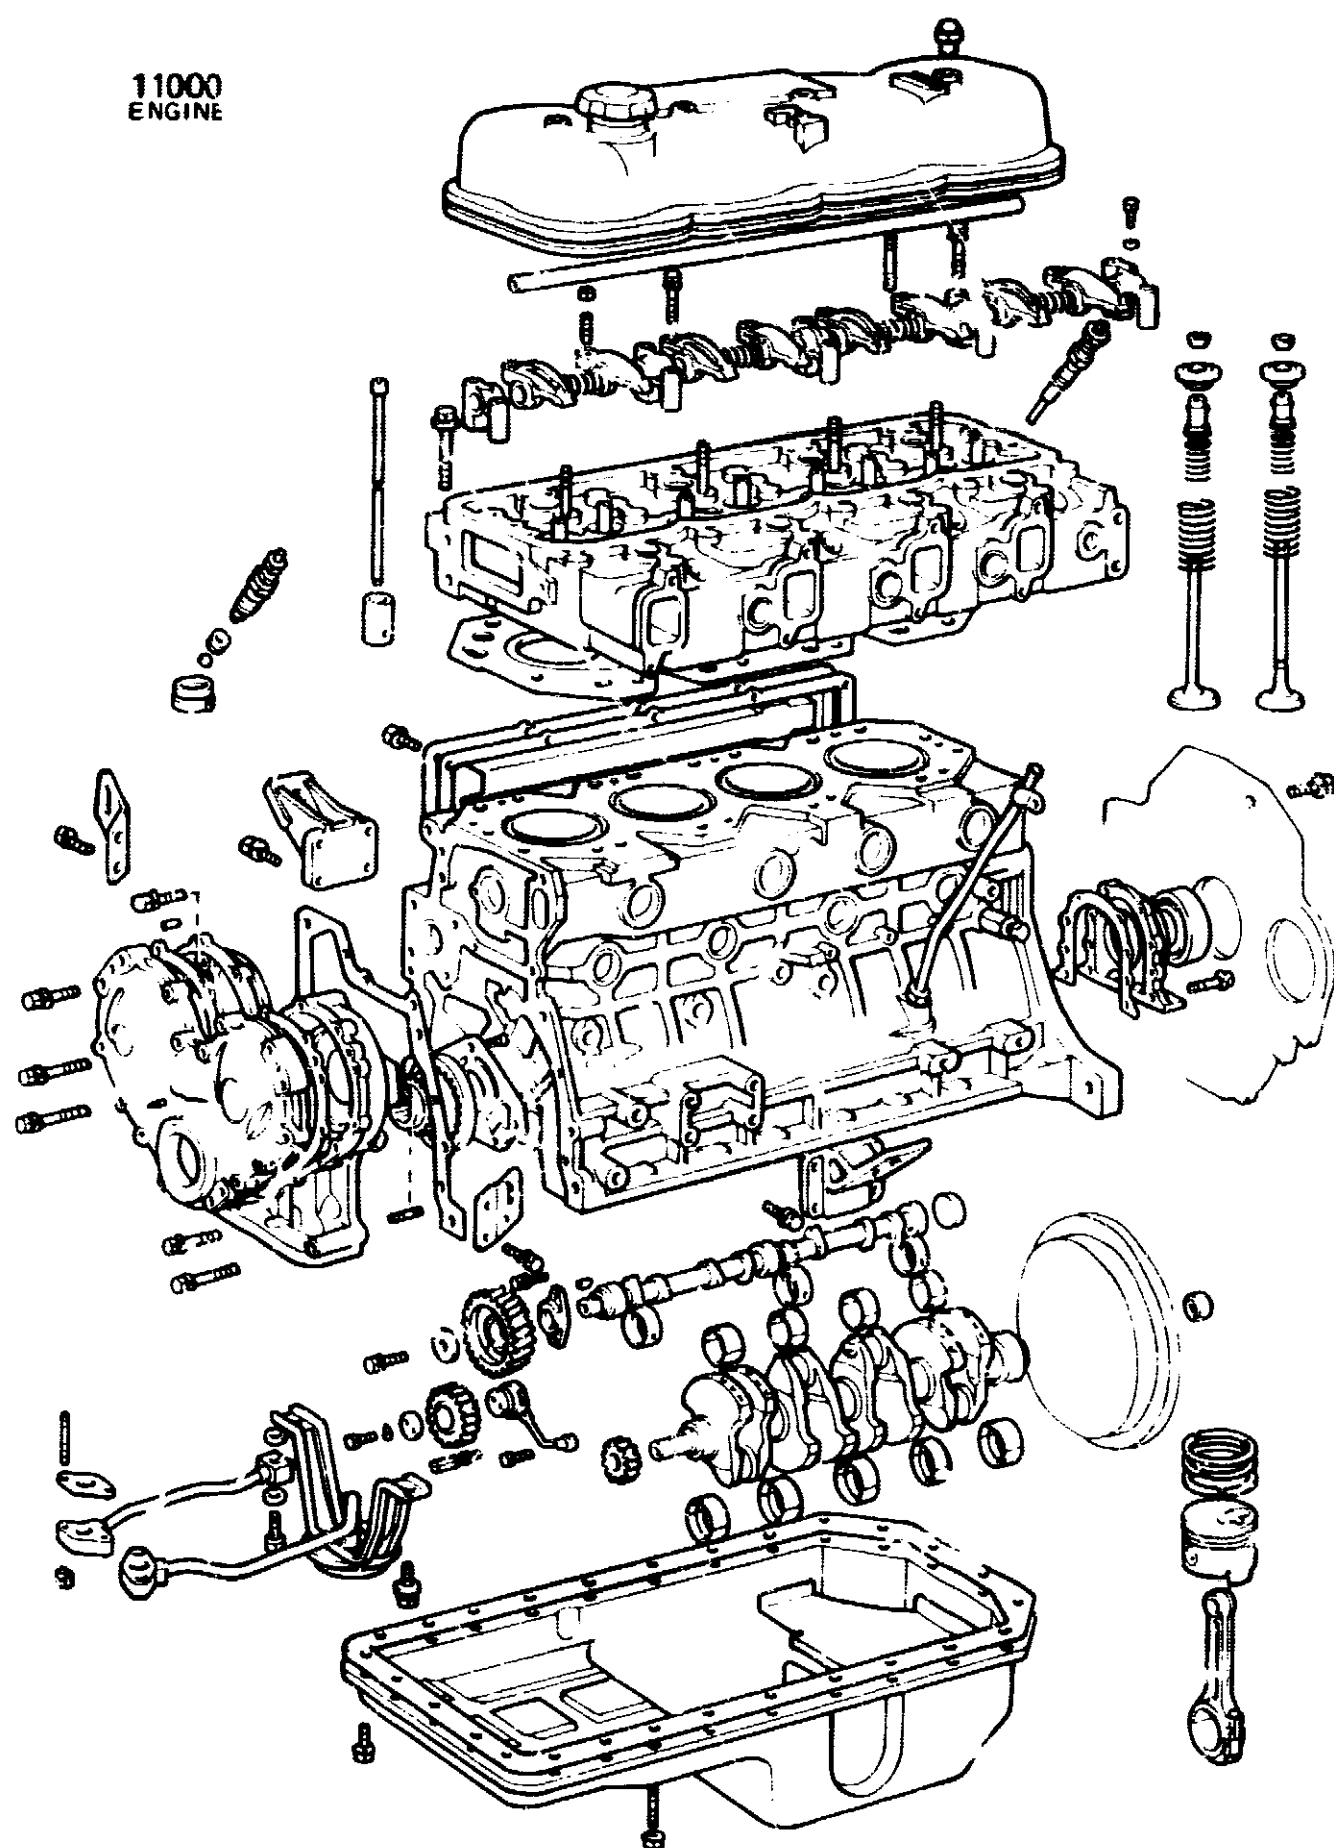

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	11-01 PARTIAL ENGINE ASSEMBLY						
	+-----+ 11000 ENGINE ASSY, PARTIAL +-----+						
8411-8501	3B..BJ70			# 19000-58380- (19000-58340-	1	81	
8501-	3B..BJ70			19000-58340-	1		


FIG.13-02 CAMSHAFT & VALVE

1-C2

M74-13-0010



GENUINE TOYOTA PARTS

(8411-)

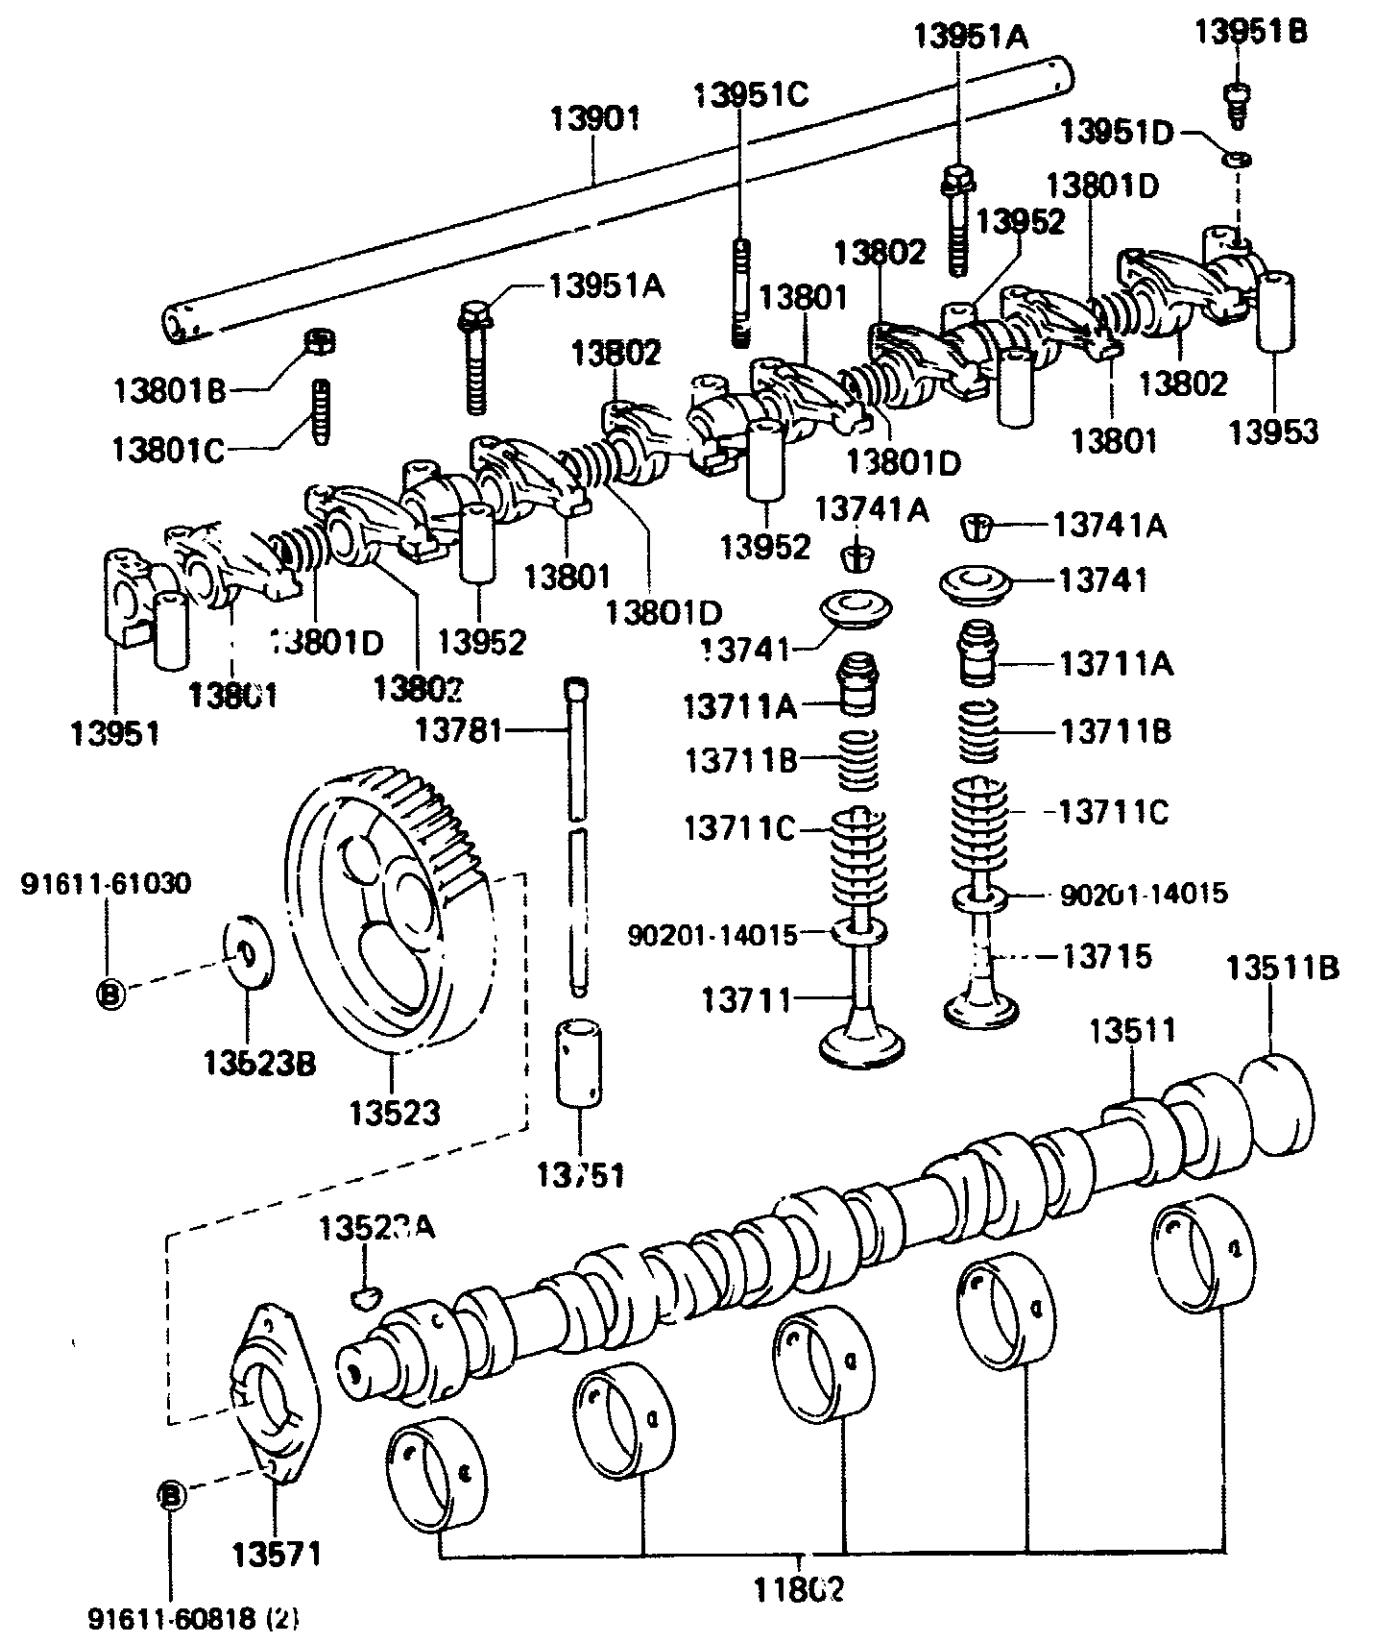

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	13-02 CAMSHAFT & VALVE						
8411-8506	11802	BEARING SET, CAMSHAFT		11802-56020-	1	81	
8606-	3B..BJ70			11802-56021-	1		
8411-	13511	CAMSHAFT		13511-56030-	1	81	
8411-	3B..BJ70						
8411-	13511B	PLUG, EXPANSION (FOR CAMSHAFT)		90331-56001-	1	81	
8411-	3B..BJ70	OD=56					
8411-	13523	GEAR OR SPROCKET, CAMSHAFT TIMING		13523-56040-	1	81	
8411-	3B..BJ70						
8411-	13523A	KEY, WOODRUFF (FOR TIMING GEAR)		95161-10519-	1	81	
8411-	3B..BJ70						
8411-	13523B	WASHER, PLATE (FOR TIMING GEAR)		90201-10227-	1	81	
8411-	3B..BJ70						
8411-	13571	PLATE, CAMSHAFT THRUST		13571-56020-	1	81	
8411-	3B..BJ70						
8411-	13711	VALVE, INTAKE		13711-58010-	4	81	
8411-	3B..BJ70						
8411-	13711A	SEAL OR RING, O (FOR VALVE STEM OIL)		90913-02051-	8	81	
8411-	3B..BJ70						
8411-	13711B	SPRING, COMPRESSION (FOR INNER)		90501-23018-	8	81	
8411-	3B..BJ70						
8411-	13711C	SPRING, COMPRESSION (FOR OUTER)		90501-47003-	8	81	
8411-	3P..BJ70						
8411-	13715	VALVE, EXHAUST		13715-58011-	4	81	
8411-	3B..BJ70						

(8411-)

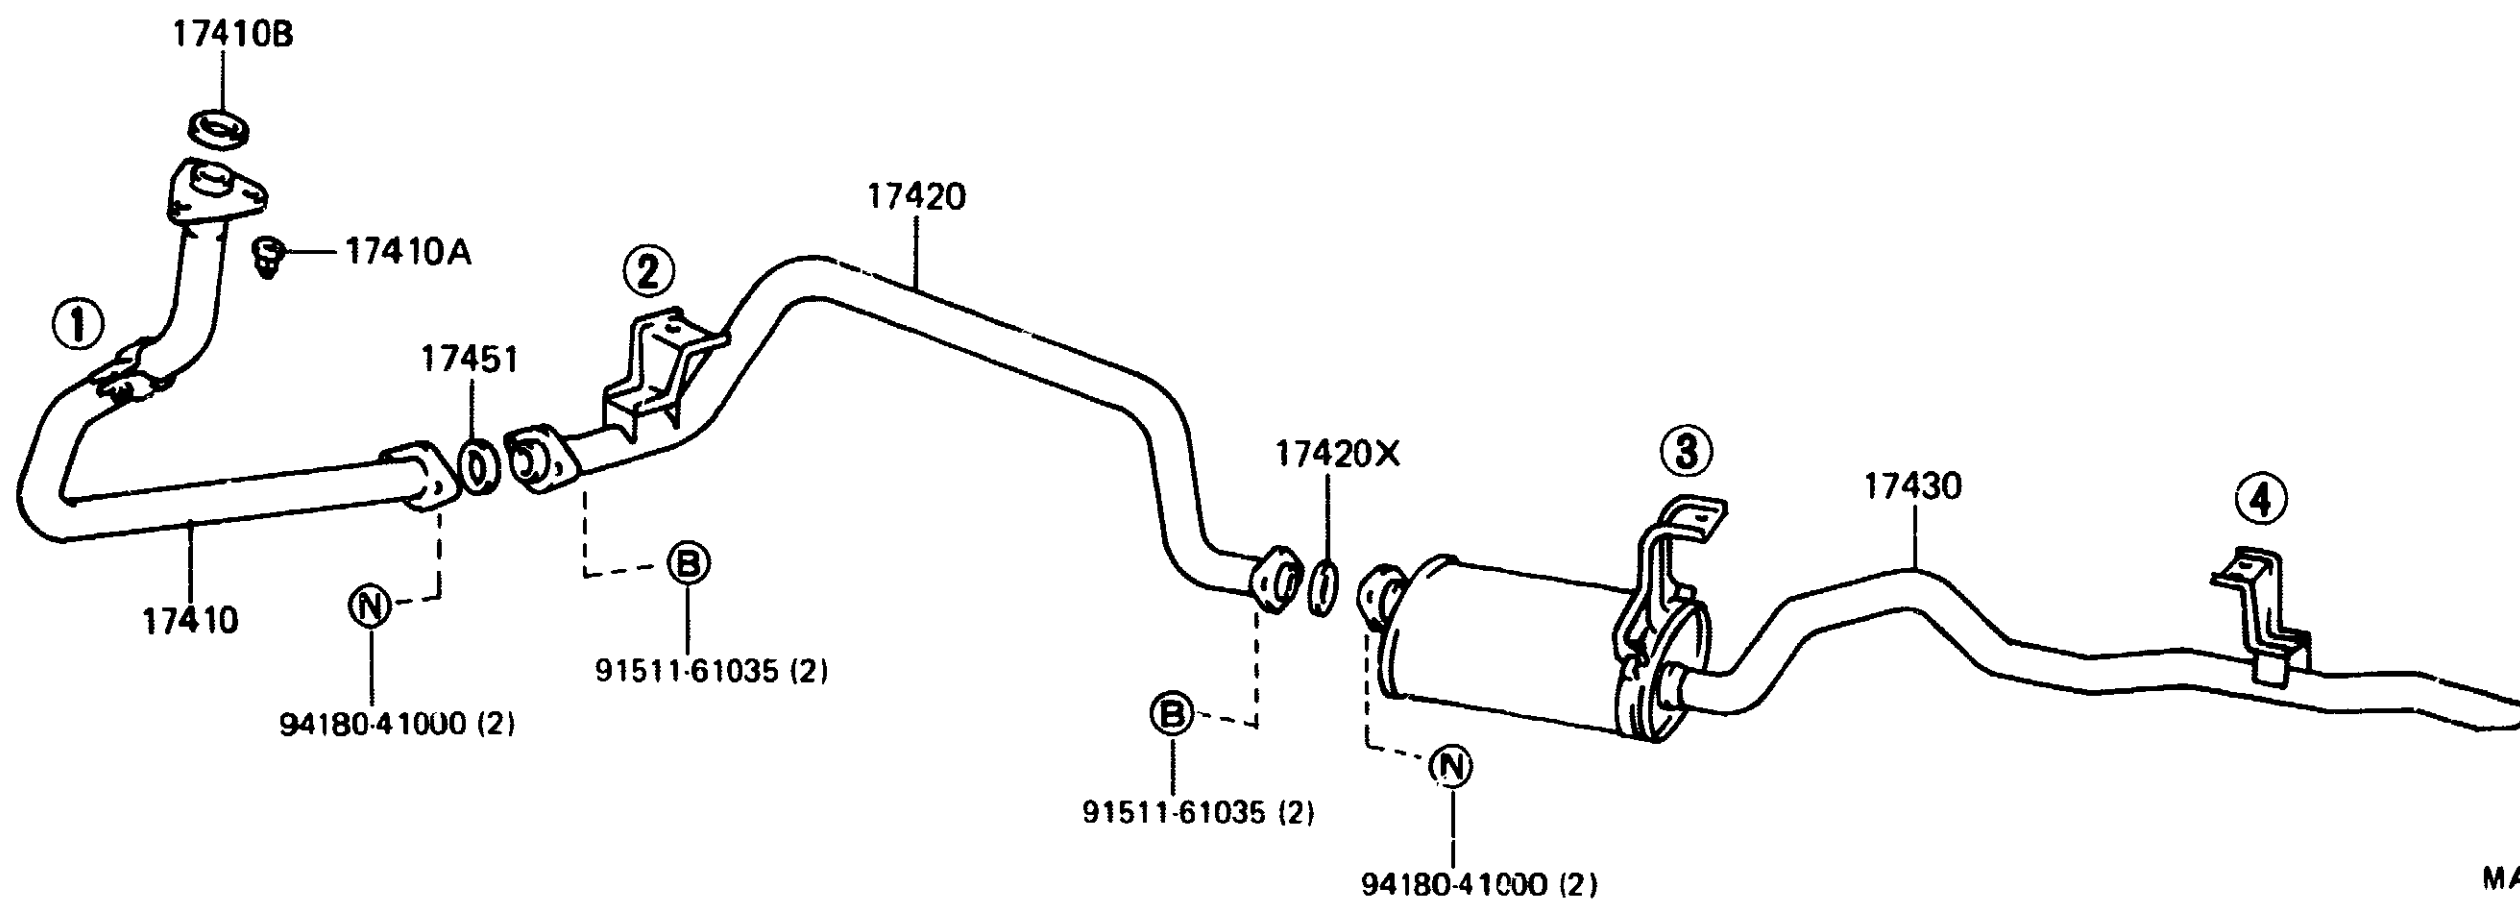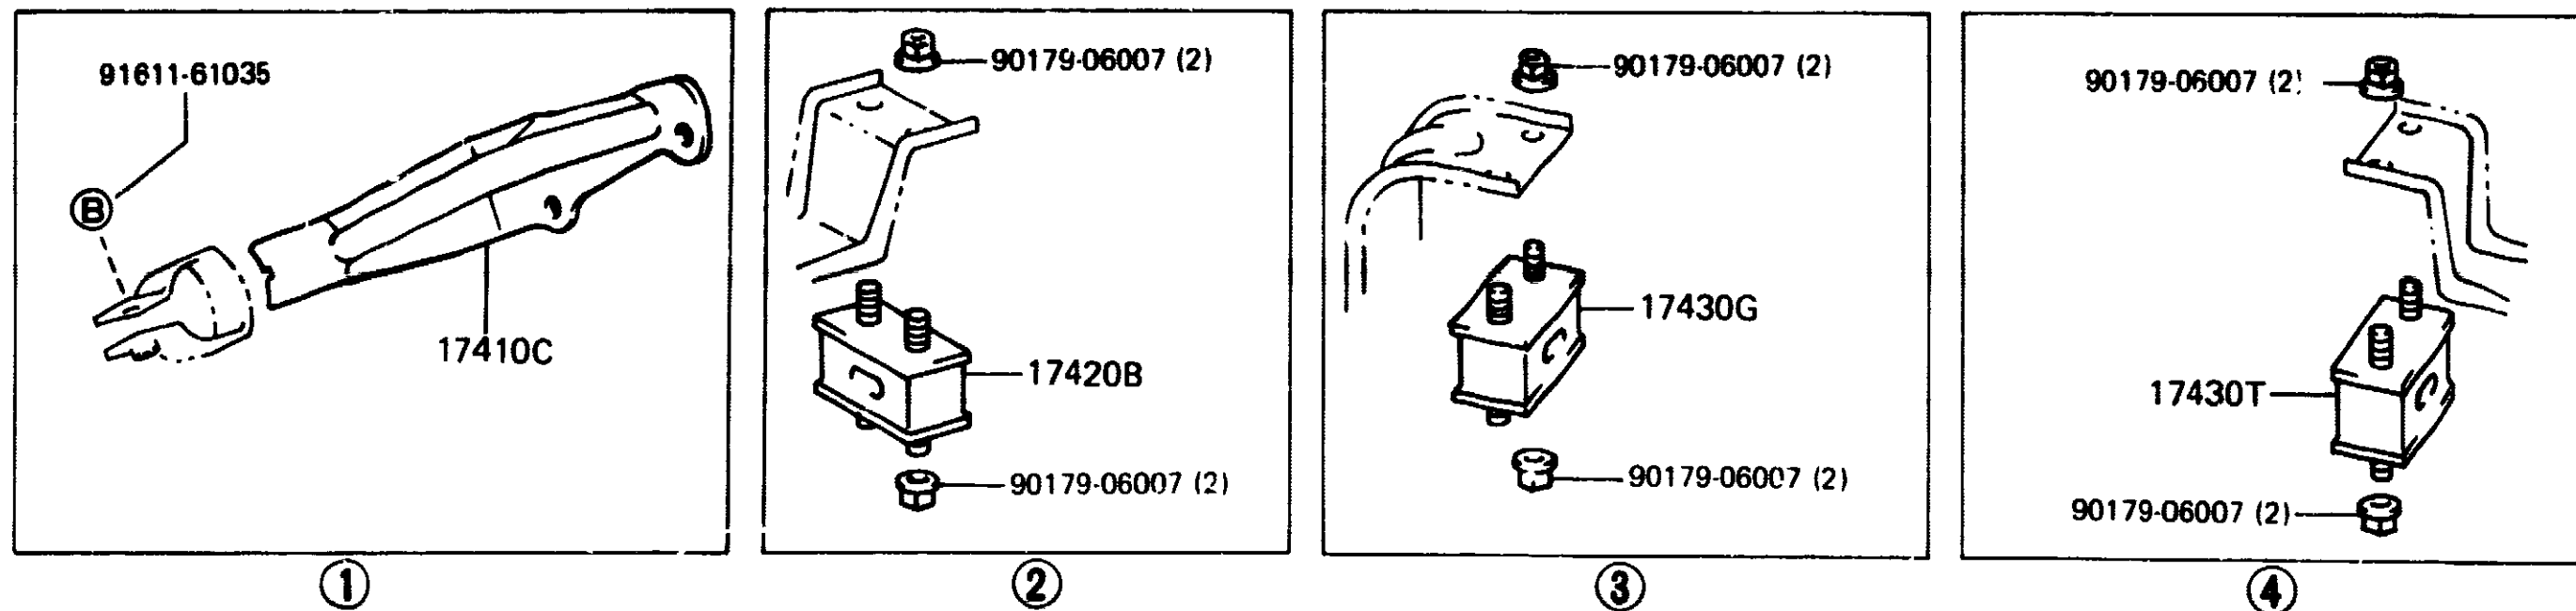

MA 7935


FIG.22-02 INJECTION PUMP ASSEMBLY

1-C4

M74-13-0023

(8411-)

GENUINE TOYOTA PARTS

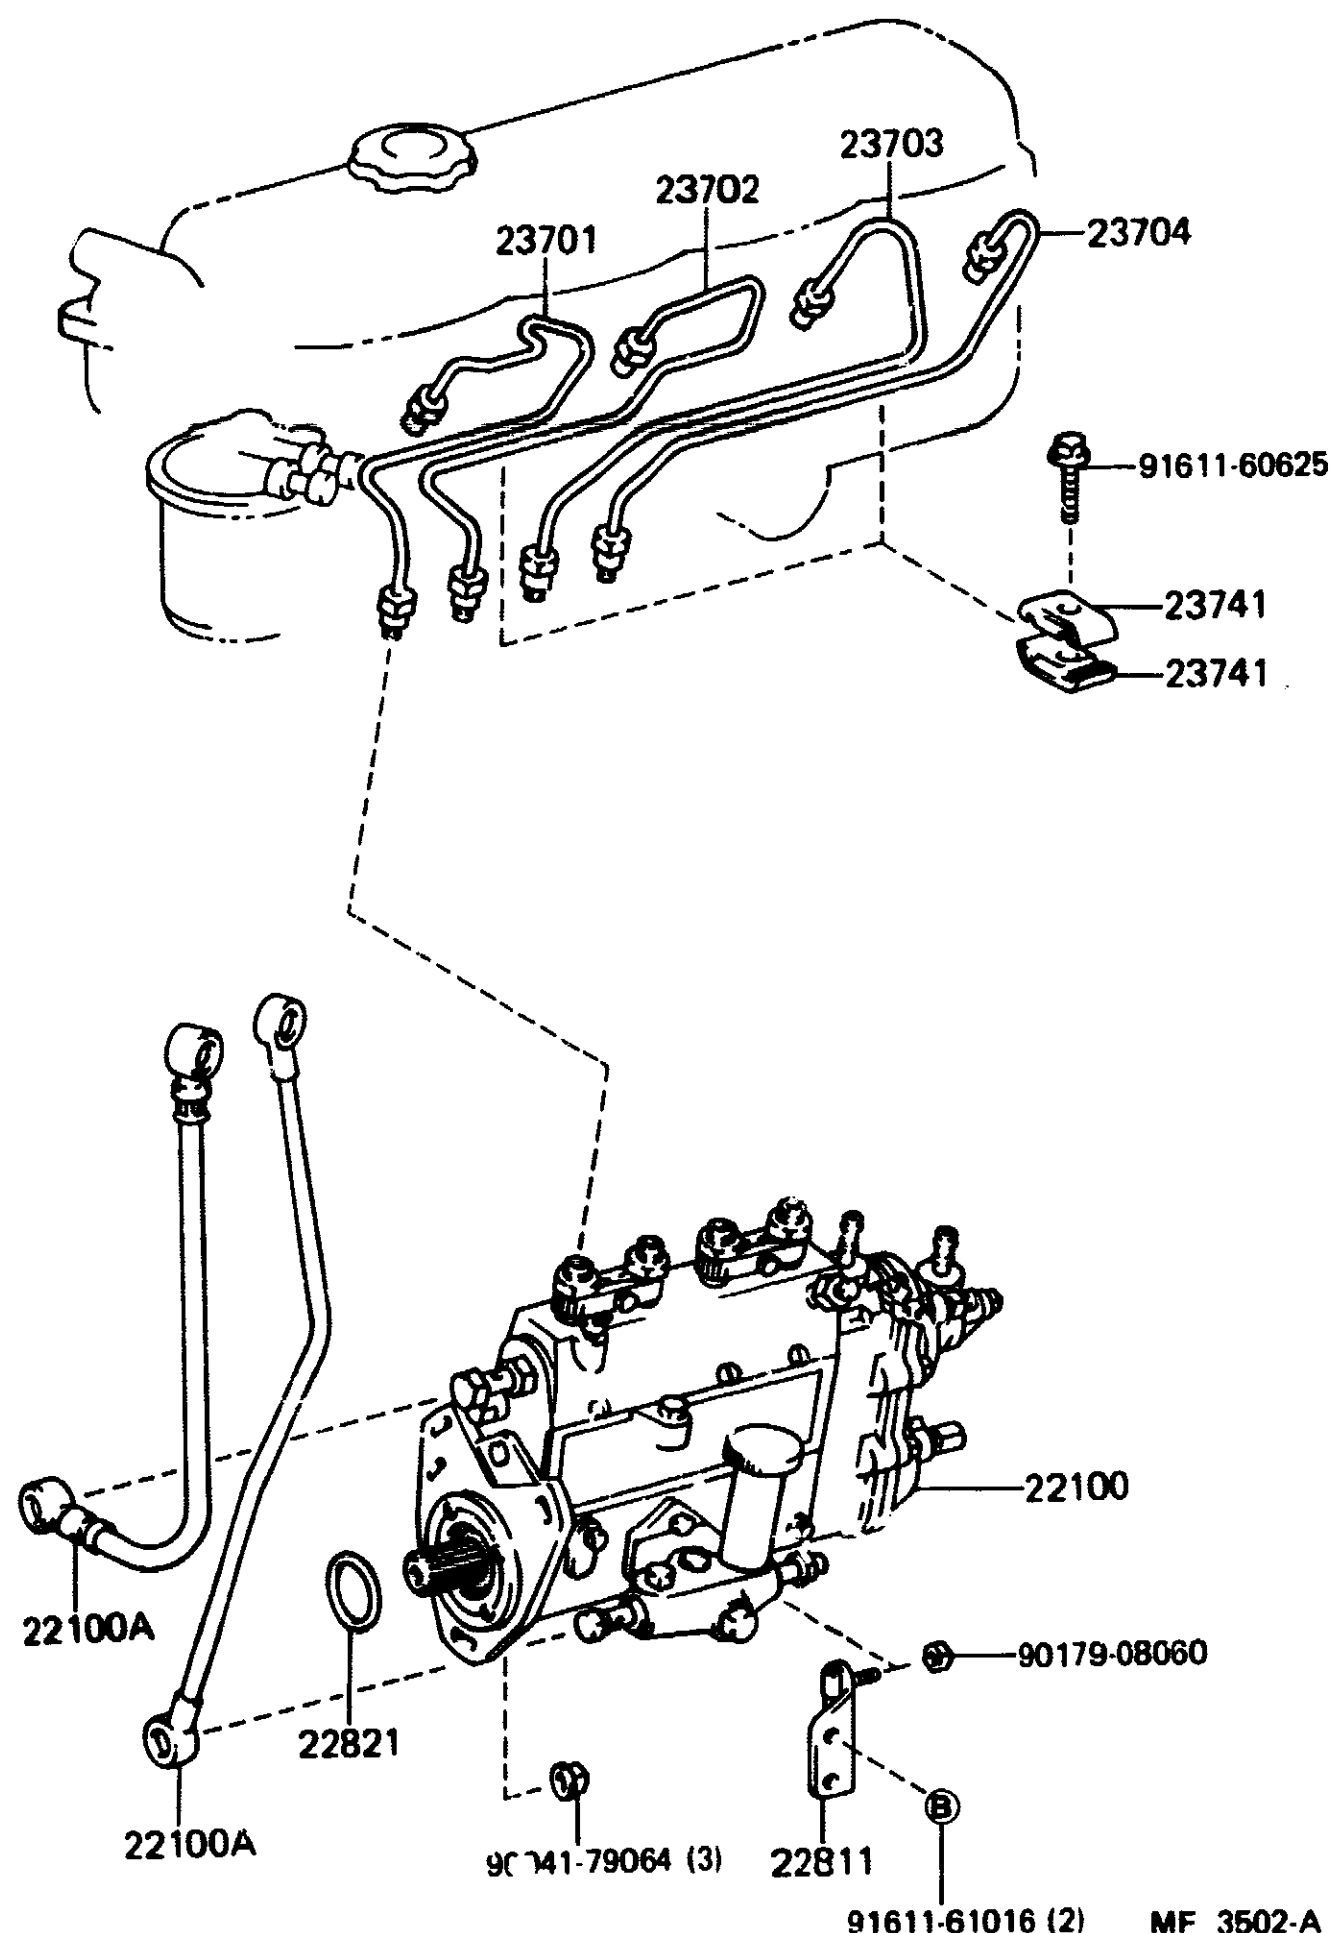

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	22-02 INJECTION PUMP ASSEMBLY						
8411-8608	22100	PUMP ASSY, INJECTION		22100-58032-	1	81	140
8608-	3B..BJ70			22100-58022-	1	141	
8411-	22100A	HOSE OR PIPE, FUEL (FOR INJECTION PUMP TO FUEL FILTER)		23801-56060-	1	81	
8411-	3B..BJ70	PIPE, L=300		23802-56040-	1	81	
8411-	22811	STAY, INJECTION PUMP		22811-56011-	1	81	
8411-	3B..BJ70			90301-77001-	1	81	
8411-	22821	GASKET, INJECTION PUMP		23701-56030-	1	81	
8411-	23701	PIPE SUB-ASSY, INJECTION, NO.1		23702-56030-	1	81	
8411-	3B..BJ70			23703-56020-	1	81	
8411-	23702	PIPE SUB-ASSY, INJECTION, NO.2		23704-56020-	1	81	
8411-	3B..BJ70			23741-56010-	4	81	
8411-	23703	PIPE SUB-ASSY, INJECTION, NO.3					
8411-	3B..BJ70						
8411-	23704	PIPE SUB-ASSY, INJECTION, NO.4					
8411-	3B..BJ70						
8411-	23741	CLAMP, INJECTION PIPE, NO.1					
8411-	3B..BJ70						

1-C6

(8411-)




FIG. 36-10

GENUINE TOYOTA PARTS

1-C7

M74-15-0621

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	36-10 TRANSFER GEAR						
8411-	BJ70	GEAR, SPEEDOMETER DRIVE (FOR TRANSFER)		33481-60060-	1	81	
8411-	BJ70	WASHER, PLATE (FOR SPEEDOMETER DRIVE GEAR)		90201-35002-	1	81	
8411-	BJ70	RECEIVER, TRANSFER OIL (FOR TRANSFER IDLER GEAR)		36119-60020-	1	81	
8411-8510	BJ70	GEAR SUB-ASSY, TRANSFER HIGH SPEED OUTPUT		36203-60021-	1	81	100
8510-	BJ70	GEAR SUB-ASSY, TRANSFER LOW SPEED OUTPUT		36203-60050-	1	101	
8411-8510	BJ70	GEAR, TRANSFER INPUT		36204-60031-	1	81	100
8510-	BJ70	GEAR, TRANSFER INPUT		36204-60080-	1	101	
8411-8510	BJ70	BEARING, RADIAL BALL (FOR TRANSFER INPUT SHAFT REAR)		90363-35013-	1	81	
8411-8502	BJ70	GEAR, POWER TAKE-OFF DRIVE		36215-60030-	1	81	
8510-	BJ70	GEAR, POWER TAKE-OFF DRIVE		36215-60080-	1	101	
8411-8510	BJ70	GEAR, TRANSFER IDLER		36221-60041-	1	81	100
8510-	BJ70	GEAR, TRANSFER IDLER		36221-60080-	1	101	
8411-8510	BJ70	BEARING (FOR TRANSFER IDLER GEAR)		90364-34006-	2	81	100
8510-	BJ70	BEARING (FOR TRANSFER IDLER GEAR)		90364-38012-	2	101	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-8510	BJ70	WASHER, TRANSFER IDLER GEAR SIDE THRUST		36222-60010-	2	81	100
8510-	BJ70	WASHER, TRANSFER IDLER GEAR SIDE THRUST		36222-60020-	2	101	
8411-8510	BJ70	SHAFT, TRANSFER IDLER GEAR		36225-60030-	1	81	100
8510-	BJ70	SHAFT, TRANSFER IDLER GEAR		36225-60050-	1	101	
8411-8510	BJ70	RING, O (FOR TRANSFER IDLER SHAFT)		90301-27003-	2	81	100
8510-	BJ70	RING, O (FOR TRANSFER IDLER SHAFT)		90301-34004-	2	101	
8411-	BJ70	SHAFT, TRANSFER OUTPUT, REAR		36231-60021-	1	81	
8411-	BJ70	SPACER (FOR TRANSFER OUTPUT SHAFT)		90560-35008-	1	81	
8411-	BJ70	SHIM (FOR TRANSFER OUTPUT SHAFT)		90564-70001-	1	81	
8411-	BJ70	SHIM (FOR TRANSFER OUTPUT SHAFT)		90564-70002-	1	81	
8411-	BJ70	SHIM (FOR TRANSFER OUTPUT SHAFT)		90564-70003-	1	81	
8411-	BJ70	SHIM (FOR TRANSFER OUTPUT SHAFT)		90564-70004-	1	81	
8411-	BJ70	SHIM (FOR TRANSFER OUTPUT SHAFT)		90564-70005-	1	81	
8411-	BJ70	SHIM (FOR TRANSFER OUTPUT SHAFT)		90564-70006-	1	81	
8411-	BJ70	SHIM (FOR TRANSFER OUTPUT SHAFT)		90564-70007-	1	81	
8411-	BJ70	SHIM (FOR TRANSFER OUTPUT SHAFT)		90564-70008-	1	81	
8411-	BJ70	SHIM (FOR TRANSFER OUTPUT SHAFT)		90564-70009-	1	81	
8411-	BJ70	SHIM (FOR TRANSFER OUTPUT SHAFT)		90564-70010-	1	81	
8411-	BJ70	SHIM (FOR TRANSFER OUTPUT SHAFT)		90564-70011-	1	81	
8411-	BJ70	SHIM (FOR TRANSFER OUTPUT SHAFT)		90564-70012-	1	81	
8411-	BJ70	SHIM (FOR TRANSFER OUTPUT SHAFT)		90564-70013-	1	81	
8411-8510	BJ70	BEARING, TAPER ROLLER (FOR TRANSFER OUTPUT SHAFT)		97600-30307-	1	81	100

PROD. DATE	MODELS	DESCRIPTION	P/R	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	44312A BJ70	BEARING (FOR VANE PUMP SHAFT)		90363-17004-	1	81	
8411-	44312B BJ70	RING, SHAFT SNAP		90520-15001-	1	81	
8411-	44313 BJ70	ROTOR, VANE PUMP					
8411-		NO MARK		44313-12010-	1	81	
8411-		MARK 1		44313-12020-	1	81	
8411-		MARK 2		44313-12030-	1	81	
8411-		MARK 3		44313-12040-	1	81	
8411-		MARK 4		44313-12050-	1	81	
8411-	44326 BJ70	RING, CAM (FOR VANE PUMP)					
8411-		NO MARK		44325-12010-	1	81	
8411-		MARK 1		44325-12020-	1	81	
8411-		MARK 2		44325-12030-	1	81	
8411-		MARK 3		44325-12040-	1	81	
8411-		MARK 4		44325-12050-	1	81	
8411-	44326A BJ70	PIN, STRAIGHT (FOR CAM RING)		90250-05008-	2	81	
8411-	44330 BJ70	VALVE ASSY, FLOW CONTROL					
8411-		MARK A		44330-30100-	1	81	
8411-		MARK B		44330-30110-	1	81	
8411-		MARK C		44330-30120-	1	81	
8411-		MARK D		44330-30130-	1	81	
8411-		MARK E		44330-30140-	1	81	
8411-		MARK F		44330-30150-	1	81	
C 8411-8610	44330A BJ70	SPRING, COMPRESSION (FOR FLOW CONTROL VALVE)		90501-12447-	1	81	
C 8610-				90501-12103-	1		

PROD. DATE	MODELS	DESCRIPTION	P/R	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	44330C BJ70	RING, SNAP (FOR FLOW CONTROL VALVE)		96151-01700-	1	81	
8411-	44337 BJ70	UNION, SUCTION PORT		44337-60010-	1	81	
8411-	44337A BJ70	RING, O (FOR SUCTION PORT UNION)		96711-19013-	1	81	
8411-	44338 BJ70	UNION, PRESSURE PORT		44308-35030-	1	81	
8411-	44338A BJ70	RING, O (FOR PRESSURE PORT UNION)					
8411-		OD=25.5		90301-22001-	1	81	
8411-		OD=17.6		96711-19014-	1	81	
8411-	44342 BJ70	PLATE, SIDE, REAR		44341-12010-	1	81	
8411-	44342A BJ70	RING, O (FOR REAR SIDE PLATE)		90301-53002-	1	81	
8411-	44342B BJ70	SPRING, COMPRESSION (FOR REAR SIDE PLATE)		90501-23014-	1	81	
C 8411-8610	44343 BJ70	SEAT, FLOW CONTROL SPRING		44343-12010-	1	81	
C 8610-				44343-12040-	1		
8411-	44343A BJ70	RING, O (FOR FLOW CONTROL SPRING SEAT)		96711-19014-	1	81	
8411-	44348 BJ70	PLATE, VANE PUMP					
8411-		ROTOR NO MARK		44345-12010-	10	81	
8411-		ROTOR MARK 1		44345-12020-	10	81	
8411-		ROTOR MARK 2		44345-12030-	10	81	

1-C₁₀

GENUINE TOYOTA PARTS

Exploded view diagram of a mechanical assembly. The main components and their part numbers are:

- 47105A**: A large, curved metal bracket or housing at the top.
- 91656-60820**: A small pin or fastener located near the top right of the main bracket.
- 47124**: A long, threaded bolt.
- 47101B**: Two small, cylindrical components, likely bushings or spacers.
- 94512-01000**: A small, cylindrical component, likely a bushing or spacer.
- 47124A**: A short, threaded bolt.
- 47264A**: A small, cylindrical component, likely a bushing or spacer.
- 47131**: A small, cylindrical component, likely a bushing or spacer.
- 90468-16142**: A coiled spring.
- 47101A**: A small, cylindrical component, likely a bushing or spacer.
- 47101**: A long, curved metal arm or lever.
- 47121**: A small, rectangular component, likely a pin or fastener.

The diagram shows the assembly of these components into a single unit. Dashed lines indicate the assembly path for the spring (90468-16142) and the small cylindrical components (47101A, 47131, 47264A) onto the main arm (47101).

MCB8 16

PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	47-01	BRAKE PEDAL & BRACKET					
	+-----+ 47101	PEDAL SUB-ASSY, BRAKE					
8411-	BJ70			47101-60110-	1	81	
	+-----+ 47101A	SPRING (FOR BRAKE PEDAL RETURN)					
8411-	BJ70			90507-12022-	1	81	
	+-----+ 47101B	BUSH (FOR BRAKE PEDAL)					
8411-	BJ70			90386-13192-	2	81	
	+-----+ 47105A	SUPPORT SUB-ASSY, BRAKE PEDAL					
8411-	BJ70			55106-90K00-	1	81	
	+-----+ 47121	PAD, BRAKE PEDAL					
8411-	BJ70			31321-14020-	1	81	
	+-----+ 47124	SHAFT, PEDAL					
8411-	BJ70			91121-51070-	1	81	
	+-----+ 47124A	COLLAR (FOR PEDAL SHAFT)					
8411-	BJ70			90387-10004-	1	81	
	+-----+ 47131	CUSHION (FOR STOP LAMP SWITCH)					
8411-	BJ70			90541-06008-	1	81	
	+-----+ 47264A	PIN (FOR PUSH ROD)					
8411-	BJ70			90249-10017-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	47315B BJ70	HOSE, FLEXIBLE (FOR BRAKE TUBE)		96940-33505-	1	81	
8411-	47316A BJ70	HOSE, FLEXIBLE (FOR REAR BRAKE TUBE)		96940-33605-	1	81	
8411-	47321 BJ70	TUBE, REAR BRAKE, NO. 1		47322-60380-	1	81	
8411-	47321A BJ70	WAY (FOR REAR BRAKE TUBE)		90413-10106-	1	81	
8411-	47321B BJ70	HOSE, FLEXIBLE (FOR REAR BRAKE TUBE)		96940-33005-	1	81	
8411-	47322 BJ70	TUBE, REAR BRAKE, NO. 2		47323-60200-	1	81	
8411-8608	47323 BJ70	TUBE, REAR BRAKE, NO. 3		47324-60090-	1	81	140
8608-	47324 BJ70	TUBE, REAR BRAKE, NO. 4		47324-60091-	1	141	
8411-8608	47325 BJ70	TUBE, REAR BRAKE, NO. 5		47325-60080-	1	81	140
8608-	47325 BJ70	TUBE, REAR BRAKE, NO. 5		47325-60081-	1	141	
8411-	47341B BJ70	TUBE, WHEEL CYLINDER, FRONT RH NO. 1		47341-60031-	1	81	
8411-	47343A BJ70	TUBE, WHEEL CYLINDER, FRONT LH NO. 1		47343-60021-	1	81	
8411-	47351B BJ70	BRACKET, FLEXIBLE HOSE, NO. 1		47351-60130-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-8608	47352B BJ70	BRACKET, FLEXIBLE HOSE, NO. 2		47354-60040-	1	81	140
8608-	47355A BJ70	BRACKET, FLEXIBLE HOSE, NO. 5		47354-60090-	1	141	
8411-	47372 BJ70	CLAMP, BRAKE TUBE, NO. 2		47355-60030-	1	81	
8411-	47910 BJ70	VALVE ASSY, LOAD SENSING PROPORTIONING		47372-35010-	5	81	
8411-	47920 BJ70	SPRING ASSY, LOAD SENSING		47910-26040-	1	81	
8411-	47920A BJ70	COLLAR (FOR LOAD SENSING SPRING)		47920-60050-	1	81	
8411-	47920B BJ70	CLIP (FOR LOAD SENSING VALVE BOOT)		90387-08099-	2	81	
8411-	47920C BJ70	WASHER (FOR LOAD SENSING SPRING)		90467-31110-	1	81	
8411-	47931 BJ70	BRACKET, LOAD SENSING VALVE		90202-10103-	2	81	
8411-	47933 BJ70	BRACKET, LOAD SENSING SHACKLE, NO. 1		47931-35050-	1	81	
8411-	47935 BJ70	SHACKLE, LOAD SENSING SPRING, NO. 1		47933-60050-	1	81	
8411-	47935A BJ70	COLLAR (FOR LOAD SENSING SPRING SHACKLE)		47935-35010-	1	81	
8411-				90387-08099-	1	81	



33321 - 42109

C14

H74-28-0041

42110 - 45450

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
33321-60070-	1-D6	36134-60020-	1-M6	36422-36010-	1-H7	42110-60250-	1-B8	44120-60100-	1-K9	44730-60040-	1-J5
33325-60010-	1-L6	36142-60030-	1-A7	36481-60070-	1-J7	-60251-	1-B8	44142-22010-	1-K9	44740-60090-	1-G10
-60020-	1-L6	36143-60020-	1-A7	36482-60070-	1-J7	42137-55010-	1-B8	-22020-	1-K9	44777-60020-	1-G10
33332-60020-	1-D6	36144-60020-	1-A7	36486-60010-	1-H7	42181-36010-	1-B8	44302-14010-	1-B9	-60030-	1-G10
33333-60030-	1-D6	36152-60030-	1-A7	36489-60030-	1-J7	42183-35010-	1-B8	44304-60020-	1-B9	44778-60020-	1-G10
33335-60020-	1-D6	36164-60040-	1-H7	36726-60020-	1-D7	-60021-	1-B9	-60030-	1-G10	-60030-	1-G10
33336-60010-	1-D6	36203-60021-	1-C7	37110-60340-	1-L7	42311-60060-	1-D8	44305-30020-	1-B9	44785-14010-	1-J5
33343-36020-	1-D6	-60050-	1-C7	37140-60170-	1-L7	42312-60070-	1-D8	44308-35030-	1-C9	-35020-	1-G10
33346-36010-	1-E6	36204-60031-	1-C7	37302-36010-	1-L7	42323-60010-	1-J8	44311-60050-	1-B9	45025-60060-	1-M8
33348-36012-	1-D6	-60080-	1-C7	-36020-	1-L7	-60020-	1-E11	44312-12010-	1-B9	45044-69085-	1-K9
33362-3602-	1-E6	36212-60041-	1-C7	-60050-	1-L7	42325-55010-	1-D8	44313-12010-	1-C9	45045-69045-	1-K9
33364-36051-	1-E6	-60080-	1-C7	37305-36010-	1-L7	42431-60020-	1-D8	-12020-	1-C9	45046-69115-	1-K9
-60010-	1-E6	36215-60030-	1-C7	-36020-	1-L7	42441-30010-	1-D8	-12030-	1-C9	45047-69065-	1-K9
33366-36020-	1-E6	36221-60041-	1-C7	-60010-	1-L7	42443-55020-	1-D8	-12040-	1-C9	45081-22020-	1-M8
33368-20012-	1-E6	-60080-	1-C7	37315-36020-	1-L7	42601-60130-	1-E8	-12050-	1-C9	45082-60020-	1-A9
33371-20010-	1-E6	36222-60010-	1-C7	37402-36080-	1-L7	-60150-	1-E8	44320-60100-	1-B9	45100-60120-03	1-G9
33391-36010-	1-E6	-60020-	1-C7	41101-60040-	1-A8	42603-35080-	1-E8	44325-12010-	1-C9	-60120-05	1-G9
33394-36011-	1-E6	36225-60030-	1-C7	41110-60100-	1-A8	-60012-	1-E8	-12020-	1-C9	-60130-03	1-G9
33395-36010-	1-E6	-60050-	1-C7	41110-60100-	1-A8	-60052-	1-E8	-12030-	1-C9	-60130-06	1-G9
-60010-	1-E6	36231-60021-	1-C7	41201-69155-	1-A8	43110-60160-	1-H8	-12040-	1-C9	45105-60030	1-G9
33398-36012-	1-E6	36234-60031-	1-D7	41201-69155-	1-A8	-60161-	1-H8	-12050-	1-C9	-60040-	1-G9
33402-36050-	1-E6	36235-60021-	1-D7	-69156-	1-A8	-60240-	1-H8	44330-30100-	1-C9	45130-60070-03	1-G9
-60020-	1-E6	36237-60020-	1-D7	41204-60030-	1-A8	43204-60020-	1-E11	-30110-	1-C9	-60070-04	1-G9
33403-69075-	1-B6	36251-60030-	1-D7	41204-60030-	1-A8	43211-60050-	1-E11	-30120-	1-C9	-60080-03	1-G9
33404-30040-	1-B6	-60050-	1-D7	41204-60030-	1-A8	43212-60050-	1-E11	-30130-	1-C9	-60080-06	1-G9
33421-36040-	1-E6	36302-60050-	1-F7	41214-26010-	1-A8	43232-35010-	1-E11	-30140-	1-C9	45142-12050-	1-G9
-60060-	1-E6	36303-60070-	1-F7	41214-26010-	1-A8	43233-60011-	1-E11	-30150-	1-C9	45155-12030-	1-G9
33451-36022-	1-F6	-60130-	1-F7	41226-35010-	1-A8	43234-60011-	1-E11	44337-60010-	1-C9	45176-20030-	1-G9
33481-60060-	1-C7	36307-60030-	1-F7	41231-60020-	1-A8	43235-60010-	1-E11	44341-12010-	1-C9	45180-60010-04	1-G9
33485-30020-	1-B6	-60040-	1-F7	41231-60020-	1-A8	43236-60010-	1-E11	44343-12010-	1-C9	-60011-	1-G9
33504-22111-01	1-J6	36308-60050-	1-F7	41252-35010-	1-A8	43237-60030-	1-E11	-12040-	1-C9	45210-60060-	1-M8
-60060-	1-J6	-60080-	1-F7	41311-36010-	1-A8	43238-60010-	1-E11	44345-12010-	1-C9	45215-22011-	1-M8
33505-60010-	1-J6	36311-60041-	1-F7	41311-36010-	1-A8	43239-60020-	1-F11	-12020-	1-C9	45220-60100-	1-M8
-60011-	1-J6	36312-60030-	1-F7	41311-36010-	1-A8	43401-60012-	1-F11	-12030-	1-C9	45222-60030-	1-M8
33521-60020-	1-I6	-60040-	1-F7	41315-30010-	1-B8	43405-60015-	1-I8	-12040-	1-D9	-60031-	1-M8
-60021-	1-I6	36313-60050-	1-F7	41315-30010-	1-B8	-60016-	1-I8	-12050-	1-D9	45225-60010-	1-M8
33530-60100-	1-J6	-60070-	1-F7	41316-30010-	1-B8	43411-60020-	1-I8	44348-60030-	1-E9	45240-60040-	1-K9
33531-36040-	1-I6	36314-60040-	1-F7	41316-30010-	1-B8	43412-60020-	1-I8	44350-60010-	1-E9	45242-60020-	1-K9
33548-60010-	1-F7	36318-60020-	1-F7	41331-35020-	1-B8	43421-60013-	1-J8	44360-60020-	1-D9	45243-60020-	1-K9
-60020-	1-J6	36321-60100-	1-F7	41331-35020-	1-B8	43422-60020-	1-J8	44381-60020-	1-E9	45254-60050-	1-M8
33554-60021-	1-J6	36322-60080-	1-F7	41341-55012-	1-B8	43423-60011-	1-J8	44391-14010-	1-D9	45255-60010-	1-M8
33555-55011-	1-J6	-60081-	1-F7	41341-55012-	1-B8	43435-60011-	1-F11	-30020-	1-D9	45260-60050-	1-M8
33621-60200-	2-H6	36323-60080-	1-G7	41342-55010-	1-B8	43436-60011-	1-F11	44410-60090-	1-E9	45280-60180-	1-M8
-60230-	2-H6	36324-60050-	1-F7	41342-55010-	1-B8	43502-60020-	1-K8	-60091-	1-E9	-60181-	1-M8
33740-26010-	1-G7	36327-60030-	1-G7	41343-55010-	1-B8	43509-60015-	1-J8	44412-60030-	1-E9	45282-22010-	1-A9
36100-6A290-	1-K6	-60031-	1-G7	41344-35010-	1-B8	43512-60040-	1-K8	-60090-	1-E9	-60010-	1-M8
-6A450-	1-K6	-60040-	1-G7	41344-35010-	1-B8	-69016-	1-K8	44416-60100-	1-E9	45286-60928-03	1-M8
-60580-	1-K6	36337-60060-	1-F7	41345-35010-	1-B8	43521-60011-	1-K8	44443-60060-	1-E9	-60928-06	1-M8
36103-60070-	1-L6	-60080-	1-H7	41346-35010-	1-B8	43530-69045-	1-K8	44444-60010-	1-E9	45289-22020-	1-M8
-60080-	1-L6	36338-60020-	1-G7	41347-35010-	1-E8	43531-60010-	1-K8	44606-12520-	1-G10	45301-60070-	1-K9
-60140-	1-L6	-60030-	1-G7	41348-35010-	1-B8	43532-60010-	1-I8	44610-60320-	1-G10	45304-26010-	1-L9
-60150-	1-L6	36340-60080-	1-G7	41351-35011-	1-B8	44104-22011-	1-J9	-26020-	1-G10	-26020-	1-L9
36110-6A090-	1-K6	36341-60032-	1-G7	41361-60010-	1-B8	44105-30060-	1-J9	-26030-	1-G10	-26030-	1-L9
-60450-	1-K6	36343-60010-	1-H7	41361-60010-	1-B8	44107-60060-	1-J9	-26040-	1-G10	-26040-	1-L9
-60760-	1-K6	-60020-	1-G7	-60020-	1-B8	44108-60010-	1-J9	44621-28120-	1-G10	45310-60080-	1-L9
36117-60020-	1-M5	-60040-	1-H7	-60030-	1-B8	44110-60080-	1-J9	44628-28120-	1-G10	45332-26010-	1-L9
-60021-	1-M5	36360-60170-	1-G7	-60040-	1-B8	-60081-	1-J9	44635-12480-	1-J5	45352-37010-	1-L9
36119-60010-	1-M6	36362-60020-	1-G7	-60040-	1-B8	44111-60020-	1-J9	-28120-	1-G10	45353-37010-	1-L9
-60020-	1-C7	-60040-	1-G7	-60040-	1-B8	-60040-	1-J9	44642-60280-	1-G10	45354-37010-	1-L9
-60030-	1-M6	36409-60030-	1-J7	-60040-	1-B8	44115-22010-	1-K9	-60450-	1-G10	45357-22010-	1-K9
36122-60040-	1-M6	36410-60030-	1-H7	42109-60050-	1-B8	-60020-	1-K9	-87502-	1-J5	-36010-	1-L9
36124-60020-	1-M6	36416-36010-	1-H7			44116-22010-	1-K9	44672-22120-	1-J5	45411-60120-	1-K9
36128-60021-	1-M6	36421-36010-	1-H7			-60020-	1-K9	44730-60040-	1-G10	45450-69065-	1-L9
36132-60020-	1-M6					44120-60060-	1-K9				


I. MODELS COVERED & CHARACTERISTICS

C15

TOYOTA LAND CRUISER Hardtop (Production from Nov. '84)

Hardtop

(8411-)

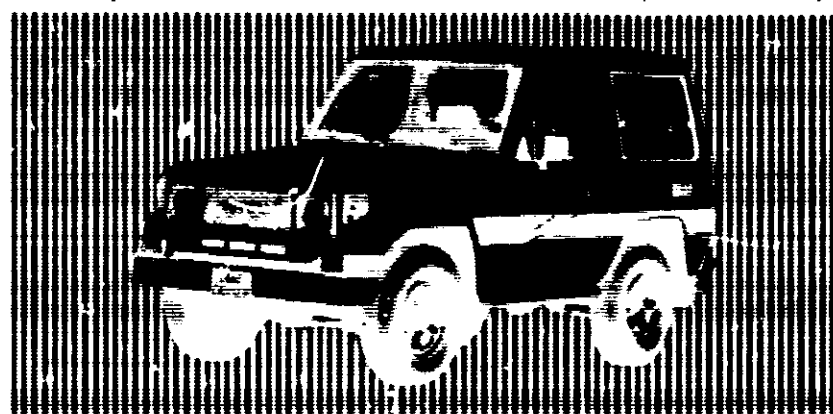

MP 1781

Model	Engine	Production period	Characteristic Expressions in Catalog Model Column	Model Name
BJ70LV-MRK	3B	8411-8608		Diesel Hardtop
" -MNK	"	8608-		"

MARK & ABBREVIATION LIST

C16

Mark	Definition	Mark	Definition
SD	Swing Door	TP	Vinyl Softtop (Tarpaulin)
SDT	Standard-Turbo type	TPS	Vinyl Softtop (Tarpaulin), Standard type
SDX	Super Deluxe type	TR	Truck (Pickup)
SED	Sedan	TVSV	Thermos'atic Vacuum Switching Valve
SL	SL type	TWC	Twin Cam
SM-SP	Semi Separate Seat	TWT	Twin Cam, Turbo Charger System
SMG	Speedometer Gear	TVTV	Thermostatic Vacuum Transmitting Valve
SP	Separate Seat	UPR	Upper
SP-BN	Split Bench Seat	U/S	Undersize
SPEC	Specification	USA	For the United States of America
SPL	Special type	V=	Volts
SPR	Supra (CELICA Supra)	V	Van or Hardtop
SR	SR type	VCV	Vacuum Control Valve
SR5	SR-5 type	VKC	Van (Hardtop), with swing type back door
SRT	Turbo - SR 5	VL	Vinyl Leatherette
S/S	Semisize	VLC	Van (Hardtop), with lift up and swing out back door
SJV	Super Soft Vinyl Leather	VLS	Van (Hardtop), with lift up and swing out back door
ST	ST type	VSG	Van, Side Glass
STD	Standard type	VSP	Van, Side Panel
STRG	Steering	VSV	Vacuum Switching Valve
SUMITOMO	Sumitomo Electric Industry Company Limited	VTV	Vacuum Transmitting Valve
SW	Switch	W	Watts
T	Thickness (mm)	W/	With
T1	Truck (Pickup, low loader 1-side open)	W/C	Wheel Cylinder
TAKATA	Takata Corporation	WD	Wire Diameter (mm)
TANAKA	Tanaka Instrument Company Limited (T.N.K.)	WG	Station Wagon
TBO	Turbo Charger system	WGV	Station Wagon (V)
TBR	T-Bar Roof	WGC	Station Wagon (G)
TD	Turbo Charger, Diesel system	W/O	Without
TEMS	Toyota Electronic Modulated Suspension	WPB	With Passive Belt
TEN	Fujitsu Ten Company Limited	WSW	White Side Wall Tire
T/L	Tubeless	W/T	With Tube
TMC	TOYOTA MOTOR CORPORATION	XTR	Xtra Cab
TOKAIRIKA	Tokai Rika Company Limited	YAZAKI	Yazaki Corporation
TOKIKO	Tokiko Company Limited	YOKOHAMA	The Yokohama Rubber Company Limited
TOSHIBA	Tokyo Shibaura Electric Company Limited	YUASA	Yuasa Battery Company Limited
TOYO	Toyo Rubber Industrial Company Limited		
TOYOTA	Toyota Motor Corporation		

(2) Abbreviations Under Heading R/P and QTY in Text

Heading	Mark	Definition
R/P	# X	Old parts number (Old) Modified old parts number which has been substituted by a multiple of parts and/or if substituted parts are specified by applicable models or other determining specifications, refer to SUBSTITUTE SUPPLY PARTS LIST (S.S.P.L.) for detailed information. (Old)
	□ •	New main part number of set substitution (New) Part number to be attached to main part (New)
QTY	33	Required quantity

(3) CHANGES TO TEXT & APPENDICES

Certain codes are used to indicate changes to the text and/or appendix.
These codes appear in the marginal area of the affected page as follows.


CODE	LOCATION	EXPLANATION
C	Text	Changes of Parts Number, Model and Production Date
I	Appendix Text & Appendix	Newly available Toyota Part Number
S	Appendix Text & Appendix	Part application expanded to include other vehicle model(s)

(U.S.A. 2/2)

GENUINE TOYOTA PARTS

(8411-)

11400
BLOCK

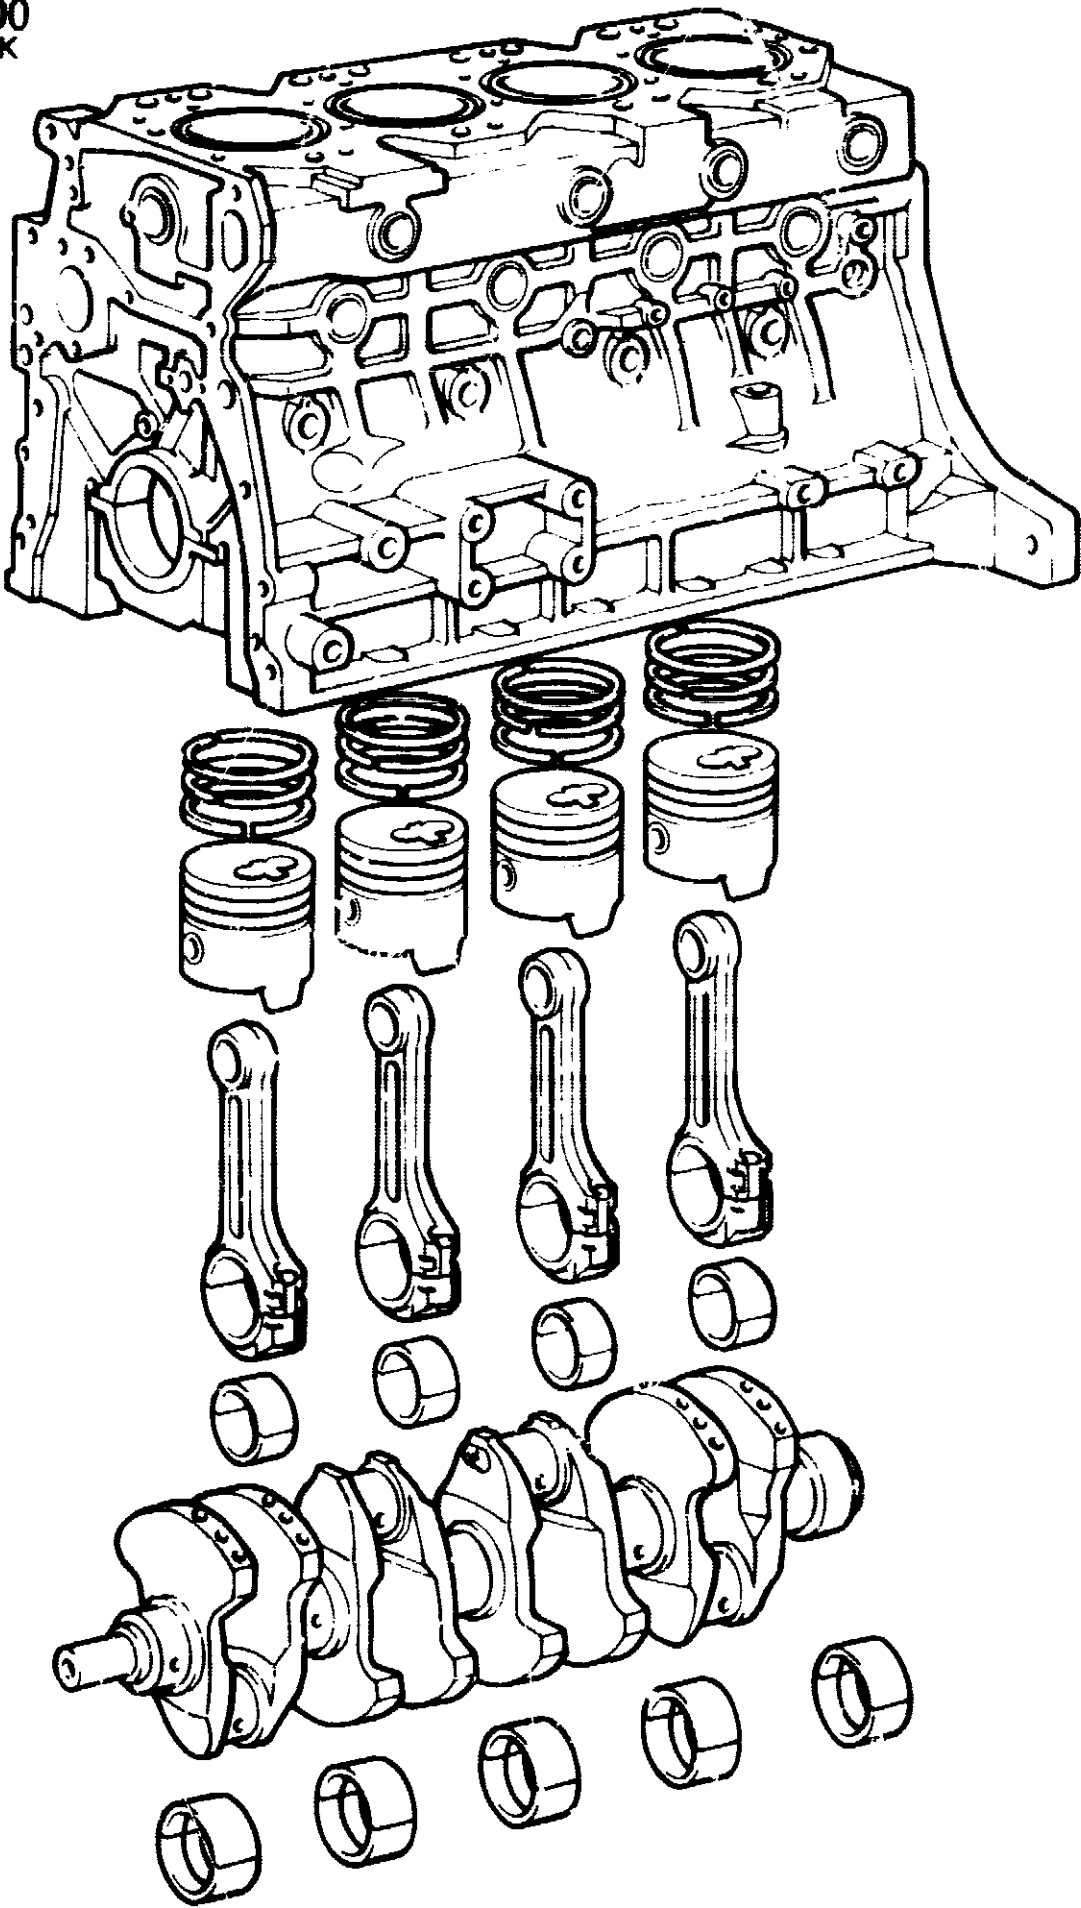

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
8411-	FIG. 11-02 SHORT BLOCK ASSEMBLY +-----+ 11400 BLOCK ASSY, SHORT +-----+ 3B..BJ70			11400-58040-	1	81	

MA 4903

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	13741	RETAINER, VALVE SPRING		13741-56021-	8	81	
	3B..BJ70						
8411-	13741A	LOCK, VALVE SPRING RETAINER		90913-03019-	16	81	
	3B..BJ70						
8411-	13751	LIFTER, VALVE		13751-56020-	8	81	
	3B..BJ70						
8411-	13781	ROD, VALVE PUSH		13781-56010-	8	81	
	3B..BJ70						
8411-	13801	ARM SUB-ASSY, VALVE ROCKER, NO.1		13811-56030-	4	81	
	3B..BJ70						
8411-8604	13801B	NUT, HEXAGON (FOR VALVE ADJUSTING)		90041-70001-	8	81	
	3B..BJ70						
8604-	3B..BJ70			90170-08022-	8		
8411-	13801C	SCREW, VALVE ADJUSTING		90913-05021-	8	81	
	3B..BJ70						
8411-	13801D	SPRING, COMPRESSION (FOR ROCKER ARM)		90501-16163-	4	81	
	3B..BJ70	WD=1.6, CW=7.5					
8411-	13802	ARM SUB-ASSY, VALVE ROCKER, NO.2		13812-56030-	4	81	
	3B..BJ70						
8411-	13901	SHAFT SUB-ASSY, VALVE ROCKER, NO.1		13901-56020-	1	81	
	3B..BJ70						
8411-	13951	SUPPORT, VALVE ROCKER, NO.1		13951-56010-	1	81	
	3B..BJ70						
8411-	13951A	BOLT (FOR ROCKER SUPPORT SET)		91611-60855-	5	81	
	3B..BJ70	X8-1.25PX5-30					

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	13951A	BOLT (FOR ROCKER SUPPORT SET)		91611-60865-	5	81	
	CONTINUED						
	3B..BJ70	X3-1.25PX6-30					
8411-	13951B	SCREW OR BOLT (FOR VALVE ROCKER SHAFT LOCK)		13958-56010-	2	81	
	3B..BJ70						
8411-	13951C	BOLT, STUD (FOR ROCKER SUPPORT)		90116-08123-	4	81	
	3B..BJ70						
8411-	13951D	WASHER, SEAL (FOR HEAD COVER SET)		90201-06177-	2	81	
	3B..BJ70						
8411-	13952	SUPPORT, VALVE ROCKER, NO.2		13952-56010-	3	81	
	3B..BJ70						
8411-	13953	SUPPORT, VALVE ROCKER, NO.3		13953-56010-	1	81	
	3B..BJ70						

*○-○P×○-○=Outside diameter-Pitch×Bolt length-Thread length


FIG.22-03 INJECTION PUMP BODY

1-D4

M74-13-0024

GENUINE TOYOTA PARTS

(8411-)

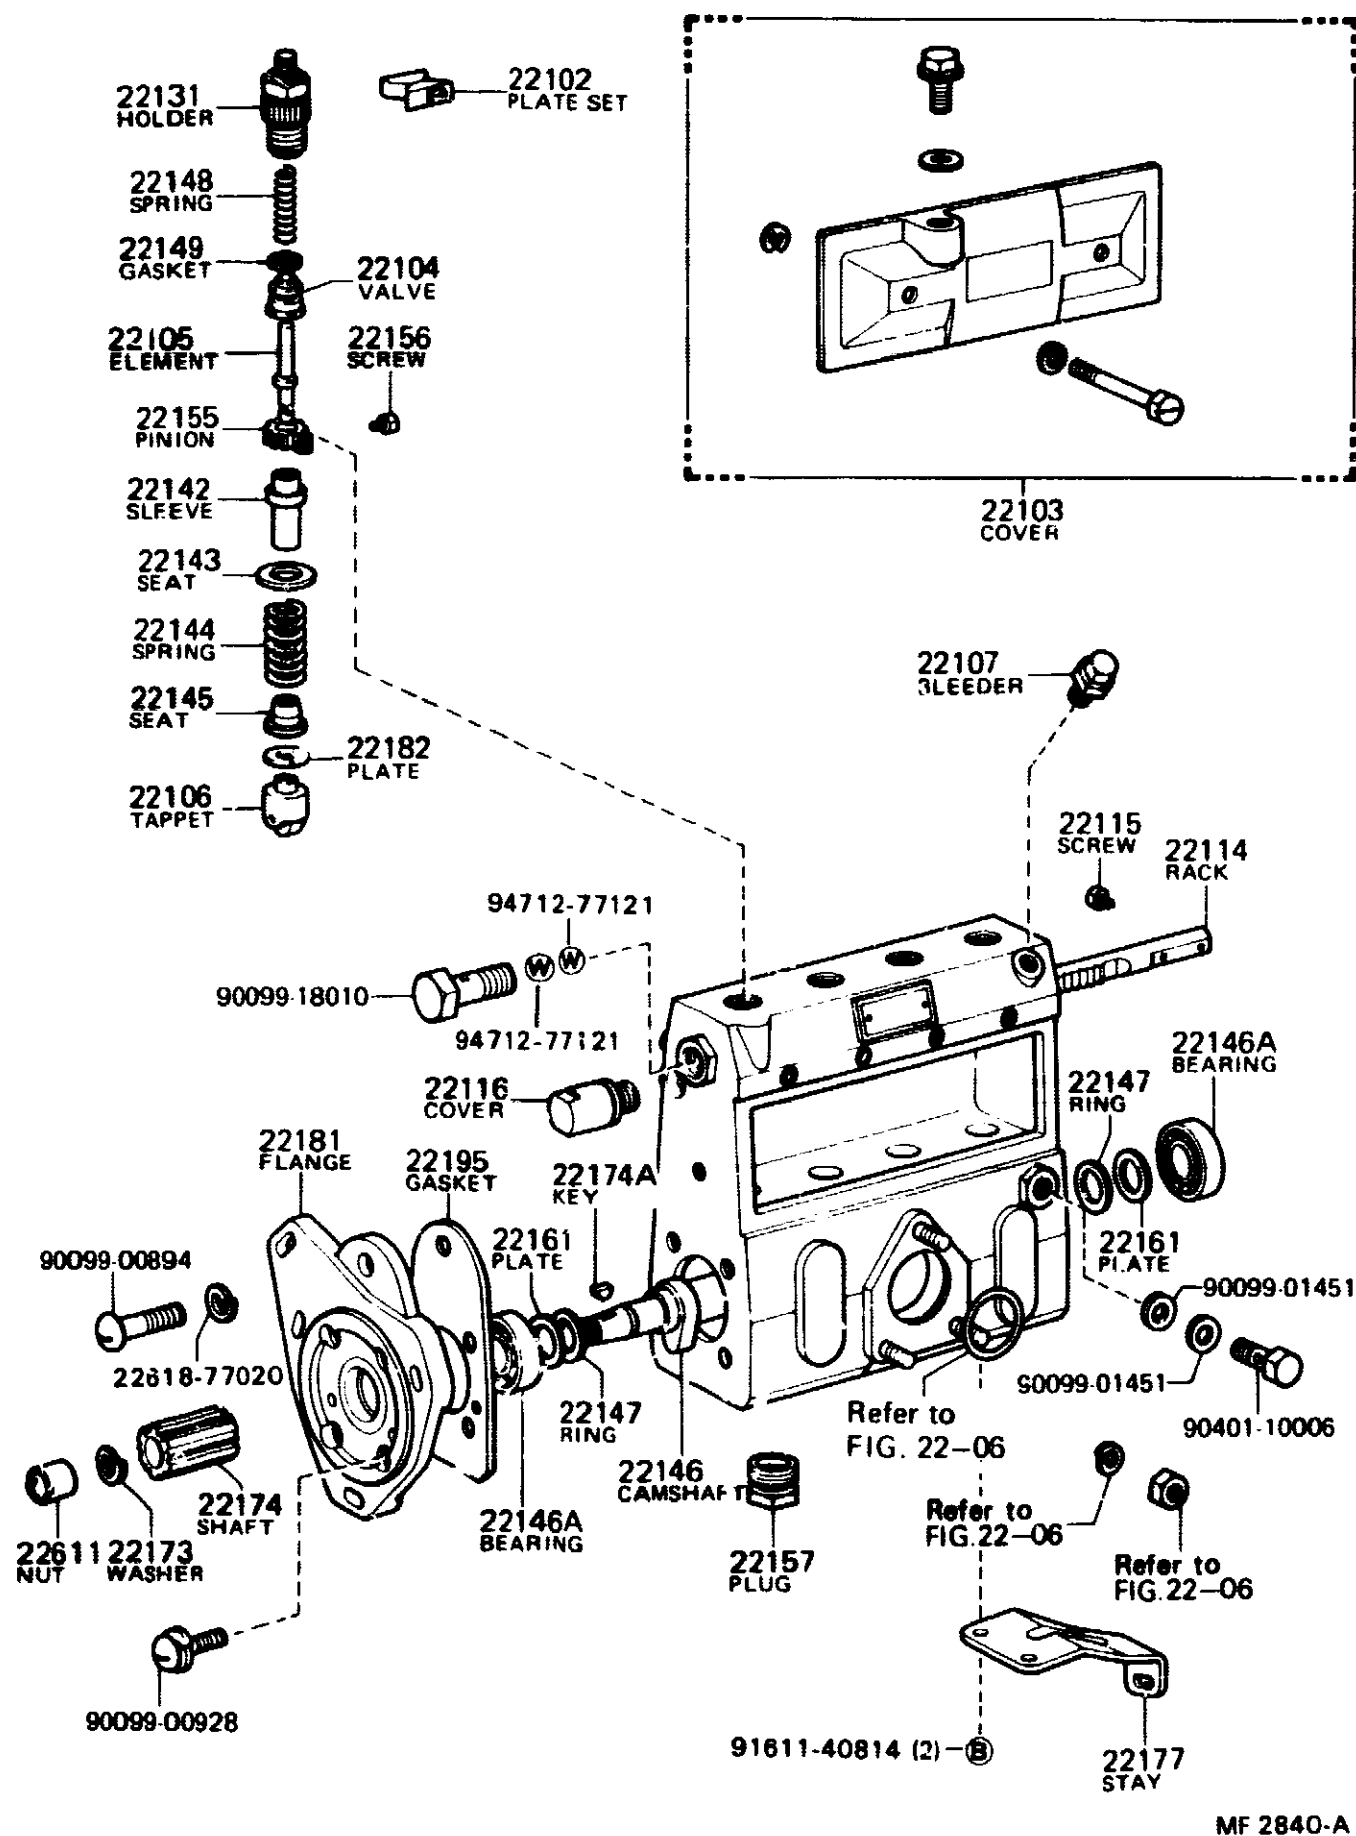


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	22-03 INJECTION PUMP BODY						
8411-	22102	PLATE SET, VALVE HOLDER LOCK		22102-77021-	2	81	
8411-	3B..BJ70						
8411-	22103	COVER SUB-ASSY, INJECTION PUMP		22103-48030-	1	81	
8411-	3B..BJ70						
8411-	22104	VALVE SUB-ASSY, INJECTION PUMP DELIVERY		22104-77020-	4	81	
8411-	3B..BJ70						
8411-	22105	ELEMENT SUB-ASSY, INJECTION PUMP		22105-58010-	4	81	
8411-	3B..BJ70						
8411-	22106	TAPPET SUB-ASSY, INJECTION PUMP		22106-46010-	4	81	
8411-	3B..BJ70						
8411-	22107	BLEEDER SUB-ASSY, AIR		22150-67010-	1	81	
8411-	3B..BJ70						
8411-	22114	RACK, CONTROL		22114-48030-	1	81	
8411-	3B..BJ70						
8411-	22115	SCREW, RACK GUIDE		22115-77020-	1	81	
8411-	3B..BJ70						
8411-	22116	COVER, CONTROL RACK		22116-46010-	1	81	
8411-	3B..BJ70						
8411-	22131	HOLDER, DELIVERY VALVE		22131-77020-	4	81	
8411-	3B..BJ70						
8411-	22142	SLEEVE, PLUNGER CONTROL		22142-77020-	4	81	
8411-	3B..BJ70						
8411-	22143	SEAT, SPRING UPPER		22143-77020-	4	81	
8411-	3B..BJ70						

MF 2840-A

(8411-)

GENUINE TOYOTA PARTS

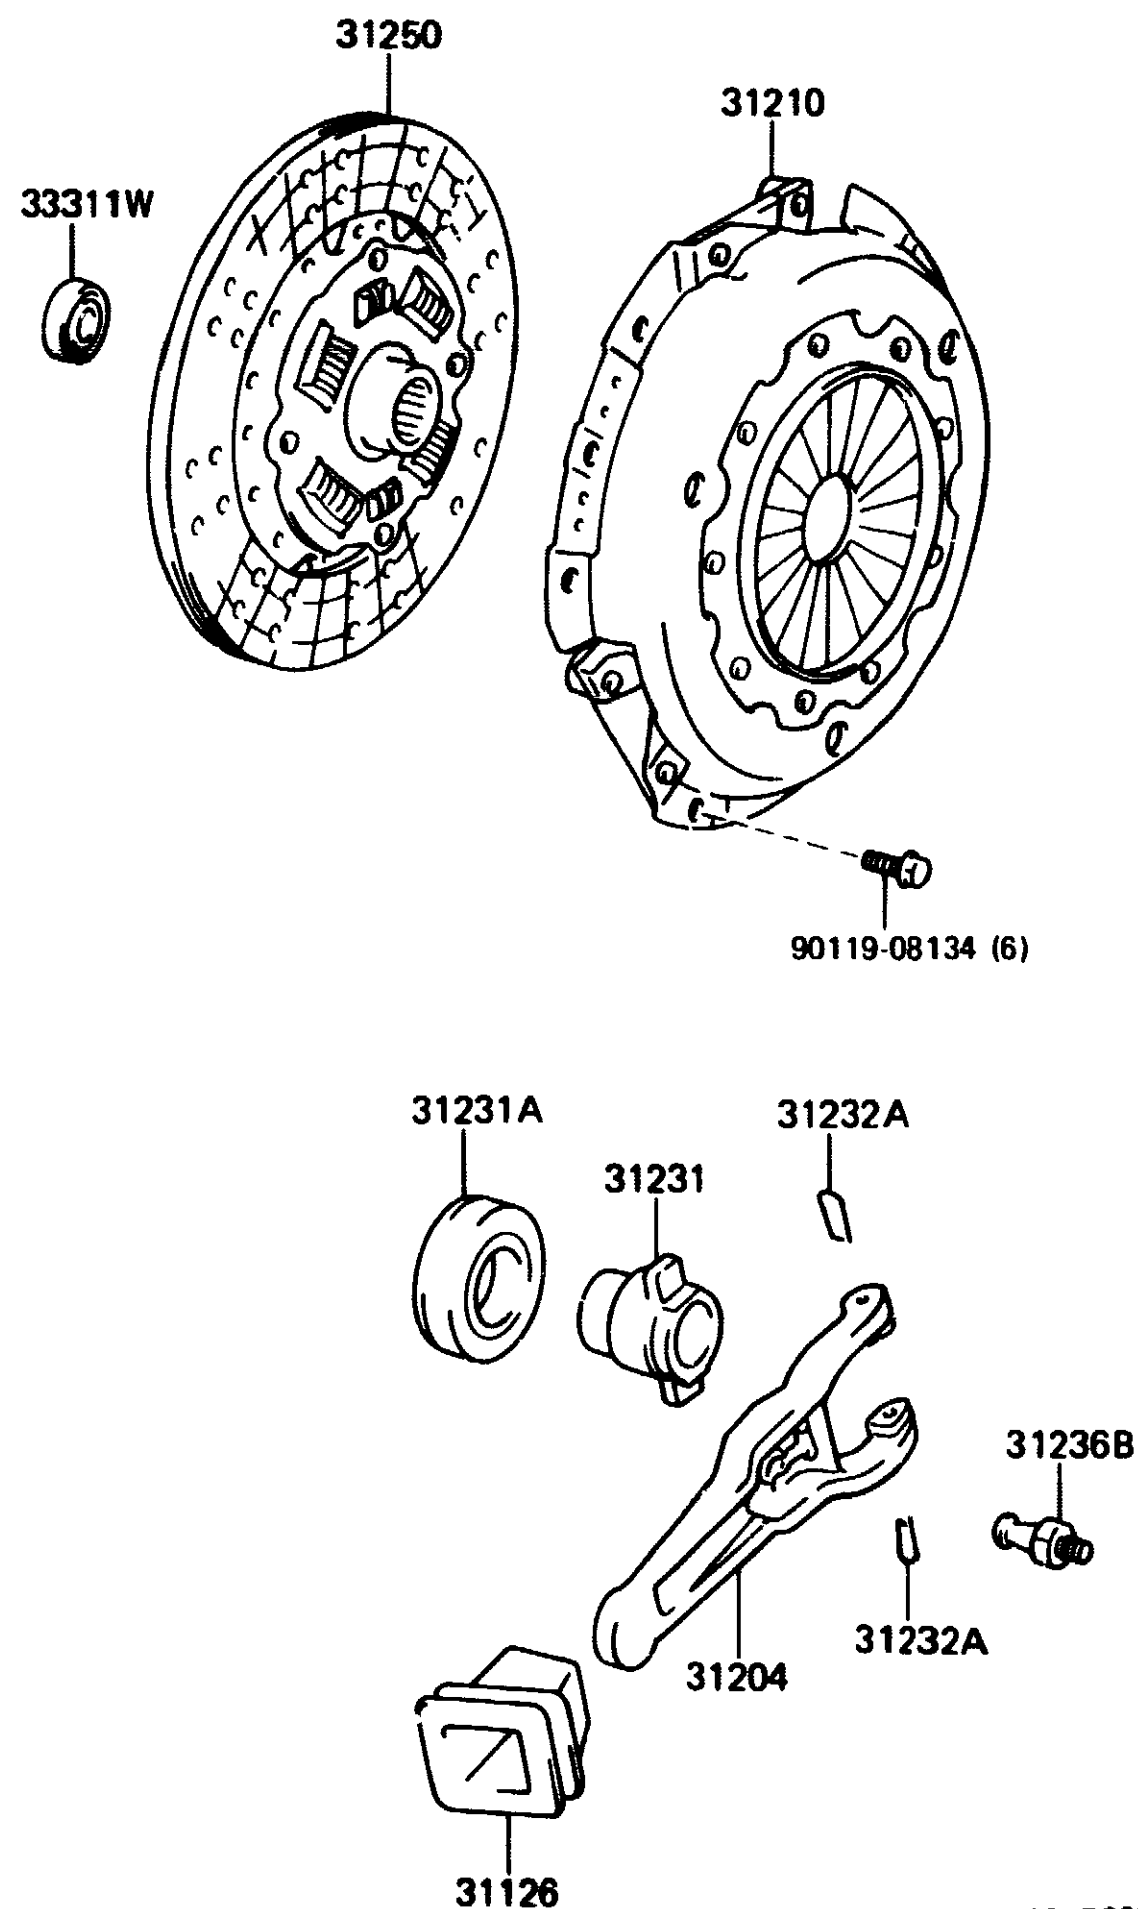

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	31-01 CLUTCH & RELEASE FORK						
8411-	+	31126 BOOT, CLUTCH RELEASE FORK		31126-60030-	1	81	
	+	BJ70					
8411-	+	31204 FORK SUB-ASSY, CLUTCH RELEASE		31204-60080-	1	81	
	+	BJ70					
8411-	+	31210 COVER ASSY, CLUTCH		31210-36100-	1	81	
	+	BJ70					
8411-	+	31231 HUB, CLUTCH RELEASE BEARING		31231-60080-	1	81	
	+	BJ70					
8411-	+	31231A BEARING, BALL (FOR CLUTCH RELEASE HUB)		90363-45002-	1	81	
	+	BJ70					
8411-	+	31232A CLIP, RELEASE BEARING HUB		31232-60020-	2	81	
	+	BJ70					
8411-	+	31236B SUPPORT, RELEASE FORK		31236-60030-	1	81	
	+	BJ70					
8411-8512	+	31250 DISC ASSY, CLUTCH		* 31250-60090- (31250-36280-	1	81	
	+	BJ70					
C 8512-8610	+	BJ70		* 31250-36280- (31250-36281-	1		
	+						
C 8610-	+	BJ70		31250-36281-	1		
	+						
8411-	+	33311W BEARING (FOR INPUT SHAFT)		90363-12002-	1	81	
	+	BJ70					

MC B662

FIG.33-05

GENUINE TOYOTA PARTS

1-D6

M74-15-0614

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	33-05 TRANSMISSION GEAR (MTM)						
	+	+					
	33306	RING SUB-ASSY, SYNCHRONIZER, NO.1					
	+	+					
C 8411-8608	BJ70			33306-36020-	1	81	
C 8608-	BJ70			33306-60010-	1		
	+	+					
	33311	SHAFT, INPUT					
	+	+					
8411-8510	BJ70			33311-60080-	1	81	100
C 8510-8703	BJ70			33311-60110-	1	101	
C 8703-	BJ70			33311-60111-	1		
	+	+					
	33311A	BEARING (FOR INPUT SHAFT FRONT)					
	+	+					
8411-8510	BJ70			90365-40002-	1	81	100
8510-	BJ70			90363-40035-	1	101	
	+	+					
	33311B	RING, SHAFT SNAP (FOR FRONT BEARING)					
	+	+					
8411-	BJ70	T=3.31-3.4		90520-36015-	1	81	
		2					
8411-	BJ70	T=3.20-3.3		90520-36016-	1	81	
		1					
	+	+					
	33311D	ROLLER OR BEARING, INPUT SHAFT NEEDLE					
	+	+					
8411-	BJ70			90361-06049-	17	81	
	+	+					
	33318	PIECE, GEAR SPLINE, NO.5					
	+	+					
C 8411-3703	BJ70			33318-36012-	1	81	
C 8703-	BJ70			33318-60010-	1		
	+	+					
	33321	SHAFT, OUTPUT					
	+	+					
8411-	BJ70			33321-60070-	1	81	
	+	+					
	33321A	BEARING (FOR OUTPUT SHAFT REAR)					
	+	+					
8411-8510	BJ70			90363-35017-	1	81	100
		(90363-35022-)					
8510-	BJ70			90363-35022-	1	101	
	+	+					
	33321G	NUT (FOR MANUAL TRANSMISSION OUTPUT SHAFT REAR SET)					
	+	+					
8411-8603	BJ70			90179-26002-	1	81	
8603-	BJ70			90179-26004-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
	+	+					
	33321T	SPACER (FOR OUTPUT SHAFT)					
	+	+					
8411-	BJ70			90560-36001-	1	81	
	+	+					
	33321U	WASHER (FOR MANUAL TRANSMISSION OUTPUT SHAFT SET)					
	+	+					
8411-8603	BJ70			90201-26003-	1	81	
	+	+					
	33321V	BEARING (FOR OUTPUT SHAFT CENTER)					
	+	+					
8411-	BJ70			90363-40018-	1	81	
	+	+					
	33332	GEAR, 2ND					
	+	+					
8411-	BJ70			33332-60020-	1	81	
	+	+					
	33332B	BEARING, NEEDLE ROLLER (FOR 2ND GEAR)					
	+	+					
8411-	BJ70			90364-44065-	1	81	
	+	+					
	33333	GEAR, 3RD					
	+	+					
8411-	BJ70			33333-60030-	1	81	
	+	+					
	33335	GEAR, 1ST					
	+	+					
8411-	BJ70			33335-60020-	1	81	
	+	+					
	33335C	BEARING (FOR 1ST GEAR NEEDLE)					
	+	+					
8411-	BJ70			90364-44065-	1	81	
	+	+					
	33336	GEAR, 5TH					
	+	+					
8411-	BJ70			33336-60010-	1	81	
	+	+					
	33343B	BUSH, 3RD GEAR					
	+	+					
8411-	BJ70			33343-36020-	1	81	
	+	+					
	33343C	BALL (FOR 3RD GEAR BUSH)					
	+	+					
8411-	BJ70			90360-06004-	1	81	
	+	+					
	33348	WASHER, 1ST GEAR THRUST					
	+	+					
8411-	BJ70			33348-36012-	1	81	
	+	+					
	33348A	PIN OR BALL (FOR 1ST GEAR THRUST WASHER)					
	+	+					
8411-	BJ70			90250-05202-	1	81	



FIG. 36-10

GENUINE TOYOTA PARTS

1-D7

M74-15-0622


GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE FROM UP TO
8411- 8510-	36231C BJ70	BEARING, TAPER ROLLER (FOR TRANSFER OUTPUT SHAFT) CONTINUED	FR RR	90366-35011- 90366-35053-	1 1	81 101
8411-	36231E BJ70	BEARING, NEEDLE ROLLER (FOR TRANSFER OUTPUT SHAFT FRONT)		90364-17010-	1	81
8411- 8411-	36231F BJ70	RING, SHAFT SNAP (FOR TRANSFER OUTPUT SHAFT) T=2.3		90520-33107-	1	81
8411-	BJ70	T=2.6		90520-33110-	1	81
8411-	36234 BJ70	SHAFT, TRANSFER OUTPUT, FRONT		36234-60031-	1	81
8411-	36234A BJ70	BEARING (FOR TRANSFER OUTPUT FRONT SHAFT)		90363-35013-	1	81
8411-	36234B BJ70	RING, SNAP (FOR TRANSFER OUTPUT FRONT BEARING)		90521-75023-	1	81
8411-	36235 BJ70	SLEEVE, TRANSFER HIGH AND LOW CLUTCH		36235-60020-	1	81
8411-	36236 BJ70	SLEEVE, FRONT DRIVE CLUTCH		36235-60020-	1	81
8411-	36237 BJ70	HUB, TRANSFER CLUTCH		36237-60020-	1	81
8411-8502 8502-8510 8510-	36251 BJ70 BJ70 BJ70	SPACER, TRANSFER INPUT SHAFT		36251-60030- 36251-60050- 36251-60030-	1 1 1	81 100 101
8411-8510 8510-	36261 BJ70 BJ70	SPACER, TRANSFER IDLER GEAR		90560-34001- 90560-38003-	1 1	81 101

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE FROM UP TO
8411-	36726 BJ70	PLATE, LOCK (FOR TRANSFER GEAR)		36726-60020-	1	81

GENUINE TOYOTA PARTS



(8411-)

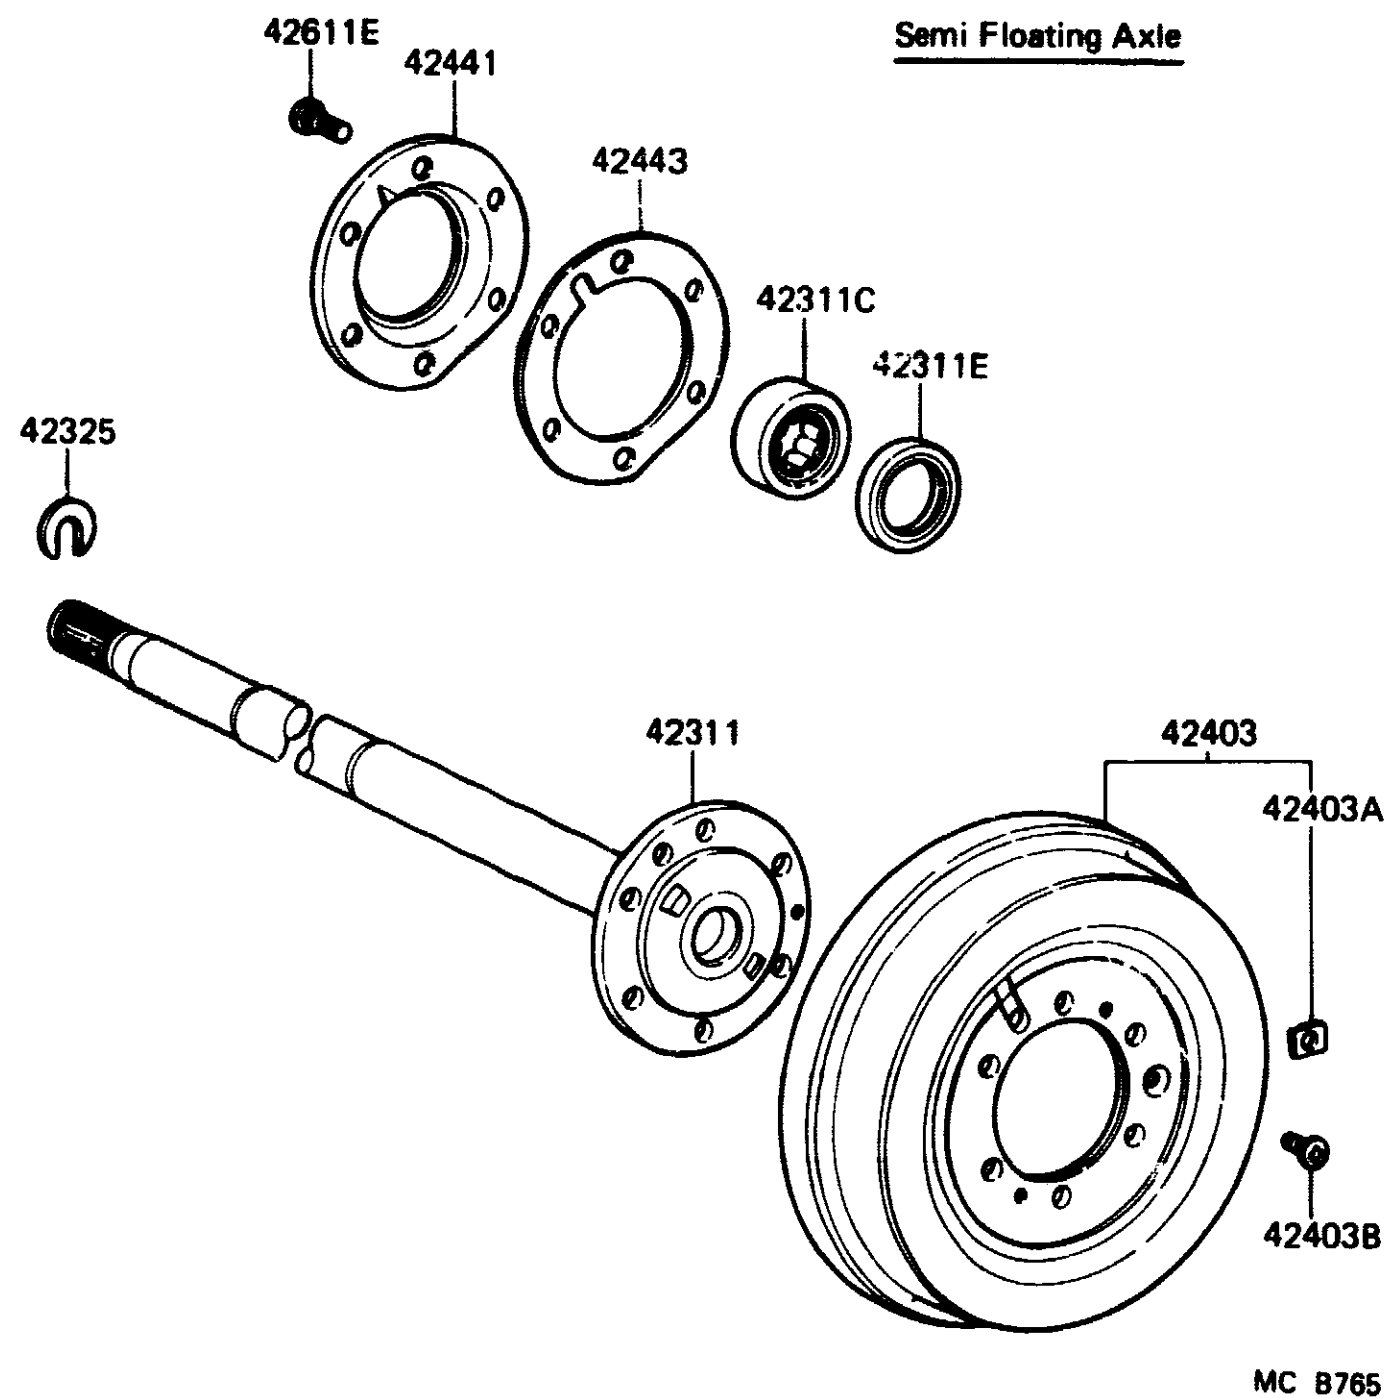Semi Floating Axle

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	41-02 REAR AXLE SHAFT & HUB						
	42311	SHAFT, REAR AXLE					
8411-	BJ70	RH		42311-60060-	1	81	
8411-	BJ70	LH		42312-60070-	1	81	
	42311C	BEARING, (FOR REAR AXLE SHAFT)					
8411-	BJ70			90365-47013-	2	81	
	42311E	SEAL, OIL (FOR REAR AXLE SHAFT OUTER)					
8411-	BJ70			90311-47001-	2	81	
	42325	LOCK, REAR AXLE SHAFT					
8411-	BJ70			42325-55010-	2	81	
	42403	DRUM SUB-ASSY, REAR BRAKE					
8411-	BJ70			42431-60020-	2	81	
	42403A	PIECE, BALANCE (FOR REAR BRAKE DRUM)					
8411-8612	BJ70	40G		90937-01120-	33	81	
8411-	BJ70	10G		90937-01117-	33	81	
8411-	BJ70	20G		90937-01118-	33	81	
8411-	BJ70	30G		90937-01119-	33	81	
8411-	BJ70	50G		90937-01121-	33	81	
8411-	BJ70	60G		90937-01122-	33	81	
	42403B	BOLT, SET (FOR REAR BRAKE DRUM SETTING)					
8411-	BJ70			90113-10003-	2	81	
	42441	DEFLECTOR, BRAKE DRUM OIL					
8411-	BJ70			42441-30010-	2	81	
	42443	GASKET, BRAKE DRUM OIL DEFLECTOR					
8411-	BJ70			42443-55020-	2	81	
	42611E	BOLT, HUB (FOR REAR AXLE)					
8411-	BJ70			90942-02052-	12	81	

GENUINE TOYOTA PARTS

(8411-)

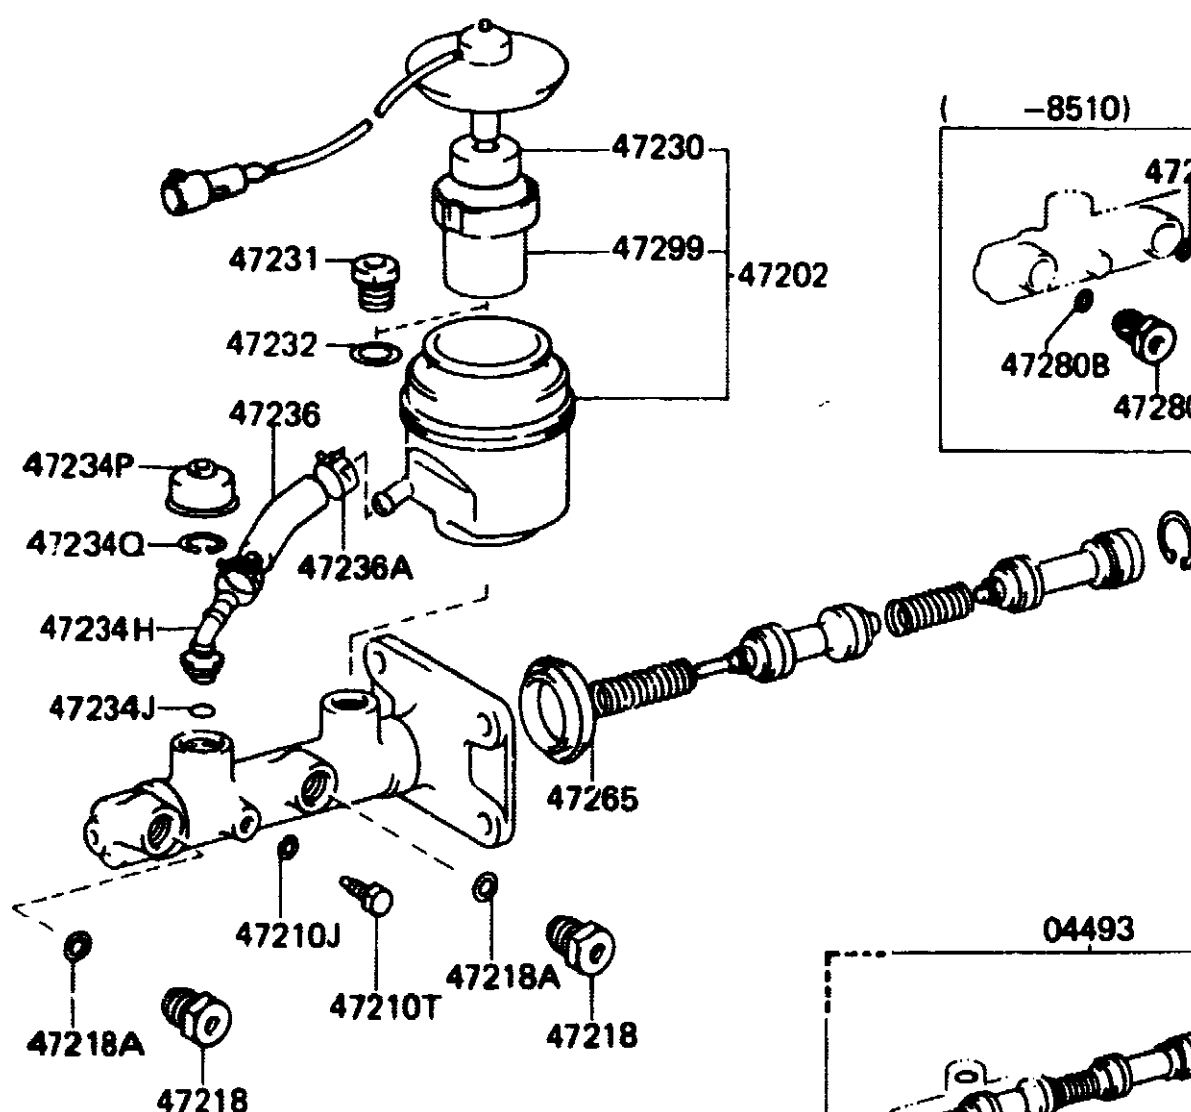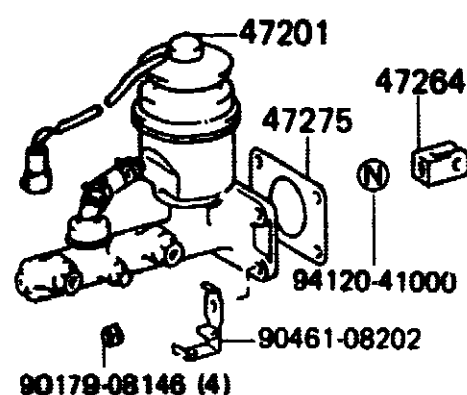

MC B818-B


MCB818B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	47-02 BRAKE MASTER CYLINDER						
8411-	BJ70	04493 CYLINDER KIT, BRAKE MASTER		04493-60090-	1	81	
8411-	BJ70	47201 CYLINDER SUB-ASSY, BRAKE MASTER		47201-60220-	1	81	
8411-	BJ70	47202 RESERVOIR SUB-ASSY, BRAKE MASTER CYLINDER		47202-60040-	1	81	
8411-	BJ70	47210J GASKET (FOR MASTER CYLINDER)		90430-06104-	1	81	
8411-	BJ70	47210T BOLT (FOR BRAKE MASTER CYLINDER)		90109-06008-	1	81	
8510-	3J70	47218 PLUG, MASTER CYLINDER FLUID OUTLET		47218-12040-	2	101	
8510-	BJ70	47218A GASKET (FOR FLUID OUTLET PLUG)		90430-09253-	2	101	
8411-	BJ70	47230 CAP ASSY, BRAKE MASTER CYLINDER RESERVOIR FILLER		84460-22010-	1	81	
8411-	BJ70	47231 BOLT, BRAKE MASTER CYLINDER RESERVOIR SET		47231-30010-	1	81	
8411-	BJ70	47232 WASHER, BRAKE RESERVOIR SET BOLT		47232-30010-	1	81	
8411-	BJ70	47234H ELBOW (FOR RESERVOIR TUBE)		90407-10003-	1	81	
8411-	BJ70	47234J RING, O (FOR RESERVOIR TUBE)		90301-14001-	1	81	

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
45451-60100-	1-L9	47214-14010-	1-E10	47920-60050-	1-C11	48823-27010-	1-J11	53101-90K00-	2-I1	55107-90K01-	1-F5
45457-60010-	1-L9	47264-22010-	1-E10	47931-35050-	1-C11	-60030-	1-J11	-90K01-	2-I1	55210-90K01-	2-A2
45458-60010-	1-L9	47265-20050-	1-E10	47933-60050-	1-C11	48825-60020-	1-J11	53202-90K01-	2-M1	-90K03-	2-A2
45460-69135-	1-L9		1-H5	47935-35010-	1-C11	51002-60060-	2-A1	53203-90K01-	2-M1	55301-90K03-03	2-C2
45461-60100-	1-L9	-20060-	1-E10	47936-35010-	1-D11	-60061-	2-A1	53207-90K04-	1-F3	-90K03-05	2-C2
45466-36010-	1-L9	47275-14010-	1-H5	47937-60010-	1-D11	-60062-	2-A1	53216-90K02-	2-M1	-90K08-03	2-C2
-55020-	1-L9	-22010-	1-E10	48046-60060-	1-L11	51065-60040-	2-A1	53217-90K02-	2-M1	-90K08-05	2-C2
45473-35010-	1-L9	47280-30030-	1-E10	48047-60060-	1-L11	51077-90K00-	2-I2	53241-90K00-	2-M1	-90K22-03	2-C2
45475-35010-	1-L9	47299-14010-	1-E10	48048-60020-	1-I11	51078-90K00-	2-I2	53291-90K00-	2-M1	-90K22-05	2-C2
45611-60060-	1-L9	47312-60490-	1-B11	48049-60020-	1-I11	51201-60100-	2-A1	53295-90K00-	1-F3	-90K24-03	2-C2
45612-60060-	1-L9	47313-60140-	1-B11	48102-60230-	1-H11	-60101-	2-A1	53297-90K00-	1-F3	-90K24-05	2-C2
45635-60020-	1-A9	-60141-	1-B11	48110-60230-	1-H11	51202-60110-	2-A1	53299-90K05-	1-F3	55305-90K00-	2-C2
45636-60061-	1-A9	47314-60160-	1-B11	-60231-	1-H11	51203-60130-	2-A1	53301-90K05-	2-J1	55308-90K01-01	2-C2
45700-69025-	1-M9	-60161-	1-B11	48111-60230-	1-H11	-60131-	2-A1	-90K13-	2-J1	-90K01-03	2-C2
45721-60070-	1-M9	47315-60320-	1-B11	48112-60230-	1-H11	51204-60080-	2-A1	-90K27-	2-J1	-90K01-05	2-C2
-60071-	1-M9	-60321-	1-B11	48114-60230-	1-H11	51205-60020-	2-A1	53303-90K05-	2-J1	55309-90K00-01	2-C2
45804-22010-	1-A9	47316-60190-	1-B11	48115-60230-	1-H11	51209-60070-	2-A1	53304-90K05-	2-J1	-90K00-03	2-C2
45813-22010-	1-A9	47322-60380-	1-C11	48141-60062-	1-I11	51321-60030-	2-A1	-90K06-	2-J1	-90K00-06	2-C2
-22020-	1-A9	47323-60200-	1-C11	-60200-	1-L11	51322-60030-	2-A1	-90K14-	2-J1	55355-90K00-03	2-C2
-22030-	1-A9	47324-60090-	1-C11	48153-60230-	1-I11	51405-60050-	2-C1	53341-90K01-	2-J1	-90K00-05	2-C2
-22040-	1-A9	-60091-	1-C11	48154-60230-	1-I11	51421-60080-	2-B1	-90K05-	2-J1	55356-90K00-03	2-C2
-22050-	1-A9	47325-60080-	1-C11	48154-60230-	1-I11	51422-60080-	2-B1	53381-90K01-	2-J1	-90K00-05	2-C2
45814-22010-	1-A9	-60081-	1-C11	48202-60460-	1-L11	51442-60030-	2-C1	53382-30060-	2-J1	55357-90A00-	2-C2
-22020-	1-A9	47326-60080-	1-C11	48210-60460-	1-L11	-60031-	2-C1	-90K00-	2-J1	55401-90K01-03	2-C2
45815-22060-	1-A9	47341-60031-	1-C11	-60461-	1-L11	51495-60130-	2-C1	-95189-	2-J1	-90K01-06	2-C2
-22070-	1-A9	47343-60021-	1-C11	-60550-	1-L11	51701-60070-	2-B1	53383-90K00-	2-F2	-90K03-03	2-C2
-22080-	1-A9	47351-60130-	1-C11	-60551-	1-L11	51703-60030-	2-B1	53410-90K00-	2-L1	-90K03-06	2-C2
-22090-	1-A9	47354-60040-	1-C11	48211-60460-	1-L11	51704-60020-	2-B1	53420-90K00-	2-L1	55403-90K00-03	2-C2
-22100-	1-A9	-60090-	1-C11	48212-60460-	1-L11	51707-90K00-	2-I2	53445-90K00-	2-L1	-90K00-06	2-C2
45819-22011-	1-A9	47355-60030-	1-C11	-60461-	1-L11	-90K02-	2-I2	53446-90K00-	2-L1	55404-90K00-03	2-C2
45821-22010-	1-A9	47371-60040-	1-J7	48213-60460-	1-L11	51708-90K00-	2-I2	53451-90K01-	2-L1	-90K00-06	2-C2
45870-60050-	1-M8	47372-35010-	1-C11	-60461-	1-L11	-90K02-	2-I2	53455-14020-	2-L1	55412-90K03-03	2-C2
45890-22050-	1-A9	-35010-	1-J7	48215-60460-	1-L11	51709-60030-	2-B1	53497-90K00-	2-L1	-90K03-05	2-D2
45897-14010-	1-A9	47447-60010-	1-J10	48216-60460-	1-L11	51773-90K00-	2-I2	53510-90K01-	2-L1	-90K04-03	2-D2
45898-22010-	1-A9	47449-30020-	1-K10	48284-60062-	1-I11	51793-90K00-	2-I2	53630-90K01-	2-L1	-90K04-05	2-D2
45899-22020-	1-A9	47491-20011-	1-K10	48289-60010-	1-I11	51908-90K03-	2-D1	-90K02-	2-L1	53413-90K00-	2-D2
46210-60060-03	1-A10	47509-60010-	1-K10	48304-60050-	1-L11	51961-60050-	2-C1	53701-90K08-	2-M1	55468-90K00-	2-D2
-60060-06	1-A10	47547-12010-	1-K3	48305-60020-	1-I11	51998-90K00-	2-D1	-90K50-	2-M1	55477-90K01-01	2-D2
46217-10020-33	1-A10	-12030-	1-A5	48306-60050-	1-M11	52101-60010-	2-G1	53702-90K12-	2-M1	55497-90K00-	2-D2
-10020-56	1-A10	-20030-	1-H10	48346-60010-	1-I11	-60020-	2-G1	-90K96-	2-M1	55498-90K00-	2-D2
46243-60060-01	1-A10	-60020-	1-K10	48404-60010-	1-M11	52106-60030-	2-H1	53737-90K01-	2-A2	55501-90K00-03	2-D2
-60060-06	1-A10	47550-60120-	1-K10	48407-60010-	1-M11	-60040-	2-H1	-90K03-	2-M1	-90K00-05	2-D2
46341-35030-	1-A10	-69105-	1-K10	48411-60010-	1-I11	52107-60030-	2-H1	-90K01-03	2-D2	-90K01-05	2-D2
46410-60230-	1-A10	47611-60010-	1-K10	48412-60010-	1-I11	-60080-	2-H1	53801-90K04-	2-K1	55505-90K00-	2-D2
46443-12020-	1-A10	47612-60010-	1-K10	48416-60060-	1-M11	-90K00-	2-H1	53802-90K04-	2-K1	55519-90K01-	2-M8
46451-60060-	1-A10	47616-60010-	1-K10			-90K01-	2-H1	53833-90K01-	2-K1	55521-16010-	2-D2
-60070-	1-A10	47624-60010-	1-K10			52108-60010-	2-H1	53834-90K01-	2-K1	55522-32010-	2-D2
	1-B10	47625-60010-	1-K10			52109-60010-	2-H1				
46458-30020-	1-B10	47626-60010-	1-K10	48417-60010-	1-M11	52116-60020-	2-G1	53871-90K00-	2-K1	55533-90A00-	2-D2
46469-60020-	1-B10	47628-35020-	1-K10	48433-60020-	1-I11	52117-60010-	2-G1	53874-90K00-	2-K1	55539-32010-01	2-D2
47043-60050-	1-J10	47633-35020-	1-K10	48434-60020-	1-I11	52151-60090-	2-H1	53911-90K02-	2-K1	55547-90K00-	2-D2
47044-60010-	1-J10	47643-60010-	1-L10	48475-60020-	1-I11	52173-60010-	2-H1	55042-90K01-03	2-C2	55556-90K01-	2-D2
47061-60011-	1-K10	47644-60010-	1-L10			52174-60010-	2-H1	-90K01-05	2-C2	55560-90K00-01	2-D2
47062-60011-	1-K10	47655-60010-	1-K10	48511-60120-	1-I11	-90K00-	2-H1	55084-90K01-	2-J10	55561-90K00-	2-D2
47101-60110-	1-C10	47703-60020-	1-I10	48512-60040-	1-I11	52201-25020-	2-E1	-90K05-	2-J10	55581-90K00-	2-D2
47201-60220-	1-D10	47704-60020-	1-I10			52202-25020-	2-E1	55085-90K01-	2-J10	55650-90K00-01	2-D2
47202-60040-	1-D10	47730-60021-	1-H10	48531-60140-	1-M11	52203-60020-	2-E1	55086-90K01-	2-J10	55660-90K00-01	2-D2
47218-12040-	1-D10	47731-30020-	1-H10	48811-60120-	1-J11	-60030-	2-E1	55087-90K01-	2-J10	55670-90K00-01	2-D2
47230-20040-	1-H5	47732-30010-	1-H10	-60050-	1-J11	52204-60020-	2-E1	55088-90K01-	2-J10	55700-90K32-	2-F2
47231-20010-	1-H5	47748-60010-	1-H10	48815-26040-	1-J11	-60030-	2-E1	55101-90K82-	2-A2	-90K59-	2-F2
-30010-	1-D10	47750-60021-	1-I10	-30050-	1-J11	52209-60020-	2-F1	-90L59-	2-A2	55780-90K01-	2-F2
	1-H5	47786-60020-	1-I10	48817-30010-	1-J11	53028-90K03-	2-M1	-90L60-	2-A2	55788-90K00-	2-F2
47232-30010-	1-D10	47787-60020-	1-I10	48823-26050-	1-J11			55106-90K00-	1-C10	55791-90K01-	2-F2
	1-H5	47910-26040-	1-C11								

ILLUSTRATED INDEX


D16

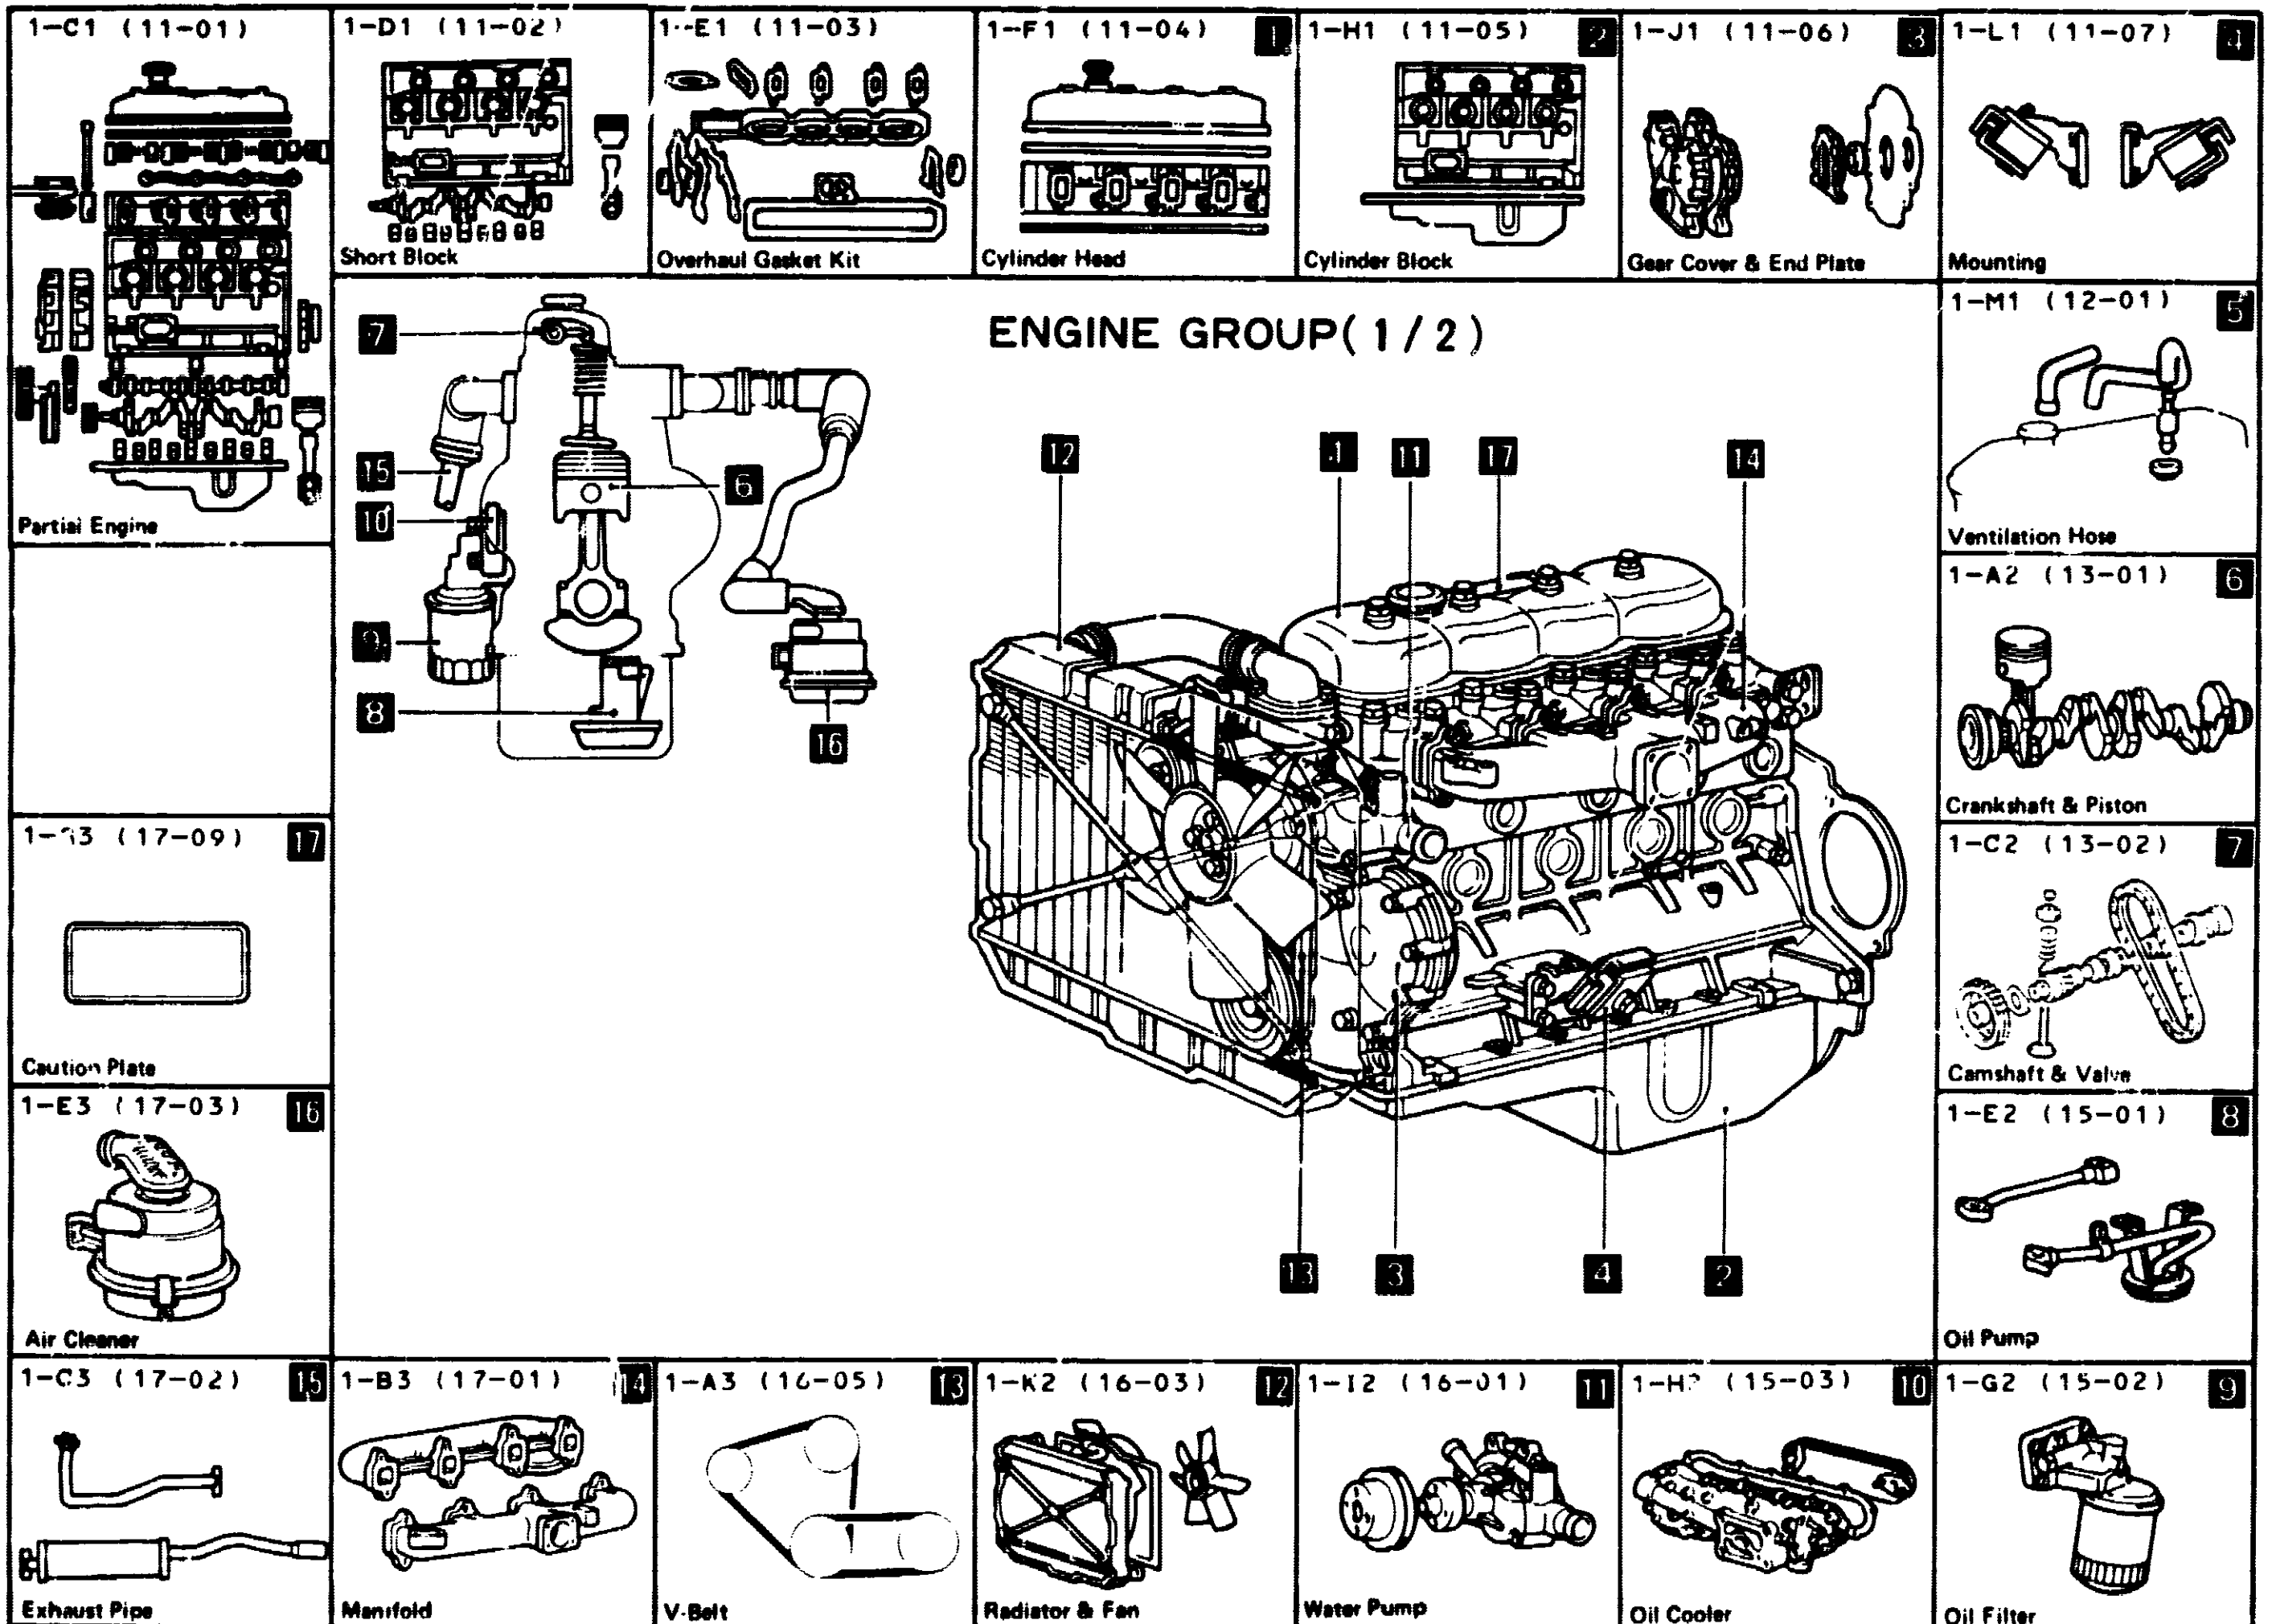


(8411-)

GENUINE TOYOTA PARTS

04111

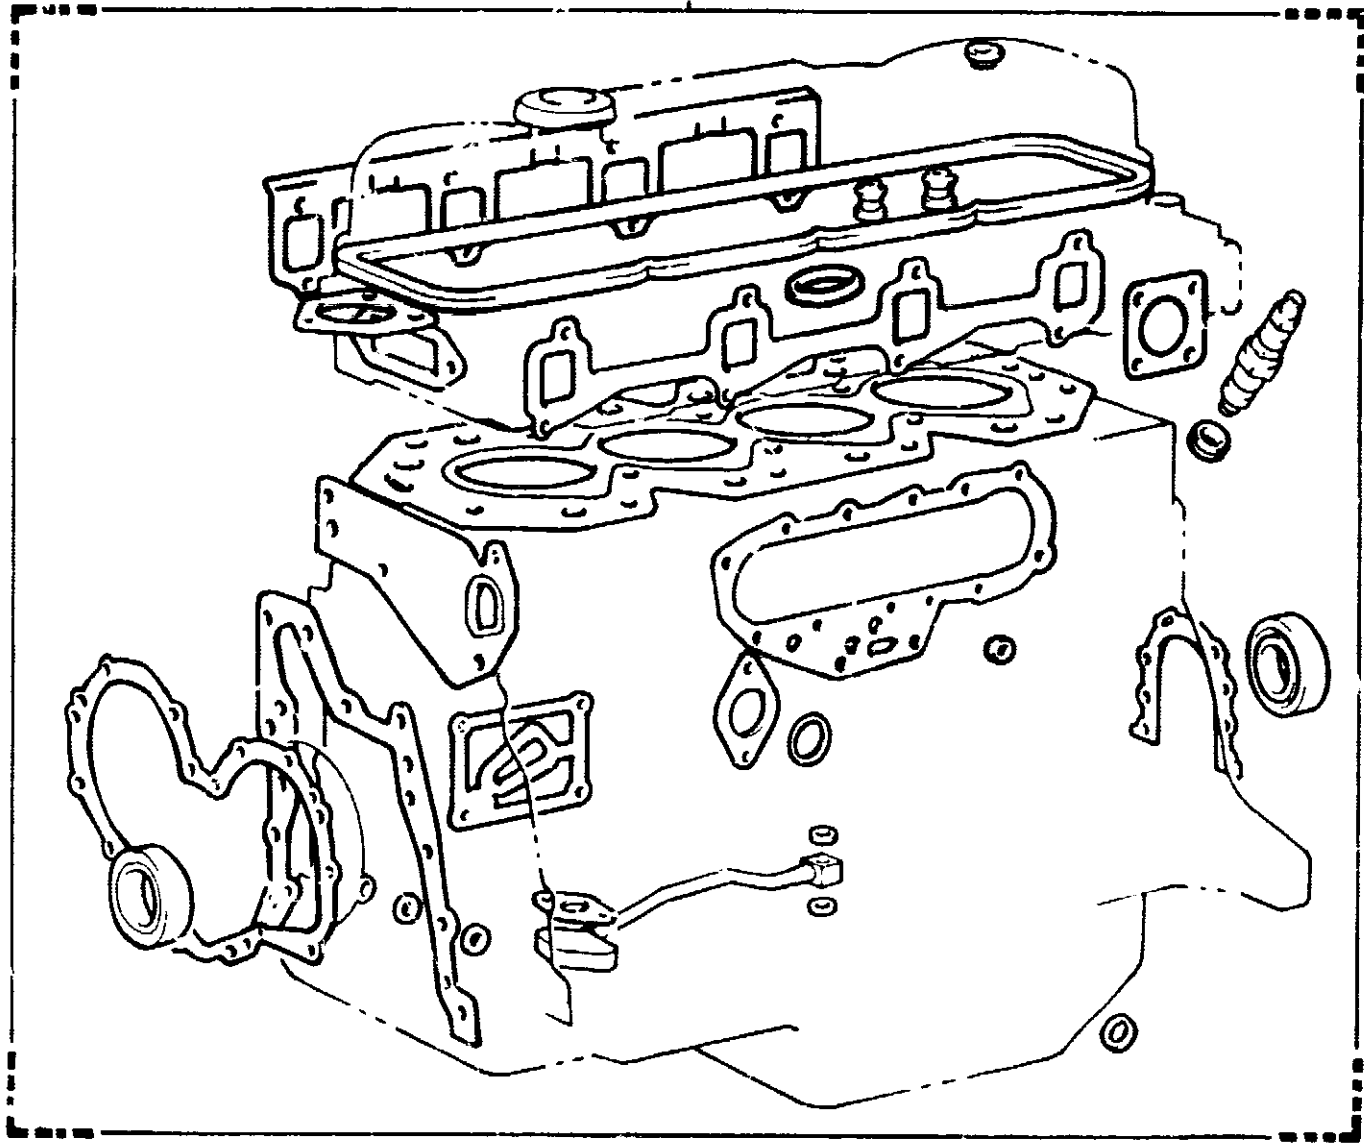

04112

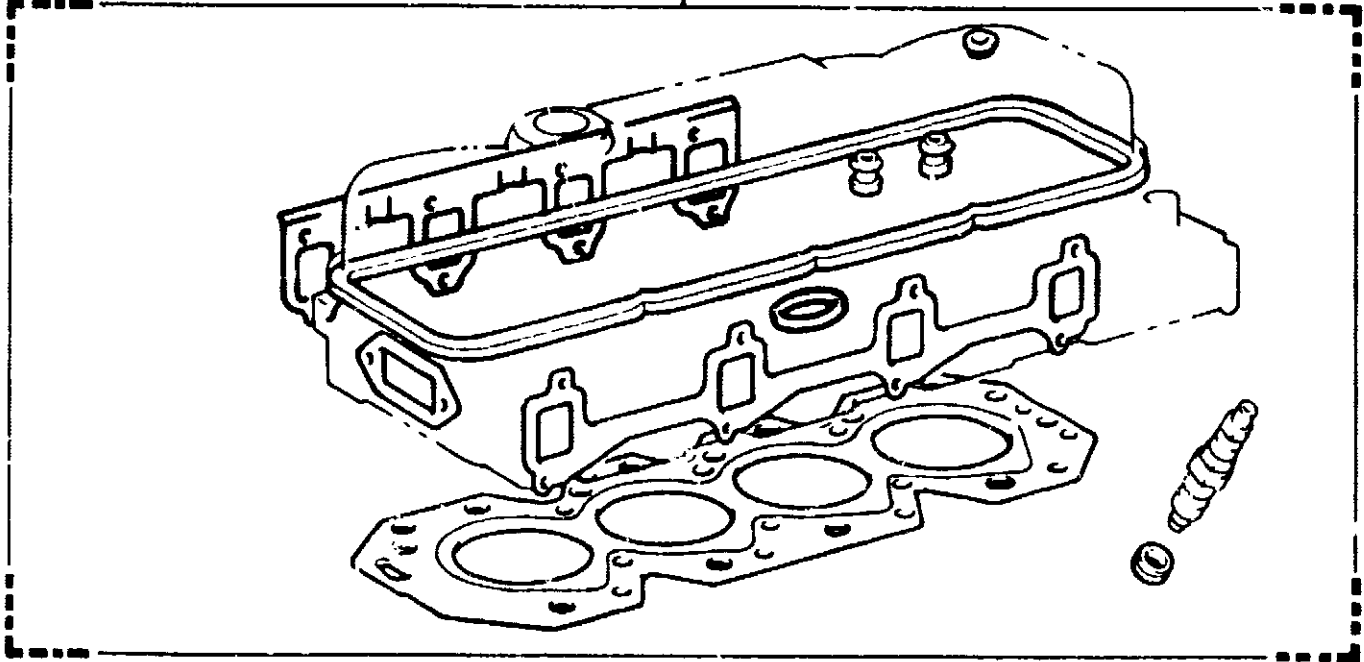


MA 7759-A

PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	11-03 ENGINE OVERHAUL GASKET KIT						
8411-	04111	GASKET KIT, ENGINE OVERHAUL		04111-58050-	1	81	
8411-	3B..BJ70						
8411-	04112	GASKET KIT, ENGINE VALVE GRIND		04112-58040-	1	81	
8411-	3B..BJ70						

GENUINE TOYOTA PARTS

(8411-)

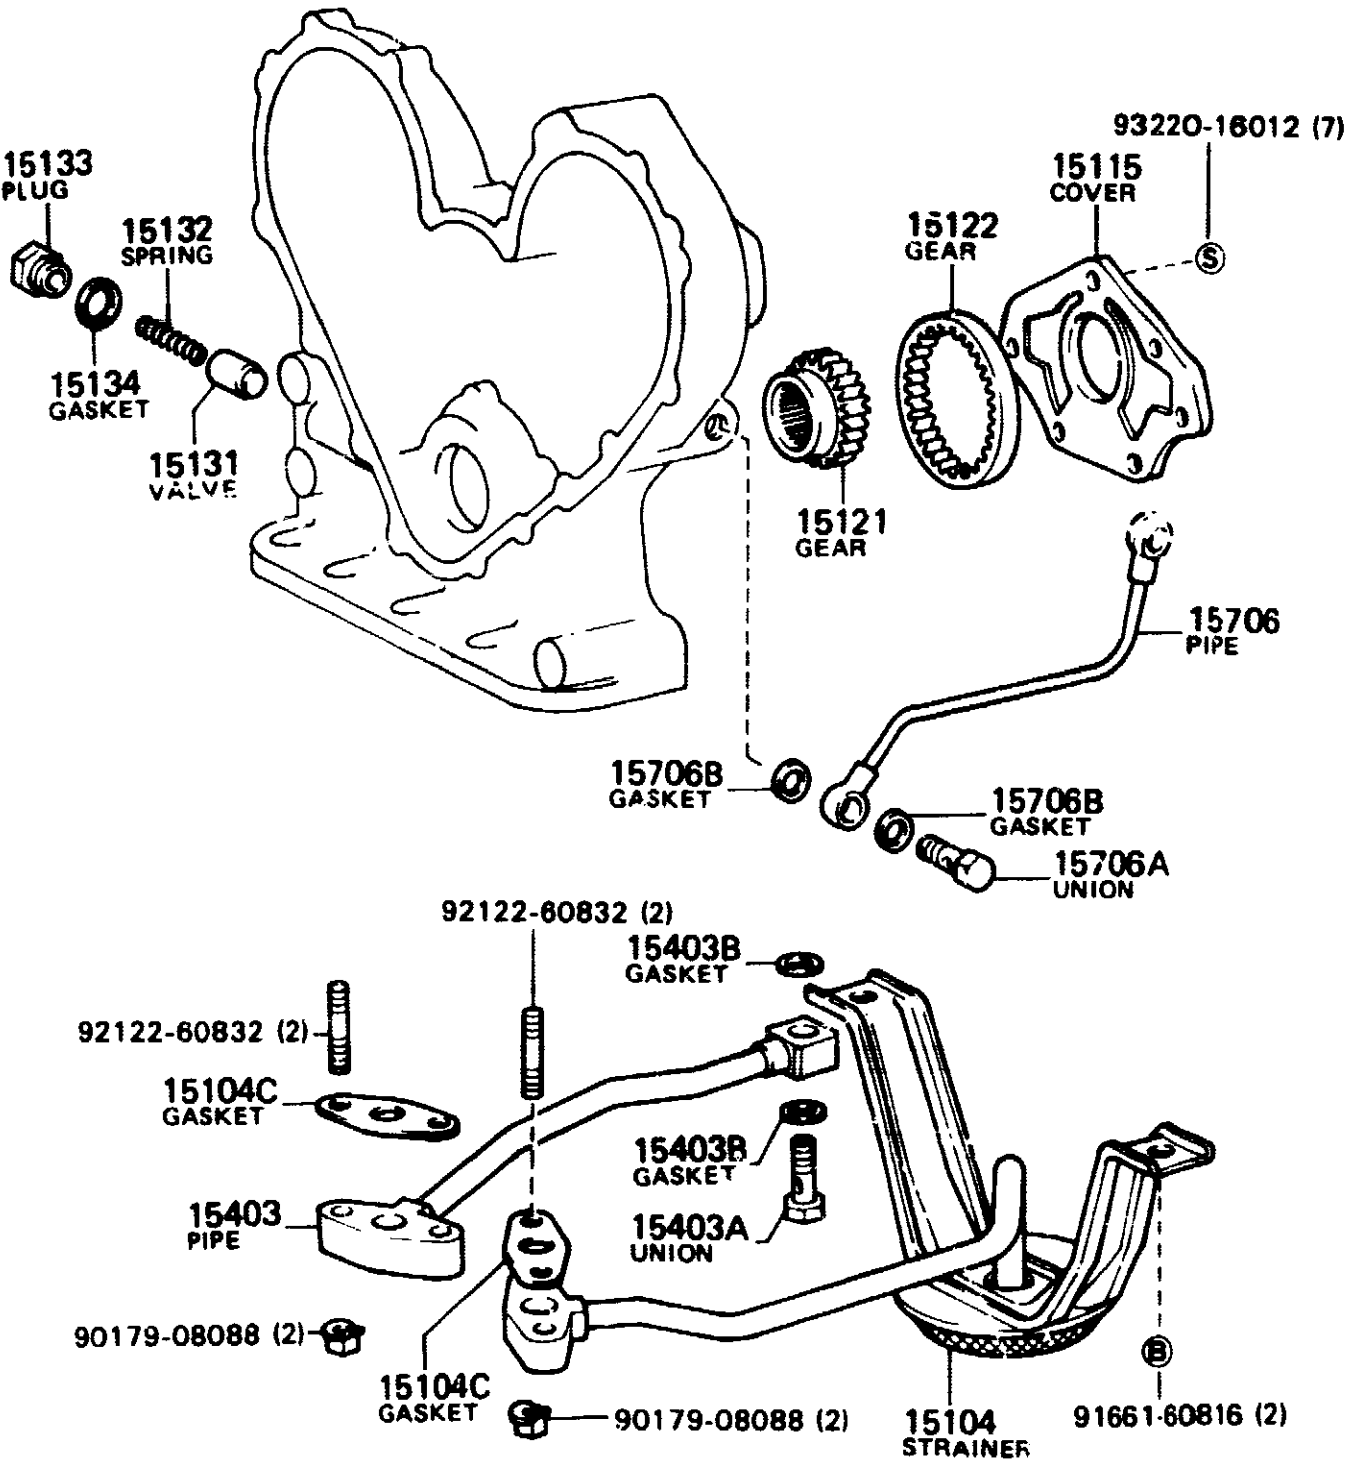

MA 4682-E


PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
FIG.	15-01 OIL PUMP						
8411-	15104	STRAINER SUB-ASSY, OIL		15104-56050-	1	81	
8411-	15104C	GASKET (FOR OIL STRAINER)		15193-56020-	2	81	
8411-	15115	COVER, OIL PUMP		15115-56030-	1	81	
8411-	15121	GEAR, OIL PUMP DRIVE		15121-56030-	1	81	
8411-	15122	GEAR, OIL PUMP DRIVEN		15122-56030-	1	81	
8411-	15131	VALVE, OIL PUMP RELIEF		15131-24010-	1	81	
8411-	15132	SPRING, OIL PUMP RELIEF VALVE		15132-76011-	1	81	
8411-	15133	PLUG, OIL PUMP RELIEF VALVE		15133-20010-	1	81	
8411-	15134	GASKET, OIL PUMP RELIEF VALVE		15134-20010-	1	81	
8411-	15403	PIPE SUB-ASSY, OIL PUMP OUTLET		15403-56041-	1	81	
8411-	15403A	UNION (FOR OIL PUMP OUTLET PIPE)		90401-18002-	1	81	
8411-	15403B	GASKET (FOR OIL PUMP OUTLET PIPE)		90430-18012-	2	81	

(8411-)

(8411-)


ILLUST.NO. 10r2

ILLUST.NO. 20F2

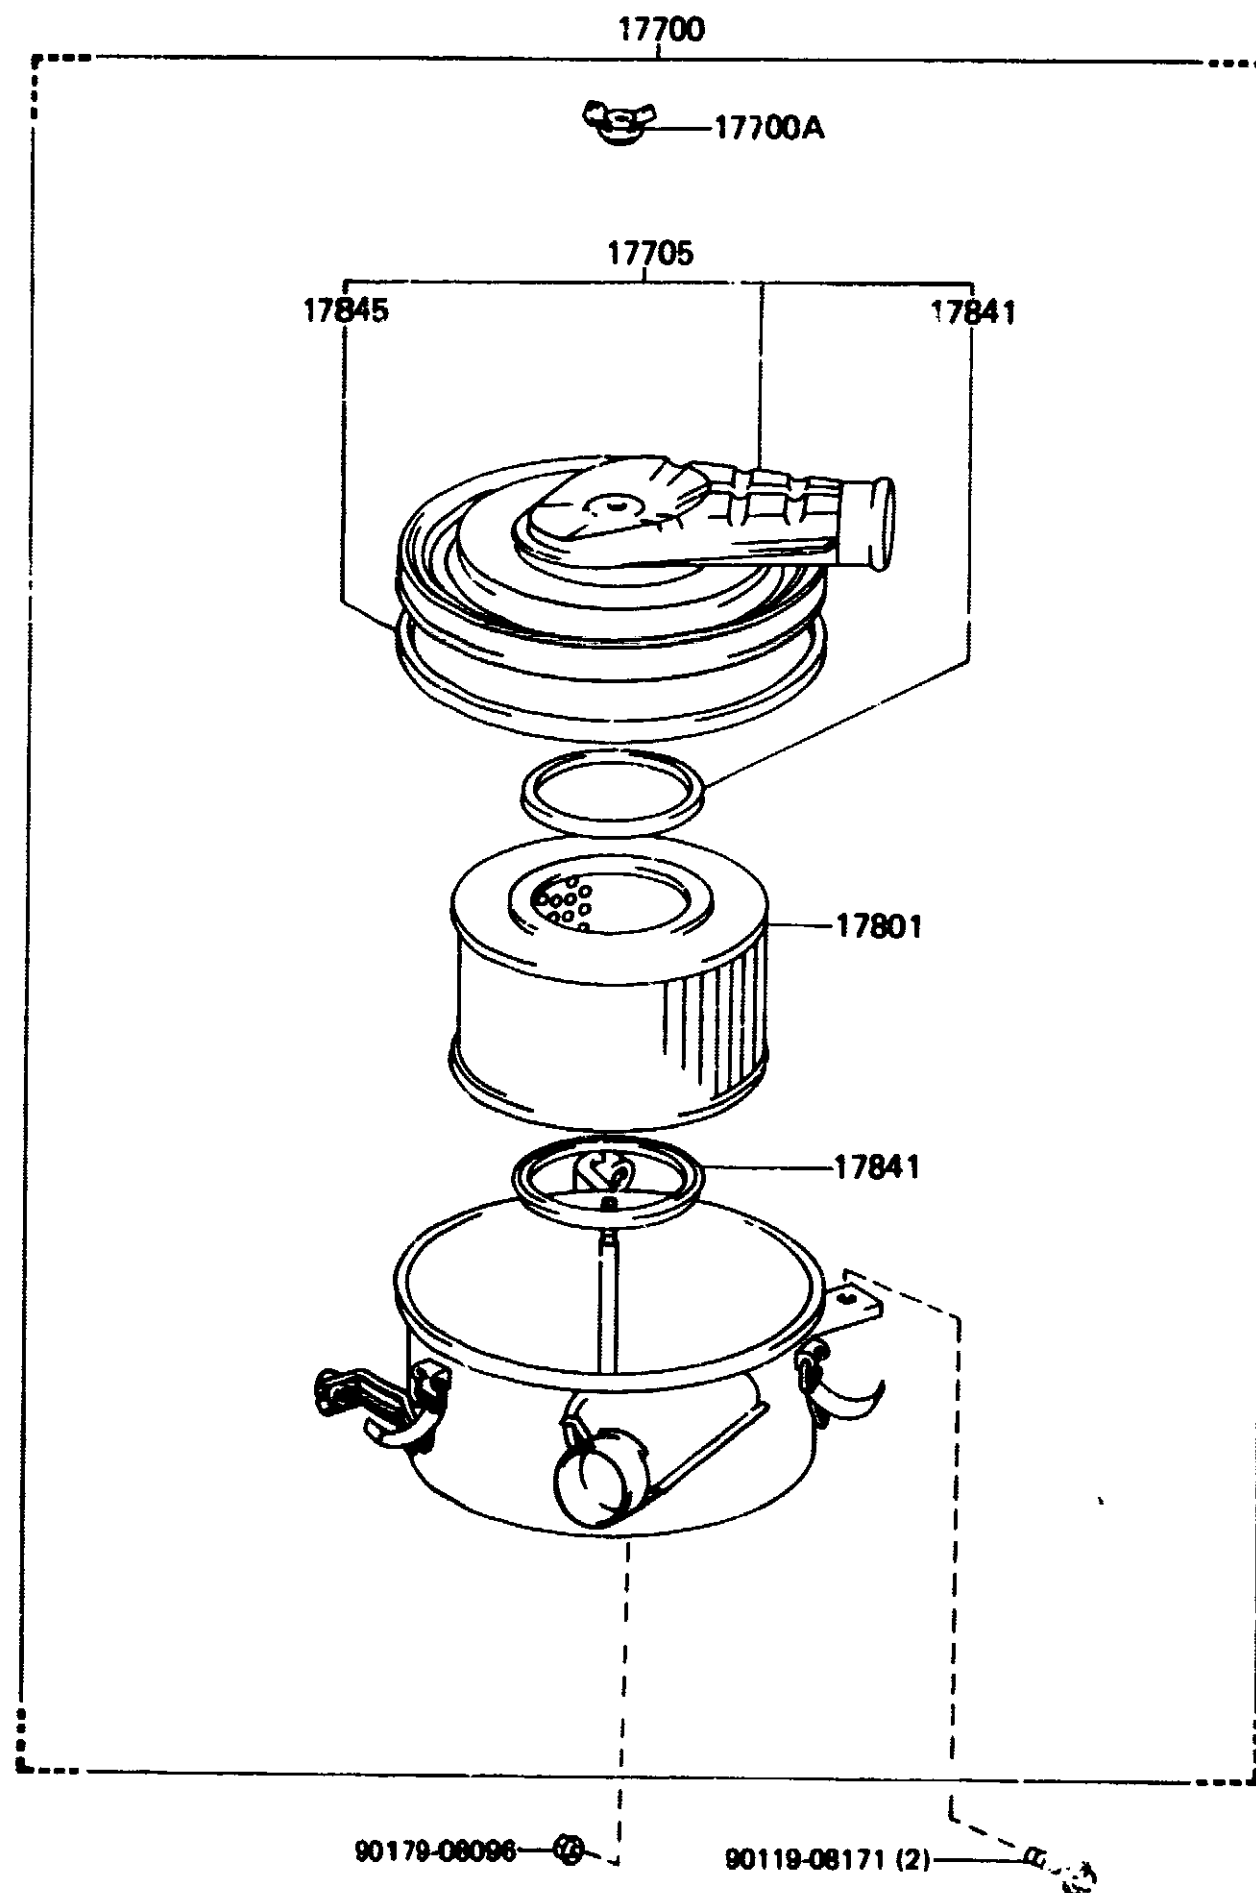

MA 7974

MA7974

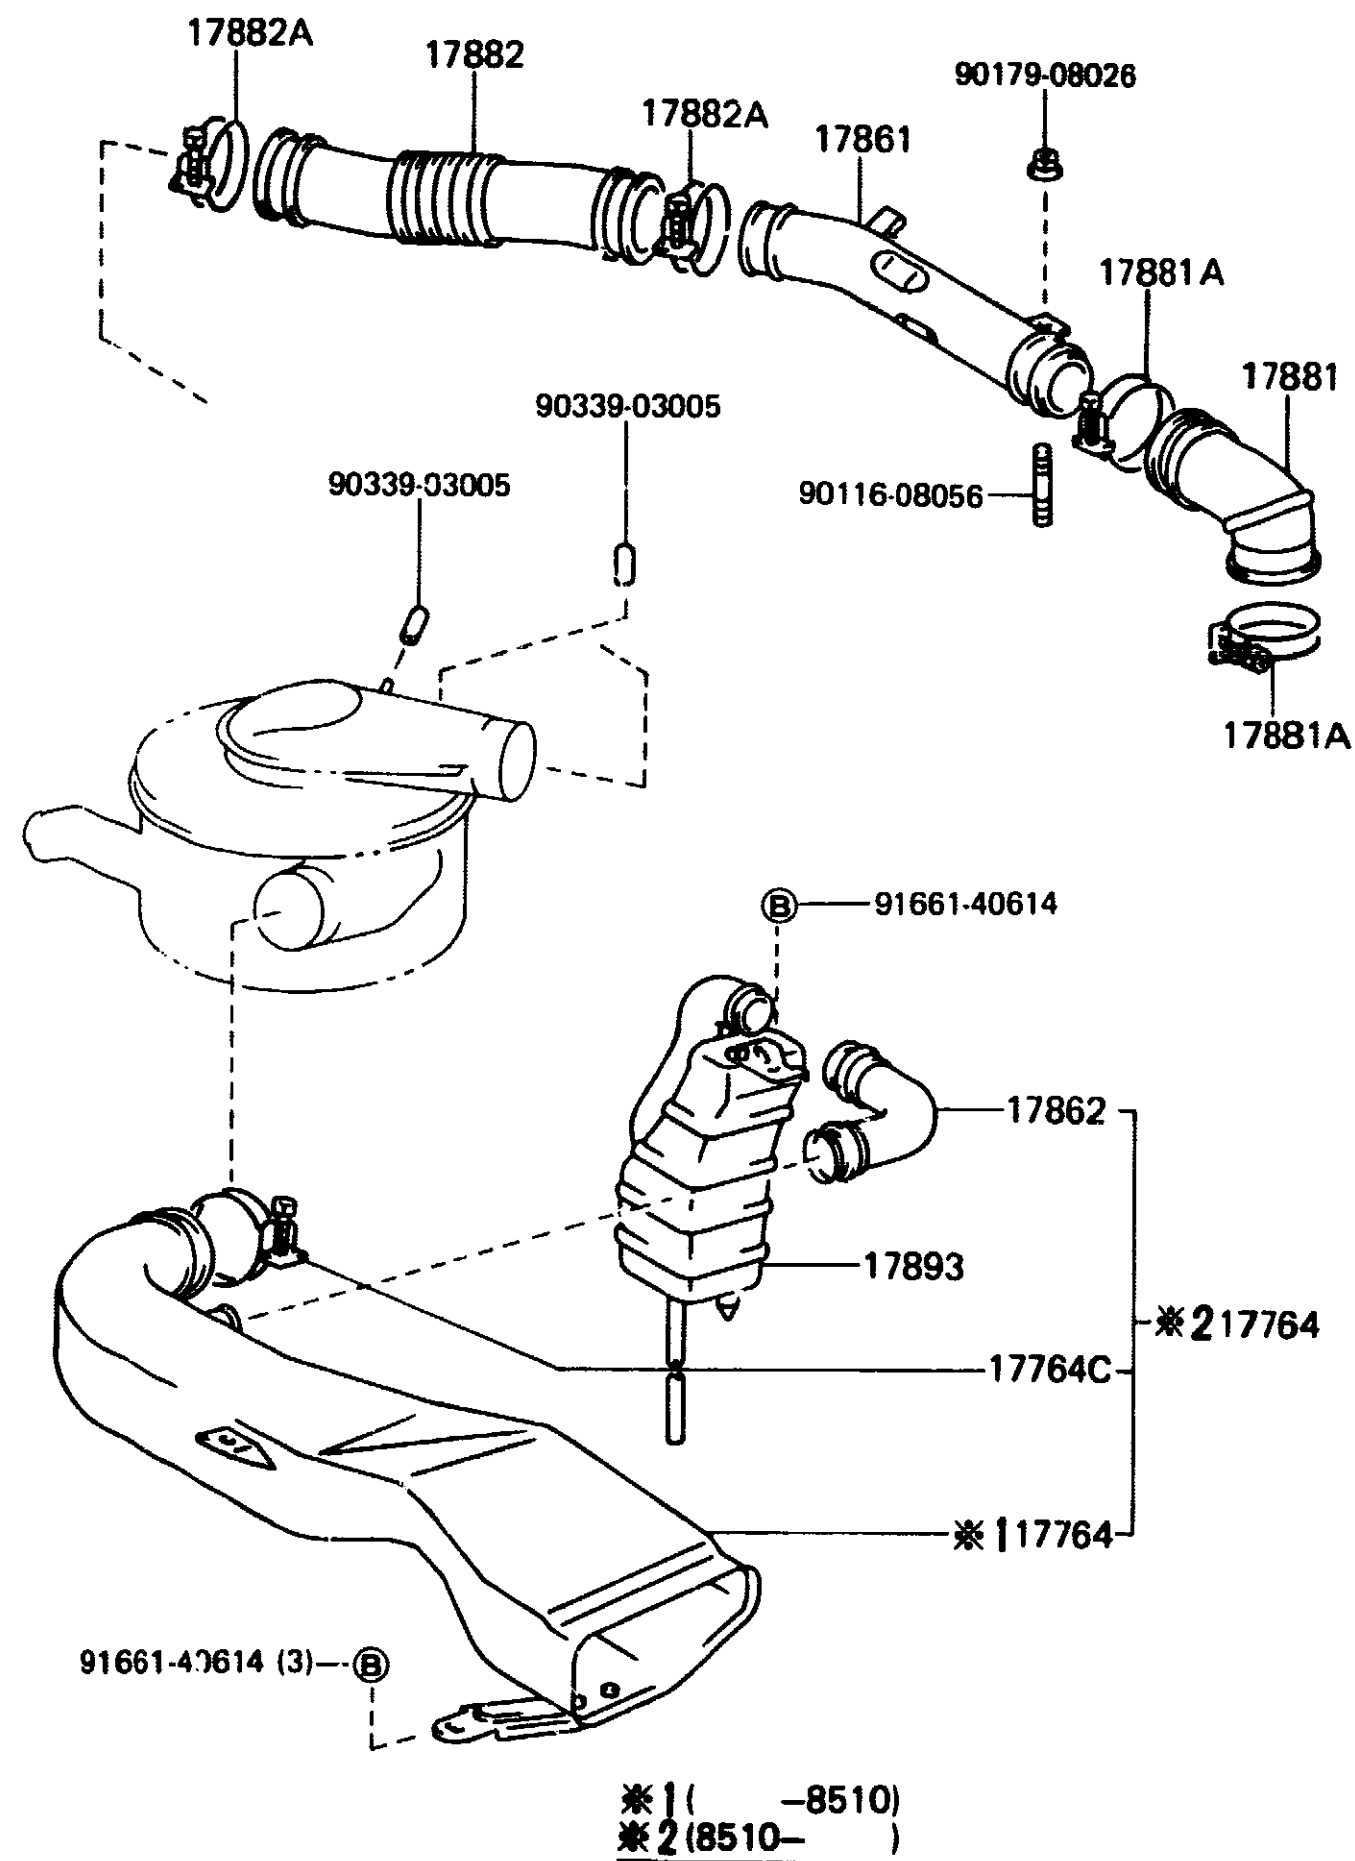

MA 8674-A

MA8674A

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
8411-	22144	SPRING, PUMP PLUNGER		22144-46010-	4	81	
	3B..BJ70						
8411-	22145	SEAT, SPRING, LOWER		22145-46010-	4	81	
	3B..BJ70						
8411-	22146	CAMSHAFT, INJECTION PUMP		22146-56010-	1	81	
	3B..BJ70						
8411-	22146A	BEARING (FOR INJECTION CAMSHAFT)		90099-10087-	2	81	
	3B..BJ70						
8411-	22147	RING, CAMSHAFT ADJUST		22147-77020-	2	81	
	3B..BJ70						
8411-	22148	SPRING, DELIVERY VALVE		22148-46010-	4	81	
	3B..BJ70						
8411-	22149	GASKET, DELIVERY VALVE		22149-76010-	4	81	
	3B..BJ70						
8411-	22155	PINION, PLUNGER CONTROL		22155-76010-	4	81	
	3B..BJ70						
8411-	22156	SCREW, PLUNGER CONTROL PINION CLAMP		22156-76010-	4	81	
	3B..BJ70						
8411-8510	22157	PLUG, INJECTION PUMP FELT PLATE		22157-48023-	4	81	
	3B..BJ70						
8510-	22157			22157-48024-	4		
	3B..BJ70						
8411-	22161	PLATE, CAMSHAFT SHIM		22161-76010-	2	81	
	3B..BJ70	T=0.10					
8411-	3B..BJ70	T=0.12		22162-76010-	2	81	
8411-	3B..BJ70	T=0.14		22163-76010-	2	81	
8411-	3B..BJ70	T=0.16		22164-76010-	2	81	
8411-	3B..BJ70	T=0.18		22165-76010-	2	81	

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
8411-	22161	PLATE, CAMSHAFT SHIM		22166-76010-	2	81	
	CONTINUED						
	3B..BJ70	T=0.50					
8411-	22173	WASHER, SPRING		22173-46010-	1	81	
	3B..BJ70						
8411-	22174	SHAFT, SPRAIN		22174-47010-	1	81	
	3B..BJ70						
8411-	22174A	KEY (FOR SPRAIN SHAFT)		90099-13002-	1	81	
	3B..BJ70						
8411-	22177	STAY, INJECTION PUMP BODY		22177-56042-	1	81	
	3B..BJ70						
8411-	22181	FLANGE, INJECTION PUMP		22181-56040-	1	81	
	3B..BJ70						
8411-	22182	PLATE, TAPPET ADJUSTING SHIM		22182-46010-	4	81	
	3B..BJ70	T=0.1					
8411-	3B..BJ70	T=0.2		22183-46010-	4	81	
8411-	3B..BJ70	T=0.3		22184-46010-	4	81	
8411-	3B..BJ70	T=0.4		22185-46010-	4	81	
8411-	3B..BJ70	T=0.5		22186-46010-	4	81	
8411-	3B..BJ70	T=0.15		22186-48010-	4	81	
8411-	3B..BJ70	T=0.6		22187-46010-	4	81	
8411-	3B..BJ70	T=0.7		22188-46010-	4	81	
8411-	3B..BJ70	T=0.8		22189-46010-	4	81	
8411-	3B..BJ70	T=0.9		22189-48031-	4	81	
8411-	3B..BJ70	T=1.0		22189-48032-	4	81	
8411-	3B..BJ70	T=1.1		22189-48033-	4	81	
8411-	3B..BJ70	T=1.2		22189-48034-	4	81	
8411-	3B..BJ70	T=1.3		22189-48035-	4	81	
8411-	3B..BJ70	T=1.4		22189-48036-	4	81	


(8411-)

(8411-)


ILLUST.NO. 10F2

ILLUST.NO. 20F2

W/Clutch Booster

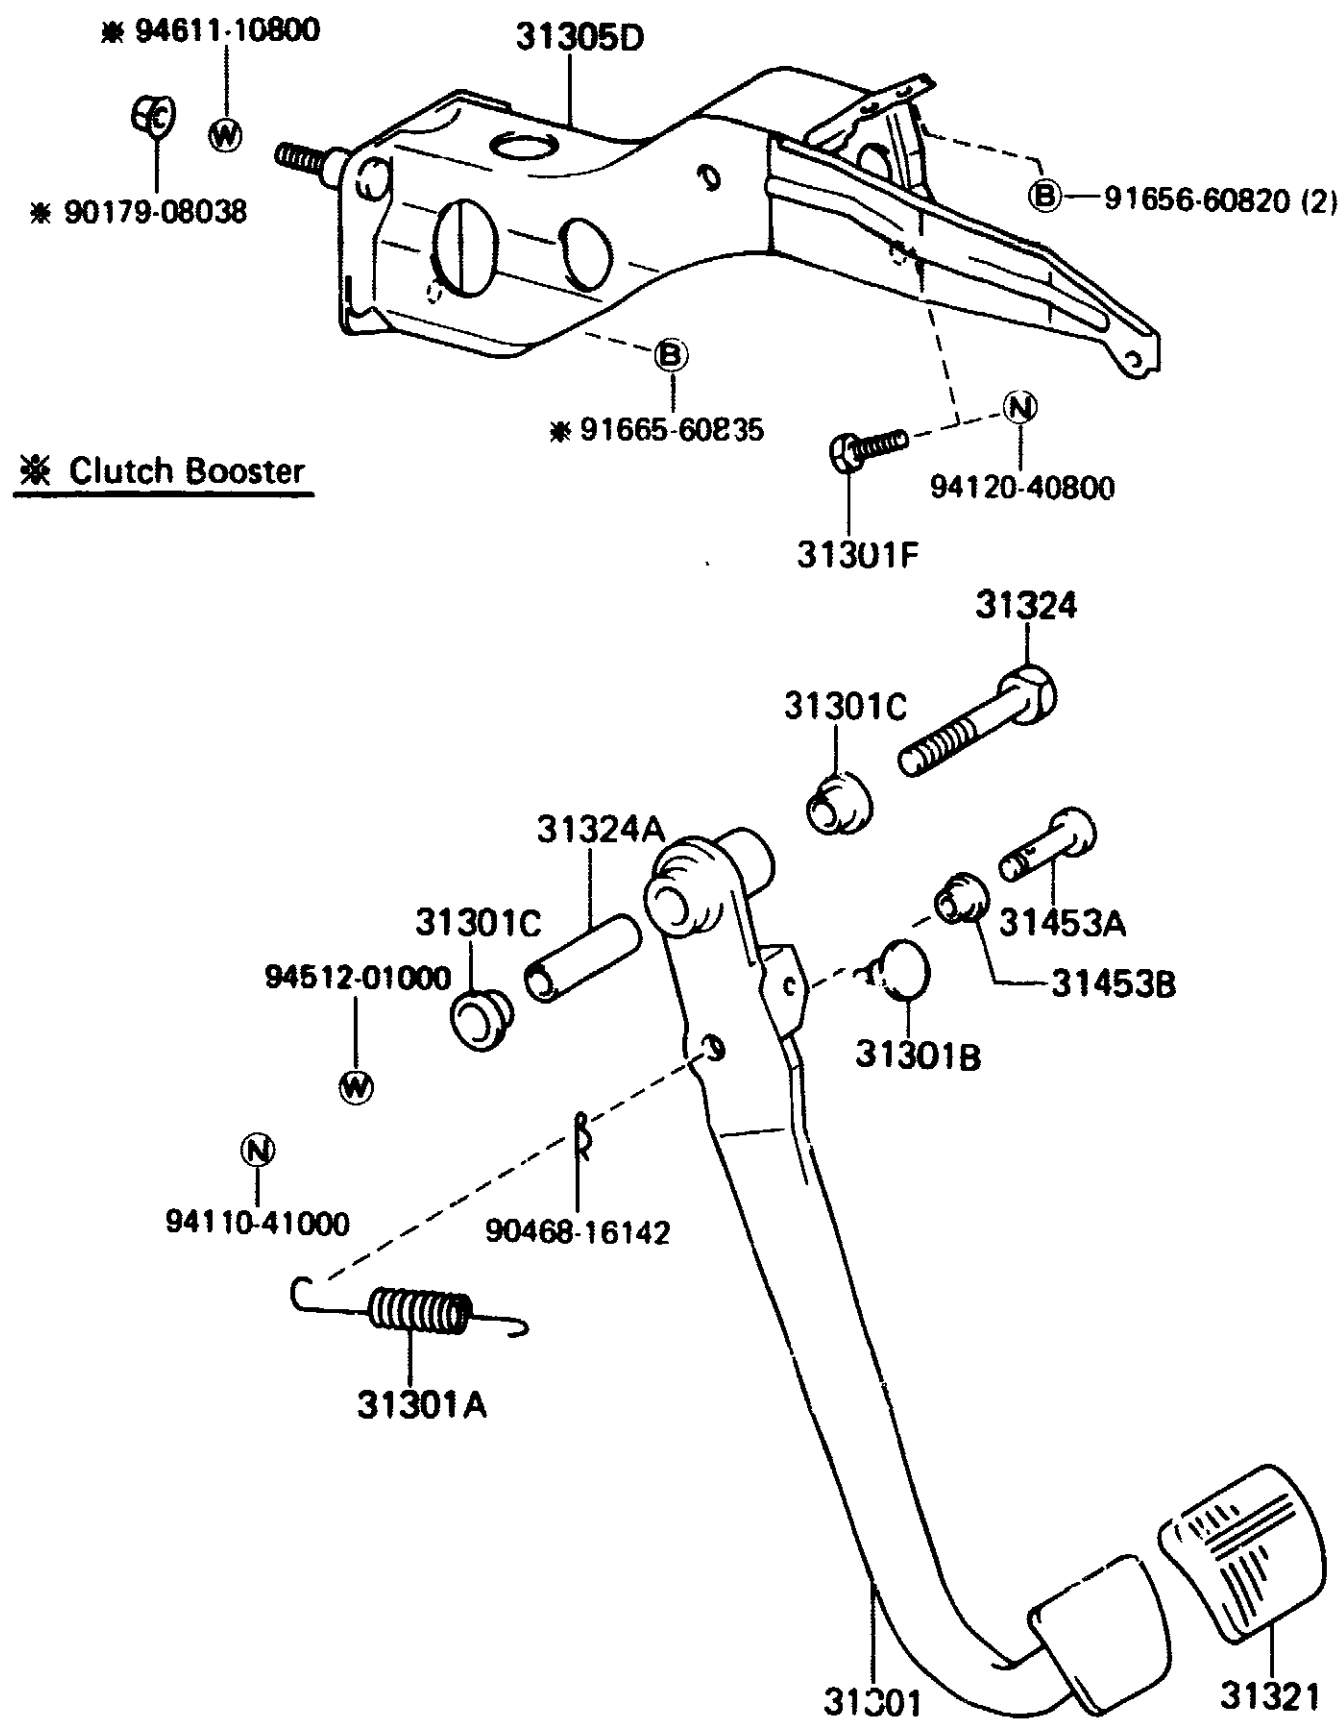

MC B665

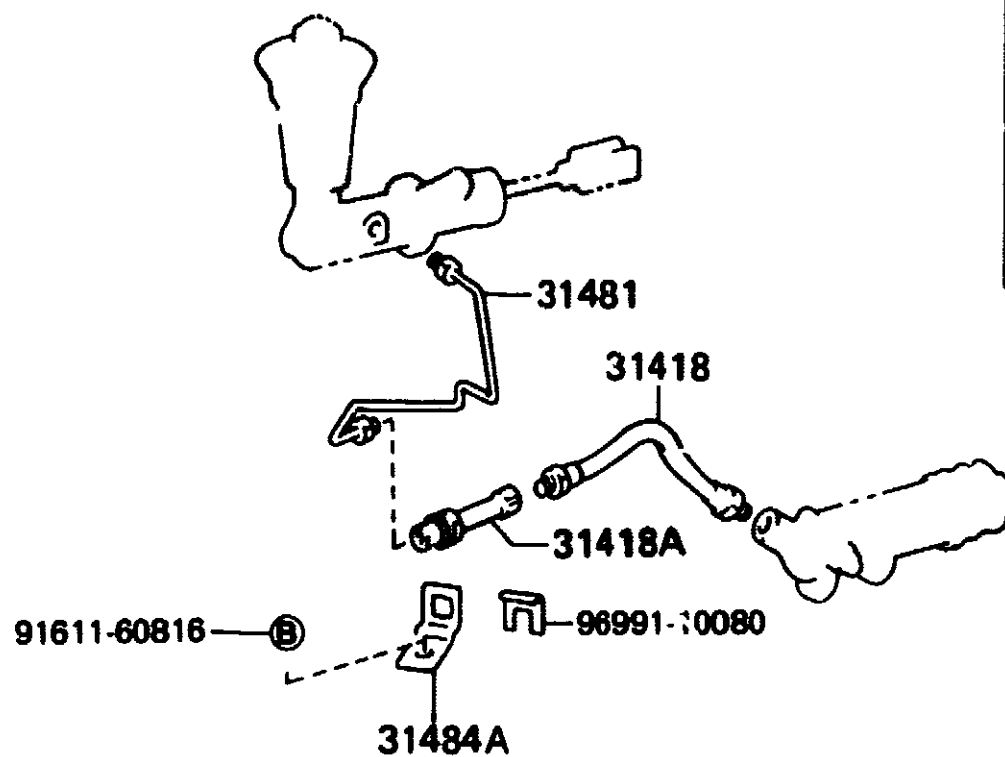

MC B667



PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	BJ70	WASHER, 5TH GEAR THRUST		33346-36010-	1	81	
8411-	BJ70	PIN (FOR 5TH GEAR THRUST WASHER)		90250-06009-	1	81	
8411-	BJ70	HUB, TRANSMISSION CLUTCH, NO.2		33362-36021-	1	81	
8411-	BJ70	RING, SHAFT SNAP (FOR CLUTCH HUB NO.2 SETTING)		90520-36250-	1	81	
8411-	BJ70	T=2.40		90520-36251-	1	81	
8411-	BJ70	T=2.45		90520-36252-	1	81	
8411-	BJ70	T=2.50		90520-36253-	1	81	
8411-	BJ70	T=2.55		90520-36254-	1	81	
8411-	BJ70	T=2.60		90520-36255-	1	81	
8411-	BJ70	T=2.65					
C 8411-8703	BJ70	SLEEVE, TRANSMISSION HUB, NO.2		33364-36051-	1	81	
C 8703-	BJ70			33364-60010-	1		
8411-	BJ70	KEY, SYNCHROMESH SHIFTING, NO.2		33366-36020-	3	81	
8411-	BJ70	RING, SYNCHRONIZER, NO.2		33368-20012-	2	81	
8411-	BJ70	RING, SYNCHRONIZER, NO.3		33368-20012-	1	81	
8411-	BJ70	SPRING, SYNCHROMESH SHIFTING KEY (FOR NO.3 CLUTCH HUB)		33391-36010-	2	81	
8411-	BJ70	KEY, SYNCHROMESH SHIFTING (FOR NO.3 CLUTCH HUB)		33394-36011-	3	81	



PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	BJ70	SPRING, SYNCHROMESH SHIFTING KEY, NO.2		33371-20010-	2	81	
C 8411-8703	BJ70	SLEEVE, TRANSMISSION HUB, NO.3		33395-36010-	1	81	
C 8703-	BJ70			33395-60010-	1		
8411-	BJ70	HOLDER, SYNCHRONIZER RING		33398-36012-	4	81	
8411-8510	BJ70	GEAR SUB-ASSY, REVERSE IDLER		33402-36050-	1	81	100
8510-	BJ70			33402-60020-	1	101	
8411-	BJ70	BEARING OR ROLLER (FOR COUNTER GEAR FRONT)		90365-32002-	1	81	
8411-	BJ70	RING, COUNTER GEAR FRONT BEARING SNAP, NO.1		90520-30214-	1	81	
8411-	BJ70	T=2.05		90520-30216-	1	81	
8411-	BJ70	T=2.15		90520-30218-	1	81	
8411-	BJ70	T=2.25					
8411-	BJ70	NUT (FOR COUNTER GEAR SHAFT)		90179-26002-	1	81	
8411-	BJ70	BEARING OR ROLLER (FOR COUNTER GEAR REAR)		90365-40001-	1	81	
8411-8510	BJ70	GEAR, COUNTER		33421-36040-	1	81	100
8510-	BJ70			33421-60060-	1	101	
8411-	BJ70	GEAR, COUNTERSHAFT 5TH		33046-60010-	1	81	
8411-	BJ70	BEARING (FOR COUNTER 5TH GEAR)		90364-32007-	1	81	

1-E7

(8411-)

(8411-

ELECTRIC TYPE

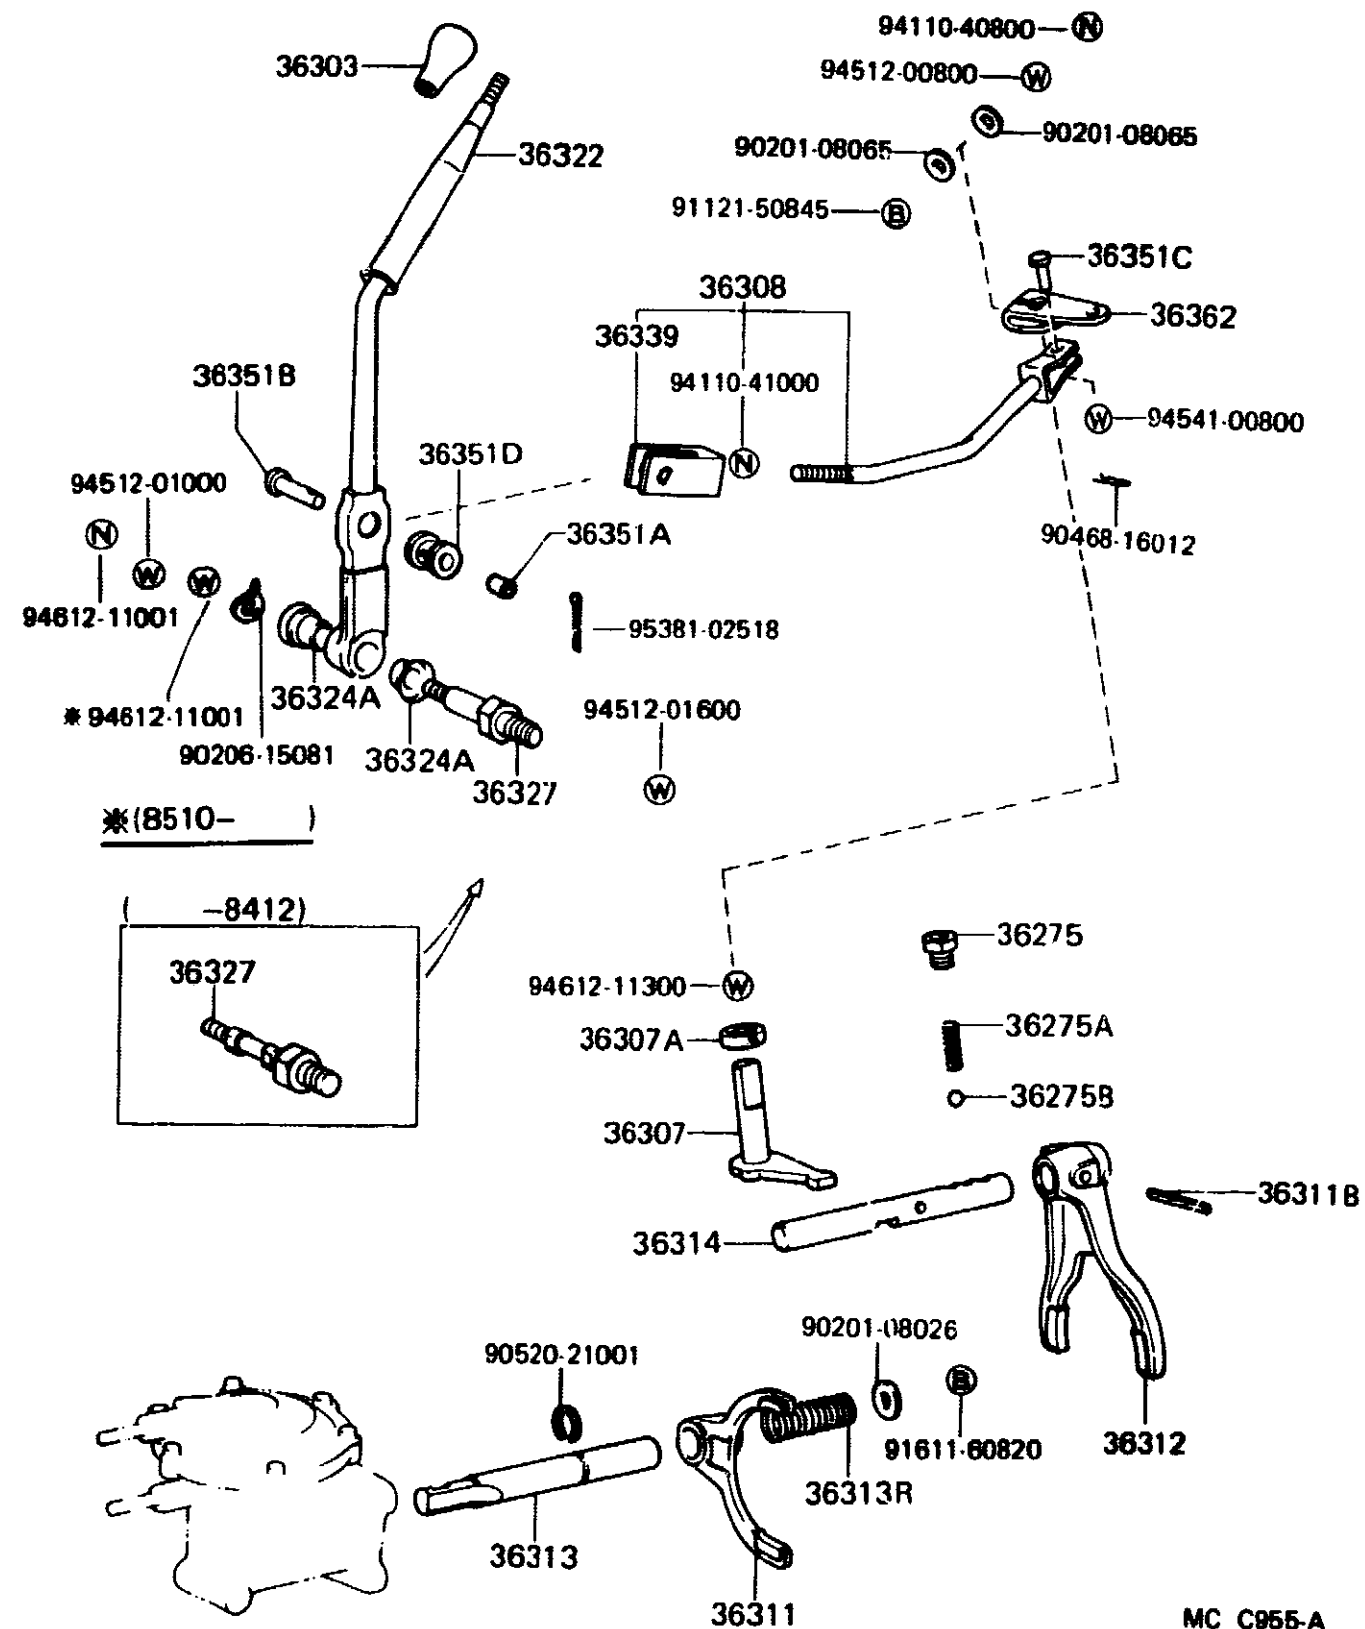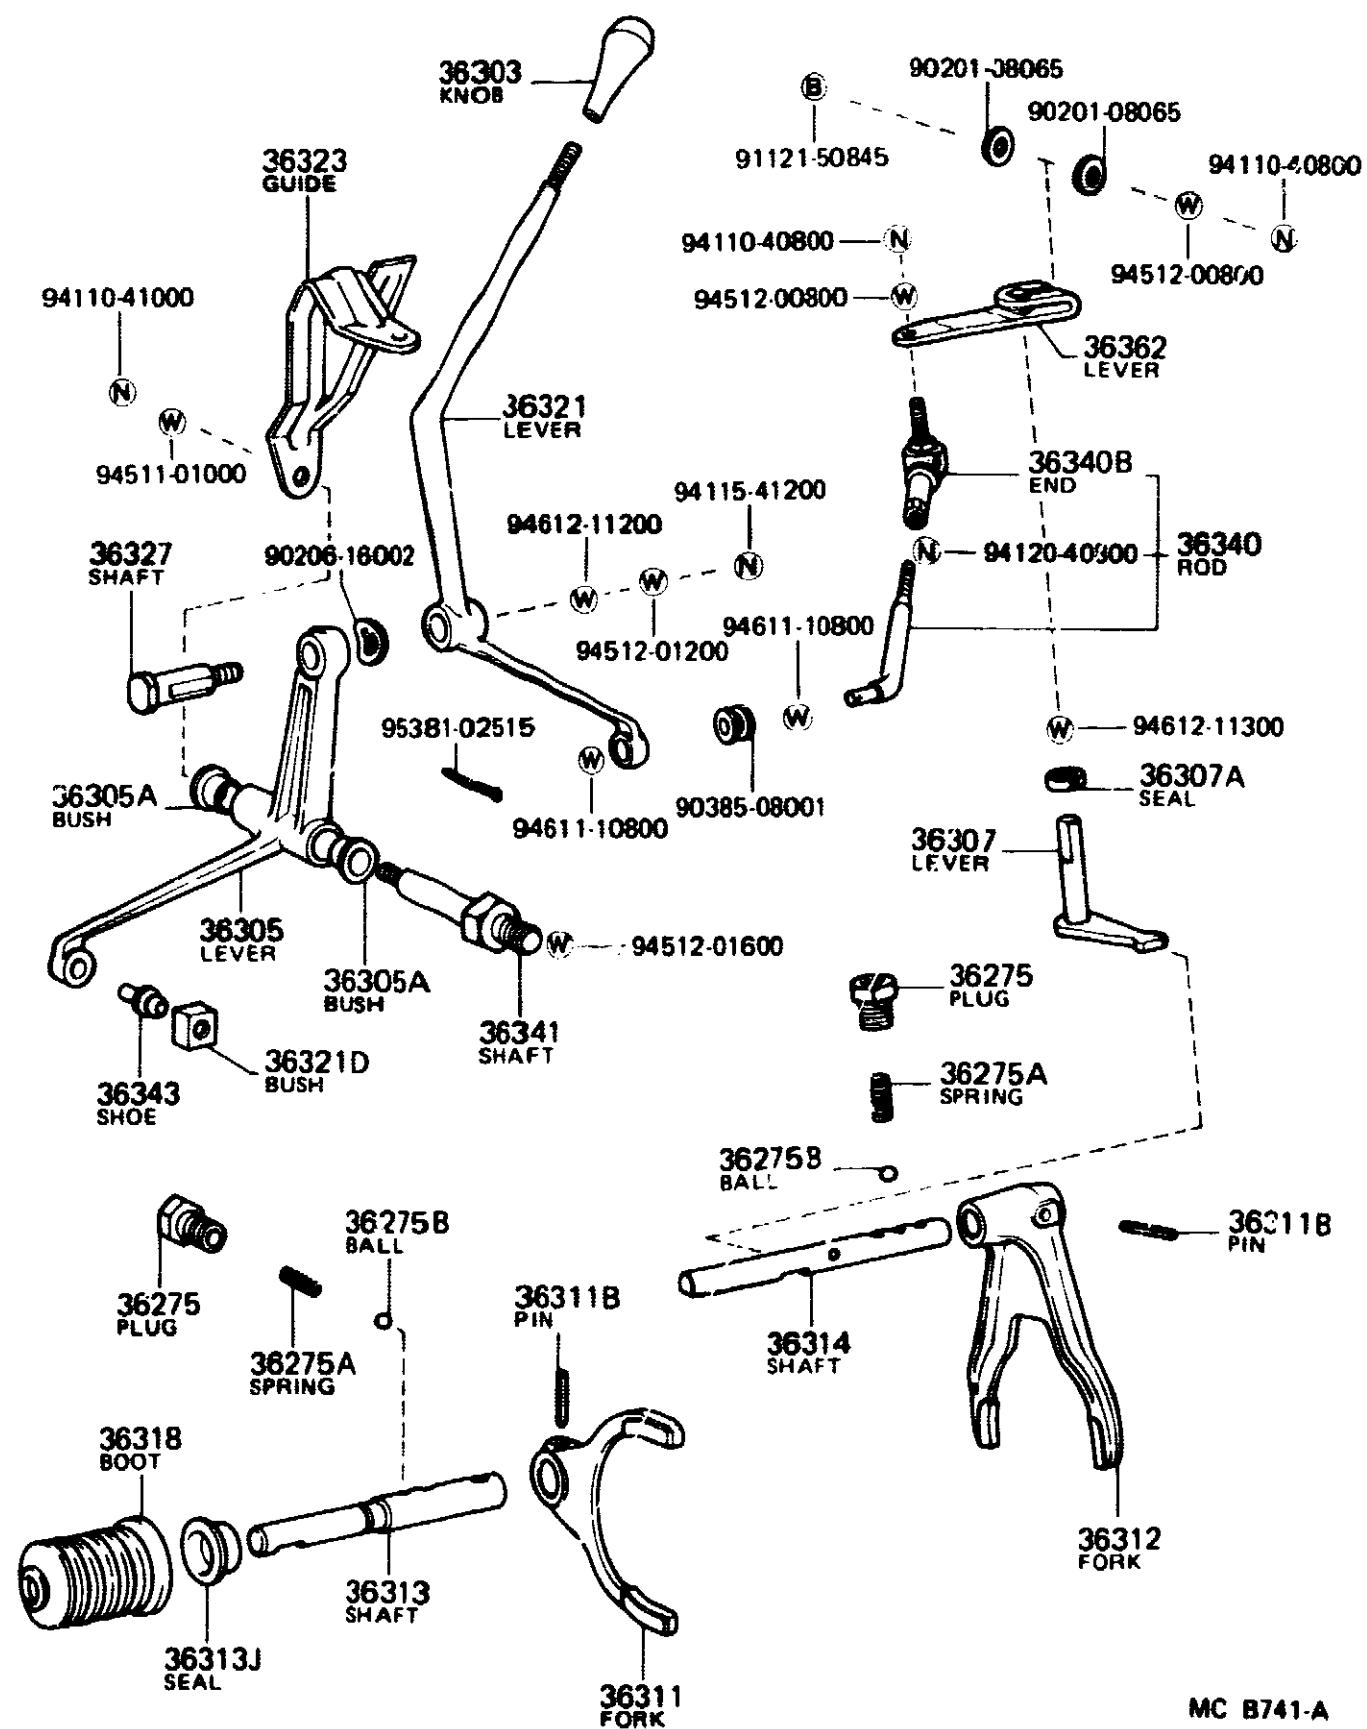


MC C955-A

MCR 741 A

MAPS.


GENUINE TOYOTA PARTS

(8411-)

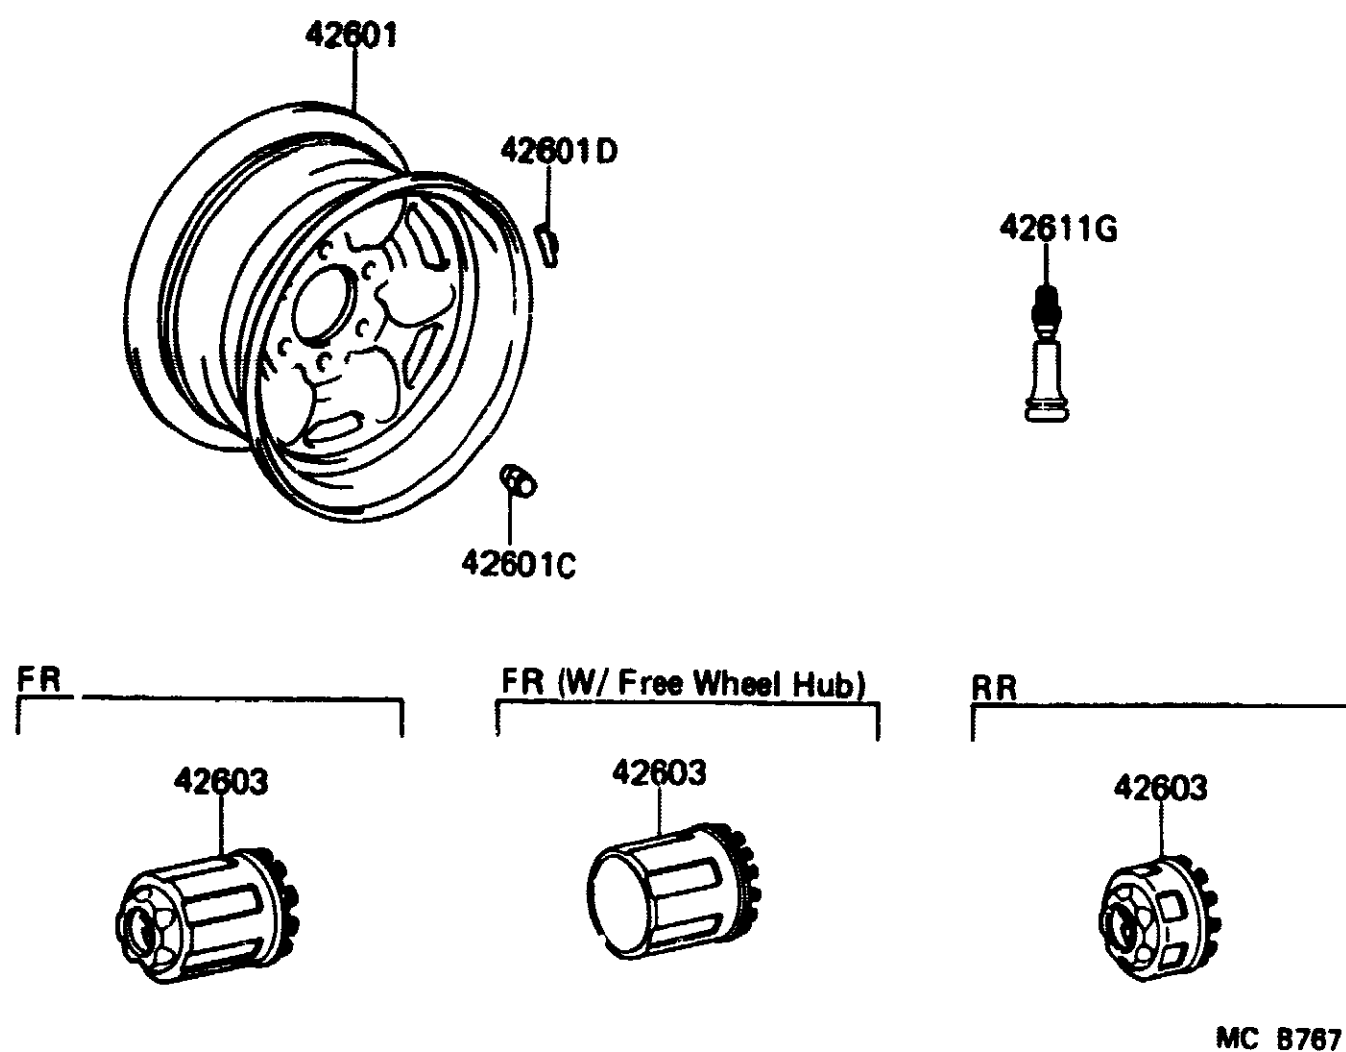

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	41-03 DISC WHEEL & WHEEL CAP						
	42601	WHEEL, DISC					
8411-	BJ70	6JJ-15, WHITE		42601-60130- (42601-60130-05)	5	81	
8411-	BJ70	6JJ-15, CHROME PLATED		42601-60150-	5	81	
	42601C	NUT, HUB (FOR AXLE)					
8411-	BJ70			90942-01047-	24	81	
	42601D	WEIGHT, BALANCE (FOR DISC WHEEL)					
8411-	BJ70	20G		90942-03079-	33	81	
8411-	BJ70	30G		90942-03080-	33	81	
8411-	BJ70	40G		90942-03081-	33	81	
8411-	BJ70	50G		90942-03082-	33	81	
8411-	BJ70	60G		90942-03083-	33	81	
8411-	BJ70	70G		90942-03084-	33	81	
8411-	BJ70	80G		90942-03085-	33	81	
8411-	BJ70	100G		90942-03086-	33	81	
8411-	BJ70	10G		90942-03107-	33	81	
	42603	ORNAMENT SUB-ASSY, WHEEL HUB					
8411-8608	BJ70	FR		42603-60012-	2	81	140
8411-	BJ70	FR, W/FREE WHEEL HUB		42603-35080-	2	81	
8411-	BJ70	RR		42603-60052-	2	81	
	42611G	VALVE (FOR TUBELESS TIRE)					
8411-	BJ70			90942-05009-	5	81	

(8411-)


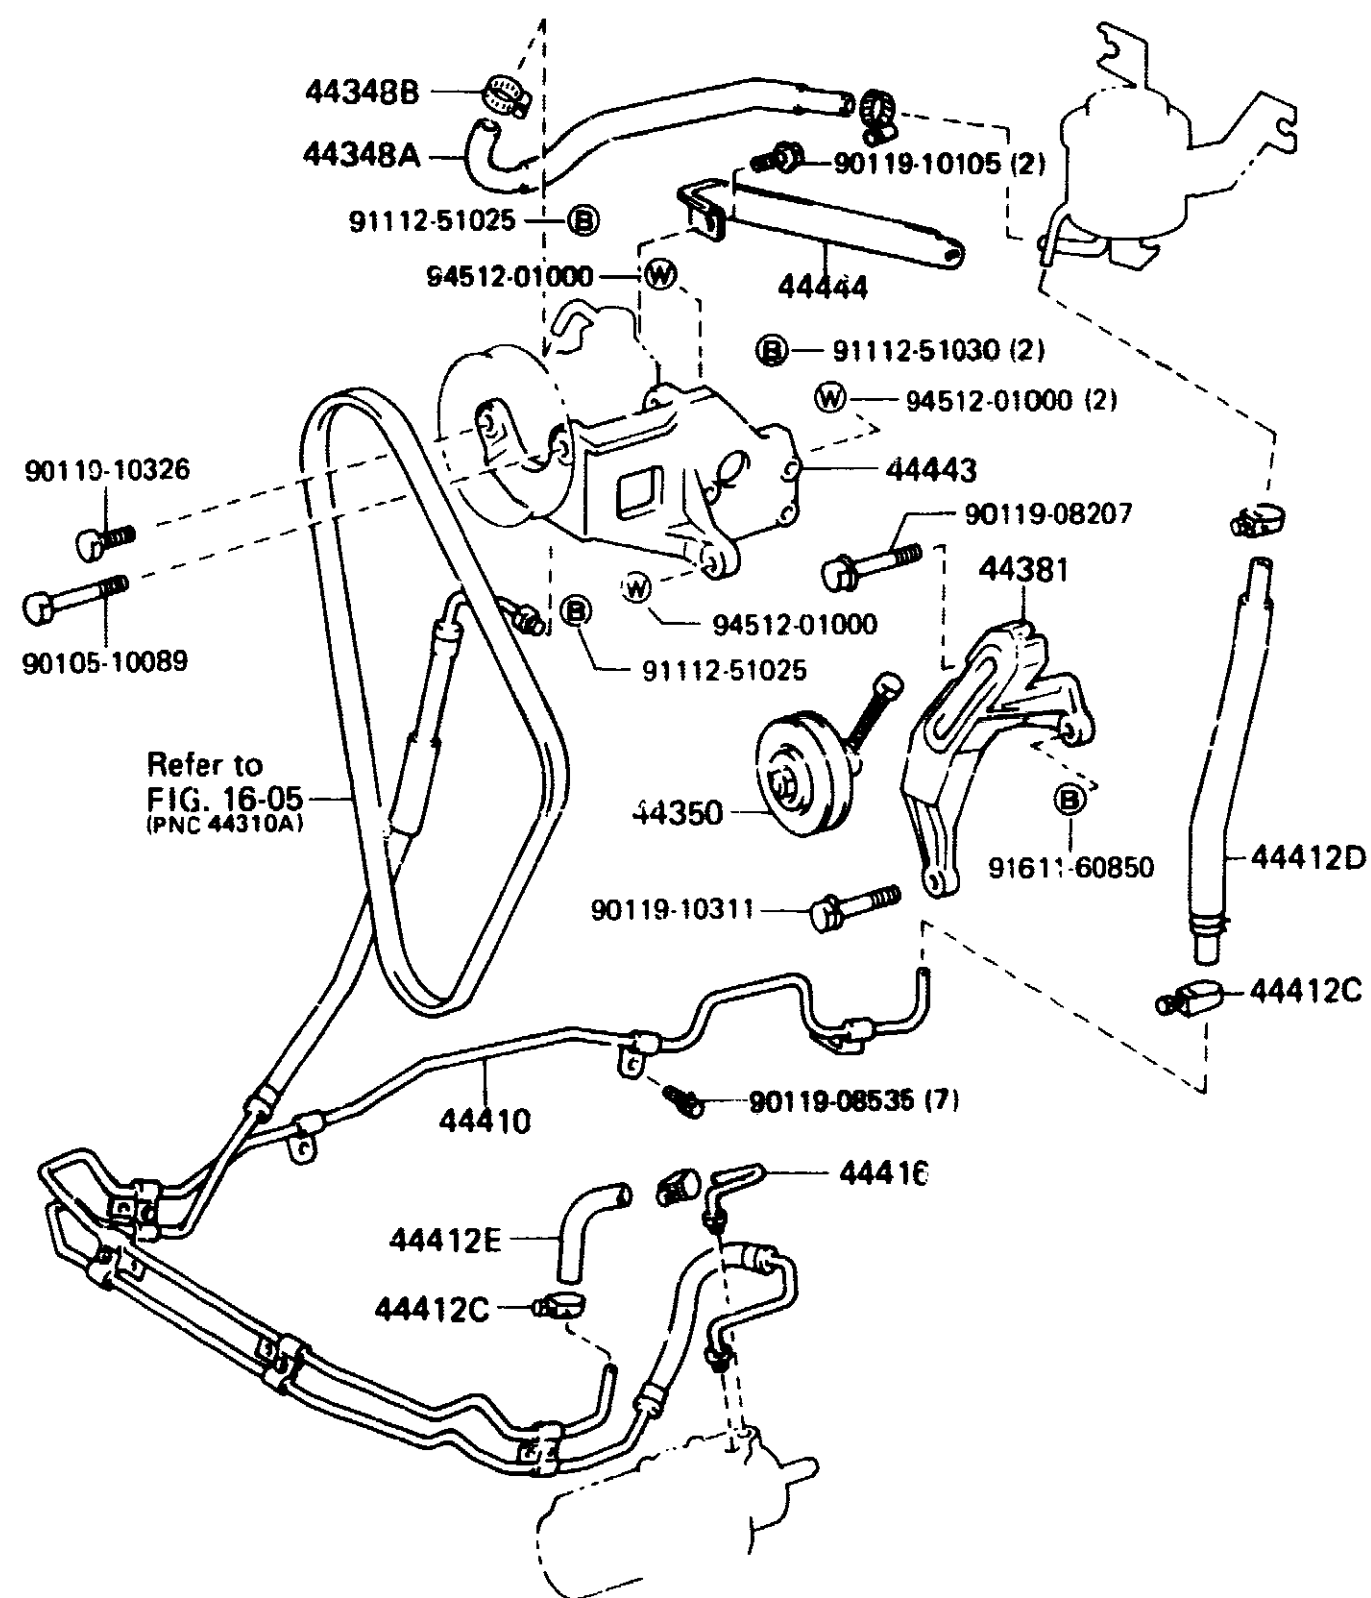


MC B803-C

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	45-03 OIL COOLER & TUBE						
8411-	+	44348A HOSE, OIL RESERVOIR TO PUMP		44348-60030-	1	81	
	BJ70						
8411-	+	44348B CLAMP (FOR OIL RESERVOIR TO PUMP HOSE)		90460-26001-	2	81	
	BJ70						
8411-	+	44350 PULLEY ASSY, POWER STEERING IDLE		44350-50010-	1	81	
	BJ70						
8411-	+	44381 BRACKET, POWER STEERING IDLE PULLEY		44381-60020-	1	81	
	BJ70						
8411-8511	+	44410 TUBE ASSY, PRESSURE FEED		44410-60090- (44410-60091-)	1	81	
	BJ70						
8511-	+	44412C CLAMP (FOR RETURN HOSE)		90460-01001-	4	81	
	BJ70						
8411-	+	44412D HOSE, RETURN, NO.1		44412-60030-	1	81	
	BJ70						
8411-	+	44412E HOSE, RETURN, NO.2		44412-60090-	1	81	
	BJ70						
8411-	+	44416 TUBE, RETURN (FOR STEERING GEAR OUTLET)		44416-60100-	1	81	
	BJ70						
8411-	+	44443 BRACKET, PUMP		44443-60060-	1	81	
	BJ70						
8411-	+	44444 STAY, PUMP, REAR		44444-60010-	1	81	
	BJ70						

(8411-)

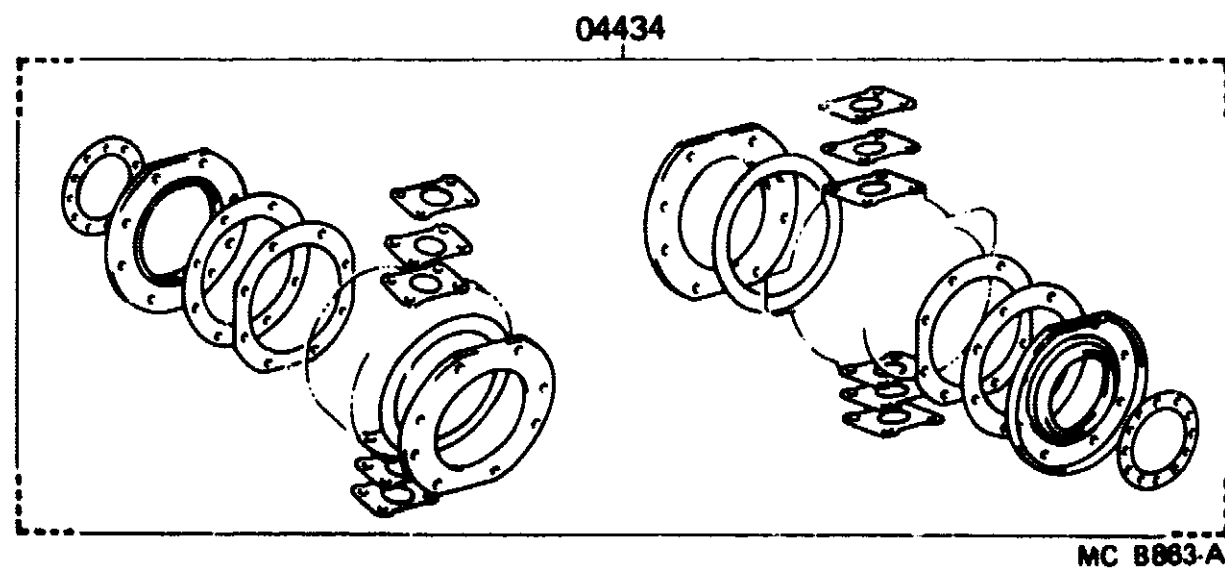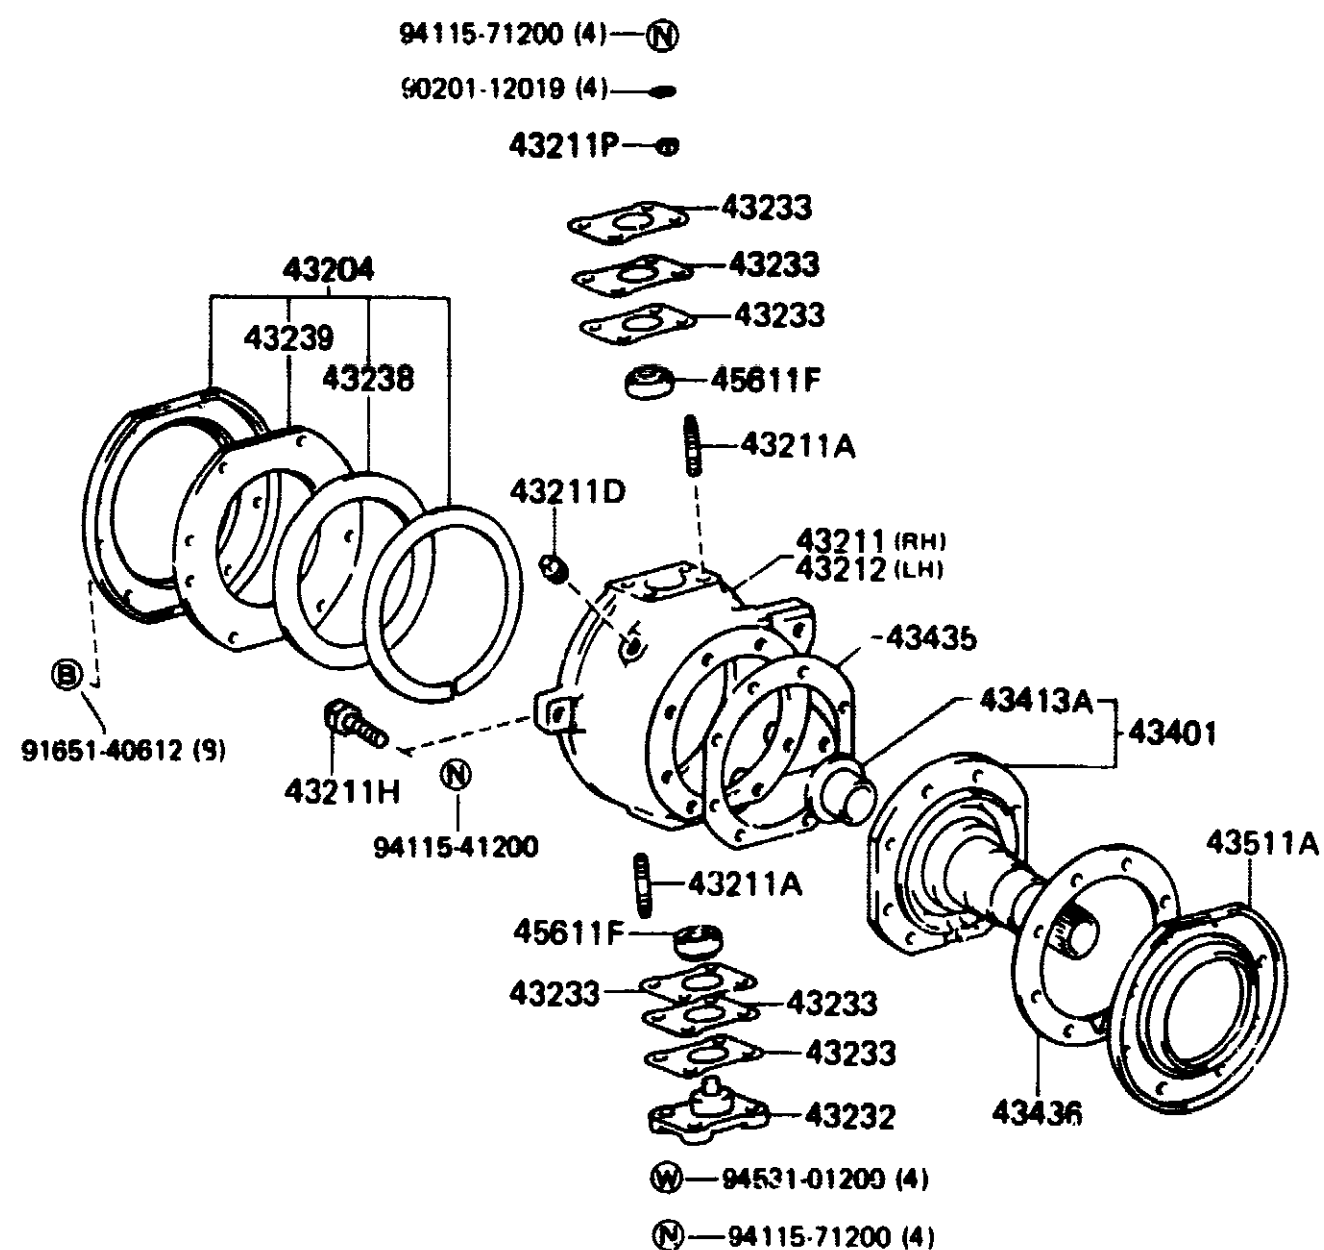













MC B863-A

PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE
						FROM UP TO
FIG.	48-02	FRONT AXLE ARM & STEERING KNUCKLE				
8411-	+	+				
	04434	GASKET KIT, FRONT AXLE OVERHAUL				
	+	+				
8411-	BJ70			04434-60020-	1	81
8411-	+	+				
	43204	SEAL SUB-ASSY, STEERING KNUCKLE OIL				
	+	+				
8411-	BJ70			43204-60020-	2	81
8411-	+	+				
	43211	KNUCKLE, STEERING, RH				
	+	+				
8411-	BJ70			43211-60050-	1	81
8411-	+	+				
	43211A	BOLT, STUD (FOR STEERING SET)				
	+	+				
8411-	BJ70			90116-12007-	16	81
8411-	+	+				
	43211D	PLUG (FOR STEERING KNUCKLE)				
	+	+				
8411-	BJ70			90345-53020-	2	81
8411-	+	+				
	43211H	BOLT, ROUND HEXAGON				
	+	+				
8411-	BJ70			90106-12022-	4	81
8411-	+	+				
	43211P	WASHER, CONE (FOR STEERING KNUCKLE)				
	+	+				
8411-	BJ70			42323-60020-	8	81
8411-	+	+				
	43212	KNUCKLE, STEERING, LH				
	+	+				
8411-	BJ70			43212-60050-	1	81
8411-	+	+				
	43232	CAP, STEERING KNUCKLE BEARING				
	+	+				
8411-	BJ70			43232-35010-	2	81
8411-	+	+				
	43233	SHIM, STEERING KNUCKLE ADJUST, NO.1				
	+	+				
8411-	BJ70	T=0.2		43233-60011-	33	81
8411-	BJ70	T=0.5		43234-60011-	33	81
8411-	BJ70	T=1.0		43235-60010-	33	81
8411-	BJ70	T=0.1		43236-60010-	33	81
8411-	BJ70	T=0.3		43237-60030-	33	81
8411-	+	+				
	43238	SEAL, STEERING KNUCKLE OIL, INNER				
	+	+				
8411-	BJ70			43238-60010-	2	81

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
55792-90K01-	2-F2	58327-90K00-	2-M2	61166-90K01-	2-F3	62367-10010-	2-H4	63221-22010-	2-L3	67005-90K36-	2-D5
55844-90K09-	2-J10	58336-90K00-	2-L2	61195-90K00-	2-B4	62411-90K00-08	2-C4	63223-30010-	2-L3	67006-90K15-	2-D5
55848-90K01-	2-J10	58339-90K00-	2-L2	61197-90K00-	2-F3	-90K01-08	2-C4	63224-30010-	2-L3	-90K49-	2-D5
55905-12070-	2-H10	58346-90K00-	2-L2	61211-90K00-	2-F3	62412-90K00-08	2-C4	63249-90K00-	2-L3	-90K66-	2-D5
-89110-	2-J10	58351-90K00-	2-L2	61212-90K00-	2-F3	-90K01-08	2-C4	-90K01-	2-L3	67045-90K00-	2-J3
-95J01-	2-J10	58352-90K00-	2-L2	61231-90K00-	2-F3	62471-90K01-08	2-C4	-90K02-	2-L3	67046-90K00-	2-J3
55906-90K01-	2-J10	58357-90K00-	2-L2	61232-90K00-	2-F3	-90K02-08	2-C4	-90K03-	2-L3	67111-90K05-	2-G4
55907-90K01-	2-J10	58510-90K34-03	2-A3	61263-90K00-	2-F3	62472-90K00-08	2-C4	63250-90K00-	2-L3	67112-90K04-	2-G4
55908-90K01-	2-J10	-90K34-06	2-A3	61264-90K00-	2-F3	-90K01-08	2-C4	63251-30010-	2-L3	67206-90K00-	2-F5
55909-90K01-	2-J10	-90K35-03	2-A3	61267-90K00-	2-F3	62510-90K01-03	2-C4	63255-22020-	2-L3	67207-90K00-	2-F5
55910-90K00-	2-J10	-90K35-06	2-A3	61268-90K00-	2-F3	-90K01-05	2-C4	63260-90A02-	2-L3	67208-90K00-	2-F5
55950-90K01-01	2-E2	-90K56-03	2-A3	61277-90K00-	2-F3	-90K06-03	2-C4	-90A03-	2-L3	67401-90K00-	2-G4
55970-90K00-	2-E2	-90K56-06	2-A3	61281-90K00-	2-F3	-90K06-05	2-C4	63261-22010-	2-L3	67402-90K00-	2-G4
56111-90K02-	2-F2	-90L04-03	2-A3	61282-90K00-	2-G3	62520-90K01-03	2-C4	63267-30010-	2-L3	67403-90K01-	2-G4
-90K03-	2-F2	-90L04-06	2-A3	61289-90K00-	2-F3	-90K01-05	2-C4	63268-30010-	2-L3	67404-90K01-	2-G4
56121-90K04-	2-F2	-90L06-03	2-A3	61307-90K00-	2-G3	62607-90K00-03	2-C4	63269-30010-	2-M3	67463-20011-	2-J4
-90K05-	2-F2	-90L06-06	2-A3	61308-90K00-	2-G3	-90K00-06	2-C4	63277-14020-	2-M3	67466-89101-	2-J4
56497-90K00-	2-F2	58540-90K15-03	2-B3	61401-90K00-	2-G3	62613-90K00-03	2-A3	-30010-	2-M3	67481-90K00-	2-G4
57401-90K00-	2-G2	-90K15-06	2-B3	61402-90K00-	2-G3	-90K00-06	2-A3	63306-90K01-08	2-D4	-90K02-	2-G4
57402-90K00-	2-G2	58570-70K00-03	2-B3	61503-20030-	2-G3	-90K03-03	2-B3	63310-90K00-08	2-D4	67482-90K00-	2-G4
-90K01-	2-G2	-90K00-06	2-B3	61611-90K03-	2-G3	-90K03-06	2-B3	63318-90K01-	2-D4	-90K02-	2-G4
57427-90K00-	2-I2	-90K05-03	2-B3	61612-90K03-	2-G3	62614-90K00-03	2-A3	63319-14011-	2-D4	67503-90K00-	2-J4
57457-90K00-	2-I2	-90K05-06	2-B3	61631-90K01-	2-G3	-90K00-06	2-A3	63320-90K00-08	2-D4	67504-90K00-	2-J4
57465-90K00-	2-I2	58573-90K00-	2-B3	61632-90K01-	2-G3	-90K03-03	2-B3	-90K01-08	2-D4	67505-90K00-	2-J4
57468-90K00-	2-I2	58581-90K00-03	2-B3	61633-90K00-	2-G3	-90K03-06	2-B3	-90K02-08	2-D4	67506-90K00-	2-J4
57469-90K00-	2-I2	-90K00-06	2-B3	61634-90K00-	2-G3	62705-90K00-	2-J3	63341-90K00-	2-D4	67507-90K00-	2-J4
57511-90K00-	2-I2	58705-90K00-	2-B7	61645-90K00-	2-G3	62706-90K00-	2-J3	-90K02-	2-D4	67508-90K00-	2-K4
-90K01-	2-I2	58707-90K00-	2-B7	61646-90K00-	2-G3	62711-90K02-	2-J3	63361-90K00-	2-D4	67528-89101-	2-K4
57605-90K00-	2-G2	58708-90K00-	2-B7	61665-12010-	2-G3	-90K03-	2-J3	-90K01-	2-E4	67533-90K00-	2-J4
-90K10-	2-G2	58754-90K00-	2-J2	61675-90K00-	2-G3	62712-90K02-	2-J3	-90K02-	2-E4	67534-90K00-	2-J4
57606-90K04-	2-G2	58911-90K01-03	2-C3	61676-90K00-	2-G3	-90K03-	2-J3	63362-90K00-	2-E4	67577-90A00-	2-J4
57627-90K00-	2-L2	-90K01-06	2-C3	61705-90K03-	2-G3	62713-90K00-	2-J3	-90K01-	2-E4	67610-90K10-03	2-G4
57628-90K00-	2-L2	58912-90K00-03	2-C3	-90K19-	2-G3	-90K01-	2-J3	-90K02-	2-E4	-90K10-05	2-G4
57663-90K00-	2-L2	-90K00-06	2-C3	61706-90K03-	2-G3	62714-90K00-	2-J3	-90K02-	2-E4	-90K11-03	2-G4
57664-90K00-	2-L2	58923-90K01-03	2-C3	-90K18-	2-G3	-90K01-	2-J3	63363-90K00-	2-D4	-90K11-05	2-G4
58011-90K00-	2-I2	-90K01-06	2-C3	61709-90K00-	2-G3	62729-90K00-	2-J3	-90K01-	2-D4	-90K12-03	2-G4
58012-90K00-	2-I2	58944-90K01-03	2-C3	61725-90K02-	2-H3	62735-89101-	2-K4	-90K02-	2-D4	-90K12-05	2-G4
58048-90K00-	2-K5	-90K01-06	2-C3	61743-90K03-	2-H3	62741-90K01-	2-J3	-90K02-	2-D4	-90K35-03	2-G4
58114-90K00-	2-I2	58951-90K00-03	2-C3	61744-90K03-	2-H3	62742-90K01-	2-J3	63371-90A02-	2-E4	-90K35-05	2-G4
-90K03-	2-I2	-90L00-06	2-C3	61745-90K00-	2-H3	62755-90K00-	2-J3	63372-90K00-	2-E4	-90K38-03	2-G4
58151-90K00-	2-M2	58959-16010-	2-C3	61746-90K00-	2-H3	62756-90K00-	2-J3	64198-90K00-	2-H3	-90K38-05	2-G4
58153-90K00-	2-M2	58964-30030-	2-C3	61749-90K00-	2-H3	62792-95A00-	2-J3	64199-90K00-	2-H3	67620-90K10-03	2-G4
-90K01-	2-M2	-90K00-	2-C3	61768-90K00-	2-H3	62793-95J00-	2-J3	64707-90K00-03	2-C4	-90K10-05	2-G4
58171-90K00-	2-I2	58968-89101-	2-C3	61769-90K00-	2-H3	-95704-	2-J3	-90K00-05	2-C4	-90K11-03	2-G4
58183-90K00-	2-I2	58976-20010-	2-C3	61856-90K00-	2-H3	62821-90K01-03	2-C4	64739-90K00-03	2-C4	-90K11-05	2-G4
58184-90K00-	2-I2	58995-90K00-	2-C3	62101-90K03-03	2-B4	-90K01-06	2-C4	-90K00-06	2-C4	-90K12-03	2-G4
-90K02-	2-I2	58996-90K00-	2-D3	-90K03-06	2-B4	62884-90K01-	2-J3	64745-90K00-	2-L2	-90K12-05	2-G4
58247-90K00-	2-L2	58997-90K00-	2-D3	62102-90K00-03	2-B4	62903-90K00-	2-A4	64746-90K00-	2-L2	-90K33-03	2-H4
58248-90K02-	2-L2	61023-90K02-	2-F3	-90K00-06	2-B4	62910-95703-	2-J3	64777-90K00-	2-C4	-90K33-05	2-H4
58261-90K01-	2-I2	61024-90K02-	2-F3	-90K07-03	2-B4	62951-90K00-	2-A4	64780-90K00-03	2-D5	-90K35-03	2-H4
58263-90K00-	2-I2	61027-90K00-	2-F3	-90K07-06	2-B4	63102-90K00-	2-L3	-90K00-05	2-D5	-90K35-05	2-H4
58266-90K00-	2-L2	61028-90K00-	2-F3	62117-90K00-03	2-B4	-90K02-	2-L3	64790-90K00-03	2-D5	67771-12010-	2-G4
58268-90K00-	2-I2	61031-90K01-	2-F3	-90K00-06	2-B4	63105-90K00-	2-L3	-90K00-05	2-D5	-22010-	2-G4
58280-90K00-	2-I2	61032-90K00-	2-F3	62211-90K04-08	2-B4	-90K08-	2-L3	-90K07-03	2-D5	-30040-	2-G4
-90K02-	2-I2	61035-90K00-	2-G3	62212-90K00-08	2-B4	-90K03-	2-L3	-90K07-05	2-D5	-30060-	2-C4
58290-90K02-	2-J2	61066-90K00-	2-G3	62249-95706-	2-J3	63111-90K00-	2-L3	66301-90K00-	2-L2	-90K00-	2-G4
-90K06-	2-J2	61101-90K03-	2-F3	62269-90K01-	2-J3	-90K03-	2-L3	-90K02-	2-L2	-90K00-	2-C4
-90K08-	2-J2	-90K14-	2-F3	62313-90K01-03	2-B4	63141-90K00-	2-L3	67001-90K05-	2-G4	-90K00-	2-G4
58307-90K01-	2-L2	61102-90K02-	2-F3	-90K01-06	2-B4	63142-30010-	2-L3	-90K21-	2-G4	67777-90K00-03	2-H4
-90K11-	2-L2	-90K03-	2-F3	62333-90K01-03	2-D5	63201-30010-	2-L3	-90K21-	2-G4	-90K00-05	2-H4
-90K17-	2-L2	-90K23-	2-F3	-90K01-06	2-D5	63203-90K00-	2-L3	67002-90K05-	2-G4	67831-90K02-	2-H4
58308-90K00-	2-L2	61165-90K00-	2-F3	62335-90K00-	2-D5	63207-22010-	2-L3	-90K18-	2-D5	-90K04-	2-H4
58311-90K02-	2-L2	-90K01-	2-F3	62336-90K00-	2-D5	63208-22010-	2-L3	-90K35-	2-D5	67847-90K01-	2-D5
58325-90K00-	2-L2	61166-90K00-	2-F3			63209-30010-	2-L3			67848-90K01-	2-D5


ILLUSTRATED INDEX

E16

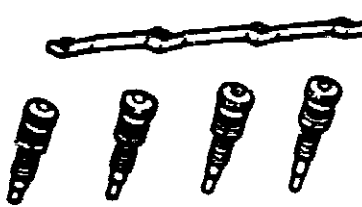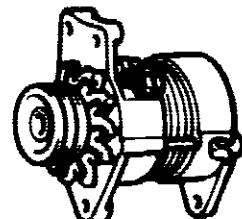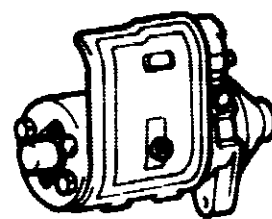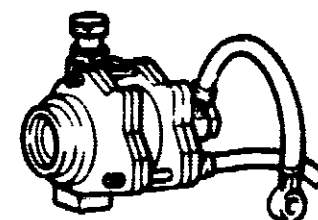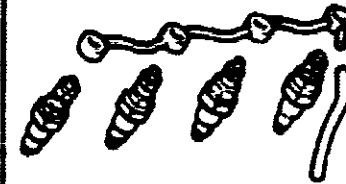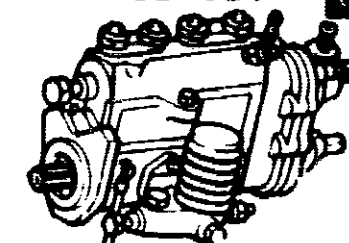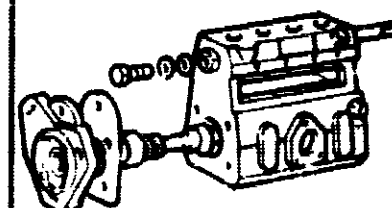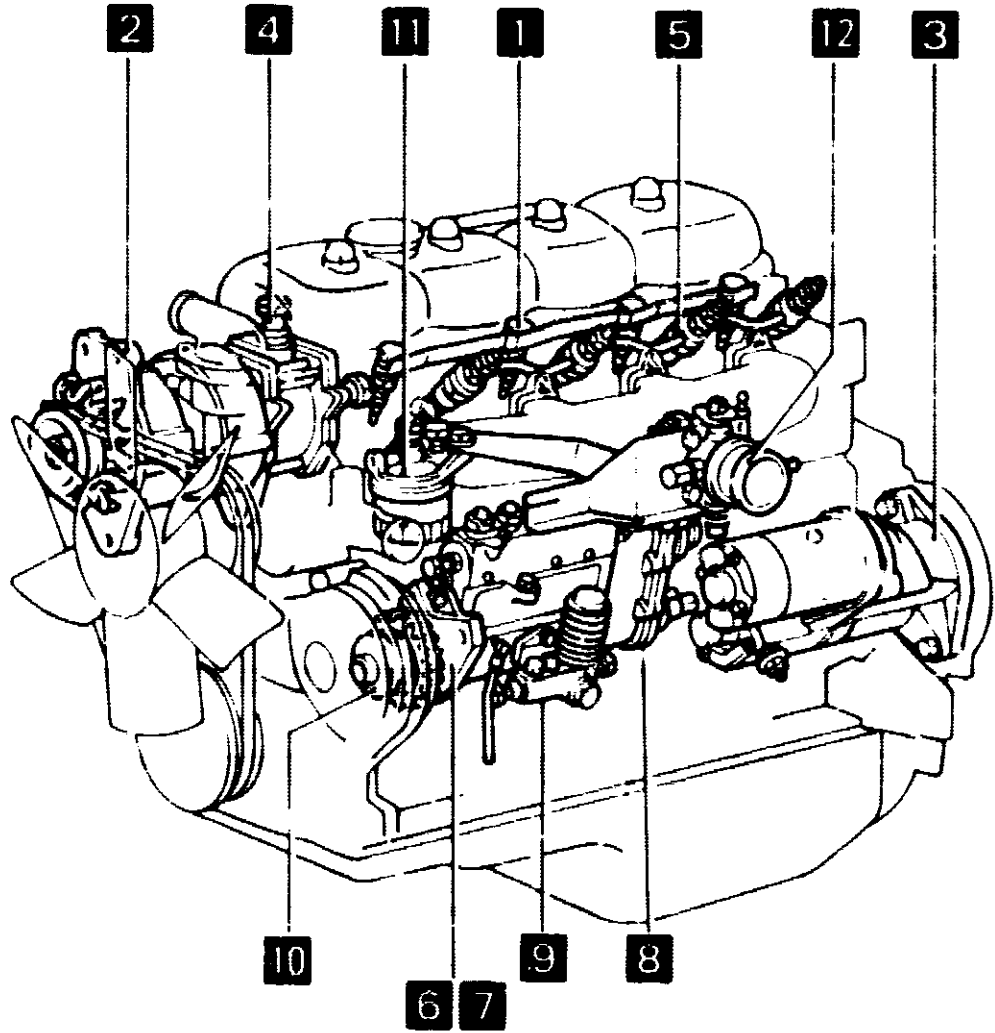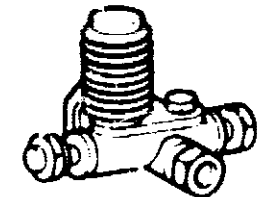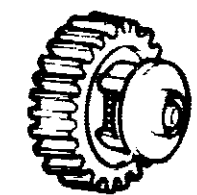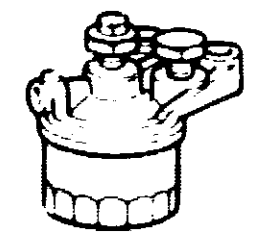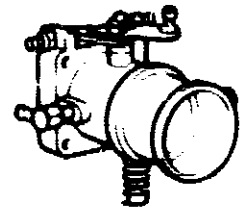1-H3 (19-01) 1 	1-I3 (19-03) 2 	1-K3 (19-04) 3 	1-M3 (19-05) 4 	1-A4 (22-01) 5 	1-C4 (22-02) 6 	1-D4 (22-03) 7 
ENGINE, FUEL GROUP (2/2) 						
						1-G4 (22-04) 8 
						1-J4 (22-06) 9 
						1-L4 (22-07) 10 
						1-M4 (23-02) 11 
						1-B5 (26-06) 12 

(8411-)

GENUINE TOYOTA PARTS

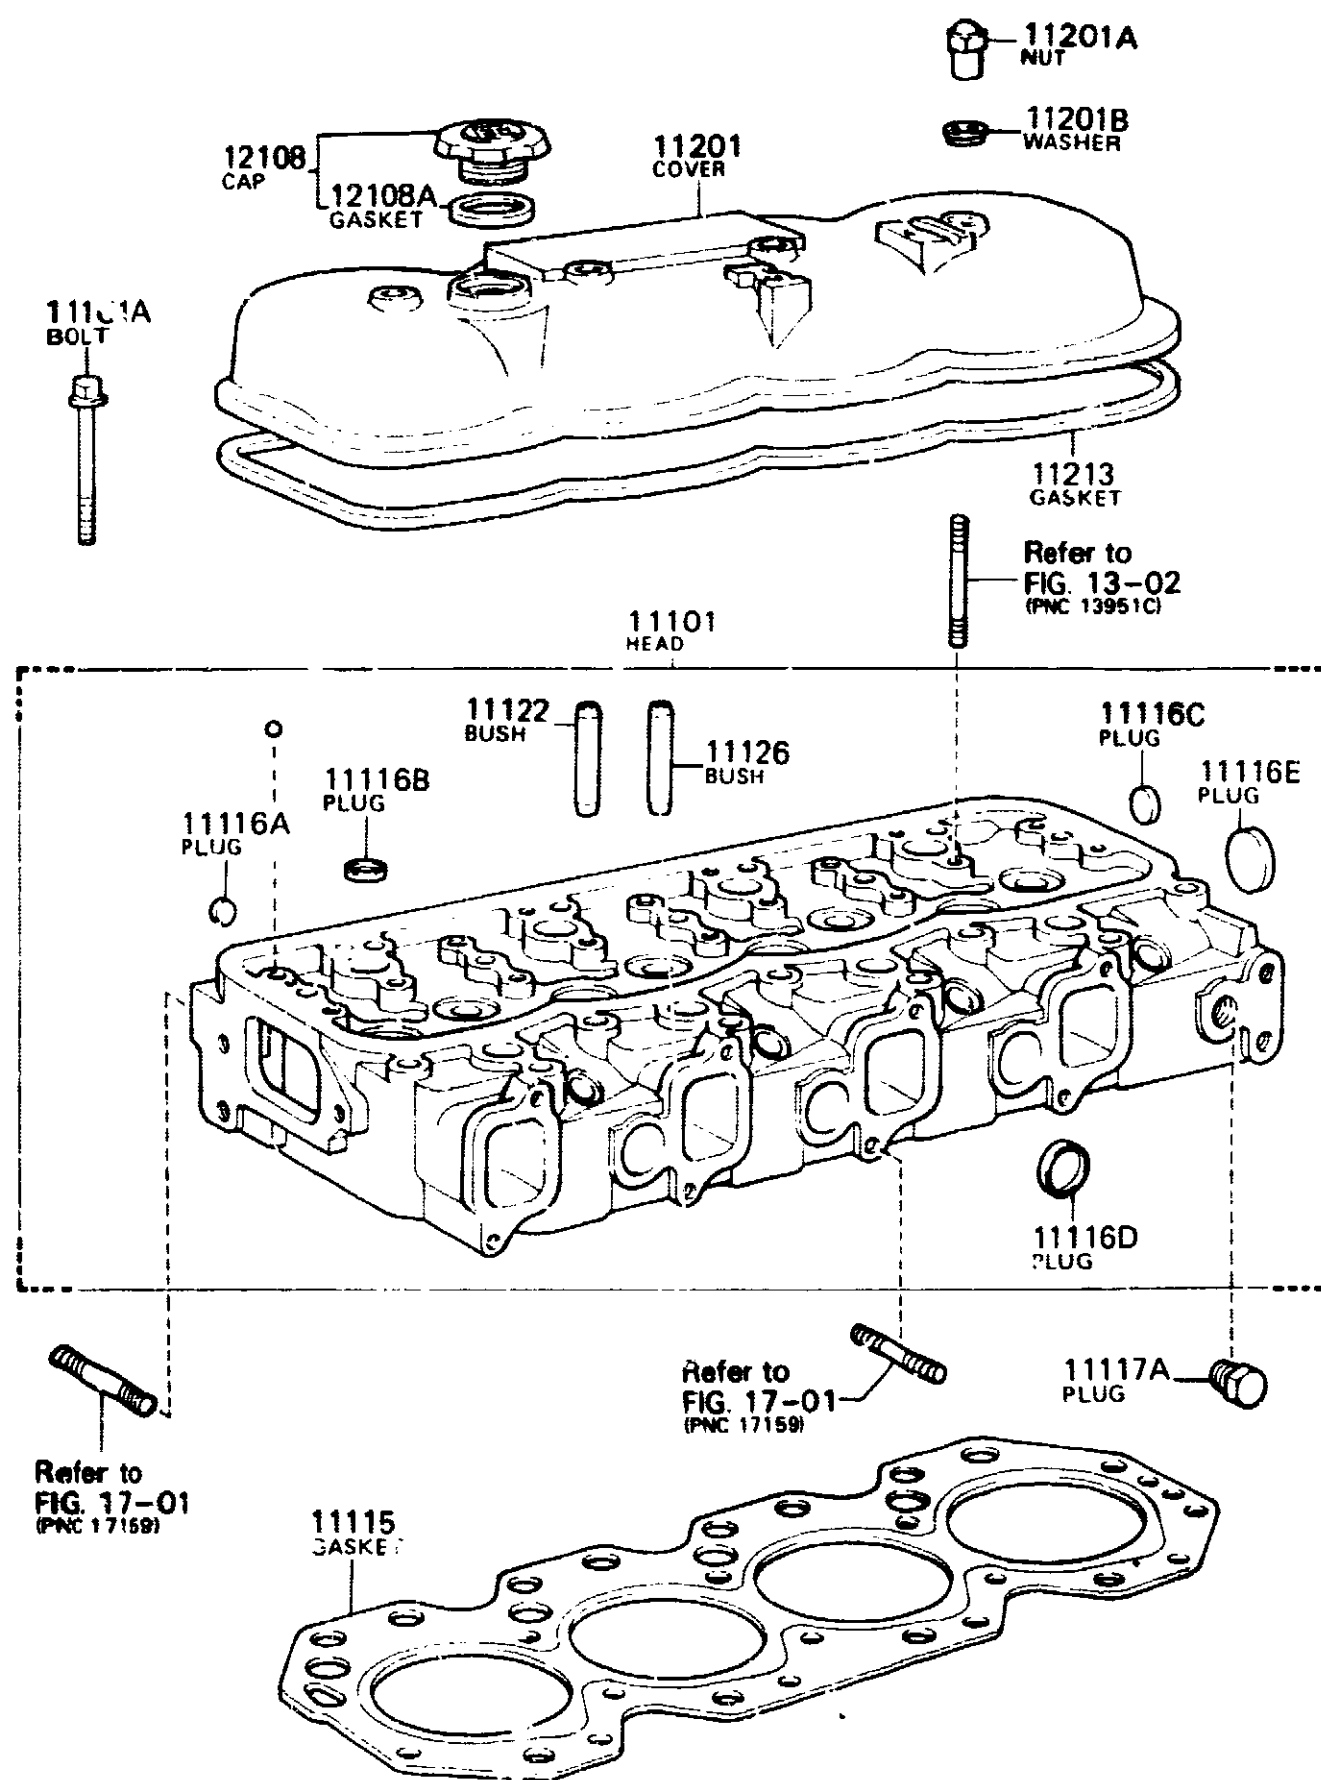

MA 7625

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	11-04 CYLINDER HEAD						
8411-	11101	HEAD SUB-ASSY, CYLINDER		11101-58013-	1	81	
8411-	3B..BJ70						
8411-	11101A	BOLT (FOR CYLINDER HEAD SET)		X12-1.25PX 119-25	18	81	
8411-	3B..BJ70						
8411-	11115	GASKET, CYLINDER HEAD		11115-58040-	1	81	
8411-	3B..BJ70						
8411-8509	11116A	PLUG, TIGHT, NO.1					
8509-	3B..BJ70						
8411-8509	3B..BJ70	OD=12		96411-11200-	4	81	
8509-	3B..BJ70	OD=12		96411-41200-	4		
8411-8509	11116B	PLUG, TIGHT, NO.2					
8509-	3B..BJ70						
8411-8509	3B..BJ70	OD=25		96411-12500-	4	81	
8509-	3B..BJ70	OD=25		96411-42500-	4		
8411-	11116C	PLUG, TIGHT, NO.3					
8411-	3B..BJ70						
8411-8509	3B..BJ70	OD=21		90331-21001-	5	81	
8509-	3B..BJ70	OD=21					
8411-8509	11116D	PLUG, TIGHT, NO.4					
8509-	3B..BJ70						
8411-8509	3B..BJ70	OD=28		96411-12800-	3	81	
8509-	3B..BJ70	OD=28		96411-42800-	3		
8411-	11116E	PLUG, TIGHT, NO.5					
8411-	3B..BJ70						
8411-	3B..BJ70	OD=40		# 90331-40024- (96411-44000-)	1	81	
8411-	11117A	PLUG, W/HEAD TAPER SCREW, NO.1					
8411-	3B..BJ70			90345-54005-	2	81	
8411-	11122	BUSH, VALVE GUIDE INTAKE					
8411-	3B..BJ70			11122-56021-	4	81	
8411-	11126	BUSH, VALVE GUIDE EXHAUST					
8411-	3B..BJ70			11122-56021-	4	81	

*○-○P×○-○=Outside diameter-Pitch×Bolt length-Thread length

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE FROM UP TO
FIG.	17-03 AIR CLEANER					
8411-	17700	CLEANER ASSY, AIR		17700-58160-	1	81
8411-	3B..BJ70					
8411-	17700A	NUT, WING (FOR AIR CLEANER)		90175-08008-	1	81
8411-	3B..BJ70					
8411-	17705	CAP SUB-ASSY, AIR CLEANER		17705-61090-	1	81
8411-	3B..BJ70					
8411-8510	17764	DUCT, AIR CLEANER		53299-90K05-	1	81 100
8510-	3B..BJ70			53207-90K04-	1	101
8411-	17764C	CLAMP, HOSE (FOR AIR CLEANER DUCT)		96111-10800-	1	81
8411-	3B..BJ70					
8411-	17801	ELEMENT SUB-ASSY, AIR CLEANER FILTER		17801-68020-	1	81
8411-	3B..BJ70					
8411-	17841	GASKET, FILTER ELEMENT		17841-68010-	2	81
8411-	3B..BJ70					
8411-	17845	GASKET, AIR CLEANER CAP		17845-61011-	1	81
8411-	3B..BJ70					
8411-	17861	CONNECTOR, INTAKE AIR		17885-58070-	1	81
8411-	3B..BJ70					
8411-	17862	CONNECTOR, INTAKE AIR, NO.2		53297-90K00-	1	81
8411-	3B..BJ70					
8411-	17881	HOSE, AIR CLEANER, NO.1		17881-58090-	1	81
8411-	3B..BJ70					
8411-	17881A	CLAMP (FOR AIR CLEANER HOSE, NO.1)		96111-10710-	2	81
8411-	3B..BJ70					

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE FROM UP TO
8411-	17882	HOSE, AIR CLEANER, NO.2		17382-58060-	1	81
8411-	3B..BJ70					
8411-	17882A	CLAMP (FOR AIR CLEANER HOSE, NO.2)		96111-10710-	1	81
8411-	3B..BJ70	CONNECTOR SIDE				
8411-	3B..BJ70	CLEANER SIDE		96111-10830-	1	81
8411-	17893	RESONATOR, INTAKE AIR		53295-90K00-	1	81
8411-	3B..BJ70					

PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	+-----+ 22195	GASKET, BEARING COVER		22195-48030-	1	81	
	+-----+ 3B..BJ70						
8411-	+-----+ 22611	NUT, TIMER ROUND		22611-46010-	1	81	
	+-----+ 3B..BJ70						

PROD. DATE	M O D E L S	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	31-02 CLUTCH PEDAL & FLEXIBLE HOSE						
	+-----+ 31301 PEDAL SUB-ASSY, CLUTCH						
8411-8510	BJ70			31301-60100-	1	81	100
8510-	BJ70			31301-60101-	1	101	
	+-----+ 31301A SPRING (FOR CLUTCH PEDAL)						
8411-	BJ70			90507-14015-	1	81	
	+-----+ 31301B CUSHION (FOR CLUTCH PEDAL)						
8411-	BJ70			90541-06008-	1	81	
	+-----+ 31301C BUSH (FOR CLUTCH PEDAL)						
8411-	BJ70			90386-13192-	2	81	
	+-----+ 31301F BOLT (FOR CLUTCH PEDAL STOPPER)						
8411-	BJ70			91131-50828-	1	81	
	+-----+ 31305D SUPPORT SUB-ASSY, CLUTCH PEDAL						
8411-	BJ70			55107-90K01-	1	81	
	+-----+ 31321 PAD, CLUTCH PEDAL						
8411-	BJ70			31321-14020-	1	81	
	+-----+ 31324 SHAFT, CLUTCH PEDAL						
8411-	BJ70			91121-51070-	1	81	
	+-----+ 31324A COLLAR, CLUTCH PEDAL SHAFT						
8411-	BJ70			90387-10004-	1	81	
	+-----+ 31418 HOSE, CLUTCH						
8411-8510	BJ70			90931-01017-	1	81	100
8510-	BJ70			90931-01020-	1	101	
	+-----+ 31418A UNION (FOR CLUTCH HOSE)						
8411-	BJ70			90404-10028-	1	81	
	+-----+ 31453A PIN, W/HOLE (FOR CLUTCH MASTER CYLINDER PUSH ROD CLEVIS)						
8411-	BJ70			90249-08018-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
	+-----+ 31453B BUSH (FOR CLUTCH MASTER CYLINDER PUSH ROD CLEVIS)						
8411-	BJ70			90386-08002-	1	81	
	+-----+ 31481 TUBE, CLUTCH MASTER CYLINDER TO FLEXIBLE HOSE						
8411-	BJ70			31481-60420-	1	81	
	+-----+ 31484A BRACKET, FLEXIBLE HOSE, NO.1 (FOR CLUTCH)						
8411-	BJ70			31481-60440-	1	81	
	+-----+ 31484A BRACKET, FLEXIBLE HOSE, NO.1 (FOR CLUTCH)						
8411-	BJ70			31484-60050-	1	81	

FIG. 36-11

GENUINE TOYOTA PARTS

1-F7

M74-15-0623

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	36-11	TRANSFER LEVER & SHIFT ROD					
8411-	BJ70	PLUG, SHAFT DETENT BALL SPRING		90341-15001-	2	81	
8411-	BJ70	SPRING, COMPRESSION (FOR SHIFT DETENT BALL)		90501-14029-	2	81	
8411-	BJ70	BALL, SHIFT DETENT		90360-10003-	2	81	
8411-	BJ70	MECHANICAL TYPE		36303-60070-	1	81	
8411-	BJ70	ELECTRIC TYPE		36303-60130-	1	81	
8411-	BJ70	LEVER SUB-ASSY, FRONT DRIVE SHIFT LINK		36337-60060-	1	81	
8411-	BJ70	BUSH (FOR FRONT DRIVE SHIFT LINK LEVER)		36324-60050-	2	81	
8411-	BJ70	MECHANICAL TYPE		36307-60030-	1	81	
8411-	BJ70	ELECTRIC TYPE		36307-60040-	1	81	
8411-	BJ70	SEAL, OIL (FOR HIGH & LOW SHIFT INNER LEVER)		90313-13001-	1	81	
8411-8503	BJ70	ROD SUB-ASSY, HIGH & LOW SHIFT		36308-60050- (36308-60080-) (90240-10157-)	1	81	
8503-	BJ70			36308-60080-	1		
8411-	BJ70	FORK, TRANSFER GEAR SHIFT, NO. 1		36311-60041-	1	81	


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	BJ70	PIN, SLOTTED SPRING (FOR SHIFT FORK)		90254-05004-	1	81	
8411-	BJ70	L=36, D=5.3		90254-05016-	1	81	
8411-	BJ70	L=25.5, D=5.2					
8411-	BJ70	FORK, TRANSFER GEAR SHIFT, NO. 2		36312-60030-	1	81	
8411-	BJ70	MECHANICAL TYPE		36312-60040-	1	81	
8411-	BJ70	ELECTRIC TYPE					
8411-	BJ70	SHAFT, TRANSFER FRONT DRIVE SHIFT		36313-60050-	1	81	
8411-	BJ70	MECHANICAL TYPE		36313-60070-	1	81	
8411-	BJ70	ELECTRIC TYPE					
8411-	BJ70	SEAL, OIL (FOR TRANSFER FRONT DRIVE SHIFT SHAFT)		90311-22005-	1	81	
8411-	BJ70	SPRING, COMPRESSION (FOR TRANSFER FRONT DRIVE SHIFT SHAFT)		90501-29003-	1	81	
8411-	BJ70	SHAFT, TRANSFER HIGH AND LOW SHIFT FORK		36314-60040-	1	81	
8411-	BJ70	BOOT, TRANSFER FRONT DRIVE SHIFT		36318-60020-	1	81	
8411-8608	BJ70	LEVER, TRANSFER FRONT DRIVE SHIFT		36321-60100- (36302-60050-)	1	81	140
8608-	BJ70			36302-60050-	1	141	
8411-	BJ70	BUSH (FOR TRANSFER SHIFT LEVER)		33548-60010-	1	81	
8411-8412	BJ70	LEVER, TRANSFER HIGH & LOW SHIFT		36322-60080-	1	81	
8412-8510	BJ70			36322-60081-	1		100

(8411-)


(8411-)

ILLUST.NO. 10F2

ILLUST.NO. 20F2

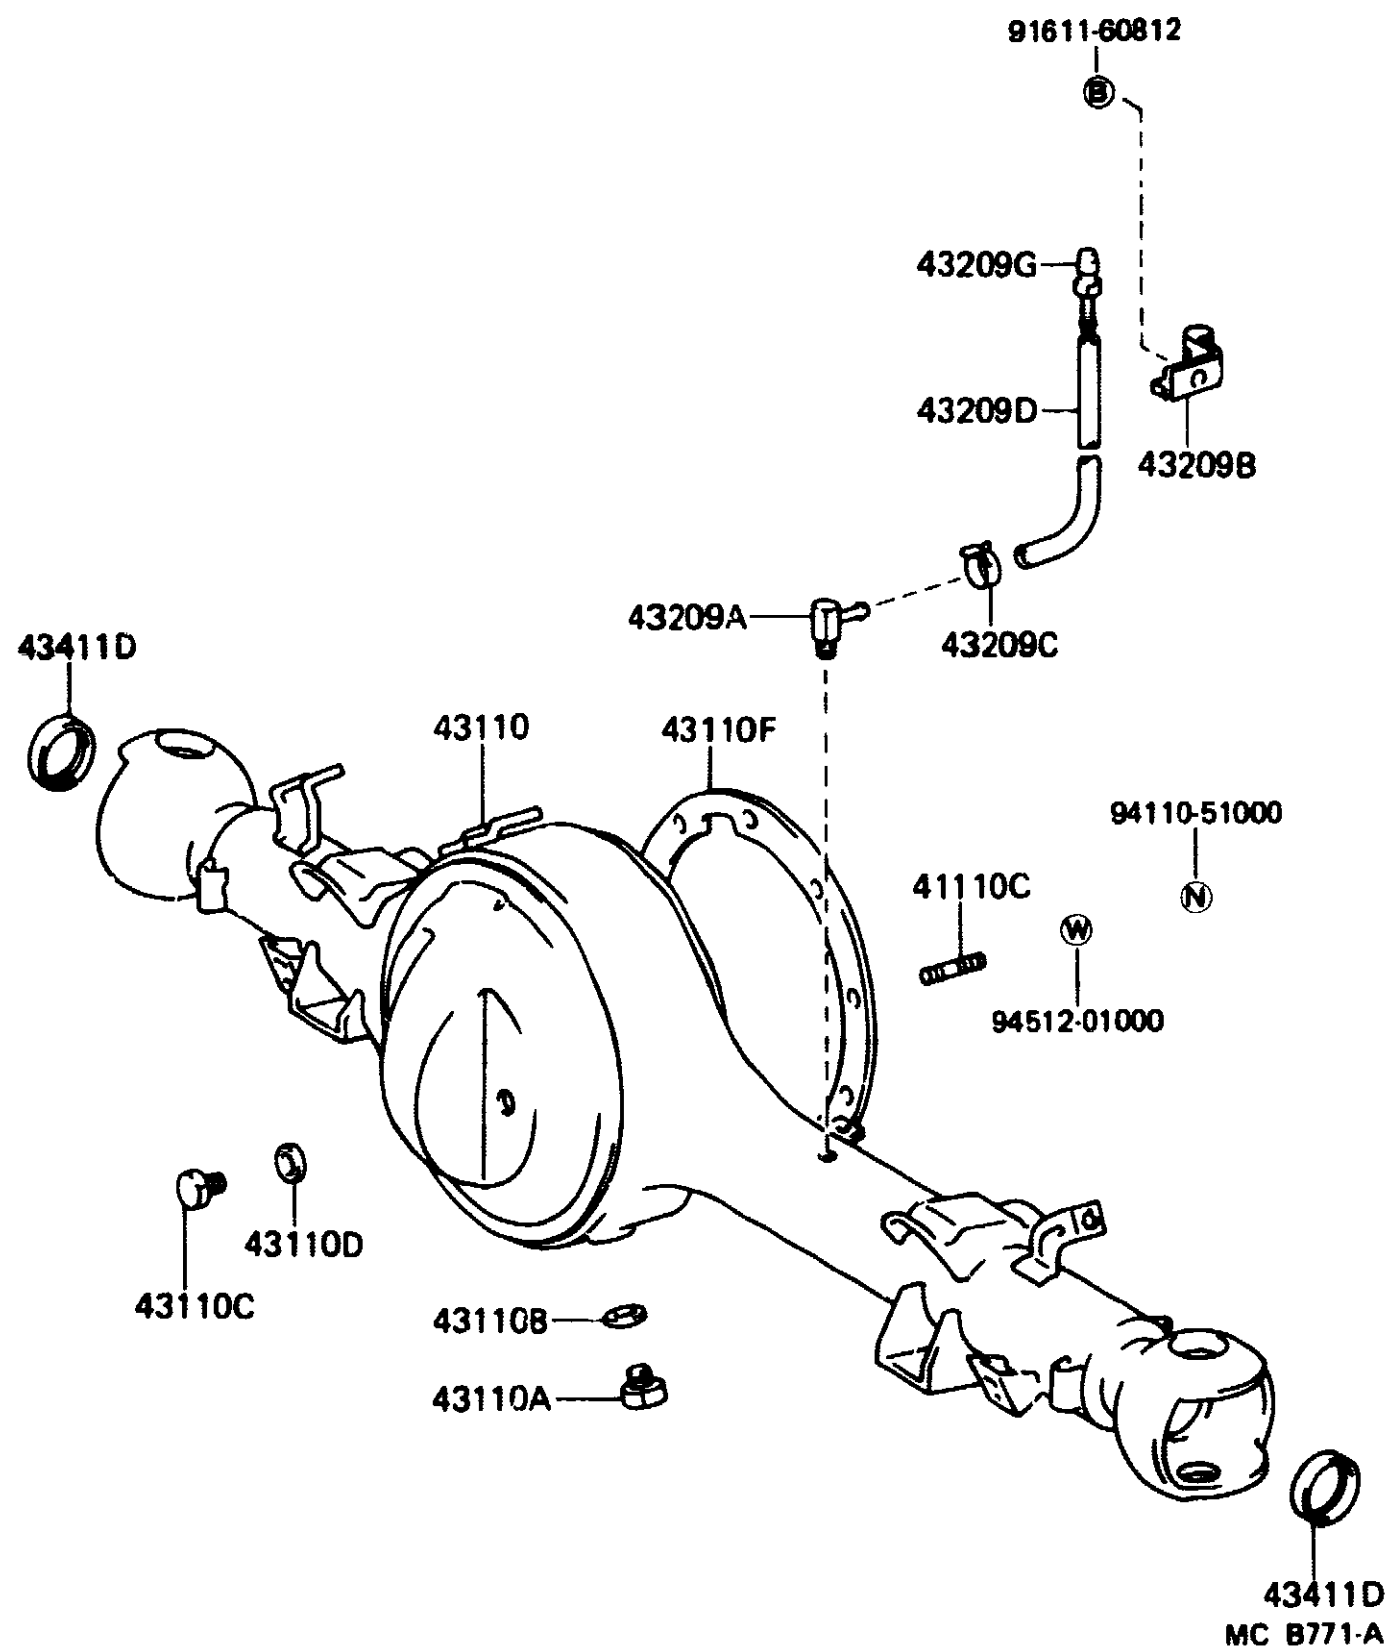43411D
MC B771-A

MCB771A

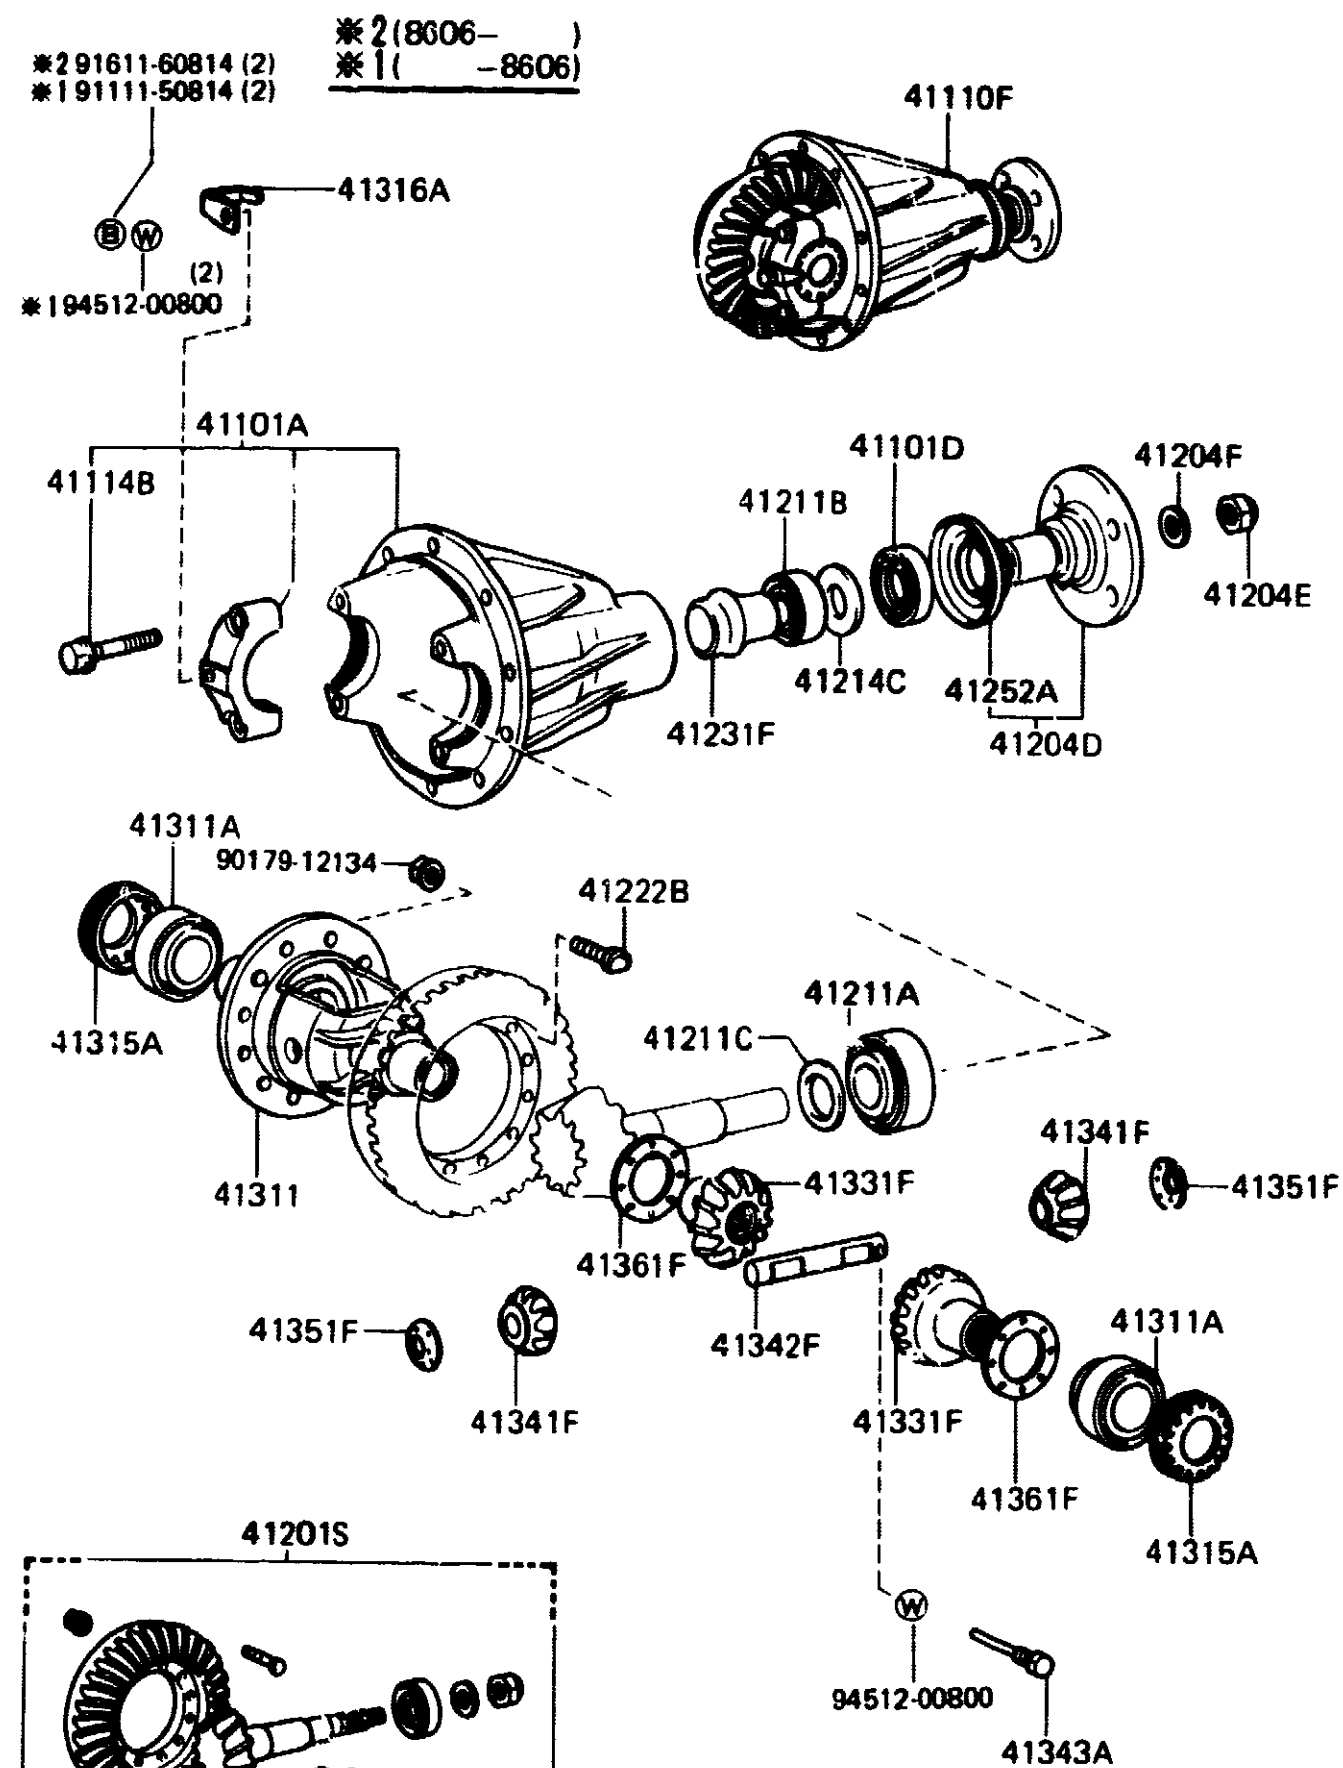


MC B774-B



MCB774B

(8411-8510)


(8411-)

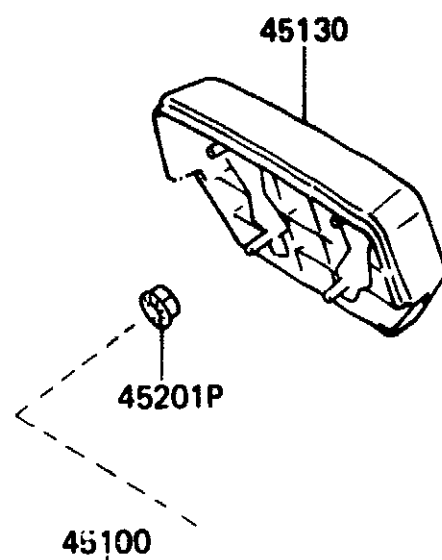

Urethane

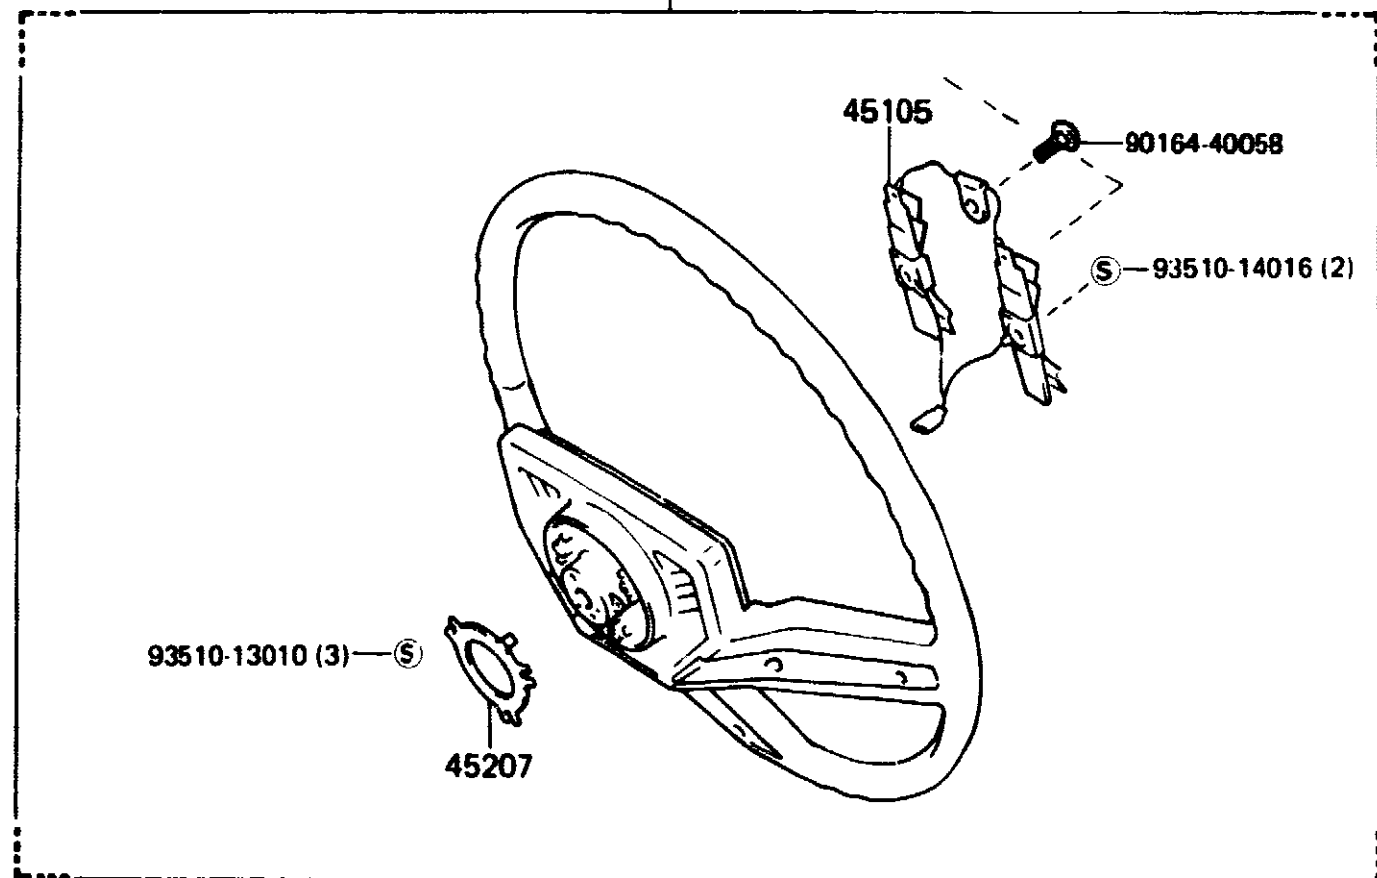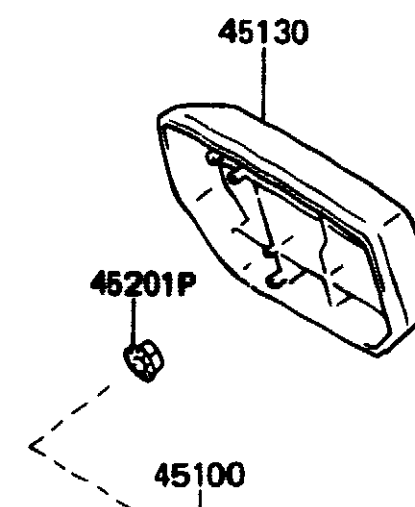

MC B808-A

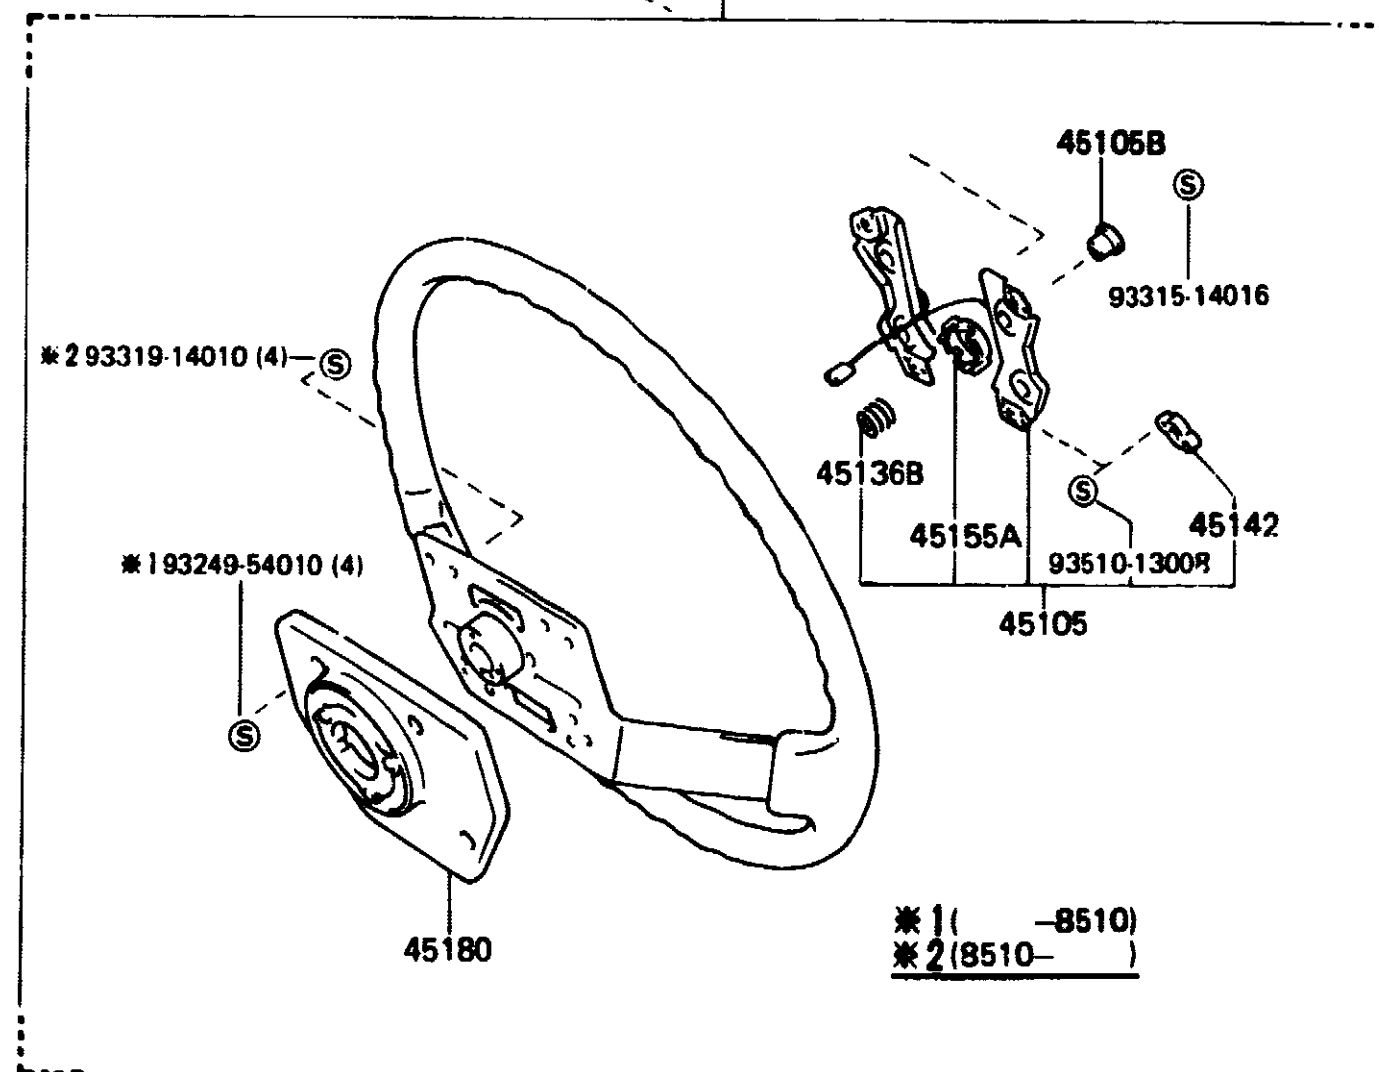


MC B808-A

(8411-)


(8411-)

ILLUST. NO. 10F2


ILLUST. NO. 20F2

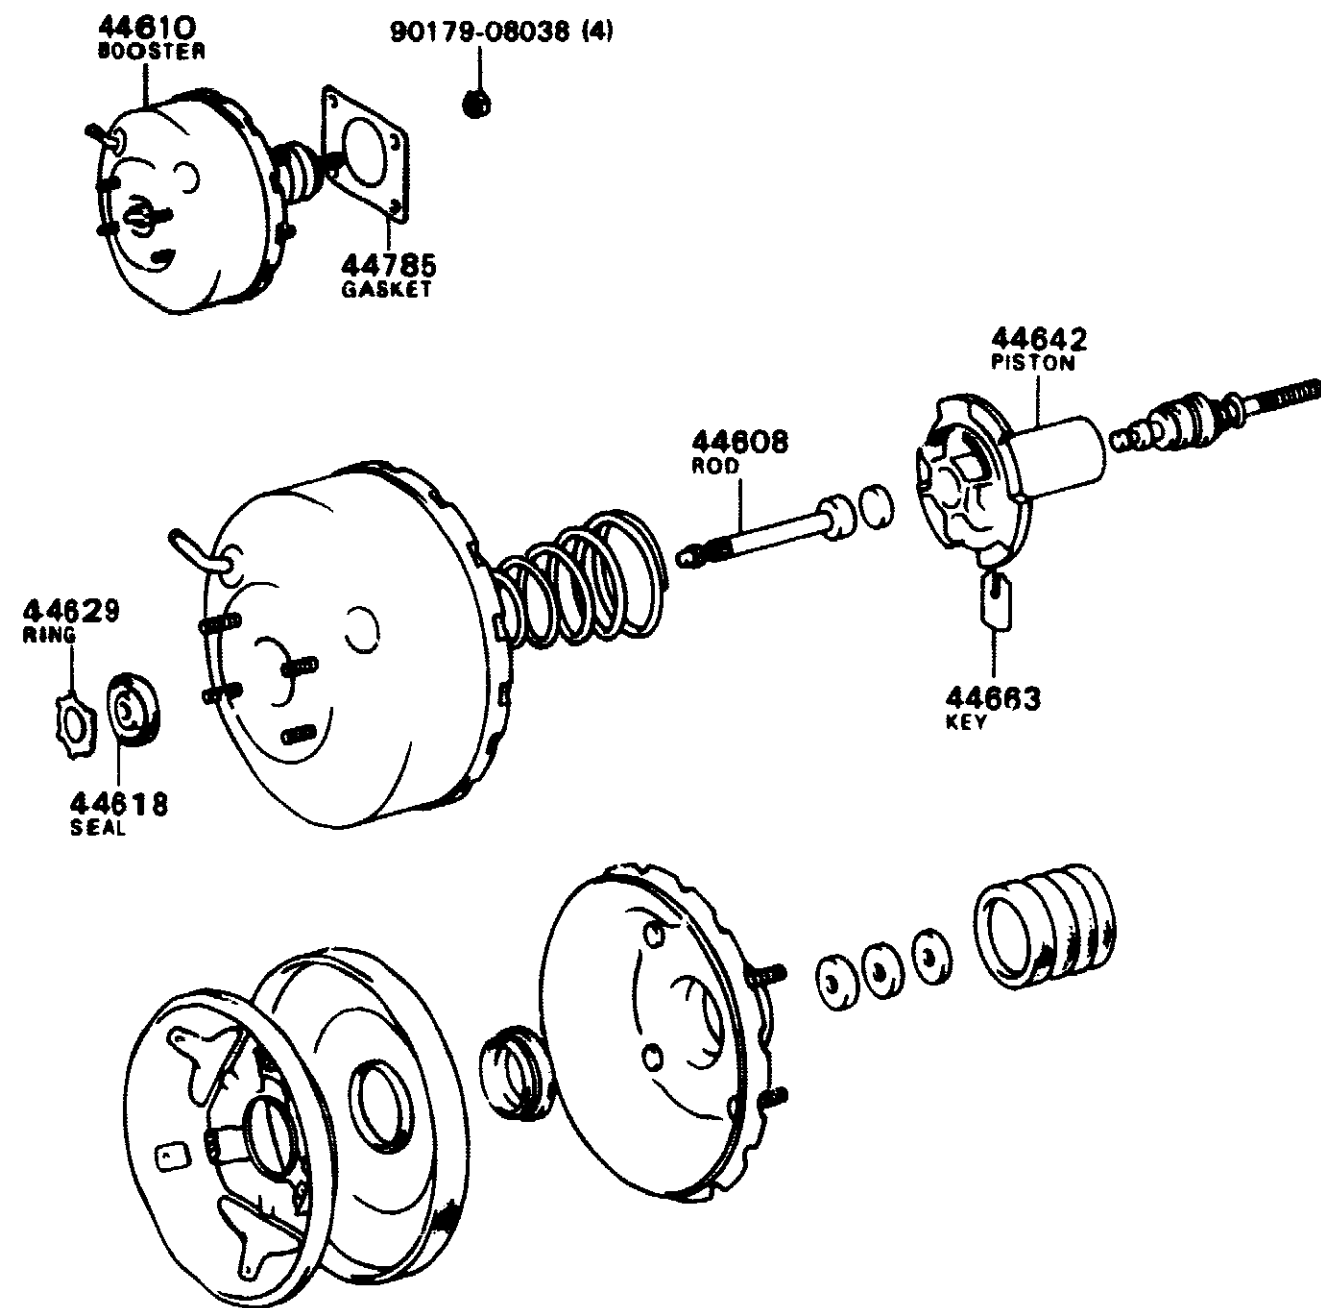

04443
BOOSTER KIT

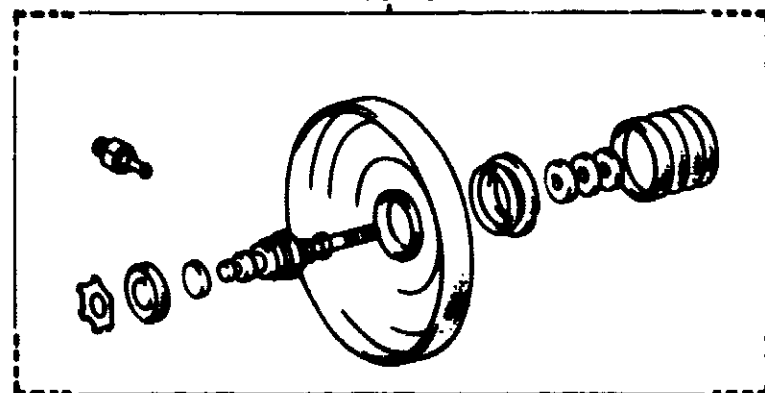

MC B821-A








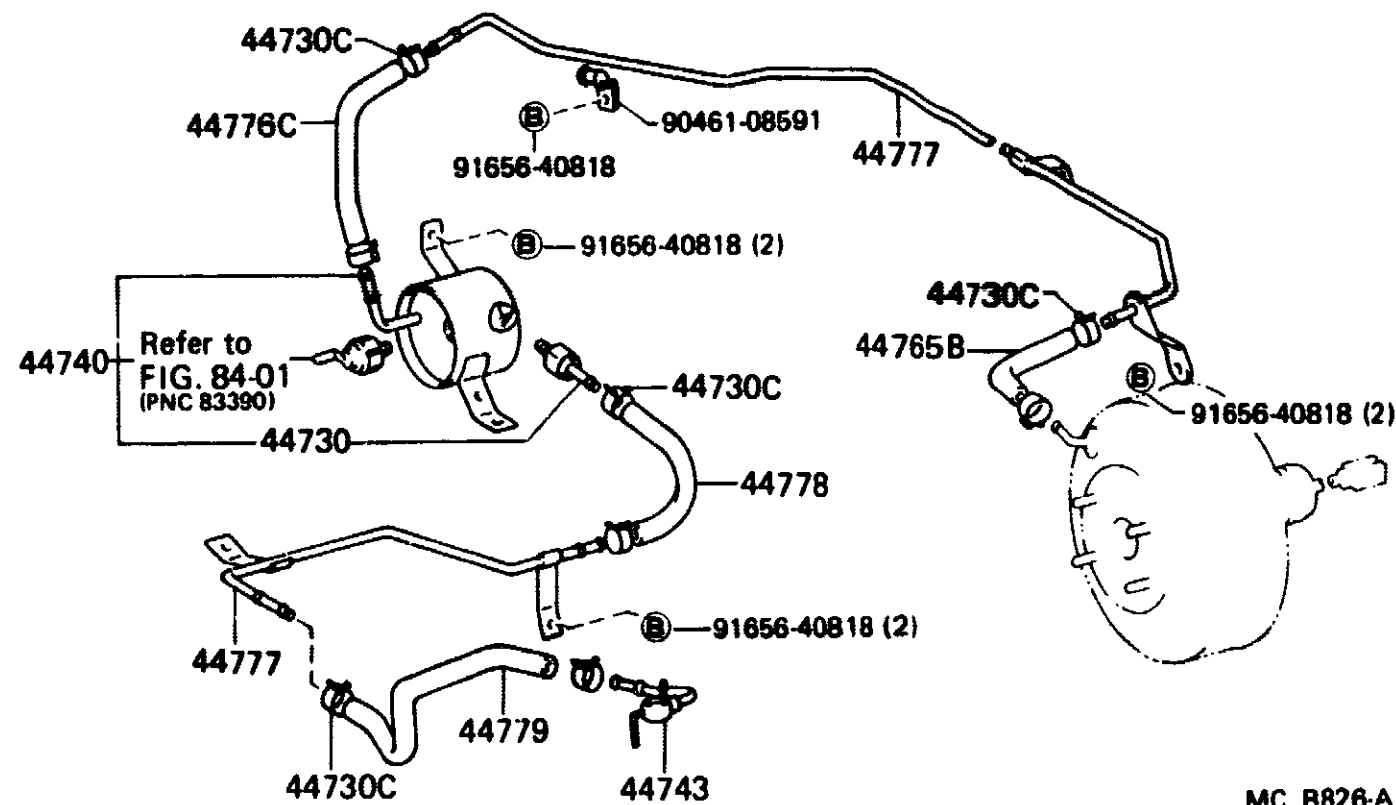


MC B826-A

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
67861-90K06-	2-H4	68851-90K00-	2-F5	69820-90K01-	2-A5	71955-90K00-01	2-M5	73847-90K00-	2-A6	75581-90K00-	2-L6
67862-90K06-	2-H4	68852-90K00-	2-F5	69901-90K00-	2-A5	72053-90K00-03	2-M5	74102-90K00-03	2-L6	75583-90K00-	2-L6
67868-30040-	2-H4	68861-90K00-	2-F5	-90K01-	2-A5	-90K00-06	2-M5	-90K00-05	2-L6	75585-90K00-	2-L6
67881-90K05-	2-D5	69005-90K44-01	2-H5	69902-90K00-	2-B5	72054-90K00-03	2-M5	74104-90K00-	2-L6	75586-90K00-	2-L6
67882-90K05-	2-D5	-90K66-01	2-H5	-90K01-	2-B5	-90K00-06	2-M5	74105-10010-10	2-L6	75589-90K00-	2-L6
67913-90K00-03	2-L6	-90L66-01	2-H5	69971-90K00-	2-B5	72110-90K01-	2-M5	-10010-13	2-L6	75596-90A00-	2-L6
-90K00-06	2-L6	69051-90K02-	2-H5	71013-90K03-	2-L5	-90K05-	2-M5	74135-10030-	2-L6	75979-90K00-02	2-A7
68111-90K00-	2-H4	69052-90K02-	2-H5	71014-90K03-	2-L5	72120-90K00-	2-M5	74137-10030-	2-L6	-90K00-07	2-A7
-90K02-	2-H4	69056-90K02-01	2-H5	71015-90K00-	2-K5	-90K03-	2-M5	74310-90K03-08	2-E6	-90K03-02	2-A7
-90K04-	2-H4	69057-90K02-	2-H5	71017-90K00-	2-K5	-90K02-	2-M5	-90K04-08	2-E6	-90K03-04	2-A7
-90K06-	2-H4	-90K16-	2-H5	-90K08-	2-K5	72130-90K00-	2-M5	-90K11-08	2-E6	75981-90K00-02	2-A7
68112-90K00-	2-H4	69058-16101-	2-H3	71033-90K02-01	2-L5	-90K02-	2-M5	74320-90K02-08	2-E6	-90K00-07	2-A7
-90K02-	2-H4	69059-90K02-	2-H5	71071-90K08-03	2-K5	-90K02-06	2-A6	-90K05-08	2-E6	-90K08-02	2-A7
-90K04-	2-H4	69205-10040-03	2-L4	-90K08-05	2-K5	72140-90K00-	2-M5	74348-32010-08	2-E6	-90K08-04	2-A7
-90K06-	2-H4	-10040-06	2-L4	-90K14-03	2-K5	-90K03-	2-A6	74372-30030-	2-E10	75982-90K00-02	2-A7
68121-90K00-	2-K4	69206-10040-03	2-L4	-90K14-05	2-K5			-90A00-	2-E10	-90K00-07	2-A7
68122-90K00-	2-K4	-10040-06	2-L4	71072-90K05-03	2-K5	72157-90K00-03	2-A6	74404-90K01-	2-G6	-90K08-02	2-A7
68131-90K00-	2-D5	-10050-03	2-F5	-90K05-05	2-K5	-90K00-06	2-A6	74405-90K01-	2-G6	-90K08-04	2-A7
-90K06-	2-D5	-10050-06	2-F5	-90K15-03	2-K5	72210-90K00-	2-A6	74407-90K00-	2-G6	75985-90K00-02	2-A7
-90K07-	2-D5	69210-90K00-	2-L4	-90K15-05	2-K5	72510-90K01-01	2-A6	74431-90K02-	2-G6	-90K00-07	2-A7
68132-90K03-	2-D5	69212-90K00-	2-F5	71073-90K16-03	2-K5	72520-90K00-	2-A6	74432-90K01-	2-G6	-90K08-02	2-A7
-90K04-	2-D5	69220-32010-	2-F5	-90K16-05	2-K5	72538-12010-	1-A9	74434-90K02-	2-G6	-90K08-04	2-A7
-90K05-	2-D5	-90K00-	2-L4	-90K17-03	2-K5	72570-90K00-	2-A6	-90K03-	2-G6	75986-90K00-02	2-A7
68141-90K03-	2-H4	69260-10040-10	2-A5	-90K17-05	2-K5	72580-90K00-	2-A6	74435-90K01-	2-G6	-90K00-07	2-A7
68143-90K00-	2-H4	-10040-33	2-A5	71074-90K12-03	2-K5	72603-90K01-03	2-A6	-90K02-	2-G6	-90K08-02	2-A7
68160-90K00-	2-H4	69266-22010-	2-A5	-90K12-05	2-K5	-90K01-06	2-A6	74436-90K01-	2-G6	-90K08-04	2-A7
-90K01-	2-H4	69285-90801-03	2-F6	-90K13-03	2-K5	72604-90K01-03	2-A6	74534-90K00-	2-E9	75991-90K00-02	2-A7
68170-90K00-	2-H4	-90801-16	2-F6	-90K13-05	2-K5	-90K01-06	2-A6	74539-20010-	2-H6	-90K00-07	2-A7
-90K01-	2-H4	69310-90K00-	2-L4	71075-90K06-03	2-L5	72607-90K00-	2-A6	74559-89101-	2-H6	-90K12-02	2-A7
68175-90K00-	2-K4	69320-90K00-	2-L4	-90K06-05	2-L5	72660-90K00-	2-A6	74564-60010-	2-H6	-90K12-04	2-A7
68176-90K00-	2-K4	69350-90K00-	2-F5	-90K07-03	2-L5	72665-90K00-	2-A6	74604-90K00-03	2-E6	75992-90K00-02	2-A7
68181-90K00-	2-K4	-90K01-	2-G5	-90K07-05	2-L5	72666-90K00-	2-A6	-90K00-06	2-E6	-90K00-07	2-A7
68182-90K00-	2-K4	69377-90K00-	2-G5	71077-90K08-03	2-L5	72690-90K00-03	2-A6	74610-12030-08	2-E6	-90K12-02	2-A7
68210-90K00-	2-H4	69380-90K00-	2-G5	-90K08-05	2-L5	-90K00-06	2-A6	74617-12010-08	2-E6	-90K12-04	2-A7
-90K01-	2-H4	69410-14030-	2-G5	-90K09-03	2-L5	72694-90K00-	2-A6	-90K00-03	2-E6	76603-90K00-	2-K1
68211-10030-	2-L4	-87001-	2-L4	-90K09-05	2-L5	73080-90K00-	2-A6	-90K00-06	2-E6	-90K01-	2-K1
-90K00-	2-H4	69430-90K00-	2-G5	71308-90K00-	2-L5	73210-90K05-03	2-C6	74630-90K00-03	2-E6	76604-90K00-	2-K1
68220-90K00-	2-H4	69470-90K00-	2-G5	71324-90K00-	2-L5	-90K05-06	2-C6	-90K00-06	2-E6	-90K01-	2-K1
-90K01-	2-H4	69511-32010-	2-H5	71381-90K02-	2-L5	-90K17-03	2-C6	74637-90K00-03	2-E6	76607-90K00-	2-H3
68291-90K00-	2-D5			71396-90K00-	2-L5	-90K17-06	2-C6	-90K00-06	2-F6	76608-90K00-	2-H3
-90K01-	2-D5	69512-87001-	2-L5	71501-90K02-	2-L5	73220-90K04-03	2-C6	-90K00-06	2-F6	76617-90K00-	2-L2
68292-90K00-	2-D5	69513-32010-	2-L5	71502-90K02-	2-L5	-90K04-06	2-C6	-90K00-06	2-F6	-90K01-	2-L2
-90K01-	2-D5	69603-90K00-03	2-L4	71505-90K02-	2-L5	-90K09-03	2-C6	74640-90K00-03	2-F6	76618-90K00-	2-L2
68299-90K00-	2-D5	-90K00-06	2-L4	71506-90K02-	2-L5	-90K09-06	2-C6	-90K00-06	2-F6	-90K01-	2-L2
68610-12030-	2-L4	69604-90K00-03	2-L4	71507-90K02-	2-L5	73230-90K02-03	2-C6	75311-90K00-	2-J6	77023-22040-	2-E7
68611-90K00-	2-E5	-90K00-06	2-L4	-90K10-	2-L5	-90K02-06	2-C6	75312-90K00-	2-J6	77035-90K01-	2-E7
68617-22010-	2-L4	69690-90K00-	2-G5	71521-90K00-	2-L5	73240-90K02-03	2-C6	75318-90K00-	2-J6	77037-90K00-	2-E7
-30010-	2-E5	69706-90K00-03	2-G5	71610-90K00-	2-L5	-90K02-06	2-C6	75370-90A02-	2-J6	77100-60290-	2-E7
-90A01-	2-L4	-90K00-06	2-G5	-90K01-	2-L5	73297-90K00-03	2-C6	75427-90K00-	2-J6	77110-60010-	2-F7
-90K00-	2-E5	69711-90K00-	2-L4	71611-90K03-	2-L5	-90K00-06	2-C6	75441-90K00-	2-J6	-60011-	2-F7
68621-90K00-	2-L4	69712-90K00-	2-L4	71620-90K00-	2-L5	73298-90K00-03	2-C6	75450-90K00-	2-J6	77131-90K00-	2-E7
68650-90K01-	2-D5	69717-90K00-01	2-E5	-90K01-	2-L5	-90K00-06	2-C6	75505-90K00-	2-K6	77169-14020-	2-E7
-90K02-	2-D5	69749-12010-	2-L1	71671-90K00-	2-L5	73299-90K00-03	2-C6	75506-90K00-	2-K6	77201-60200-	2-E7
68660-90K01-	2-D5	69751-90K00-	2-G5	71771-90K00-	2-L5	-90K00-06	2-C6	75531-90K00-	2-K6	77213-60040-	2-E7
-90K03-	2-D5	69759-30021-	2-M4	71811-90K00-03	2-M5	73350-90K02-03	2-D6	75533-90K00-	2-K6	77240-60110-	2-E7
68699-90K00-	2-E5	-90K00-	2-G5	-90K00-06	2-M5	-90K02-06	2-D6	75535-90K00-	2-K6	77251-60280-	2-E7
68710-14030-	2-A5	-90K01-	2-M4	71812-90K01-03	2-M5	73360-90K03-03	2-D6	75541-90K00-	2-K6	77252-60100-	2-E7
68720-14030-	2-A5	69801-90K00-	2-A5	-90K01-06	2-M5	-90K03-06	2-D6	75543-90K00-	2-K6	-A0101-	2-E7
68730-24010-	2-A5	-90K01-	2-A5	71910-90K00-03	2-M5	73371-90K00-03	2-D6	75553-90K00-	2-K6	77253-60070-	2-E7
68740-24010-	2-A5	69802-90K00-	2-A5	-90K00-06	2-M5	-90K00-06	2-D6	75554-90K00-	2-K6	-60080-	2-E7
68801-90K00-	2-F5	-90K01-	2-A5	71930-10060-33	2-M5	73380-90K01-03	2-D6	75571-90K00-	2-L6	77277-90K00-	2-F7
68802-90K00-	2-F5	69810-90K00-	2-A5	-10060-36	2-M5	-90K01-06	2-D6	75572-90K00-	2-L6	77290-90K00-	2-F7
68803-90K00-	2-F5	-90K01-	2-A5	71931-10010-33	2-M5	73800-90K01-	2-A6	75575-90K00-	2-L6	77293-90K00-	2-F7
68804-90K00-	2-F5	69820-90K00-	2-A5	-10010-36	2-M5	73810-90K01-	2-A6	75576-90K00-	2-L6	77305-90K00-	2-F7

ILLUSTRATED INDEX


F16

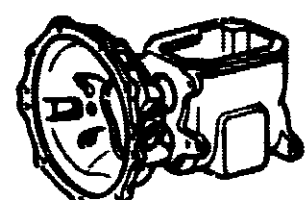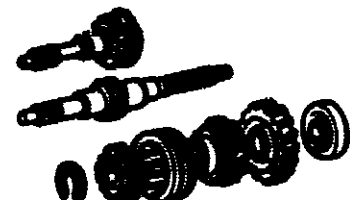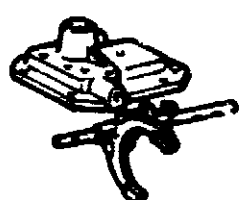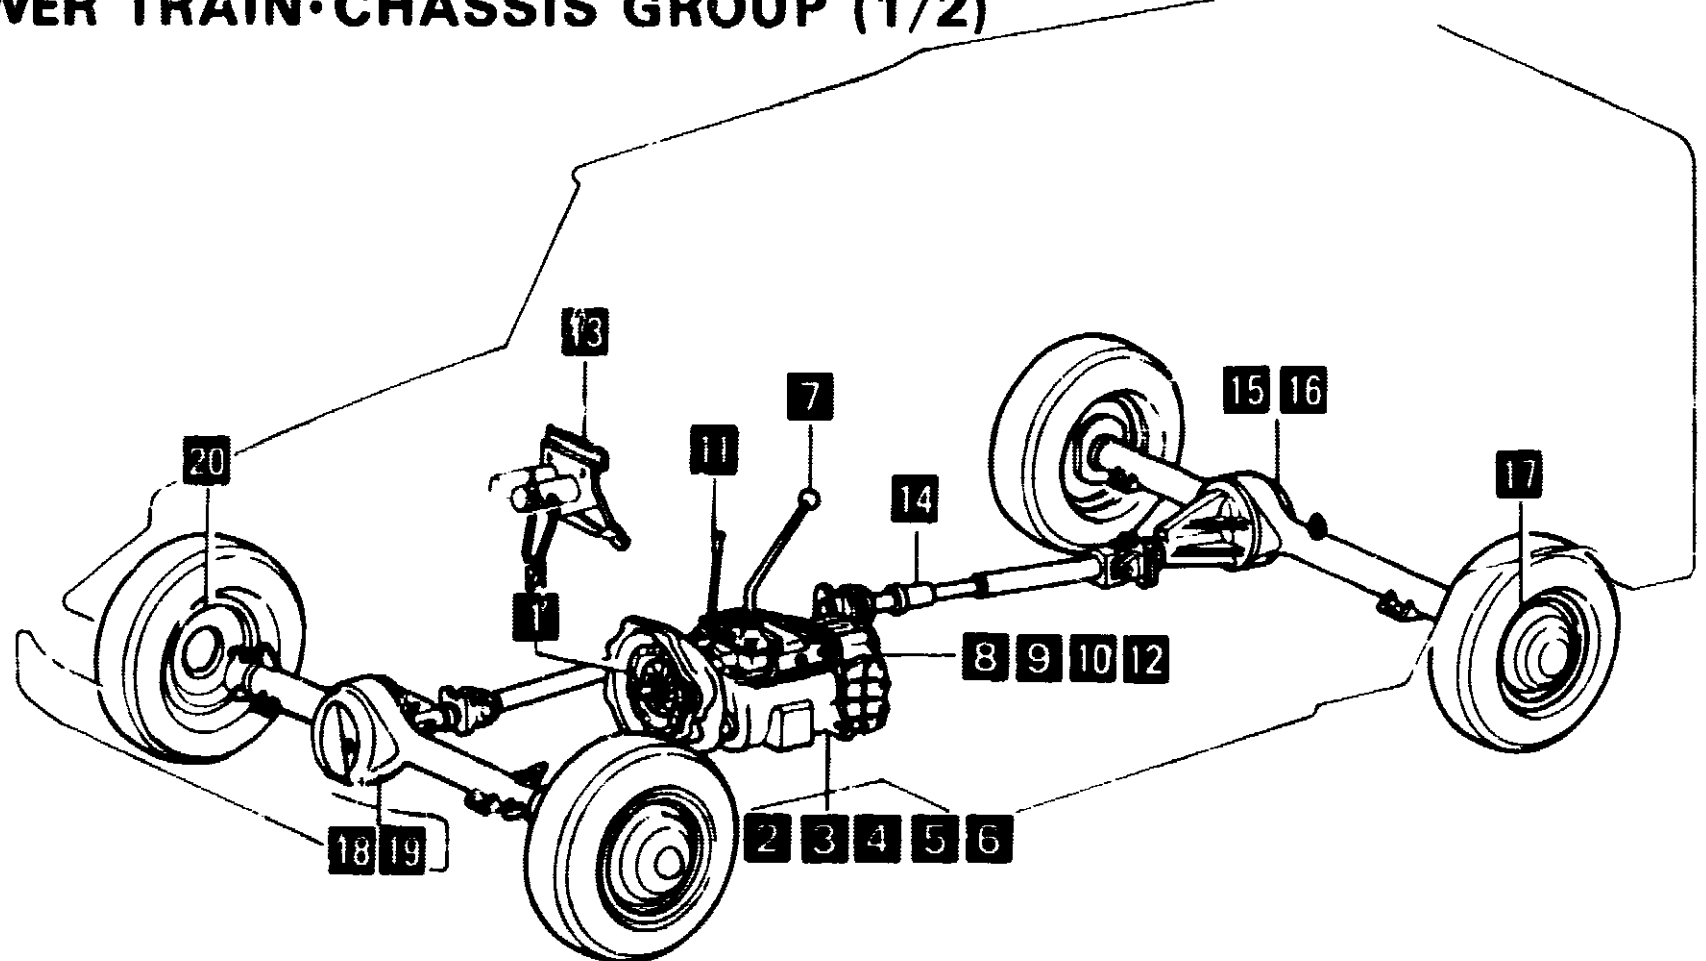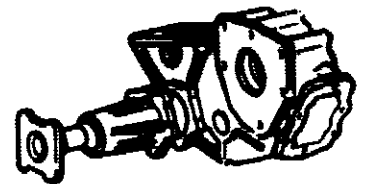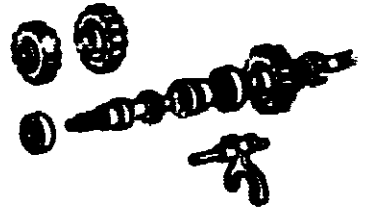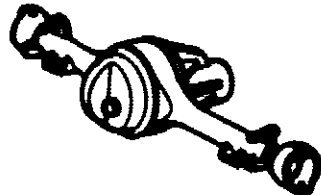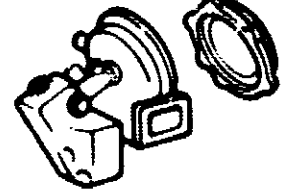1-D5 (31-01) 1  Clutch & Release Fork	1-L5 (33-01) 2  Transmission Assy	1-M5 (33-02) 3  Transmission Case	1-B6 (33-04) 4  Spr-Jometer Driven Gear	1-C6 (33-05) 5  Transmission Gear	1-G6 (33-07) 6  Gear Shift Fork	1-J6 (33-12) 7  Shift Lever & Retainer	
POWER TRAIN-CHASSIS GROUP (1/2) 							
							1-K6 (36-08) 8  Transfer Assy
							1-L6 (36-09) 9  Transfer Case
1-J8 (43-03) 20  Front Axle Hub							1-B7 (36-10) 20  Transfer Gear
1-I8 (43-02) 19  Drive Shaft							1-E7 (36-11) 11  Transfer Lever
1-F8 (43-01) 18  Front Axle Housing	1-E8 (41-03) 17  Disc Wheel & Cap	1-D8 (41-02) 16  Rear Axle Shaft & Hub	1-M7 (41-01) 15  Rear Axle Housing	1-K7 (37-01) 14  Propeller Shaft	1-I7 (36-16) 13  Vacuum Shift Valve	1-H7 (36-12) 12  Diaphragm Cylinder	

MC B935

GENUINE TOYOTA PARTS



(8411-)

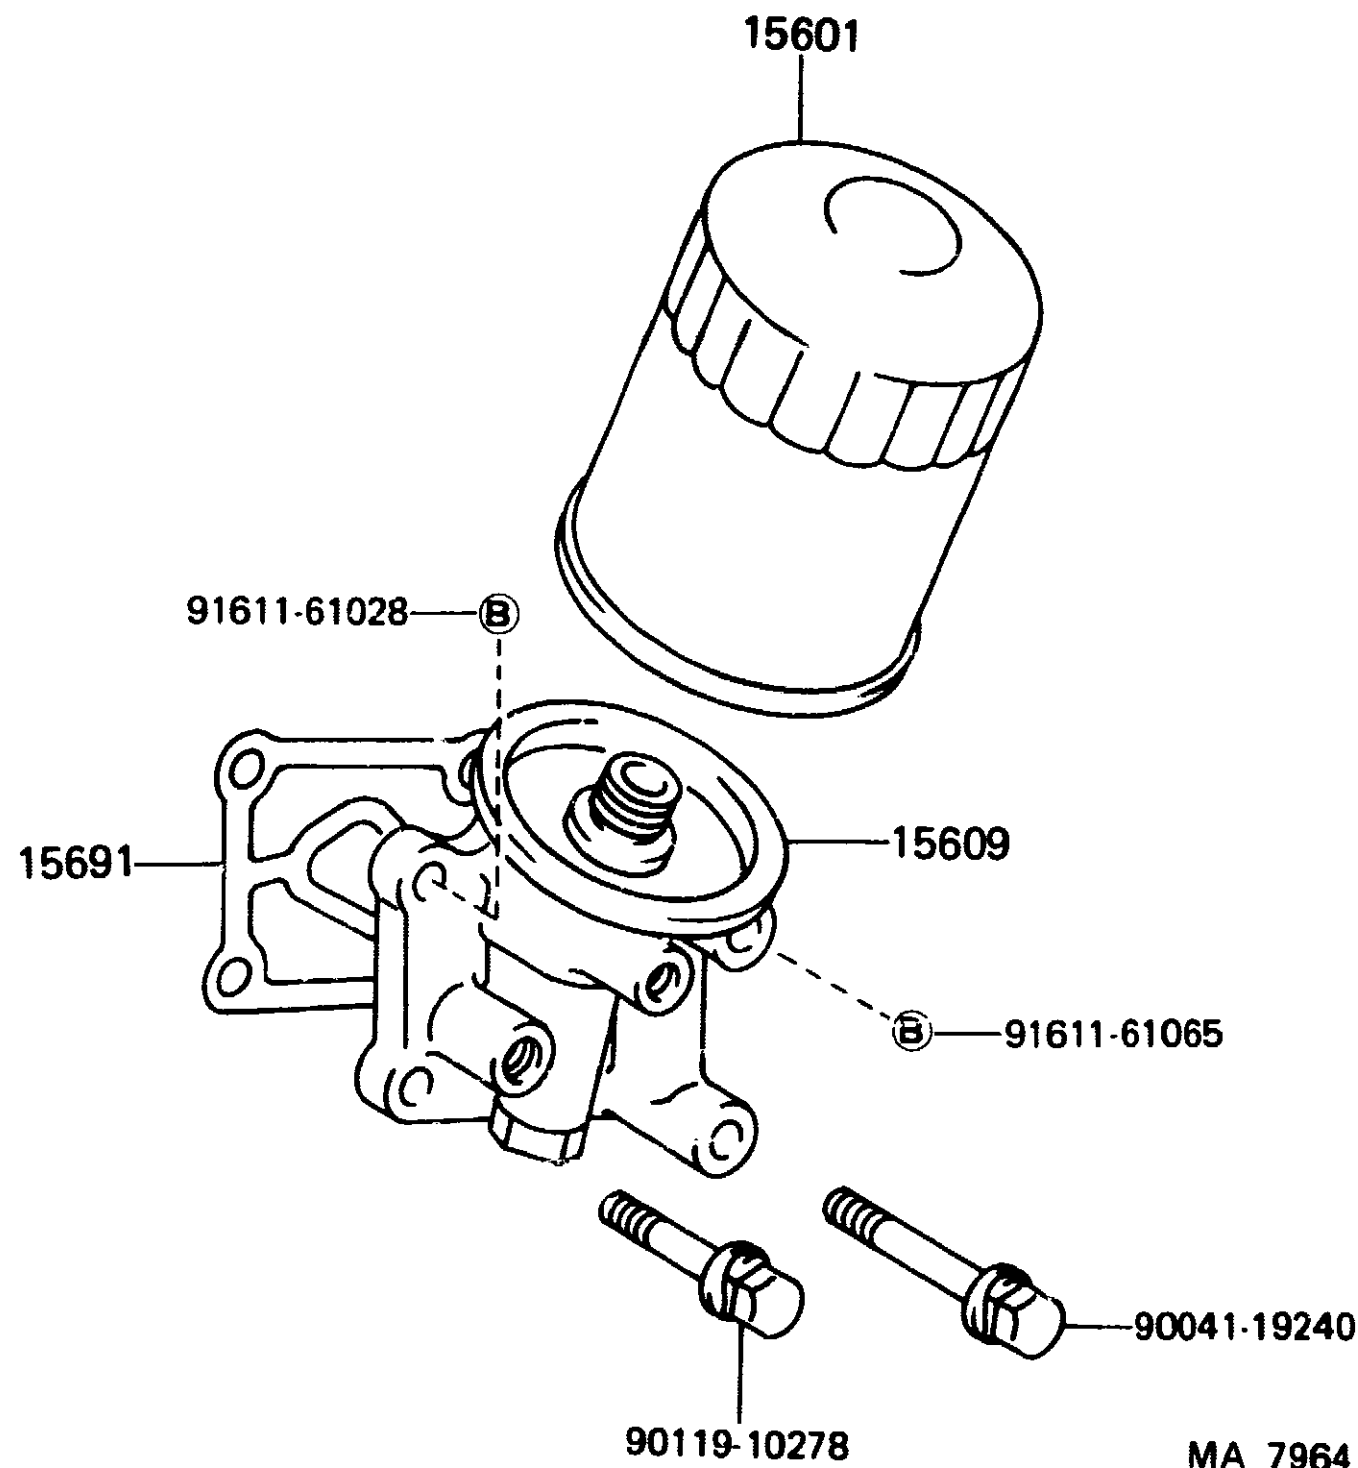

PROD.DATE	M O D E L S	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	FIG. 15-02 OIL FILTER	+-----+ 15601 FILTER SUB-ASSY, OIL +-----+ 3B..BJ70		15600-41010-	1	81	
8411-		+-----+ 15609 BRACKET SUB-ASSY, OIL FILTER +-----+ 3B..BJ70		15609-58010-	1	81	
8411-		+-----+ 15691 GASKET, OIL FILTER +-----+ 3B..BJ70		15691-56030-	1	81	

GENUINE TOYOTA PARTS

(8411-)

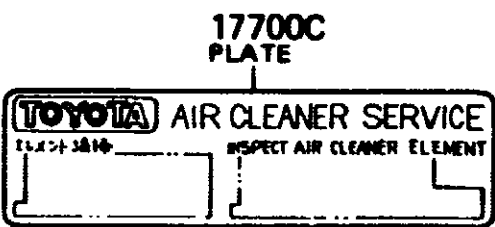
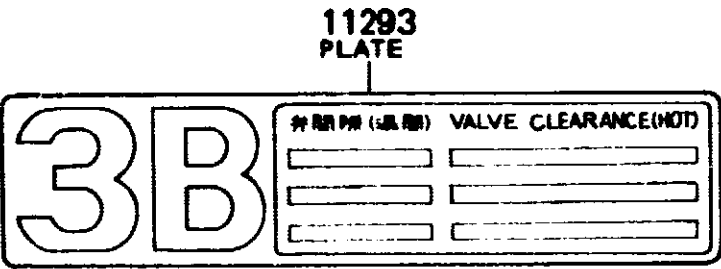


PROD. DATE	M O D E L S	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	17-09 CAUTION PLATE & NAME PLATE						
8411-	+-----+ 11293 +-----+ 3B..BJ70	PLATE, ENGINE CAUTION & ENGINE NAME		11293-58010-	1	81	
8411-	+-----+ 17700C +-----+ 3B..BJ70	PLATE, AIR CLEANER CAUTION (FOR ENGINE MODEL)		17791-56170-	1	81	

MA 7956



(8411-)

(8411-)

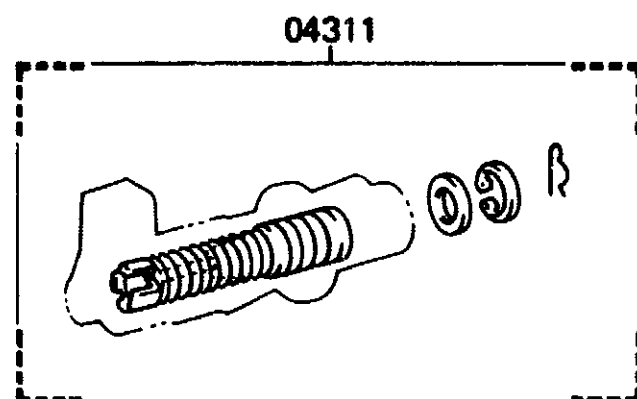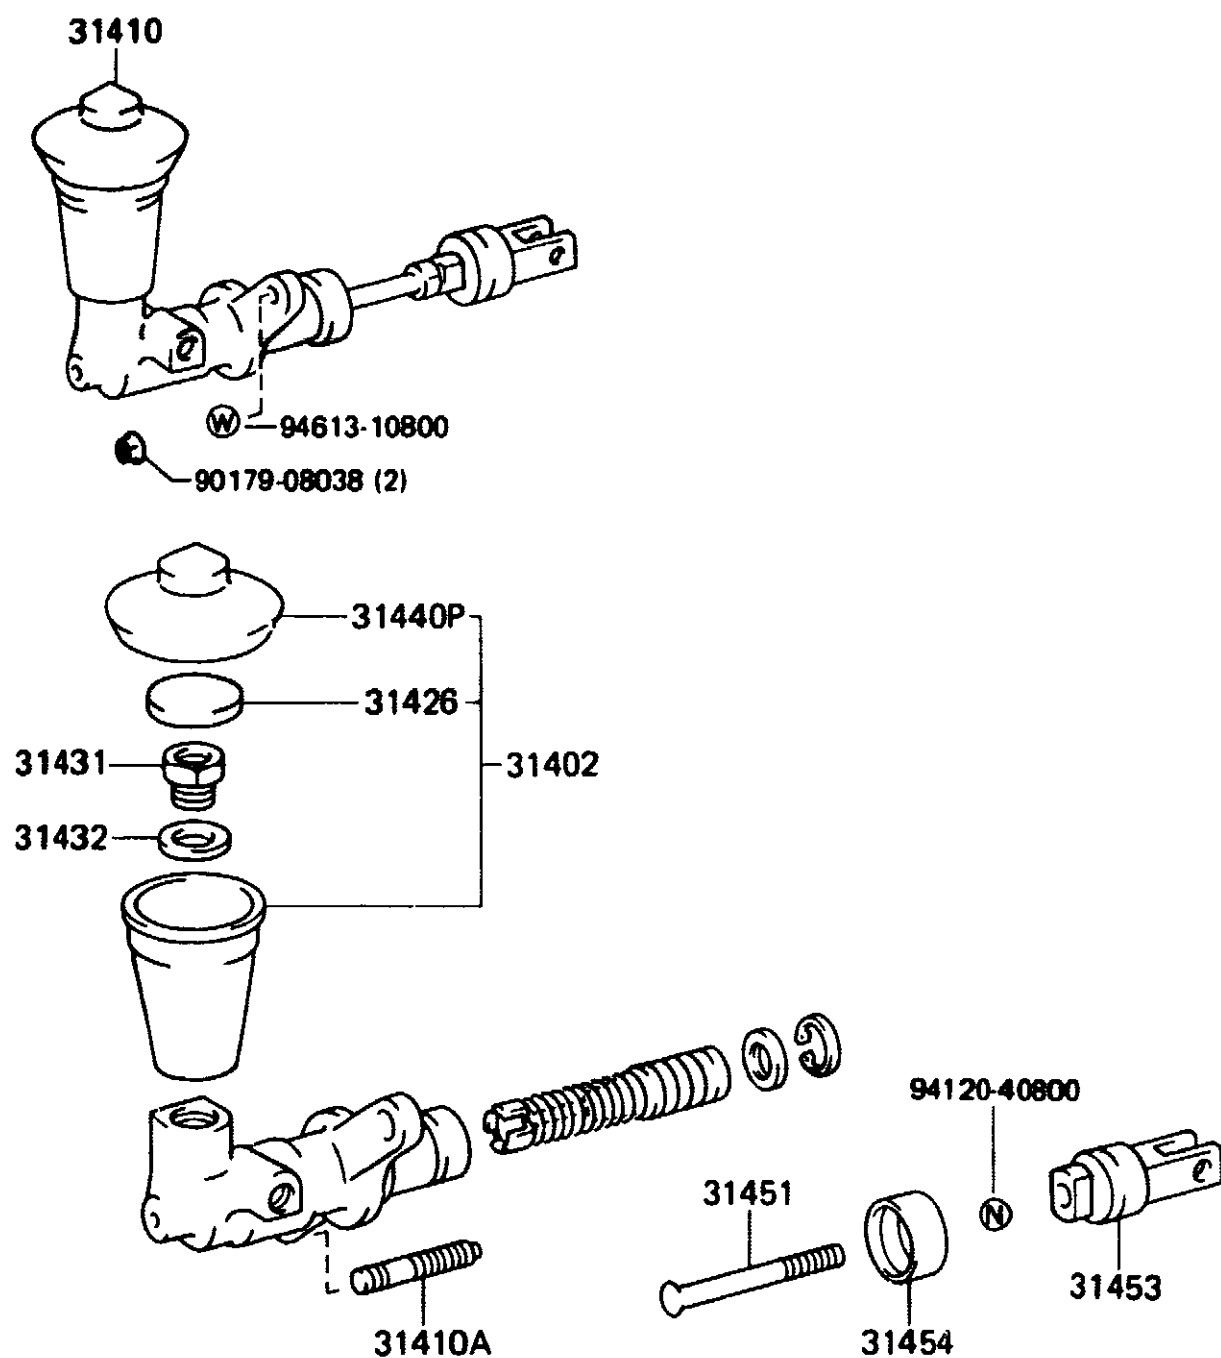

MC B671-B

W/ Clutch Booster

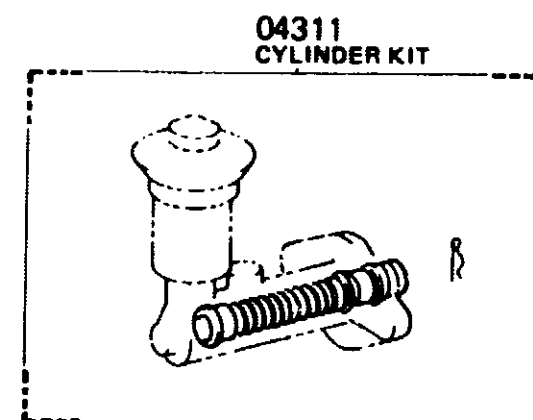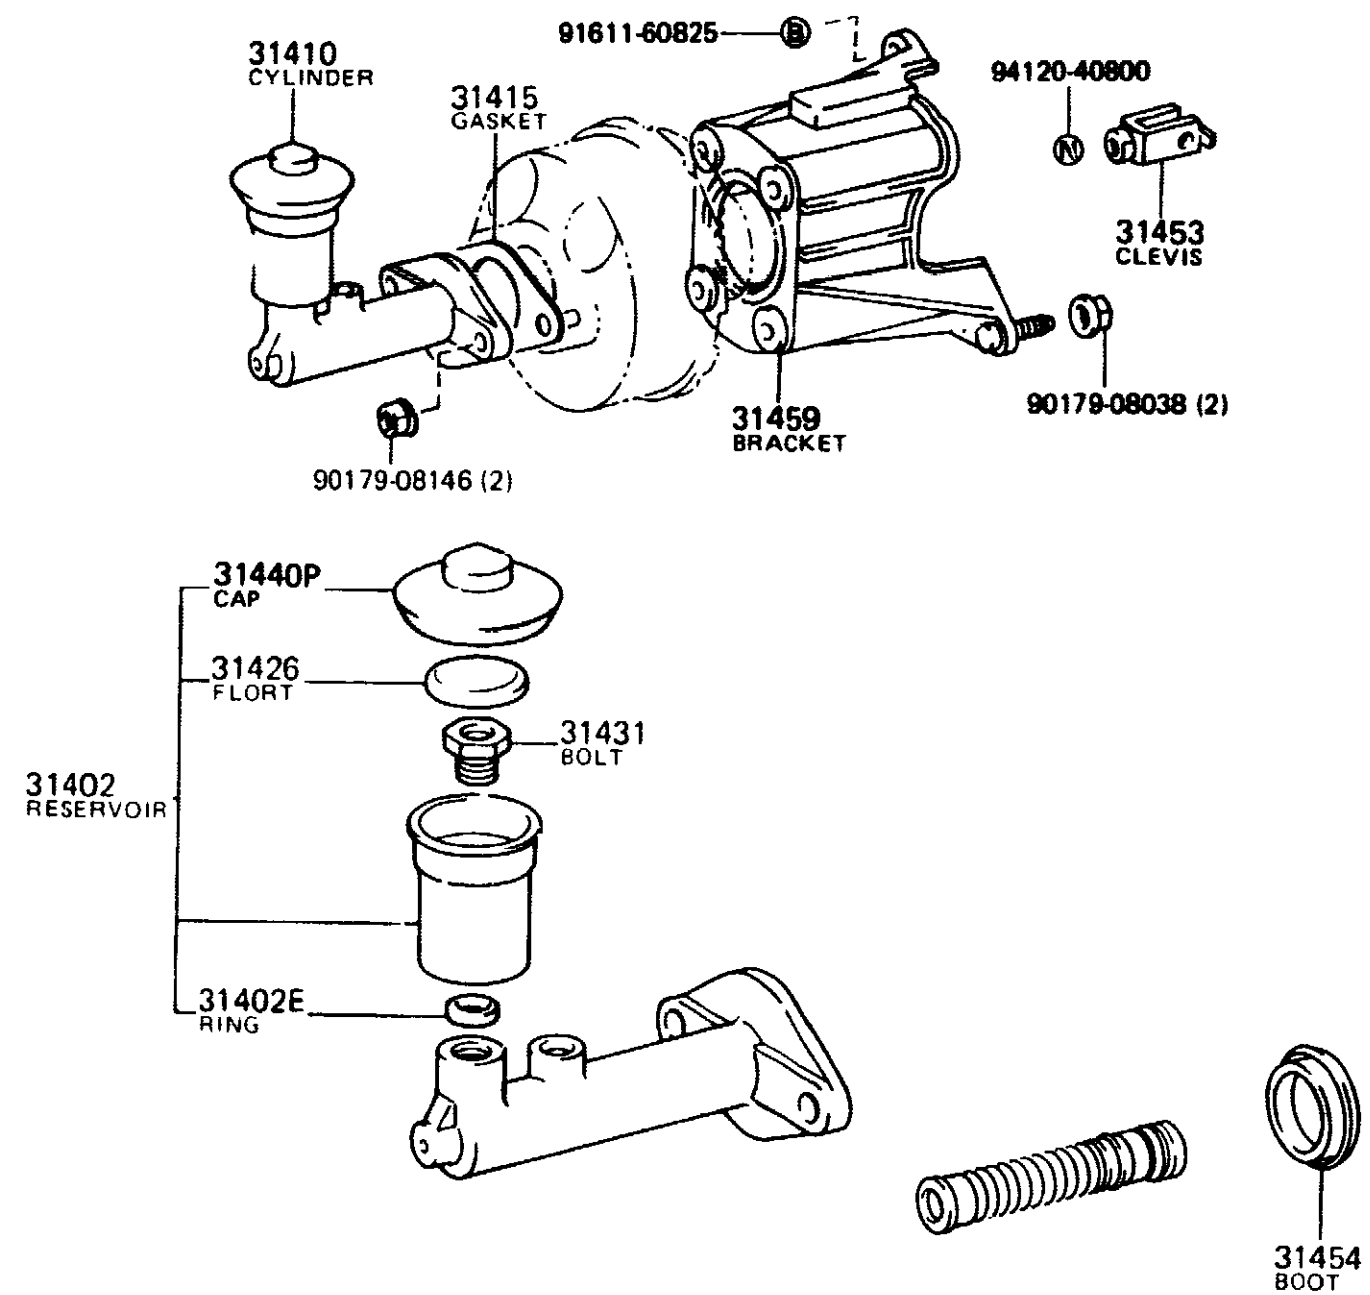

MC B676-B

FIG.33-07 GEAR SHIFT FORK & LEVER SHAFT


(MTM)

1-G6

M74-13-0033

(8411-)

GENUINE TOYOTA PARTS

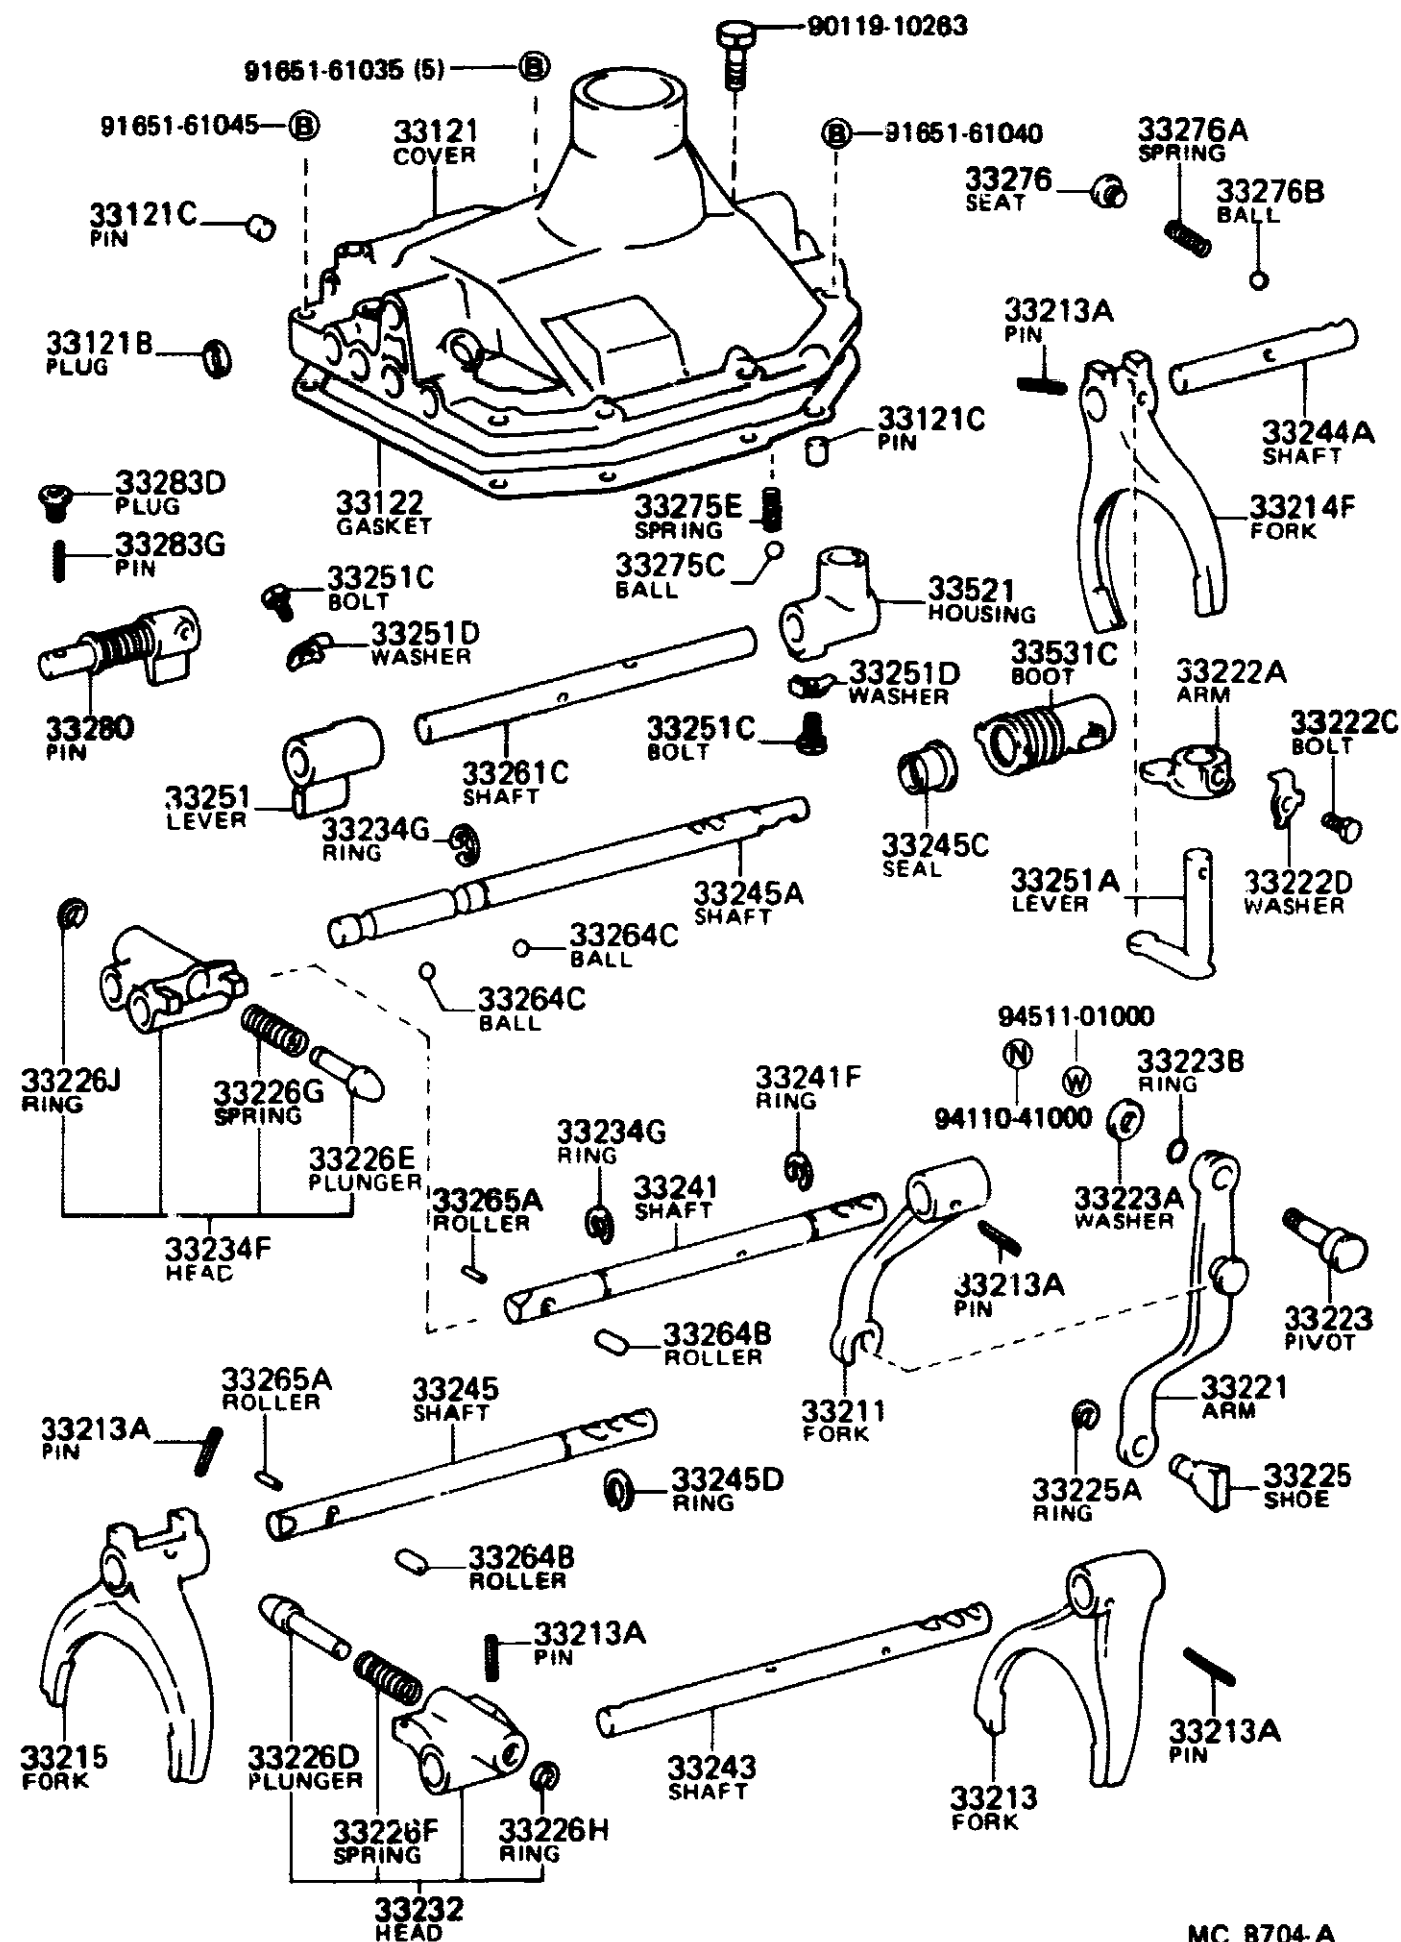

MC B704-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	33-07 GEAR SHIFT FORK & LEVER SHAFT (MTM)						
8411-	BJ70	COVER, MANUAL TRANSMISSION CASE		33102-60080-	1	81	
8411-8609	BJ70	PLUG, EXPANSION OR TIGHT (FOR TRANSMISSION CASE COVER)		90331-12002-	1	81	
8411-8609	BJ70	OD=12		90331-16050- (96411-11600-)	7	81	
8411-8609	BJ70	OD=16		90331-18001-	2	81	
8411-8609	BJ70	OD=18		96411-11800-	2	81	
8609-	BJ70	OD=16		96411-11600-	7	81	
8609-	BJ70	OD=12		96411-41200-	1	81	
8612-	BJ70	OD=18		96411-41800-	2	81	
8411-	BJ70	PIN (FOR TRANSMISSION CASE COVER)		90250-10214-	2	81	
8411-	BJ70	L=14, OD=10		90250-10215-	1	81	
8411-	BJ70	L=8, OD=9.6			7		
8411-	BJ70	GASKET, MANUAL TRANSMISSION CASE COVER		33122-60010-	1	81	
8411-	BJ70	FORK, REVERSE SHIFT		33211-36011-	1	81	
8411-	BJ70	FORK, 1ST & 2ND SHIFT		33212-36020-	1	81	
8411-	BJ70	PIN, SLOTTED SPRING (FOR SHIFT FORK SET)		90254-05016-	5	81	
8411-	BJ70	FORK, 5TH SHIFT		33214-60021-	1	81	
8411-	BJ70	FORK, 3RD & 4TH SHIFT		33213-60050-	1	81	
8411-8703	BJ70			33213-60051-	1		
8703-	BJ70						

FIG.36-11

GENUINE TOYOTA PARTS

1-G7

M74-15-0624

GENUINE TOYOTA PARTS

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8510-	+	36322 LEVER, TRANSFER HIGH & LOW SHIFT		36360-60170-	1	101	
	CONTINUED						
	BJ70						
8411-	+	36323 GUIDE, TRANSFER SHIFT LEVER		36323-60080-	1	81	
	BJ70						
8412-	+	36324A BUSH, TRANSFER SHIFT LEVER		36324-60050-	1		
	BJ70						
8411-8412	+	36327 SHAFT, TRANSFER SHIFT LEVER		36327-60030-	1	81	
	BJ70	ELECTRIC TYPE					
8411-	BJ70	MECHANICAL TYPE		36327-60040-	1	81	
8412-	BJ70	ELECTRIC TYPE		36327-60031-	1		
8411-8503	+	36339 CLEVIS, TRANSFER SHIFT ROD		36338-60020-	1	81	
	BJ70						
8503-	BJ70			36338-60030-	1		
8411-	+	36340 ROD ASSY, HIGH AND LOW SHIFT, NO.2		36340-60080-	1	81	
	BJ70						
8411-	+	36340B END ASSY (FOR HIGH & LOW SHIFT ROD)		33740-26010-	1	81	
	BJ70						
8411-	+	36341 SHAFT, FRONT DRIVE SHIFT LINK SUPPORT		36341-60032-	1	81	
	BJ70						
8411-	+	36343 SHOE, FRONT DRIVE SHIFT LINK LEVER (FOR DIRECT TYPE)		36343-60020-	1	81	
	BJ70						
8411-	+	36351A SPACER (FOR HIGH & LOW SHIFT ROD)		90560-10406-	1	81	
	BJ70						
8411-8503	+	36351B PIN (FOR HIGH & LOW SHIFT ROD)		90240-10027-	1	81	
	BJ70	L=33.5					
8503-	BJ70	L=31.5		90240-10157-	1		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	+	36351C PIN (FOR HIGH & LOW SHIFT ROD)		90240-08128-	1	81	
	BJ70						
8411-	+	36351D GROMMET (FOR HIGH & LOW SHIFT ROD)		90480-17401-	1	81	
	BJ70						
8411-	+	36362 LEVER, TRANSFER HIGH AND LOW SHIFT OUTER		36362-60020-	1	81	
	BJ70	ELECTRIC TYPE					
8411-	BJ70	MECHANICAL TYPE		36362-60040-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE
						FROM UP TO
FIG.	43-01	FRONT AXLE HOUSING & DIFFERENTIAL				
8411-	BJ70	CARRIER SUB-ASSY, DIFFERENTIAL, FRONT		41101-60040-	1	81
8411-	BJ70	SEAL, OIL (FOR FRONT DIFFERENTIAL CARRIER)		90311-38134-	1	81
8411-	BJ70	BOLT, STUD (FOR FRONT DIFFERENTIAL CARRIER)		90116-10074-	8	81
8411-	BJ70	BOLT, STUD (FOR FRONT DIFFERENTIAL CARRIER)		90116-10075-	2	81
8411-	BJ70	CARRIER ASSY, DIFFERENTIAL, FRONT		41110-60100-	1	81
8411-	BJ70	BOLT, FRONT DIFFERENTIAL BEARING CAP		90105-12053-	4	81
8411-8412	BJ70	FINAL GEAR KIT, DIFFERENTIAL, FRONT		41201-69155- (41201-69156-)	1	81
8412-	BJ70			41201-69156-	1	
8411-	BJ70	FLANGE SUB-ASSY, DRIVE PINION COMPANION, FRONT		41204-60030-	1	81
8411-	BJ70	NUT (FOR DRIVE PINION COMPANION FLANGE FRONT)		90179-22011-	1	81
8411-	BJ70	WASHER, PLATE (FOR DRIVE PINION COMPANION FLANGE FRONT)		90201-22007-	1	81
8411-	BJ70	BEARING, TAPERED ROLLER (FOR FRONT DRIVE PINION FRONT)		90366-40004-	1	81
8411-	BJ70	BEARING, TAPERED ROLLER (FOR FRONT DRIVE PINION REAR)		90366-30011-	1	81

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE
						FROM UP TO
8411-	BJ70	WASHER, PLATE (FOR FRONT DIFFERENTIAL DRIVE PINION)		90201-40551-	1	81
8411-	BJ70			90201-40552-	1	81
8411-	BJ70			90201-40553-	1	81
8411-	BJ70			90201-40554-	1	81
8411-	BJ70			90201-40555-	1	81
8411-	BJ70			90201-40556-	1	81
8411-	BJ70			90201-40557-	1	81
8411-	BJ70			90201-40558-	1	81
8411-	BJ70			90201-40559-	1	81
8411-	BJ70			90201-40560-	1	81
8411-	BJ70			90201-40561-	1	81
8411-	BJ70	SLINGER, FRONT DIFFERENTIAL DRIVE PINION OIL		41214-26010-	1	81
8411-	BJ70	BOLT, HEXAGON (FOR FRONT RING GEAR SET)		41226-35010-	12	81
8411-	BJ70	SPACER, FRONT DIFFERENTIAL DRIVE PINION BEARING		41231-60020-	1	81
8411-	BJ70	DEFLECTOR, DUST (FOR FRONT DIFFERENTIAL)		41252-35010-	1	81
8411-	BJ70	CASE, FRONT DIFFERENTIAL		41311-36010-	1	81
8411-	BJ70	BEARING, TAPERED ROLLER (FOR FRONT DIFFERENTIAL CASE)		90368-45066-	2	81
8411-	BJ70	NUT, FRONT DIFFERENTIAL BEARING ADJUSTING		41315-30010-	2	81
8411-	BJ70	LOCK, FRONT DIFFERENTIAL BEARING ADJUSTING NUT		41316-30010-	2	81

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
FIG.	45-04 STEERING WHEEL						
	+-----+ 45100 WHEEL ASSY, STEERING						
8411-8510	BJ70	GRAY		45100-60120-03	1	81	100
8411-8510	BJ70	BROWN		45100-60120-06	1	81	100
8411-	BJ70	GRAY, URETHANE		45100-60130-03	1	81	
8411-	BJ70	BROWN, URETHANE		45100-60130-06	1	81	
	+-----+ 45105 PLATE SUB-ASSY, HORN						
8411-8510	BJ70	BUTTON CONTACT, NO.1		45105-60030-	1	81	100
8411-	BJ70	URETHANE		45105-60040-	1	81	
	+-----+ 45105B SPACER (FOR HORN BUTTON CONTACT PLATE)						
8411-	BJ70			90561-04010-	4	81	
	+-----+ 45130 BUTTON ASSY, HORN						
8411-8510	BJ70	GRAY		45130-60070-03	1	81	100
8411-8510	BJ70	BROWN		45130-60070-06	1	81	100
8411-	BJ70	GRAY, URETHANE		45130-60080-03	1	81	
8411-	BJ70	BROWN, URETHANE		45130-60080-06	1	81	
	+-----+ 45136B SPRING, COMPRESSION (FOR HORN BUTTON CONTACT PLATE)						
8411-8503	BJ70			90501-10083-	4	81	
8503-	BJ70			90501-12099-	4		
	+-----+ 45142 SEAT, HORN BUTTON CONTACT, NO.1						
8411-	BJ70			45142-12050-	4	81	
	+-----+ 45155A SPACER, HORN CONTACT						
8411-	BJ70			45155-12030-	4	81	
	+-----+ 45180 COVER SUB-ASSY, STEERING WHEEL						
8411-8510	BJ70	BLACK		45180-60010-01	1	81	
8510-	BJ70			45180-60011-	1		

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
	+-----+ 45201P NUT, STEERING WHEEL SET						
8411-	BJ70			90179-12086-	1	81	
	+-----+ 45207 RING, HORN CONTACT						
8411-8510	BJ70			45176-20030-	1	81	100

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE
						FROM UP TO
FIG.	47-03 BRAKE BOOSTER					
	+	+				
	04443	BOOSTER KIT, BRAKE				
	+	+				
8411-8510	BJ70			04443-60200-	1	81 100
8510-	BJ70			04443-60300-	1	101
	+	+				
	44608	PUSH ROD SUB-ASSY, BOOSTER				
	+	+				
8411-	BJ70			44606-12520-	1	81
	+	+				
	44610	BOOSTER ASSY, BRAKE				
	+	+				
8411-8510	BJ70			44610-60320-	1	81 100
8510-	BJ70			44610-60460-	1	101
	+	+				
	44618	SEAL, BOOSTER BODY				
	+	+				
8411-	BJ70			44621-28120-	1	81
	+	+				
	44629	RING, CIRCULAR INTERNAL				
	+	+				
8411-	BJ70			44628-28120-	1	81
	+	+				
	44642	PISTON, BRAKE BOOSTER				
	+	+				
8411-8510	BJ70			44642-60280-	1	81 100
8510-	BJ70			44642-60450-	1	101
	+	+				
	44663	KEY, VALVE STOPPER				
	+	+				
8411-	BJ70			44635-28120-	1	81
	+	+				
	44730	VALVE ASSY, VACUUM CHECK (FOR BRAKE)				
	+	+				
8411-	BJ70			44730-60040-	1	81
	+	+				
	44730C	CLIP (FOR VACUUM HOSE)				
	+	+				
8411-	BJ70			90467-16002-	8	81
	+	+				
	44740	RESERVOIR ASSY, VACUUM				
	+	+				
8411-	BJ70			44740-60090-	1	81
	+	+				
	44743	UNION (FOR VACUUM PUMP)				
	+	+				
8411-	BJ70	W/CLUTCH B BOOSTER		90405-09089-	1	81

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE
						FROM UP TO
	+	+				
	44743	UNION (FOR VACUUM PUMP)				
	CONTINUED					
8411-	BJ70	W/CLUTCH B BOOSTER & XE LC		90405-09090-	1	81
	+	+				
8411-	BJ70			90405-09091-	1	81
8411-	BJ70	XELC		90405-09094-	1	81
	+	+				
	44765B	HOSE, CONNECTOR TO BRAKE BOOSTER				
	+	+				
8411-	BJ70			44778-60020-	1	81
	+	+				
	44776C	HOSE, VACUUM RESERVOIR TO CONNECTOR				
	+	+				
8411-	BJ70			95441-09190-	1	81
	+	+				
	44777	CONNECTOR, VACUUM HOSE				
	+	+				
8411-	BJ70	DASH PANEL SIDE		44777-60020-	1	81
8411-	BJ70	EPRON SIDE		44777-60030-	1	81
	+	+				
	44778	HOSE, CONNECTOR TO CHECK VALVE				
	+	+				
8411-	BJ70			44778-60030-	1	81
	+	+				
	44779	HOSE, UNION TO CONNECTOR				
	+	+				
8411-	BJ70			95444-09240-	1	81
	+	+				
	44785	GASKET, BRAKE BOOSTER				
	+	+				
8411-	BJ70			44785-35020-	1	81


*ELC=Electric Control Transfer

(8411-)

(8411-)


ILLUST.NO. 10F3

ILLUST.NO. 20F3

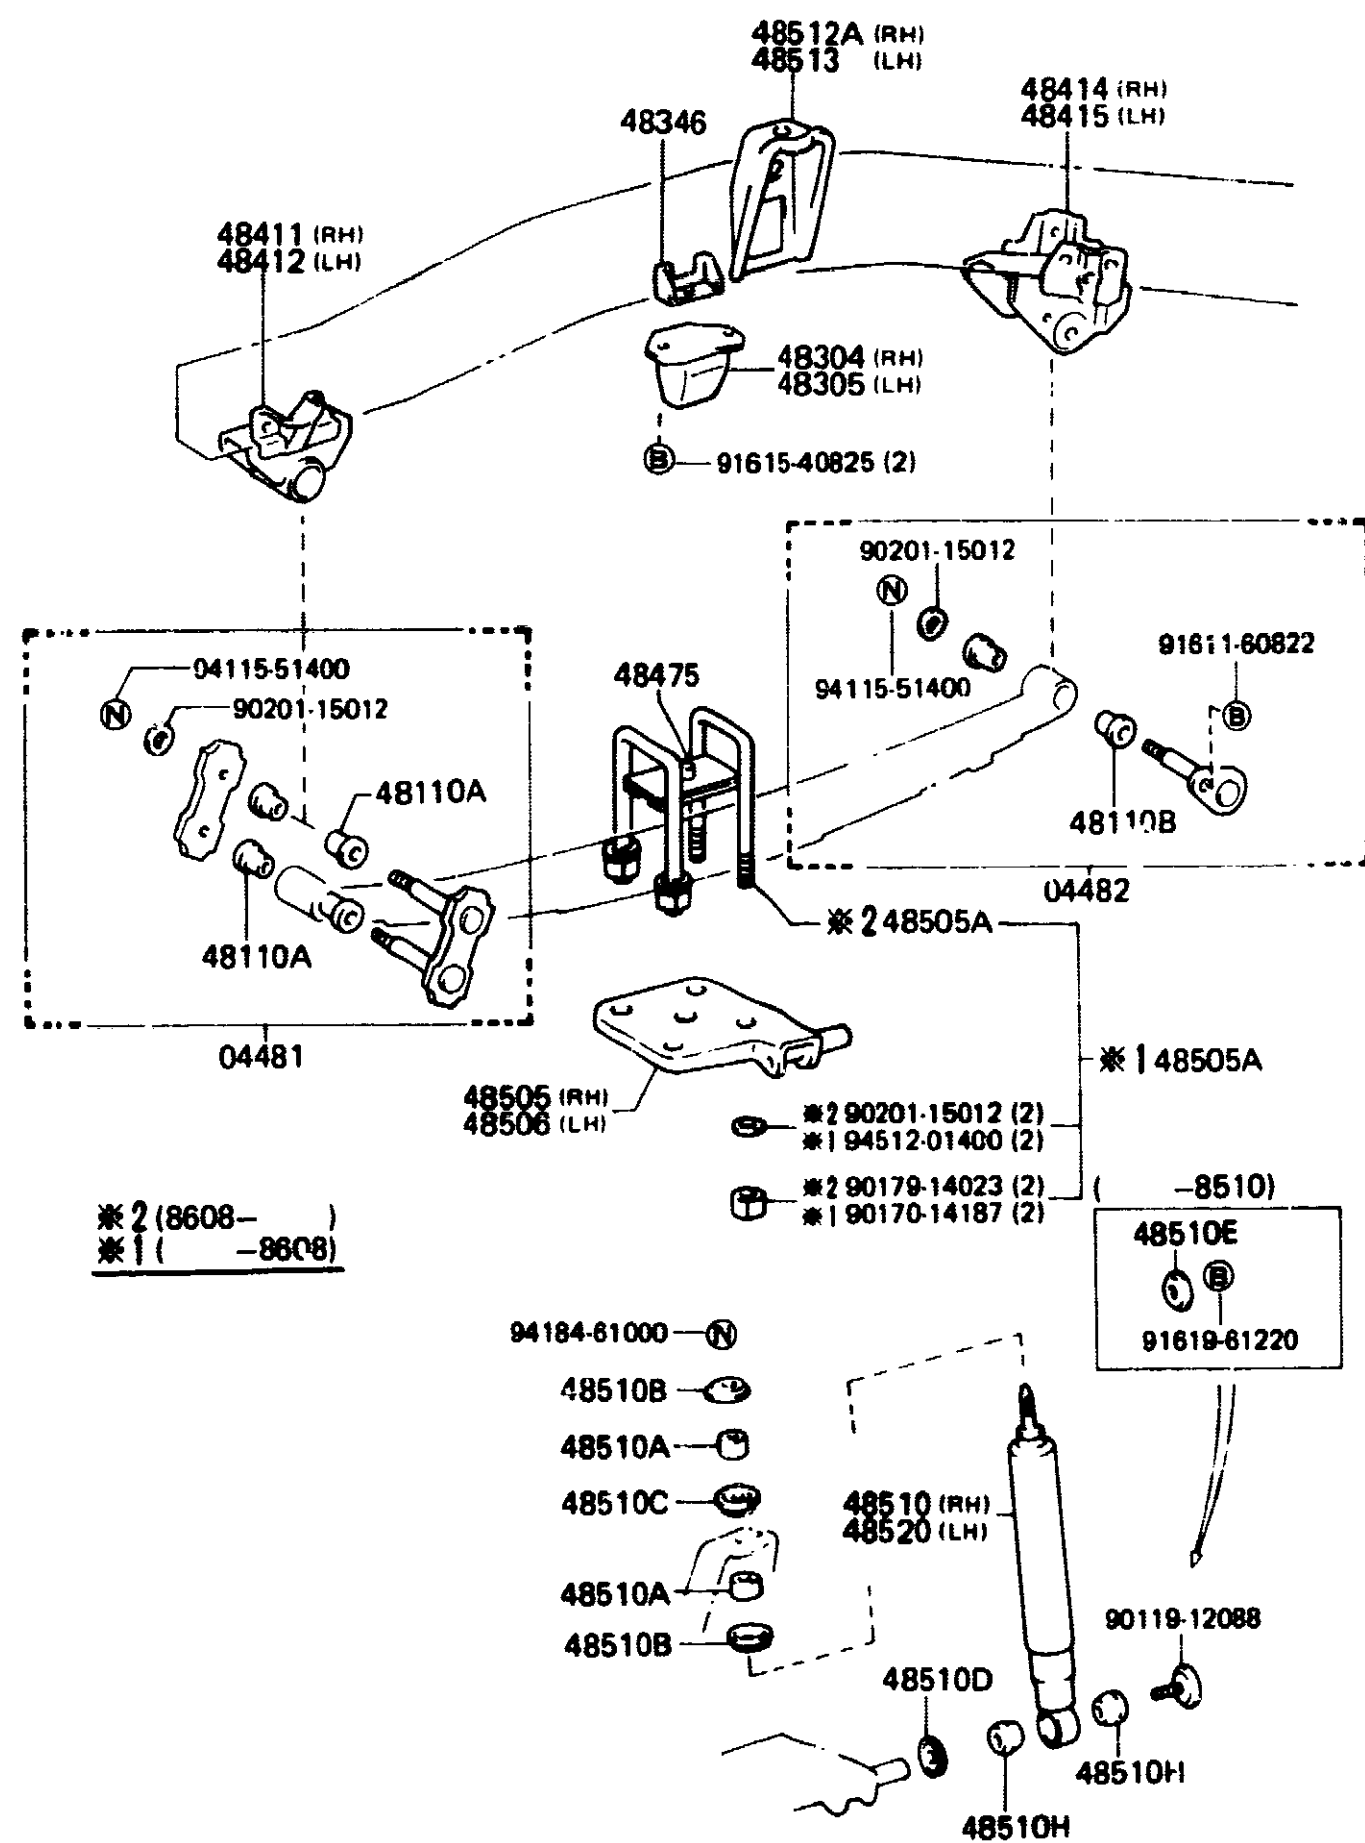

MC B866-F

MCB866F

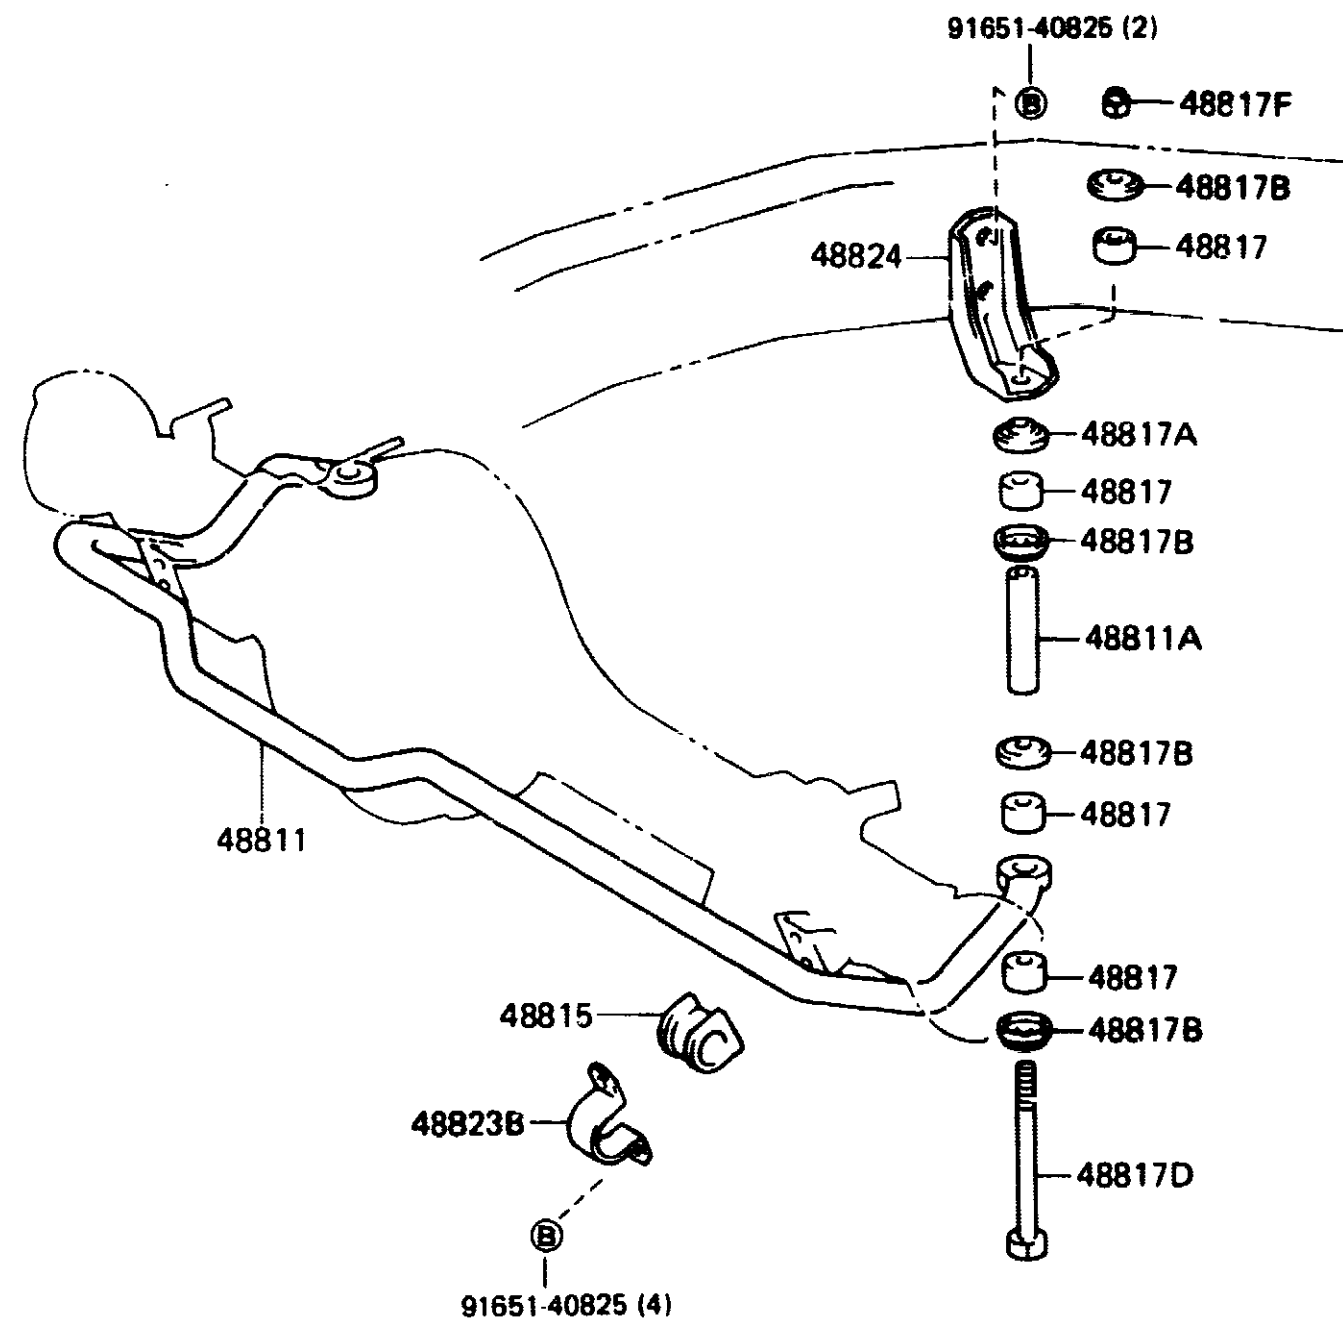

MC B911-A

MCB911A

77310 - 83710

G14

M74-29-0045

83909 - 90041

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
77310-35061-	2-E7	81550-69125-	2-M7	82183-90K07-	2-H8	83909-12230-	2-L8	85310-90B00-	2-L9	86520-22120-	2-D10
77316-12050-	2-E7	-90K16-	2-M7	-90K08-	2-H8	83910-90K01-	2-L8	-90K01-	2-J9	-90K05-	2-D10
77319-90K00-	2-F7	81551-90K02-	2-M7	82184-90K00-	2-H8	-90K05-	2-L8	85316-23010-	2-L9	86995-90A01-	2-L8
77338-90K00-	2-F7	81555-90K02-	2-M7	-90K01-	2-H8	83919-12230-	2-L8	55330-90K03-	2-L9	-90K00-	2-M8
-90K01-	2-F7	-90K16-	2-M7	-90K03-	2-H8	84112-69355-	2-D9	-90K08-	2-J9	87100-90K09-	2-F10
77358-12020-	2-F7	81560-69125-	2-M7	-90K04-	2-H8	84118-90A00-	2-D9	85332-12320-	2-J9	-90K24-	2-F10
77366-12010-	2-F7	-90K16-	2-M7	-90K06-	2-H8	84119-90K00-	2-D9	85333-20010-	2-J9	87104-89110-	2-H10
77378-90K00-	2-F7	81561-90K02-	2-M7	-90K07-	2-H8	-90K02-	2-D9	-20020-	2-J9	-90K00-	2-H10
77391-32010-	2-F7	81730-19305-	2-L7	82185-90K00-	2-H8	84140-69105-	2-D9	85338-30010-	1-L2	-90K01-	2-H10
77601-60080-	2-F7	-90A01-	2-L7	82186-90K00-	2-L8	84210-60021-	2-D9	-74040-	1-L2	-90K03-	2-H10
77606-60030-	2-F7	81731-14110-	2-L7	82187-90K00-	2-L8	84222-60021-	2-D9	85342-14010-	2-J9	-90K04-	2-H10
77614-60050-	2-F7	81732-90A01-	2-B8	82345-12050-	2-L8	-60040-	2-D9	85343-87002-	2-J9	87105-14020-	2-H10
77625-60020-	2-F7		2-L7	-32020-	2-L8	84230-22051-	2-D9		2-K9	-87002-	2-H10
77675-90K00-	2-F7	81740-19286-	2-L7	82616-12010-	2-C9	84310-60570-	2-D9	85348-89101-	2-J9	87107-90K01-	2-H10
77676-90K00-	2-F7	-90A01-	2-L7	82650-20011-	2-C9	84312-32010-	2-D9	85349-20010-	2-J9	-90K02-	2-H10
78111-25110-	2-G7	81741-14110-	2-L7	-35010-	2-C9	84332-69115-	2-D9	S 85355-14481-	2-L9	87110-90K00-	2-H10
78118-90K00-	2-G7	81742-90A01-	2-B8	82670-90K00-	2-L8	84340-30030-	2-D9	-16192-	2-J9	-90K01-	2-H10
78120-90K02-	2-G7		2-L7	82683-90K00-	2-C9	-32010-	2-D9	-20070-	2-L9	87126-12050-	2-H10
78180-90K10-	2-G7	81750-29145-	2-B8	-90K06-	2-C9	84450-60130-	2-D9	-87201-	2-L9	-90K00-	2-H10
78183-90A00-	2-G7	-90A01-	2-B8	-90K12-	2-C9	84460-22010-	1-D10	-89122-	2-L9	87130-90K02-	2-H10
78184-90K01-	2-G7	81751-14030-	2-B8	82821-24010-	2-E8	84461-60020-	2-D9	85440-60060-	2-E9	-90K03-	2-H10
78410-90K01-	2-G7	-89107-	2-B8	82823-12020-	2-L8	84550-24010-	2-D9	-60070-	2-E9	87138-90K00-	2-H10
78411-90K00-	2-G7	81754-91255-	2-B8	83101-20040-	2-K8	84580-36021-	2-D9	85500-12190-	2-E9	-90K01-	2-H10
78449-90300-	2-M7	81755-20060-	2-B8	-89101-	2-K8	84652-69445-	2-D9	-90K06-	2-E9	-90K02-	2-H10
78910-90K00-	2-A6	81760-90A00-	2-B8	83110-90K06-	2-K8	84653-22010-	2-D9	85520-14030-	2-E9	-90K03-	2-H10
78920-90K00-	2-A6	81761-89107-	2-B8	-90K12-	2-K8	84722-60050-	2-D9	-95400-	2-E9	87150-90K03-	2-H10
78950-90K00-03	2-A6	81850-90K00-	2-M8	-90K23-	2-K8	-60060-	2-D9	85613-31010-	1-L4	87200-90K02-	2-F10
-90K00-06	2-B6	-90K06-	2-M8	83128-90K00-	2-K8	84731-12010-	2-D9	85710-90K01-	2-M9	-90K11-	2-F10
79929-90K03-	2-B6	81930-90K00-	2-M8	83132-90K00-	2-K8	84732-90K01-	2-D9	-90K03-	2-M9	87201-90K01-	2-J10
81110-69265-	2-I7	-90K01-	2-M8	-90K04-	2-K8	-90K04-	2-D9	85720-90K01-	2-M9	-90K03-	2-J10
-90K01-	2-I7	81980-22070-	2-C9	-90K06-	2-K8	84790-90K01-	2-E9	-90K03-	2-M9	-90K05-	2-H10
81111-22150-	2-I7	-36060-	2-C9	83134-90K00-	2-K8	-90K02-	2-E9	85913-30020-	2-E9	-90K06-	2-J10
81113-90K00-	2-I7	82122-90K05-	2-E8	-90K01-	2-K8	84810-90K00-03	2-E9	-90K00-	2-E9	87208-90K07-	2-L10
81121-62010-	2-I7	-90K06-	2-E8	-90K05-	2-L8	-90K00-06	2-E9	85921-90A00-	2-E9	-90K15-	2-L10
81131-28050-	2-I7	-90K09-	2-E8	N 83138-90K00-	2-K8	84820-90K01-03	2-E9	-90A01-	2-E9	87212-90K00-	2-H10
81150-69265-	2-I7	82123-90K00-	2-E8	83145-90K00-	2-L8	-90K01-06	2-E9	85926-60010-	2-E9	87240-90K00-	2-L10
-90K01-	2-I7	-90K03-	2-E8	83180-60040-	2-L8	-90K04-03	2-E9	85930-90K03-	2-E9	-90K05-	2-H10
81153-90K00-	2-I7	-90K07-	2-H8	83242-90K03-	2-L8	-90K04-06	2-E9	85940-90K01-	2-E9	87245-18060-	2-L10
81240-22070-08	2-C8	82125-90K02-	2-H8	-90K04-	2-L8	84999-10110-	2-E9	-90K03-	2-E9	-90K04-	2-L10
-22080-08	2-C8	82131-90K06-	2-H8	83243-90K00-	2-L8	-10170-	2-D9	85991-12050-	2-E9	-90K16-	2-L10
-90K00-	2-C8	-90K81-	2-H8	-90K02-	2-L8	-50010-	2-L8	-90K01-	2-E9	-90K28-	2-L10
-90K01-	2-C8	-90L44-	2-H8	-90K03-	2-L8	-50080-	2-L8	85999-12050-	2-E9	-90K29-	2-L10
-90K04-	2-C8	82133-90K00-	2-H8	83244-90K00-	2-L8	85033-36120-	2-L9		2-F9	-90K30-	2-L10
81241-20060-	2-C8	82141-90K05-	2-H8	83246-90K00-	2-L8	85035-90K01-	2-J9	-89101-	2-E9	-90K31-	2-L10
81260-90K00-	2-C8	82142-90K00-	2-H8	-90K01-	2-L8	-90K02-	2-L9	86120-17010-	2-A10	87248-90K02-	2-H10
-90K01-	2-C8	-90K01-	2-H8	-90K02-	2-L8	85110-90K04-	2-H9	-17050-	2-A10	-90K05-	2-H10
81261-90K00-	2-C8	82151-90K00-	2-H8	83247-90K01-	2-K8	-90K05-	2-I9	-17051-	2-A10	-90K18-	2-L10
81270-69145-	2-A8	-90K01-	2-H8	-90K03-	2-K8	-90K06-	2-I9	-90K05-	2-A10	-90K19-	2-L10
-69155-	2-A8	82152-90K00-	2-H8	-90K12-	2-K8	-90K07-	2-H9	86160-90K00-	2-B10	-95400-	2-L10
-90K01-	2-A8	-90K01-	2-H8	-90K26-	2-K8	85160-90K04-	2-H9	-90K01-	2-B10	87251-30200-	2-L10
81271-87004-	2-A8	82161-90K02-	2-H8	83290-90K00-	2-L8	85179-16150-	2-I9	86206-90K00-	2-A10	-90K00-	2-L10
81272-87004-	2-A8	-90K23-	2-H8	-90K02-	2-L8	85190-90K03-	2-H9	86211-90K00-	2-A10	87484-90K00-	2-L8
81276-90K02-	2-A8	-90K24-	2-H8	83320-69025-	2-C9	-90K06-	2-I9	86212-90K00-	2-A10	87810-90K00-	2-E10
81510-69245-	2-J7	82162-90K00-	2-H8	83340-90K00-	2-L8	85195-95J01-	2-I9	86260-16140-	2-A10	-90K02-	2-E10
-90K09-	2-J7	-90K02-	2-H8	83361-20030-	2-C9	85210-90K03-	2-H9	-17010-	2-A10	-90K04-	2-E10
81511-90K01-	2-J7	-90K15-	2-H8	83390-30020-	2-C9	85220-12500-	2-H9	S -17011-	2-A10	87817-90K00-	2-E10
81512-90K01-	2-J7	-90K17-	2-H8	83420-20020-	2-C9	-22300-	2-I9	-19045-	2-A10	87828-30010-	2-E10
81514-90K01-	2-J7	-90K33-	2-H8	83520-60010-	2-C9	-22450-	2-H9	-90K01-	2-A10	-87005-	2-E10
81517-90K01-	2-J7	-90K34-	2-H8	-60020-	2-C9	85221-12210-	2-H9	86300-90K01-	2-C10	87834-20080-18	2-E10
81520-69245-	2-J7	82171-90K04-	2-H8	83530-14010-	2-G9	-16070-	2-I9	86309-90K01-	2-C10	87910-90K00-	2-E10
-90K09-	2-J7	82172-90K01-	2-H8	-14030-	2-G9	-22090-	2-H9	86392-90K00-	2-C10	87911-90K00-	2-E10
81521-90K01-	2-J7	82183-90K00-	2-H8	-30060-	2-D9	85261-90K02-	2-H9	86396-16020-	2-C10	87940-90K00-	2-E10
81524-90K01-	2-J7	-90K01-	2-H8	-36011-	2-D9	85310-12130-	2-J9	86510-22130-	2-D10	89422-30020-	2-F9
81527-90K01-	2-K7	-90K04-	2-H8	83710-90K04-	2-L8	-22080-	2-L9	-90K05-	2-D10	90041-70001-	1-D2

ILLUSTRATED INDEX

G16

1-E5 (31-02)


1



Clutch Pedal

1-G5 (31-03)


2

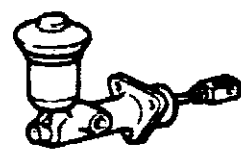

Clutch Master Cylinder

1-I5 (31-04)

3

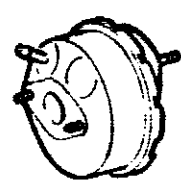

Clutch Booster

1-K5 (31-05)


4



Clutch Release Cylinder

1-L8 (45-01)


5

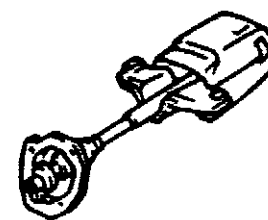

Steering Column & Shaft

1-B9 (45-02)


6

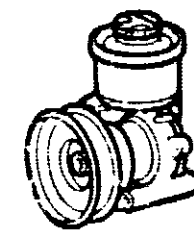

Vane Pump & Reservoir


1-E9 (45-03)

7

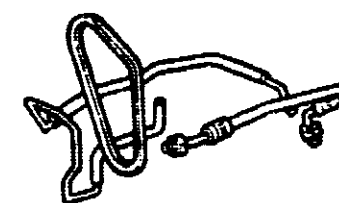

Oil Cooler & Tube

POWER TRAIN-CHASSIS GROUP (2/2)

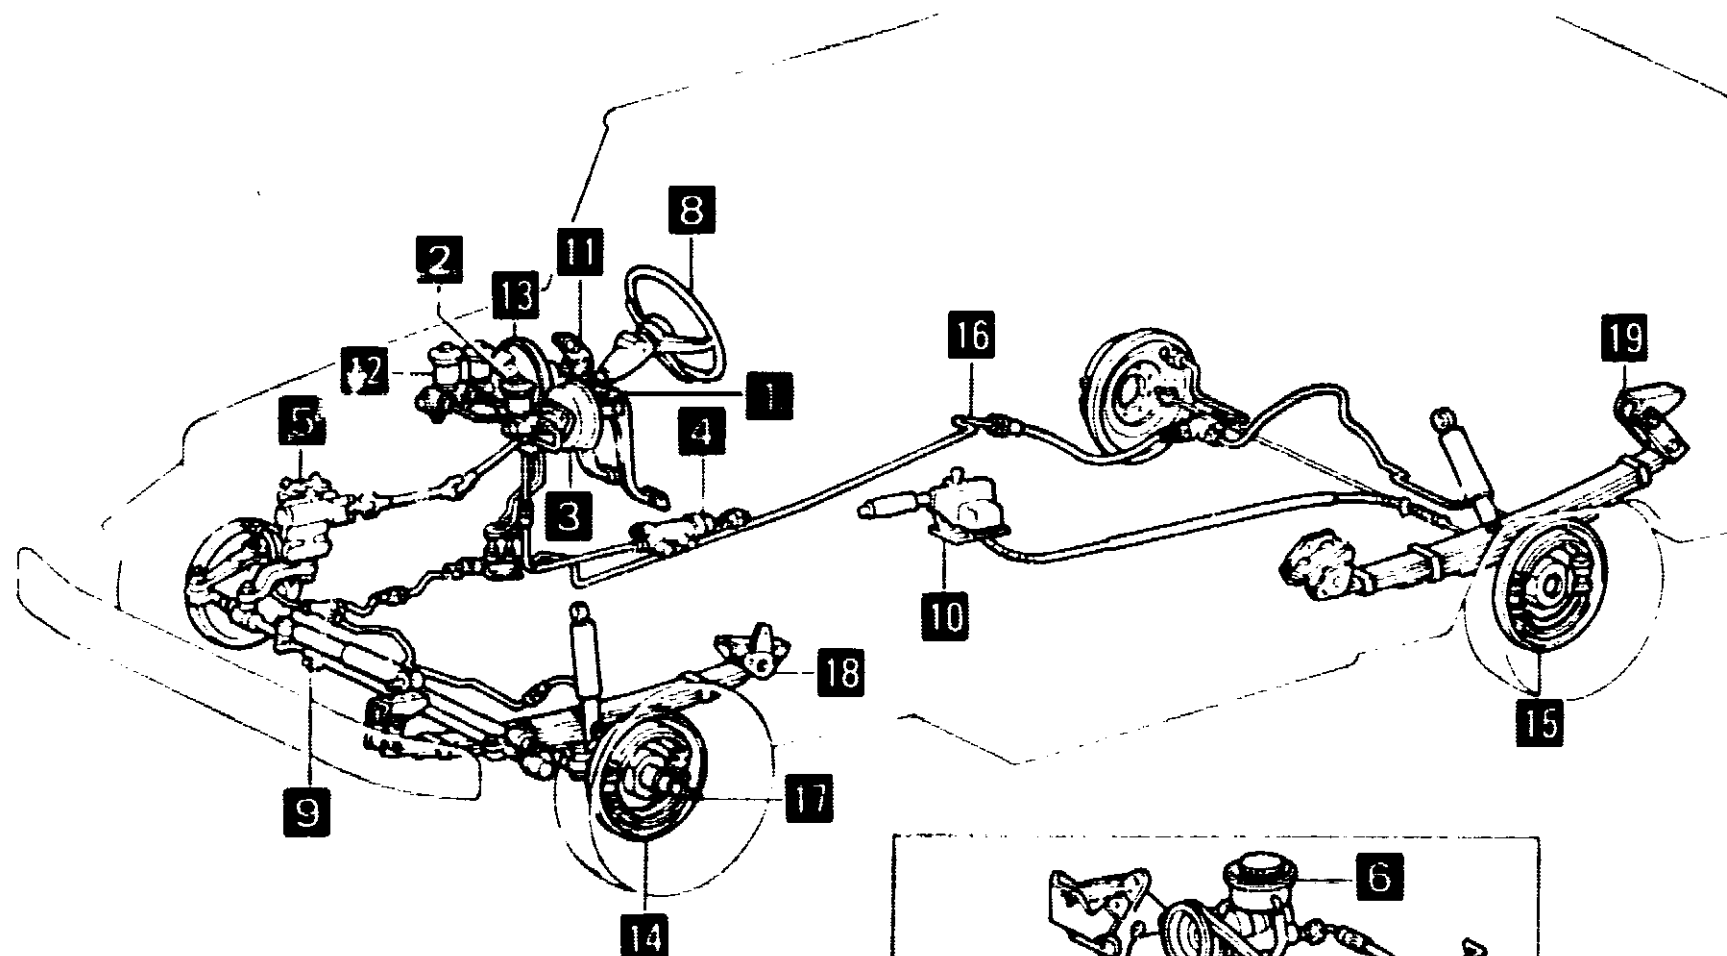

1-F9 (45-04)


8



Steering Wheel

1-H9 (45-05)

9

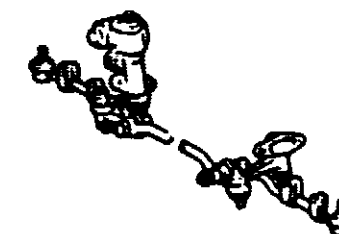

Steering Gear & Link

1-A10 (46-01)


10



Parking Brake & Cable

1-C10 (47-01)


11

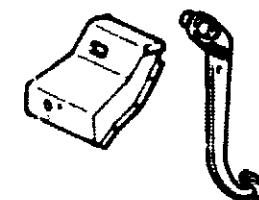

Brake Pedal & Bracket

1-K11 (48-04)


19

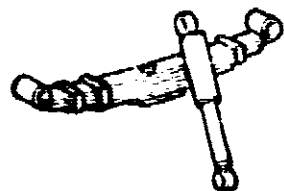

Rear Spring

1-G11 (48-03)

18

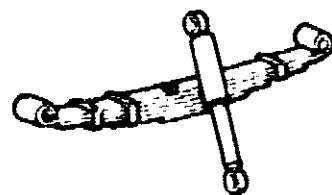

Front Spring

1-E11 (48-02)


17



Front Axle Arm

1-M10 (47-08)

16

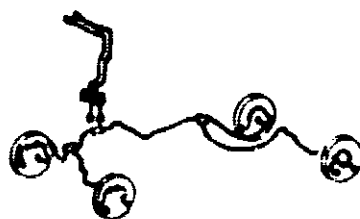

Brake Tube & Clamp

1-J10 (47-06)


15



Rear Backing Plate

1-H10 (47-05)

14

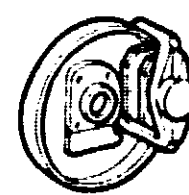

Front Disc Brake Caliper

1-F10 (47-03)


13



Brake Booster

1-D10 (47-02)

12

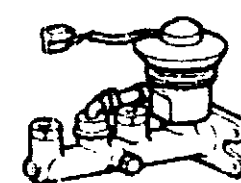

Brake Master Cylinder

MC B936 A



FIG. 11-05 CYLINDER BLOCK

1-H1

M74-13-0006

GENUINE TOYOTA PARTS


(8411-)

*2 (-8510)

*3 (8510-)

90179-08088 (2) *3 92132-60820 (2)
*2 90116-08194 (2)

90119-08512 (8)

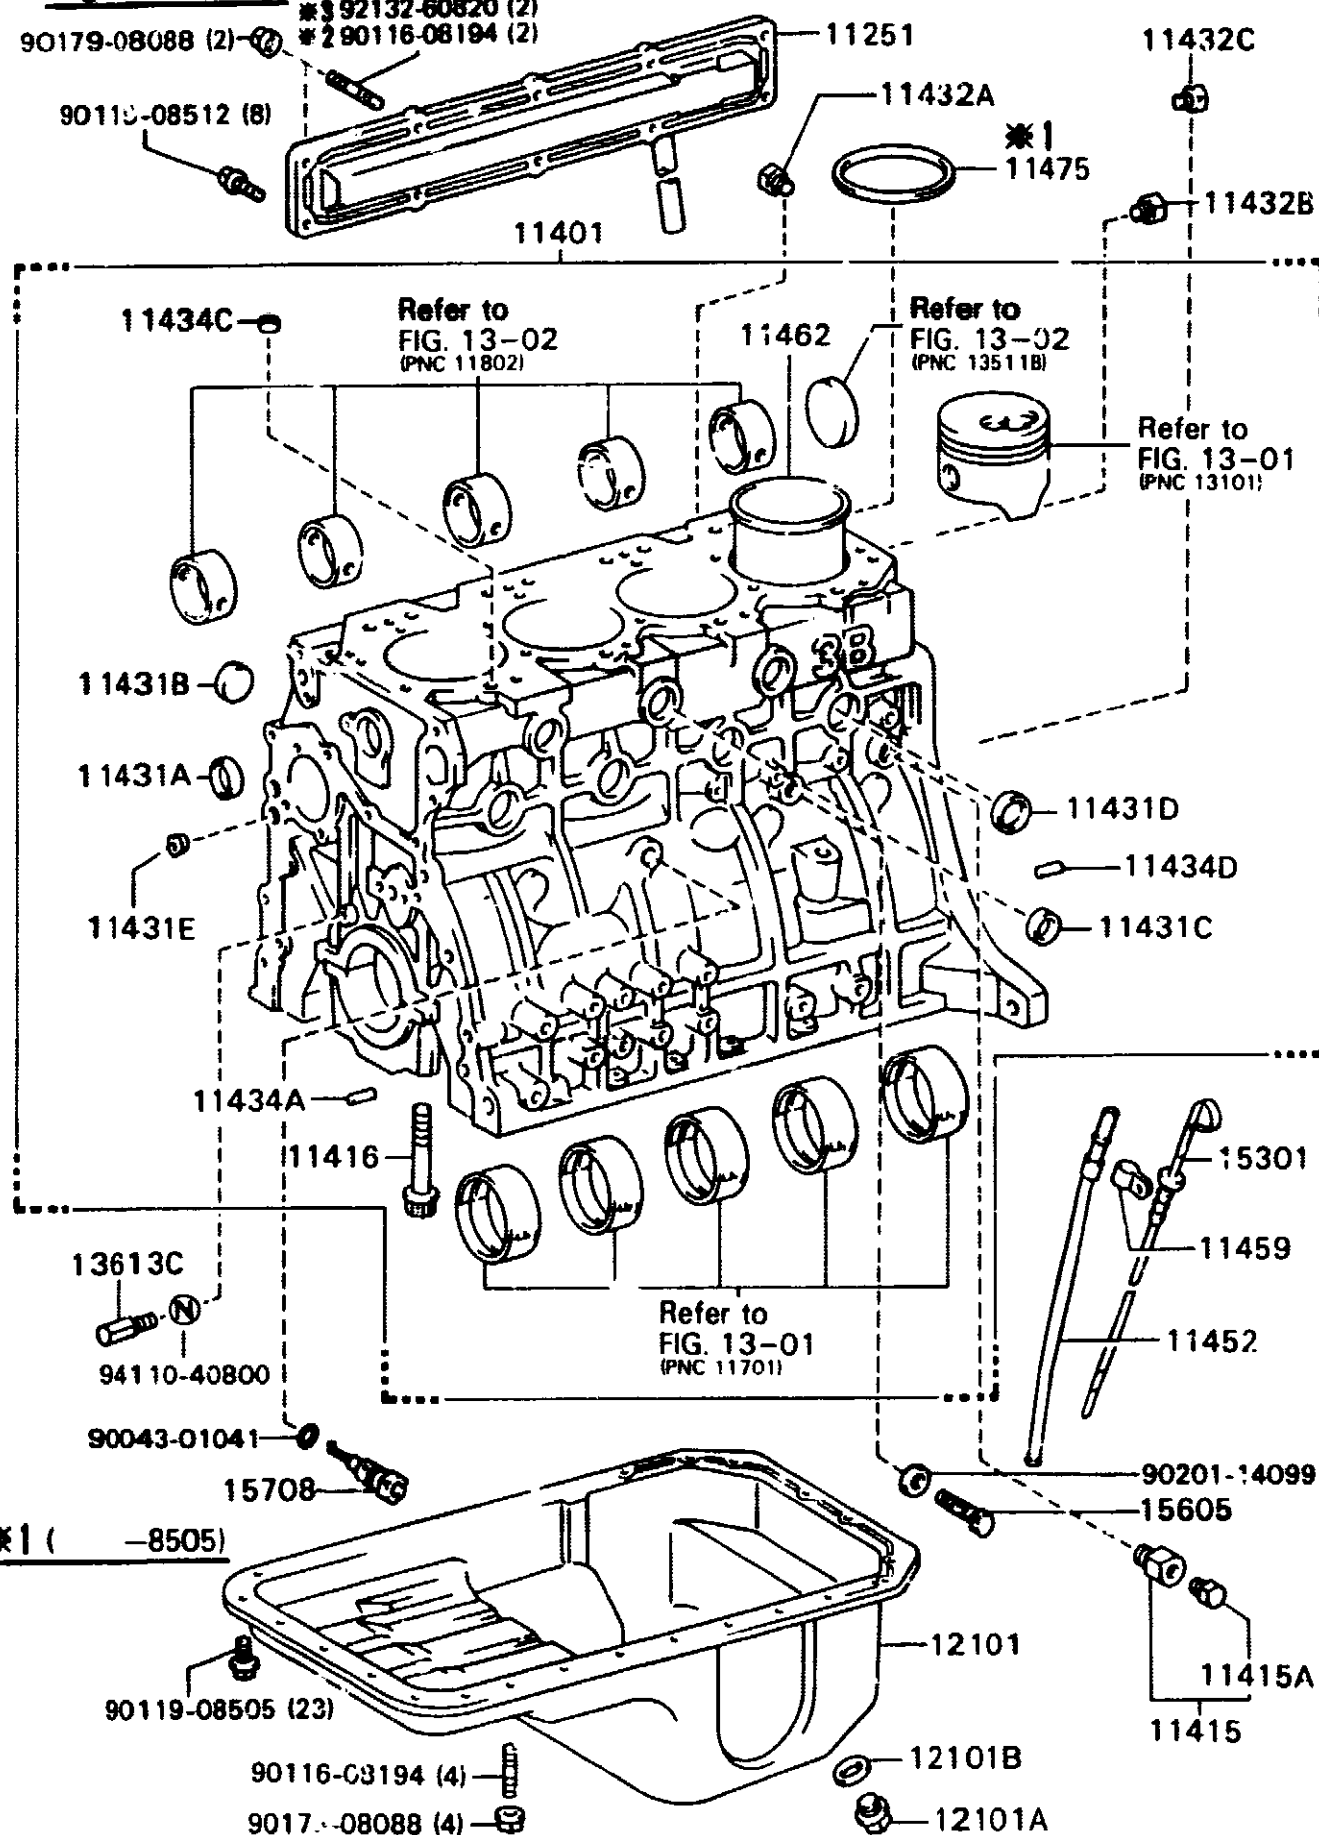

MA 7958-C

*○-○P×○-○- Outside diameter-Pitch×Bolt length-Thread length

MA7958C

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	11-05 CYLINDER BLOCK						
8411-8506	11251	COVER, VALVE PUSH ROD		# 11203-56040- (11203-56041-	1	81	
8506-	3B..BJ70			11203-56041-	1		
8411-	11401	BLOCK SUB-ASSY, CYLINDER		11401-59305-	1	81	
8411-8504	11415	COCK SUB-ASSY, WATER DRAIN (FOR CYLINDER BLOCK)		# 90910-09070- (96431-53828-	1	81	
8504-	3B..BJ70			96431-53828-	1		
8411-8504	11415A	PLUG, WATER DRAIN COCK (FOR CYLINDER BLOCK)		# 90910-09072- (96432-23814-	1	81	
8504-	3B..BJ70			96432-23814-	1		
8411-	11416	BOLT (FOR CRANKSHAFT BEARING CAP SET)		x16-20X88- 5-32	10	81	
8411-	11431A	PLUG, TIGHT, NO.1 (FOR CYLINDER BLOCK)		OD=51 90331-51032-	2	81	
8411-8509	11431B	PLUG, TIGHT, NO.2 (FOR CYLINDER BLOCK)		OD=28 96411-12800-	4	81	
8509-	3B..BJ70			OD=28 96411-42800-	4		
8411-8509	11431C	PLUG, TIGHT, NO.3 (FOR CYLINDER BLOCK)		OD=30 96411-13000-	4	81	
8509-	3B..BJ70			OD=30 96411-43000-	4		
8411-8509	11431D	PLUG, TIGHT, NO.4 (FOR CYLINDER BLOCK)		OD=35 96411-13500-	4	81	
8509-	3B..BJ70			OD=35 96411-43500-	4		




FIG.15-03 OIL COOLER

1-H2

M74-13-0013

GENUINE TOYOTA PARTS


(8411-)

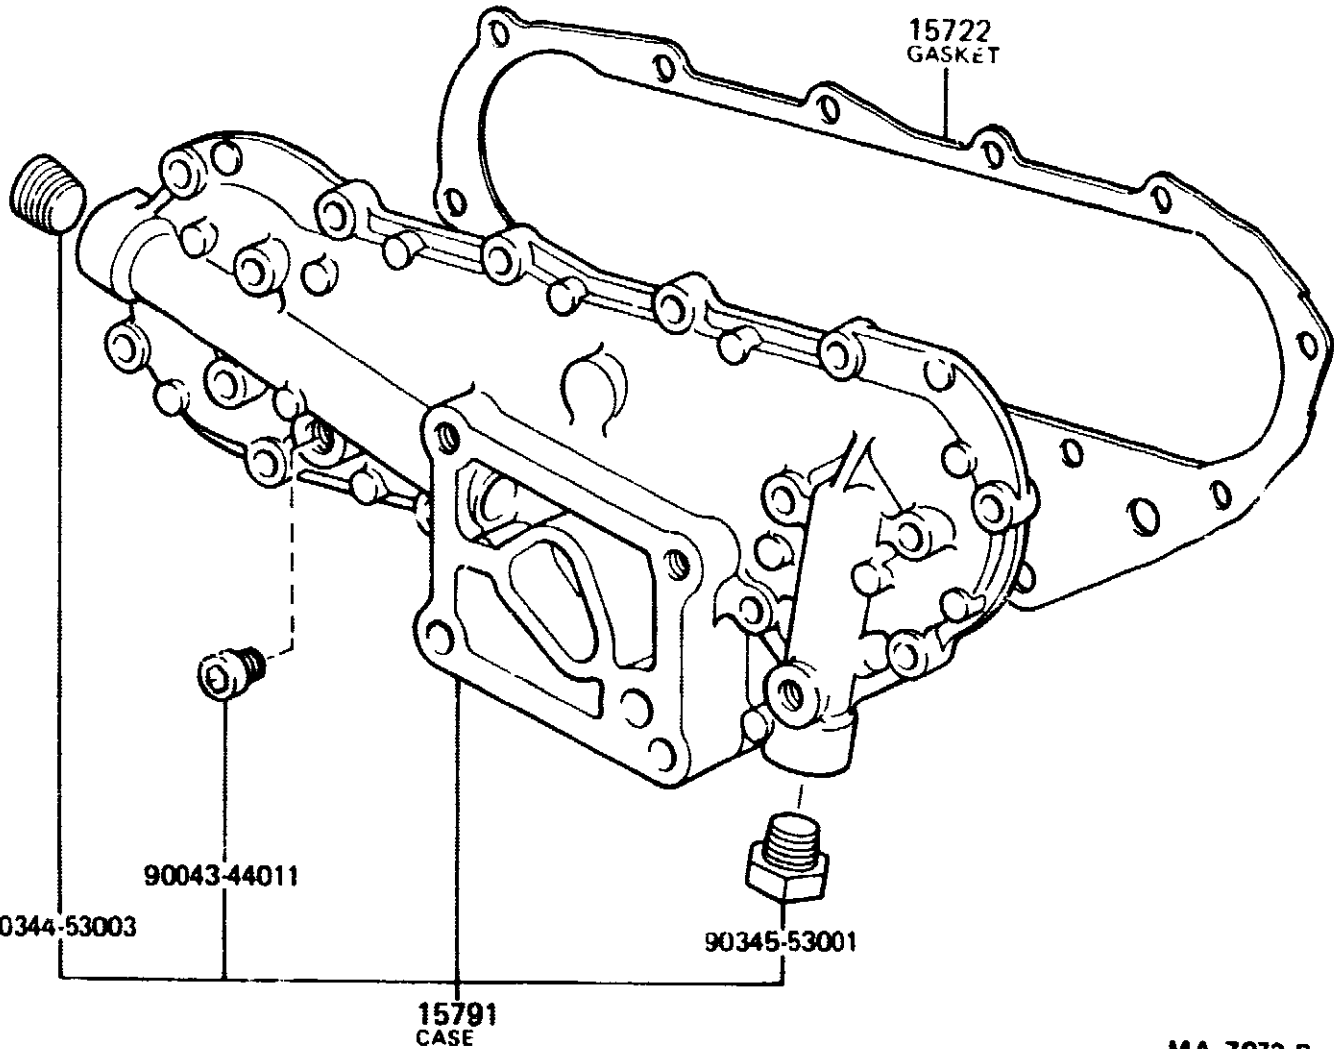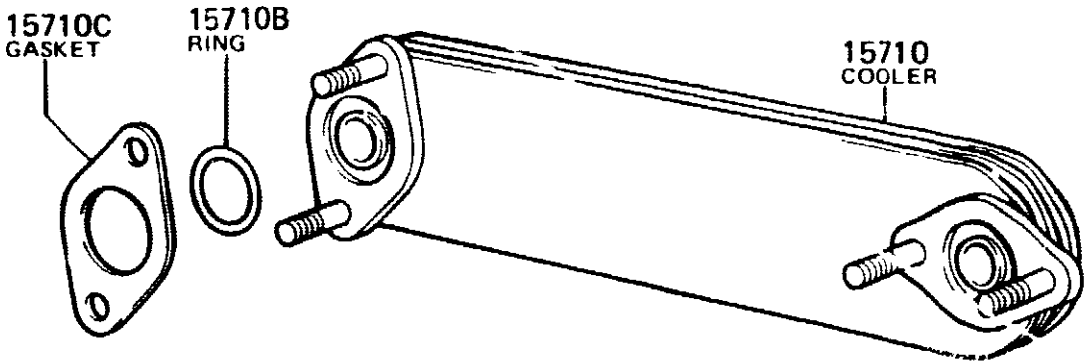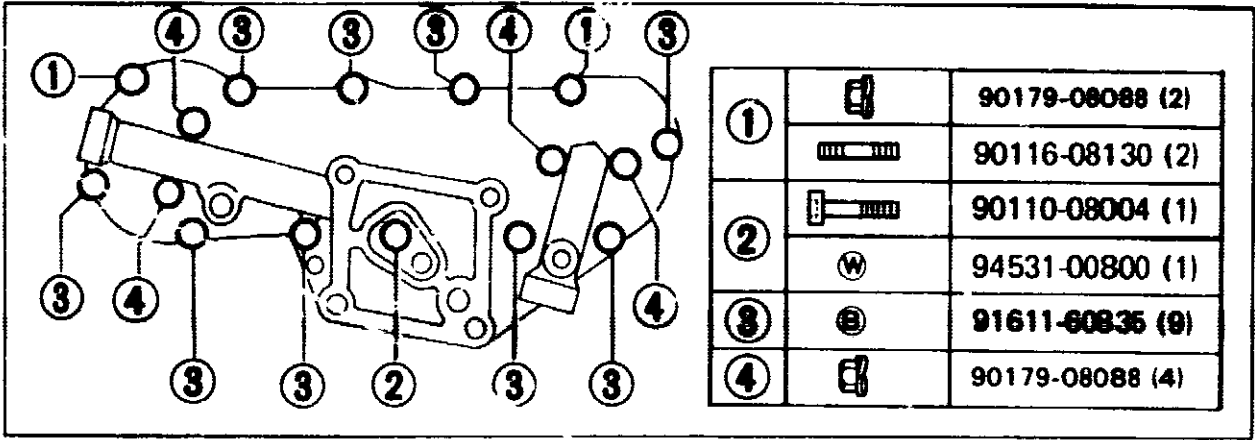

MA 7973-B

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
FIG.	15-03 OIL COOLER						
8411-		15710 COOLER ASSY, OIL		15710-56041-	1	81	
8411-		3B..BJ70					
8411-		15710B RING, O		90301-20001-	2	81	
8411-		3B..BJ70					
8411-		15710C GASKET		90923-05014-	2	81	
8411-		3B..BJ70					
8411-		15722 GASKET, OIL COOLER		15725-56011-	1	81	
8411-		3B..BJ70					
8411-		15791 CASE, OIL COOLER		15701-56011-	1	81	
8411-		3B..BJ70					

(8411-)

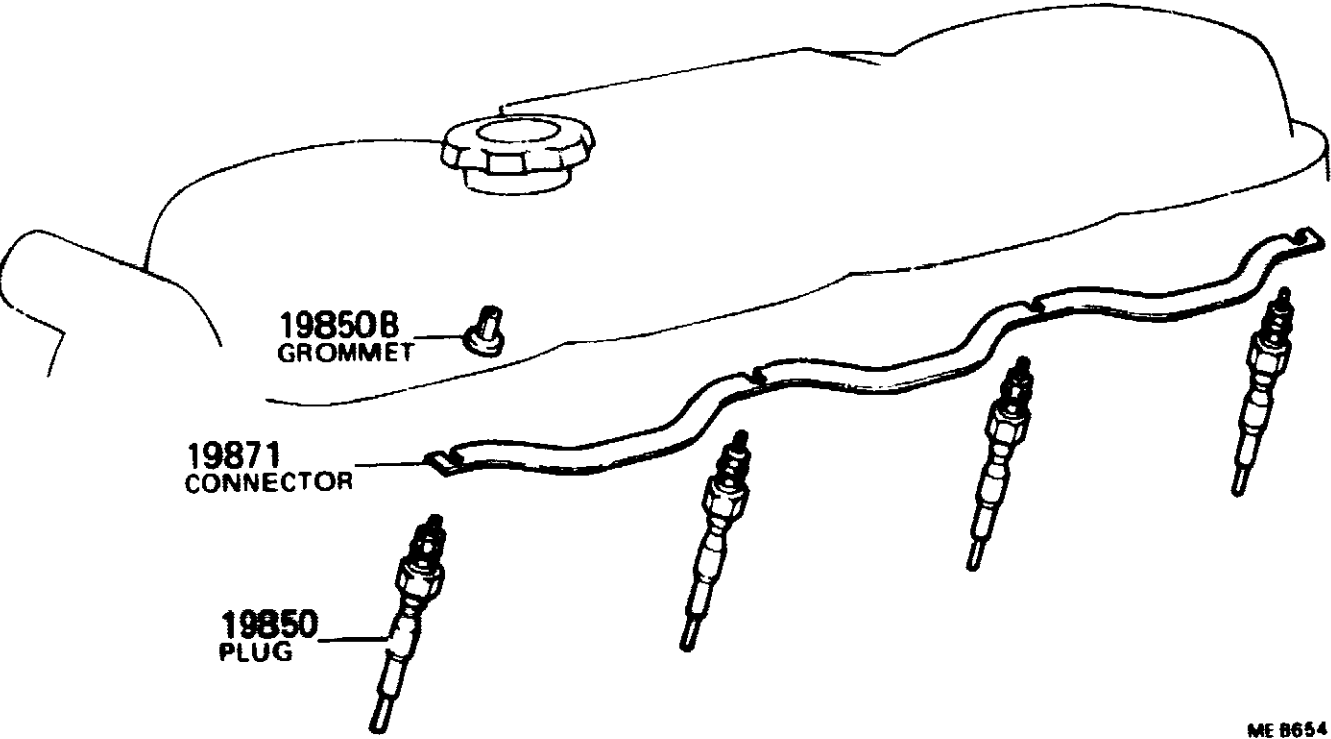

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	19-01	IGNITION COIL & SPARK PLUG					
8411-8608	19850	PLUG ASSY. GLOW					
	3B..BJ70	X12V-6V		19850-68050-	4	81	140
8608-	3B..BJ70	X24V-14V		19850-68060-	4	141	
8411-	19850B	GROMMET, SCREW (FOR GLOW PLUG)					
	3B..BJ70			90189-04024-	3	81	
8411-	19871	CONNECTOR, GLOW PLUG NO.1					
	3B..BJ70			19871-56020-	1	81	

*○○V-○○V= Battery Voltage - Glow Plug Rated Voltage

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
FIG.	22-04 PNEUMATIC GOVERNOR						
8411-	22178A	BRACKET, DIAPHRAGM CONNECTING		22178-56011-	1	81	
8411-	3B..BJ70						
8411-	22303	DIAPHRAGM SUB-ASSY, GOVERNOR		22303-47010-	1	81	
8411-	3B..BJ70						
8411-	22304	LEVER SUB-ASSY, INJECTION PUMP, NO.3		22408-68010-	1	81	
8411-	3B..BJ70						
8411-	22304A	RING, O (FOR NO.3 LEVER)		96710-01008- (96711-19008-)	1	81	
8411-	3B..BJ70						
8411-	22304B	KEY (FOR NO.3 LEVER)		90099-13001-	1	81	
8411-	3B..BJ70						
8411-8408	22305	LEVER SUB-ASSY, INJECTION PUMP, NO.1		22308-56130-	1	81	140
8608-	3B..BJ70			22308-56041-	1	141	
8411-	22306A	GASKET (FOR GOVERNOR HOUSING)		22442-77131-	1	81	
8411-	3B..BJ70						
8411-	22306B	GASKET (FOR INJECTION PUMP HOUSING)		22442-77130-	1	81	
8411-	3B..BJ70						
8411-8608	22310	GOVERNOR ASSY, INJECTION PUMP		22320-58031-	1	81	140
8608-	3B..BJ70			22320-58022-	1	141	
8411-	22311	PLUG, DIAPHRAGM HOUSING SEALING SCREW		22457-58010-	1	81	
8411-	3B..BJ70						
8411-	22318	CAPSULE, IDLING		22318-48030-	1	81	
8411-	3B..BJ70						

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
8411-	22319	NUT, GOVERNOR IDLING SPRING SET		22319-77010-	1	81	
8411-	3B..BJ70						
8411-	22323	HOUSING, GOVERNOR DIAPHRAGM		22323-58010-	1	81	
8411-	3B..BJ70						
8411-	22326	SPRING, GOVERNOR MAIN		22326-58010-	1	81	
8411-	3B..BJ70						
8411-	22329	BOLT, DIAPHRAGM CONNECTING		22329-77021-	1	81	
8411-	3B..BJ70						
8411-	22329A	BOLT, DIAPHRAGM CONNECTING, NO.2		22329-77130-	1	81	
8411-	3B..BJ70						
8411-	22333	SPRING, DIAPHRAGM STOP LEVER RETURN		22333-56040-	1	81	
8411-	3B..BJ70						
8608-	22336	CAPSULE, FULL STOP		22336-68010-	1	141	
8608-	3B..BJ70						
8411-	22357	SCREW, DIAPHRAGM HOUSING SET		90099-04945-	1	81	
8411-	3B..BJ70						
8411-	22361	SHIM, MAIN SPRING		22361-76010-	2	81	
8411-	3B..BJ70	T=3.0		22362-76010-	2	81	
8411-	3B..BJ70	T=2.0		22363-76010-	2	81	
8411-	3B..BJ70	T=1.0		22364-76010-	2	81	
8411-	3B..BJ70	T=0.5					
8411-	22378	WASHER, DRAIN SCREW		22378-76010- (22113-77090-)	2	81	
8411-	3B..BJ70						
8411-8608	22680	BELLOWS ASSY, PNEUMATIC		22680-48062-	1	81	140
8411-8608	3B..BJ70						

FIG.31-03

GENUINE TOYOTA PARTS

1-H5

M74-15-0611

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE
						FROM UP TO
FIG.	31-03 CLUTCH MASTER CYLINDER					
	+-----+					
	04311	CYLINDER KIT, CLUTCH MASTER				
	+-----+					
8411-	BJ70	W/CLUTCH B OOSTER		04311-60040-	1	81
8411-	BJ70			04311-60050-	1	81
	+-----+					
	31402	RESERVOIR SUB-ASSY, CLUTCH MASTER CYLINDER				
	+-----+					
8411-	BJ70	W/CLUTCH B OOSTER		31402-20010-	1	81
8411-	BJ70			31402-30030-	1	81
	+-----+					
	31402E	RING (FOR CLUTCH MASTER CYLINDER RESERVOIR)				
	+-----+					
8411-	BJ70			90562-18151-	1	81
	+-----+					
	31410	CYLINDER ASSY, CLUTCH MASTER				
	+-----+					
8411-	BJ70	W/CLUTCH B OOSTER		31401-60020-	1	81
8411-	BJ70			31410-60290-	1	81
	+-----+					
	31410A	BOLT (FOR CLUTCH MASTER CYLINDER SETTING)				
	+-----+					
8411-	BJ70			90116-08146-	1	81
	+-----+					
	31415	GASKET, CLUTCH MASTER CYLINDER				
	+-----+					
8411-	BJ70			47275-14010-	1	81
	+-----+					
	31426	FLOAT, CLUTCH MASTER CYLINDER RESERVOIR				
	+-----+					
8411-	BJ70			31426-30011-	1	81
	+-----+					
	31431	BOLT, CLUTCH MASTER CYLINDER RESERVOIR SET				
	+-----+					
8411-	BJ70	W/CLUTCH B OOSTER		47231-20010-	1	81
8411-	BJ70			47231-30010-	1	81
	+-----+					
	31432	WASHER, CLUTCH RESERVOIR SET BOLT				
	+-----+					
8411-	BJ70			47232-30010-	1	81
	+-----+					
	31440P	CAP ASSY, CLUTCH MASTER CYLINDER RESERVOIR FIL				
	+-----+	LER				
8411-	BJ70			47230-20040-	1	81

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE
						FROM UP TO
	+-----+					
	31451	ROD, CLUTCH MASTER CYLINDER PUSH				
	+-----+					
8411-	BJ70			31451-60070-	1	81
	+-----+					
	31453	CLEVIS, CLUTCH MASTER CYLINDER PUSH ROD				
	+-----+					
C 8411-8610	BJ70	W/CLUTCH B OOSTER		31453-22010-	1	81
8411-	BJ70			31404-36020-	1	81
C 8610-	BJ70	W/CLUTCH B OOSTER		31453-35010-	1	
	+-----+					
	31454	BOOT, CLUTCH MASTER CYLINDER				
	+-----+					
8411-	BJ70			31454-30030-	1	81
8411-	BJ70	W/CLUTCH B OOSTER		47265-20050-	1	81
	+-----+					
	31459	BRACKET, CLUTCH MASTER CYLINDER				
	+-----+					
8411-	BJ70			31459-60070-	1	81

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	33221	ARM, REVERSE SHIF		33201-36030-	1	81	
8411-	BJ70						
8411-	33222A	ARM, 5TH SHIFT		33222-36030-	1	81	
8411-	BJ70						
8411-	33222C	BOLT (FOR 5TH SHIFT ARM)		90113-08001-	1	81	
8411-	BJ70						
8411-	33222D	WASHER (FOR 5TH SHIFT ARM)		90215-09003-	1	81	
8411-	BJ70						
8411-	33223	PIVOT, SHIFT ARM		33223-36020-	1	81	
8411-	BJ70						
8411-	33223A	WASHER (FOR SHIFT ARM PIVOT)		90201-10092-	1	81	
8411-	BJ70						
8411-	33223B	RING, O (FOR SHIFT ARM PIVOT)		96711-19010-	1	81	
8411-	BJ70						
8411-	33225	SHOE, SHIFT ARM		33225-36030-	1	81	
8411-	BJ70						
8411-	33225A	RING, SHAFT SNAP (FOR SHIFT ARM SHOE)		90520-08098-	1	81	
8411-	BJ70						
8411-	33226D	PLUNGER, 1ST & 2ND SHIFT RETURN		33226-60010-	1	81	
8411-	BJ70						
8411-	33226E	PLUNGER, REVERSE & 5TH SHIFT RETURN		33226-60010-	1	81	
8411-	BJ70						
8411-	33226F	SPRING, COMPRESSION (FOR 1ST & 2ND SHIFT RETURN PLUNGER)		90501-14076-	1	81	
8411-	BJ70						
8411-	33226G	SPRING, COMPRESSION (FOR REVERSE & 5TH SHIFT RETURN PLUNGER)		90501-14069-	1	81	
8411-	BJ70						

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	33226H	RING, SHAFT SNAP (FOR 1ST & 2ND SHIFT RETURN PLUNGER)		90520-07001-	1	81	
8411-	BJ70						
8411-	33226J	RING, SHAFT SNAP (FOR REVERSE & 5TH SHIFT RETURN PLUNGER)		90520-07001-	1	81	
8411-	BJ70						
8411-	33232	HEAD, 1ST & 2ND SHIFT		33203-60010-	1	81	
8411-	BJ70						
8411-8608	33234F	HEAD, REVERSE & 5TH SHIFT		33202-60030-	1	81	140
8608-	BJ70			33202-60031-	1	141	
8411-	33234G	RING, E (FOR REVERSE & 5TH SHIFT HEAD)		90523-15025-	2	81	
8411-	BJ70						
8411-	33241	SHAFT, REVERSE SHIFT FORK		33241-60050-	1	81	
8411-	BJ70						
8411-	33241F	RING, E (FOR REVERSE SHIFT FORK SHAFT)		90523-15025-	1	81	
8411-	BJ70						
8411-	33243	SHAFT, 1ST & 2ND SHIFT FORK		33242-60030-	1	81	
8411-	BJ70						
8411-8703	33244A	SHAFT, 5TH SHIFT FORK		33244-60010-	1	81	
8703-	BJ70			33244-60011-	1		
8411-8703	33245	SHAFT, 3RD & 4TH SHIFT FORK		33243-60070-	1	81	
8703-	BJ70			33243-60071-	1		
8411-8703	33245A	SHAFT, 5TH SHIFT ARM		33245-60031-	1	81	
8703-	BJ70			33245-60032-	1		




FIG. 36-12 DIAPHRAGM CYLINDER & TRANSFER
VACUUM ACTUATOR

1-H7

M74-13-0037

(8411-)

GENUINE TOYOTA PARTS

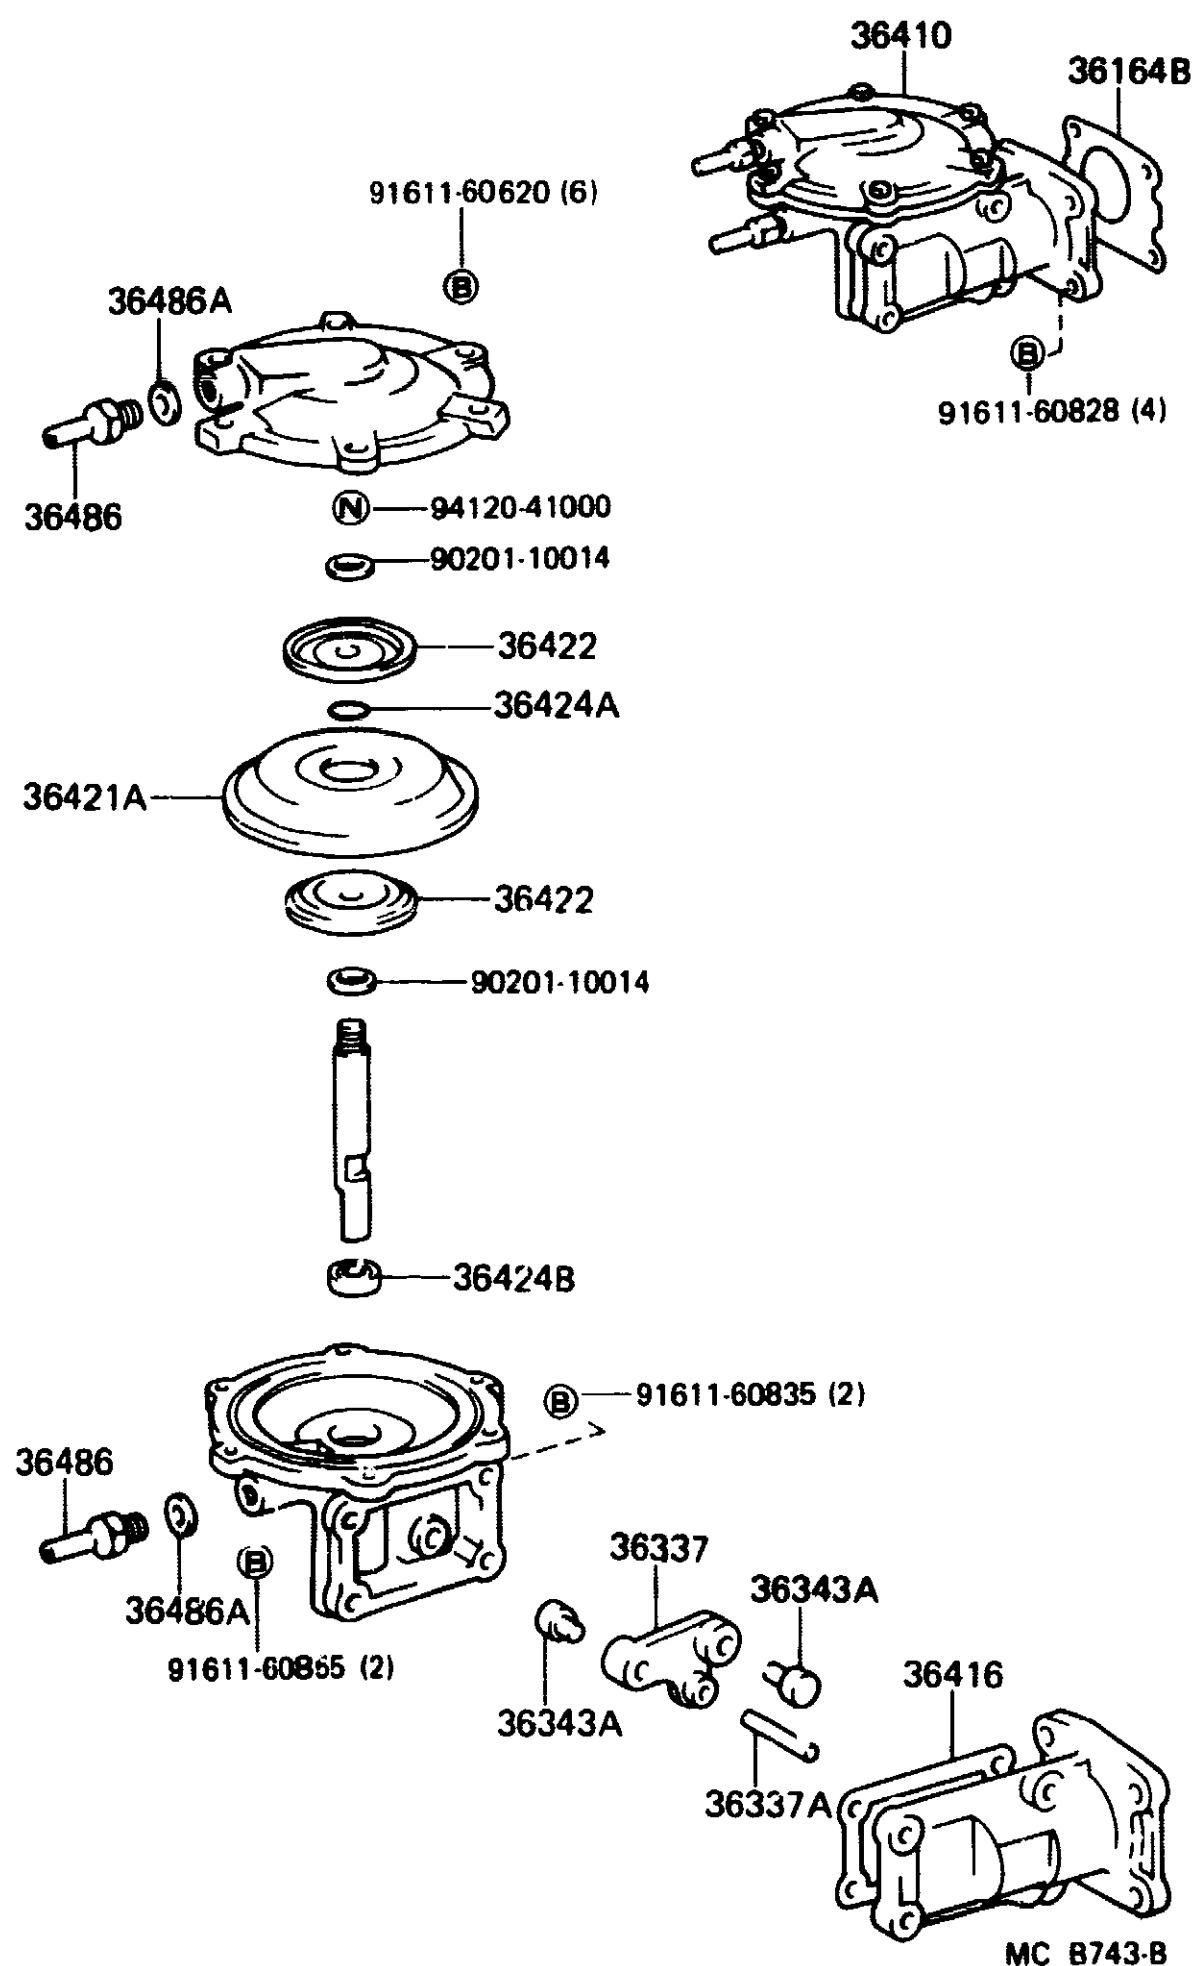

PROD. DATE	M O D E L S		DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
							FROM	UP TO
FIG.	36-12 DIAPHRAGM CYLINDER & TRANSFER VACUUM ACTUATOR							
8411-	+-----+ 36164B +-----+	GASKET, TRANSFER SHIFT SHAFT GUIDE			36164-60040-	1	81	
8411-	+-----+ 36337 +-----+	LEVER, FRONT DRIVE SHIFT LINK			36337-60080-	1	81	
8411-	+-----+ 36337A +-----+	PIN, STRAIGHT (FOR FRONT DRIVE SHIFT LINK LEVER)			90250-08024-	1	81	
8411-	+-----+ 36343A +-----+	SHOE, FR DRIVE SHIFT LINK LEVER (FOR VACUUM MA GNET TYPE)			36343-60010-	1	81	
8411-			OD=18		36343-60040-	1	81	
8411-			OD=12					
8411-	+-----+ 36410 +-----+	CYLINDER ASSY, DIAPHRAGM			36410-60030-	1	81	
8411-	+-----+ 36416 +-----+	GASKET, DIAPHRAGM CYLINDER			36416-36010-	1	81	
8411-	+-----+ 36421A +-----+	DIAPHRAGM (FOR DIAPHRAGM CYLINDER)			36421-36010-	1	81	
8411-	+-----+ 36422 +-----+	PLATE, TRANSFER DIAPHRAGM			36422-36010-	2	81	
8411-	+-----+ 36424A +-----+	RING, O (FOR DIAPHRAGM PUSH ROD)			96711-19010-	1	81	
8411-	+-----+ 36424B +-----+	SEAL, TYPE T, OIL (FOR DIAPHRAGM PUSH ROD)			90311-13066-	1	81	
8411-	+-----+ 36486 +-----+	TUBE, SUCTION			36486-60010-	2	81	
8411-	+-----+ 36486A +-----+	GASKET (FOR SUCTION TUBE)			90430-10022-	2	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	41331F	GEAR, FRONT DIFFERENTIAL SIDE		41331-35020-	2	81	
8411-	41341F	PINION, FRONT DIFFERENTIAL		41341-55012-	2	81	
8411-	41342F	SHAFT, FRONT DIFFERENTIAL PINION		41342-55010-	1	81	
8411-	41343A	PIN, FRONT DIFFERENTIAL PINION SHAFT		41343-55010-	1	81	
8411-	41351F	WASHER, FRONT DIFFERENTIAL PINION THRUST		41351-35011-	2	81	
8411-	41361F	WASHER, FRONT DIFFERENTIAL SIDE GEAR THRUST		41361-60010-	2	81	
8411-		T=1.55-1.6		41361-60020-	2	81	
8411-		T=1.70-1.8		41361-60030-	2	81	
8411-		T=1.85-1.9		41361-60040-	2	81	
8411-		T=2.00-2.1		41361-60040-	2	81	
8411-8605	43110	HOUSING ASSY, FRONT AXLE		43110-60160-	1	81	
8605-8608				43110-60240-	1		140
8608-				43110-60161-	1	141	
8411-	43110A	PLUG SUB-ASSY, DRAIN		90341-18057-	1	81	
8411-	43110B	GASKET, DRAIN		12157-10010-	1	81	
8411-	43110C	PLUG (FOR FRONT AXLE HOUSING)		90341-18006-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	43110D	GASKET (FOR FRONT AXLE HOUSING PLUG)		12157-10010-	1	81	
8411-	43110F	GASKET, FRONT DIFFERENTIAL CARRIER		42181-36010-	1	81	
8411-	43209A	UNION (FOR FRONT AXLE BREATHER HOSE)		90404-10019-	1	81	
8411-8510	43209B	CLAMP (FOR FRONT AXLE BREATHER HOSE)		90461-10387-	1	81	100
8510-				90949-01323-	1	101	
8411-	43209C	CLIP, HOSE (FOR FRONT AXLE BREATHER HOSE)		96132-30600-	1	81	
8411-8510	43209D	HOSE, NO. 1 (FOR FRONT AXLE BREATHER)		XH, L=420 95332-06060-	1	81	100
C 8510-8702				XH, L=380 95332-06040-	1	101	
C 8702-				XH, L=380 95333-06040-	1		
8411-	43209G	PLUG, BREATHER (FOR FRONT AXLE)		90930-03097-	1	81	
8411-	43411D	SEAL, TYPE T OIL (FOR FRONT DRIVE SHAFT)		90311-33085-	2	81	

*H, L=Cut hose to length as specified in remarks




(8411-)

(8411-8608)

ILLUST.NO. 10F3


ILLUST.NO. 20F3

*2(8608-)
*1(-8608)

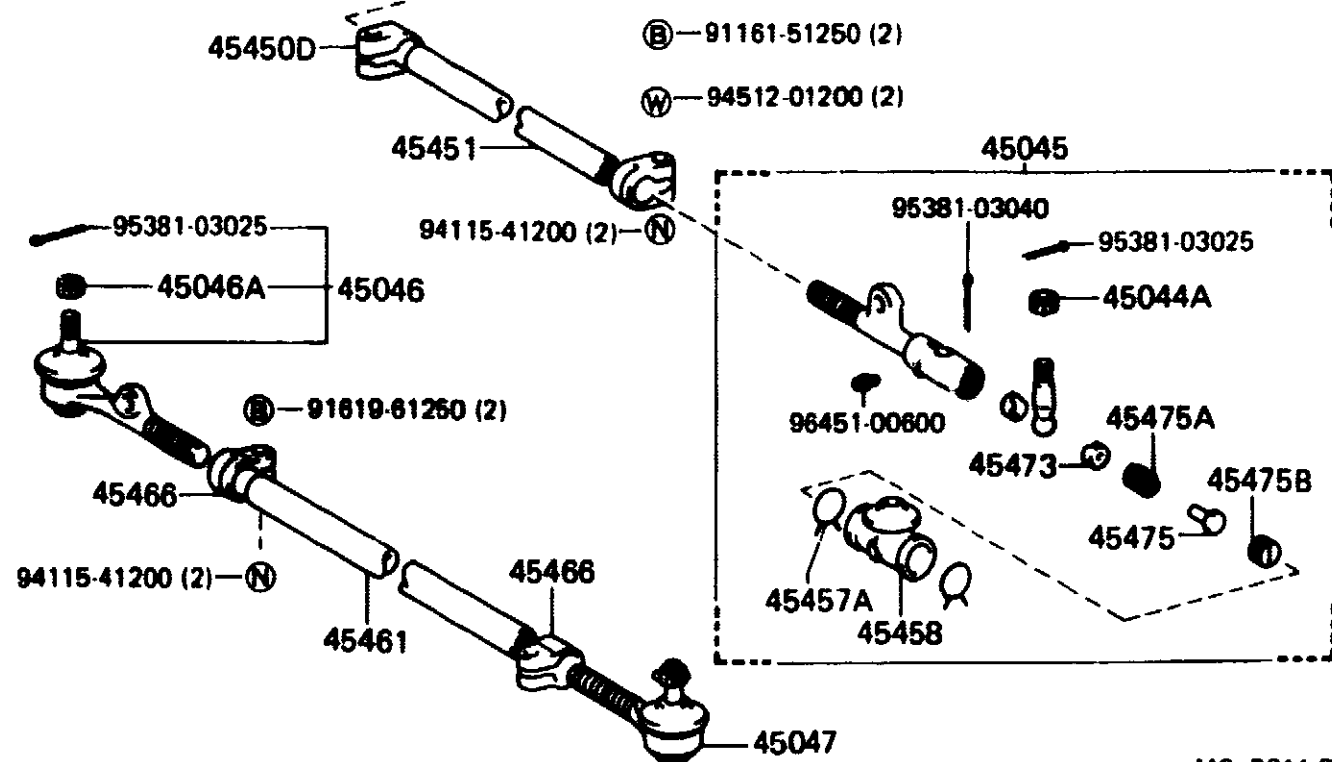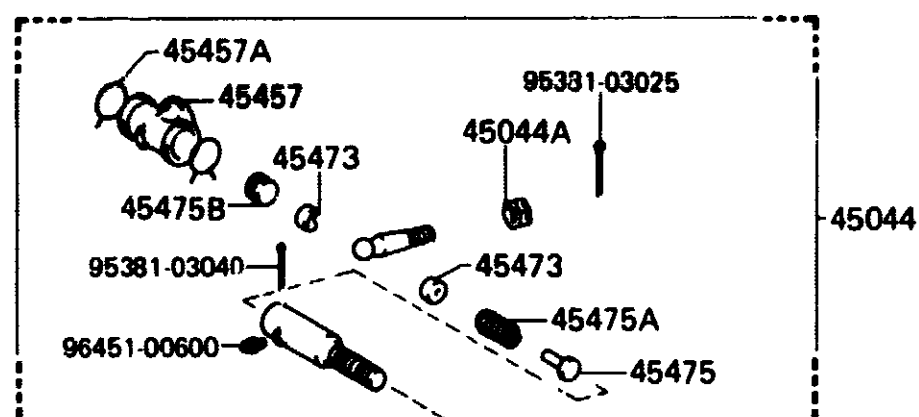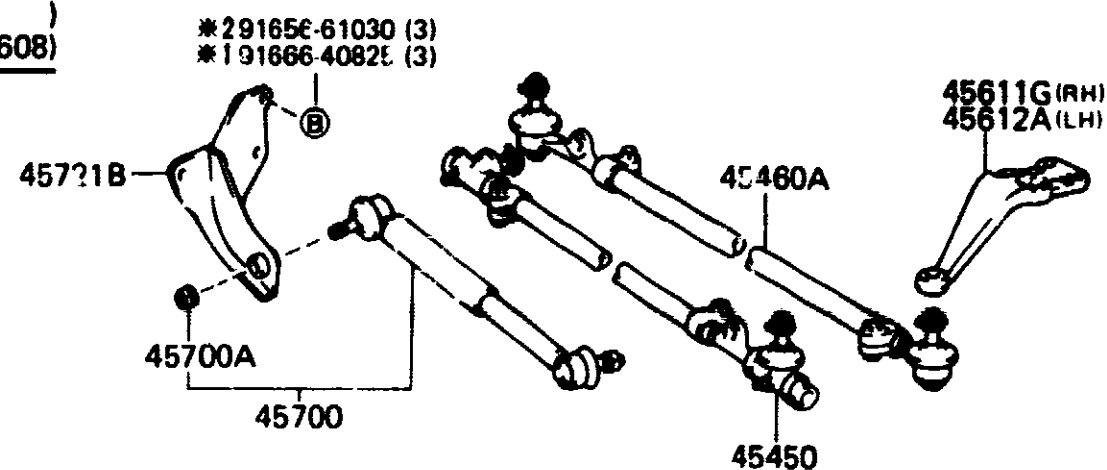

MC B811-D

MCB811D

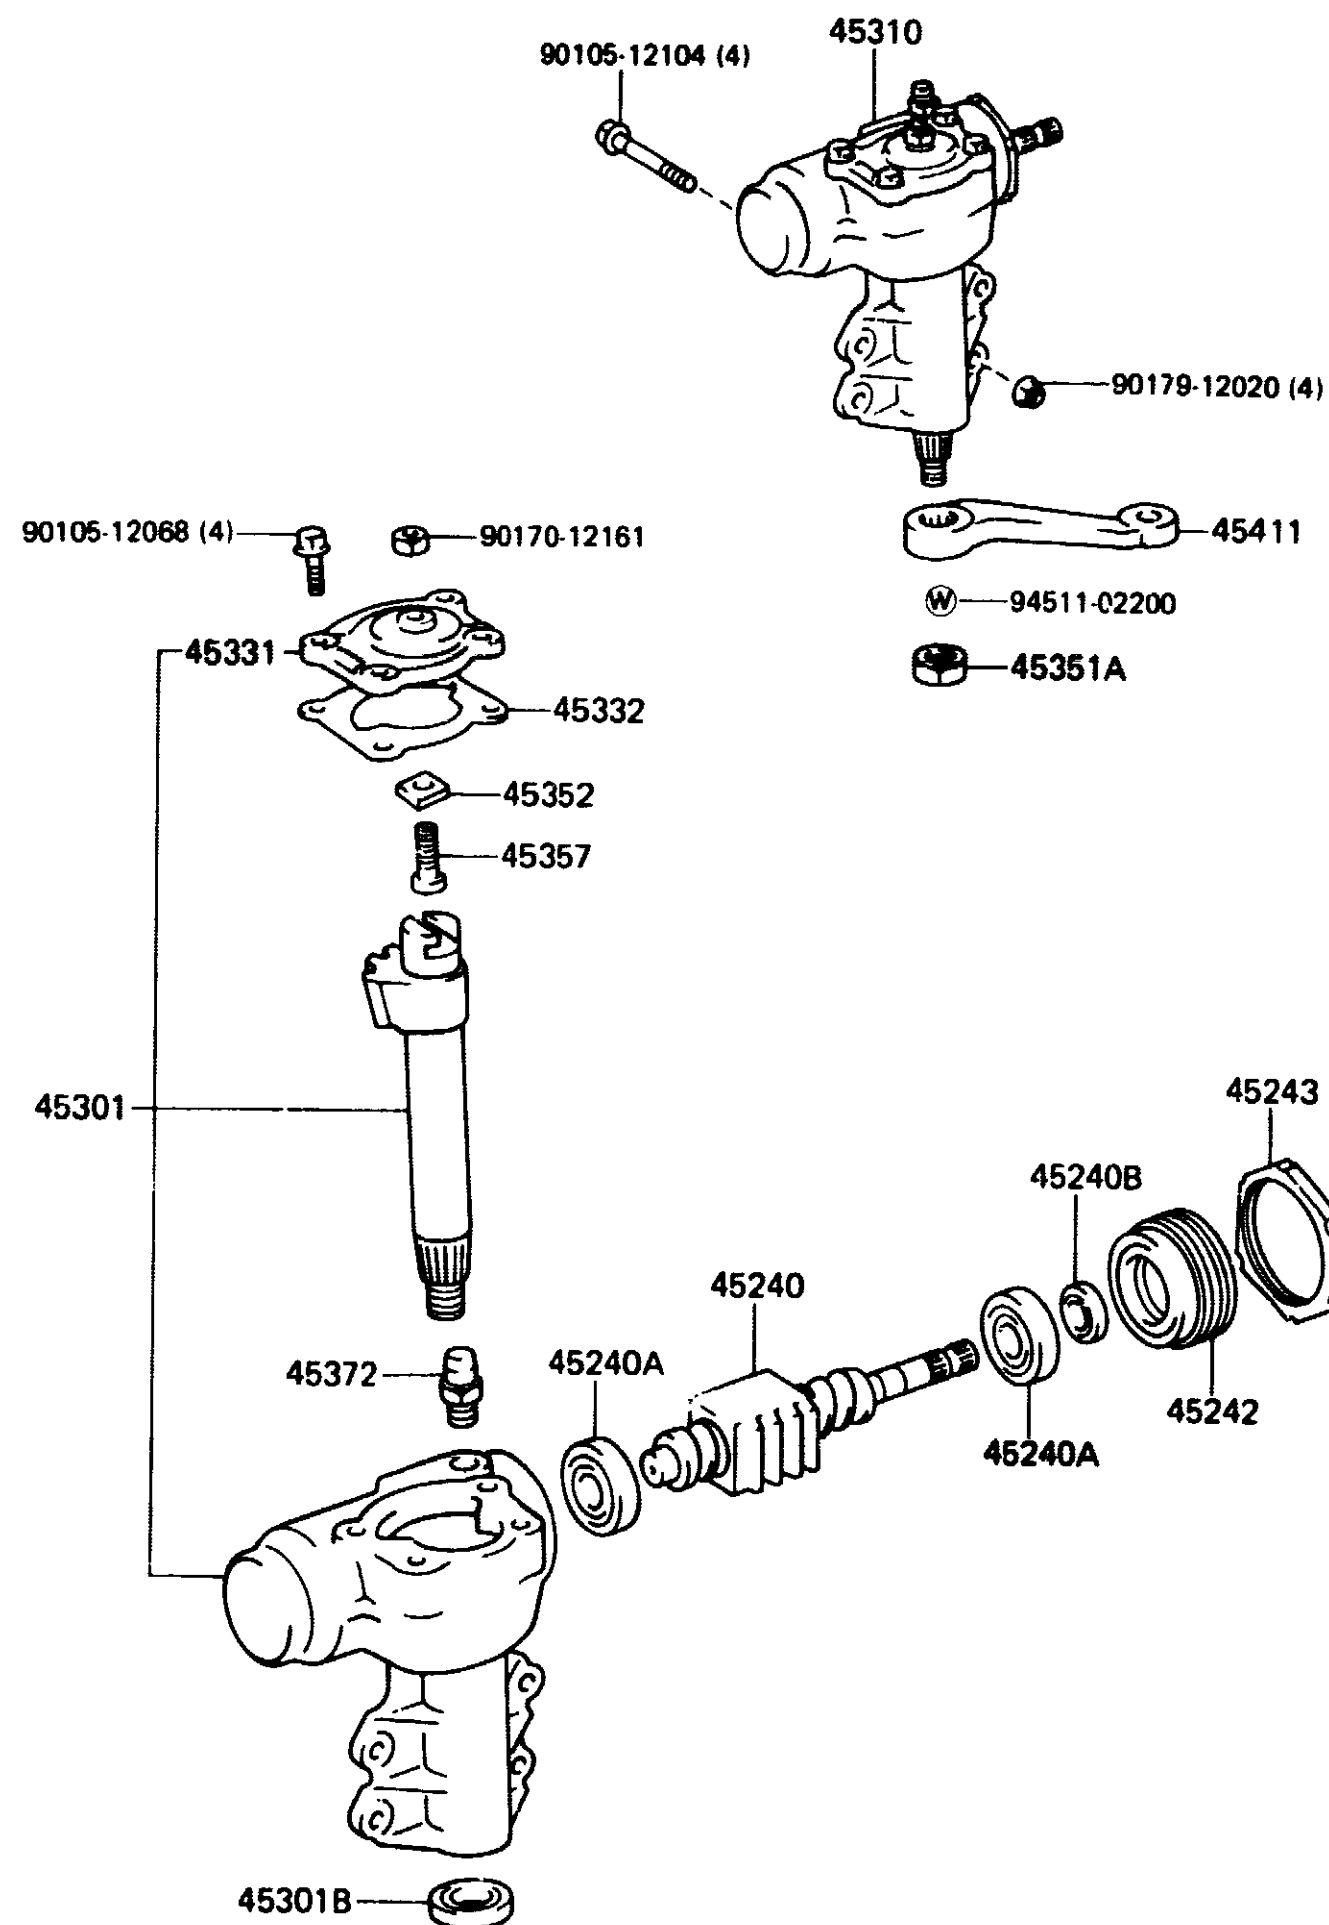

MC B788-A

MCB788A





FIG.47-05 FRONT DISC BRAKE CALIPER & DUST
COVER

1-H10

M74-13-0048

GENUINE TOYOTA PARTS

(8411-)

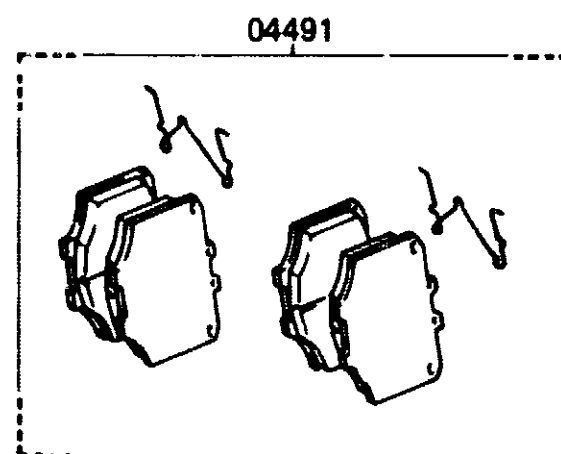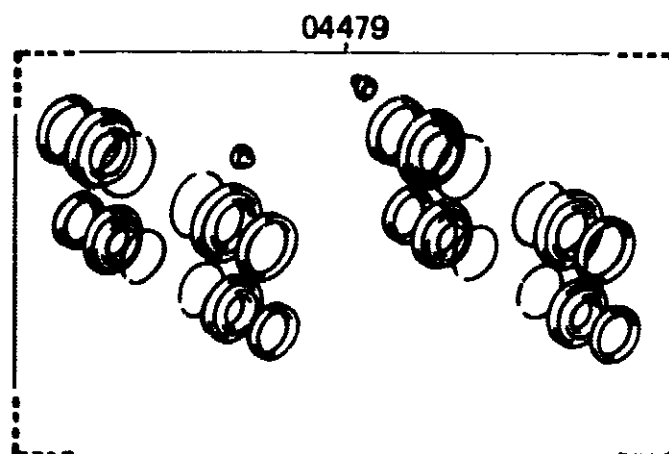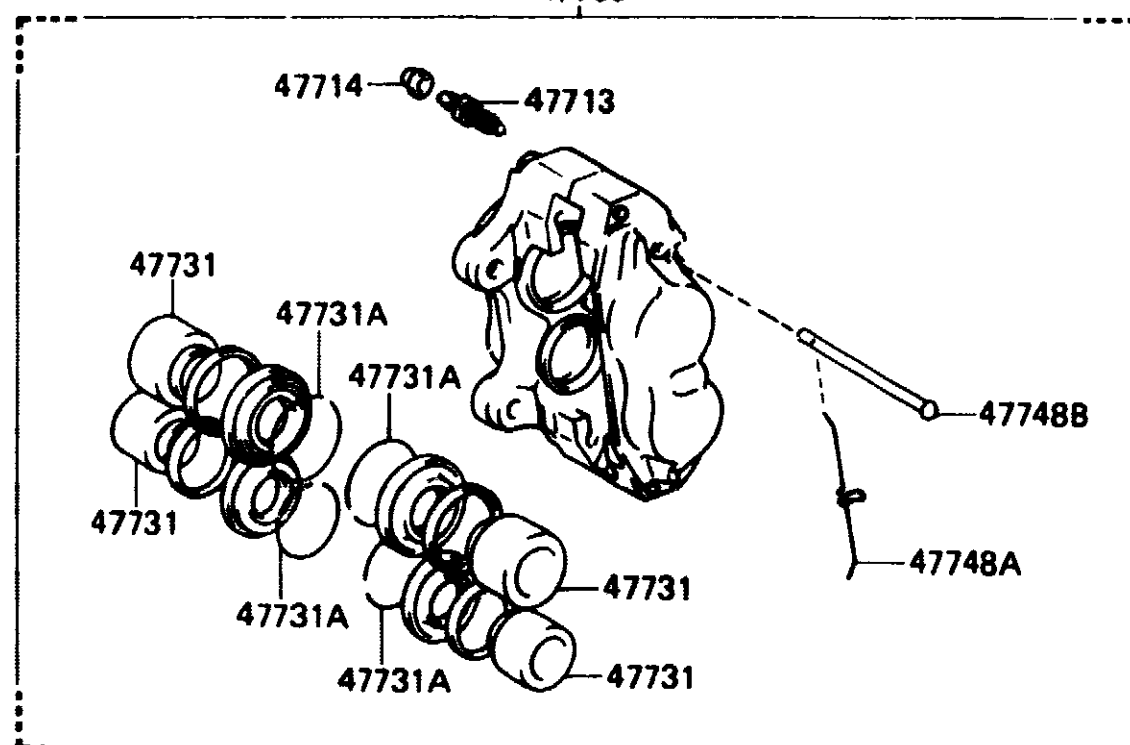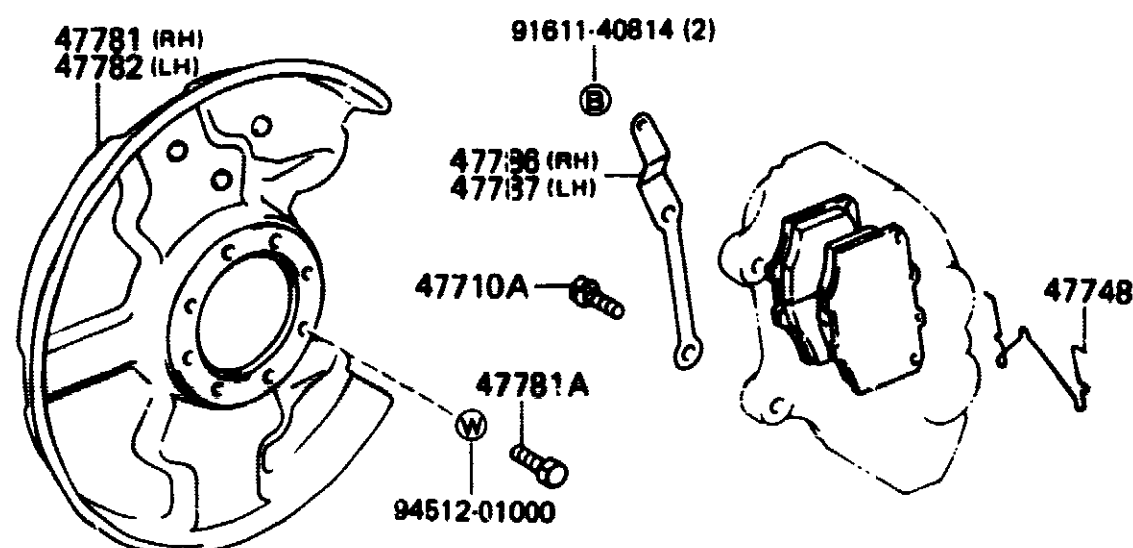


MC B835-B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	47-05 FRONT DISC BRAKE CALIPER & DUST COVER						
8411-	BJ70	04479 CYLINDER KIT, DISC BRAKE, FRONT		04479-30030-	1	81	
8411-	BJ70	04491 PAD KIT, DISC BRAKE, FRONT		04491-60010-	1	81	
8411-	BJ70	47710A BOLT, HEXAGON (FOR FRONT CALIPER)		90101-12060-	4	81	
8411-	BJ70	47713 PLUG, BLEEDER (FOR DISC BRAKE, FRONT)		47547-20030-	2	81	
8411-	BJ70	47714 CAP, BLEEDER PLUG (FOR DISC BRAKE, FRONT)		31478-30010-	2	81	
8411-	BJ70	47730 CYLINDER ASSY, DISC BRAKE, RH		47730-60021-	1	81	
8411-	BJ70	47731 PISTON, FRONT DISC BRAKE		OD=42.82 47731-30020-	4	81	
8411-	BJ70	47731 PISTON, FRONT DISC BRAKE		OD=33.93 47732-30010-	4	81	
8411-	BJ70	47731A RING, SET (FOR FRONT DISC BRAKE PISTON)		PISTON OD=33.93 90522-40043-	4	81	
8411-	BJ70	47731A RING, SET (FOR FRONT DISC BRAKE PISTON)		PISTON OD=42.82 90522-48044-	4	81	
8411-	BJ70	47748 SPRING, ANTIRATTLE, NO.1		47748-60010-	2	81	
8411-	BJ70	47748A CLIP (FOR DISC BRAKE ANTIRATTLE)		90468-12003-	2	81	
8411-	BJ70	47748B PIN, W/HOLE (FOR DISC BRAKE ANTIRATTLE)		90240-06158-	4	81	

(8411-)

ILLUST.NO. 30F3

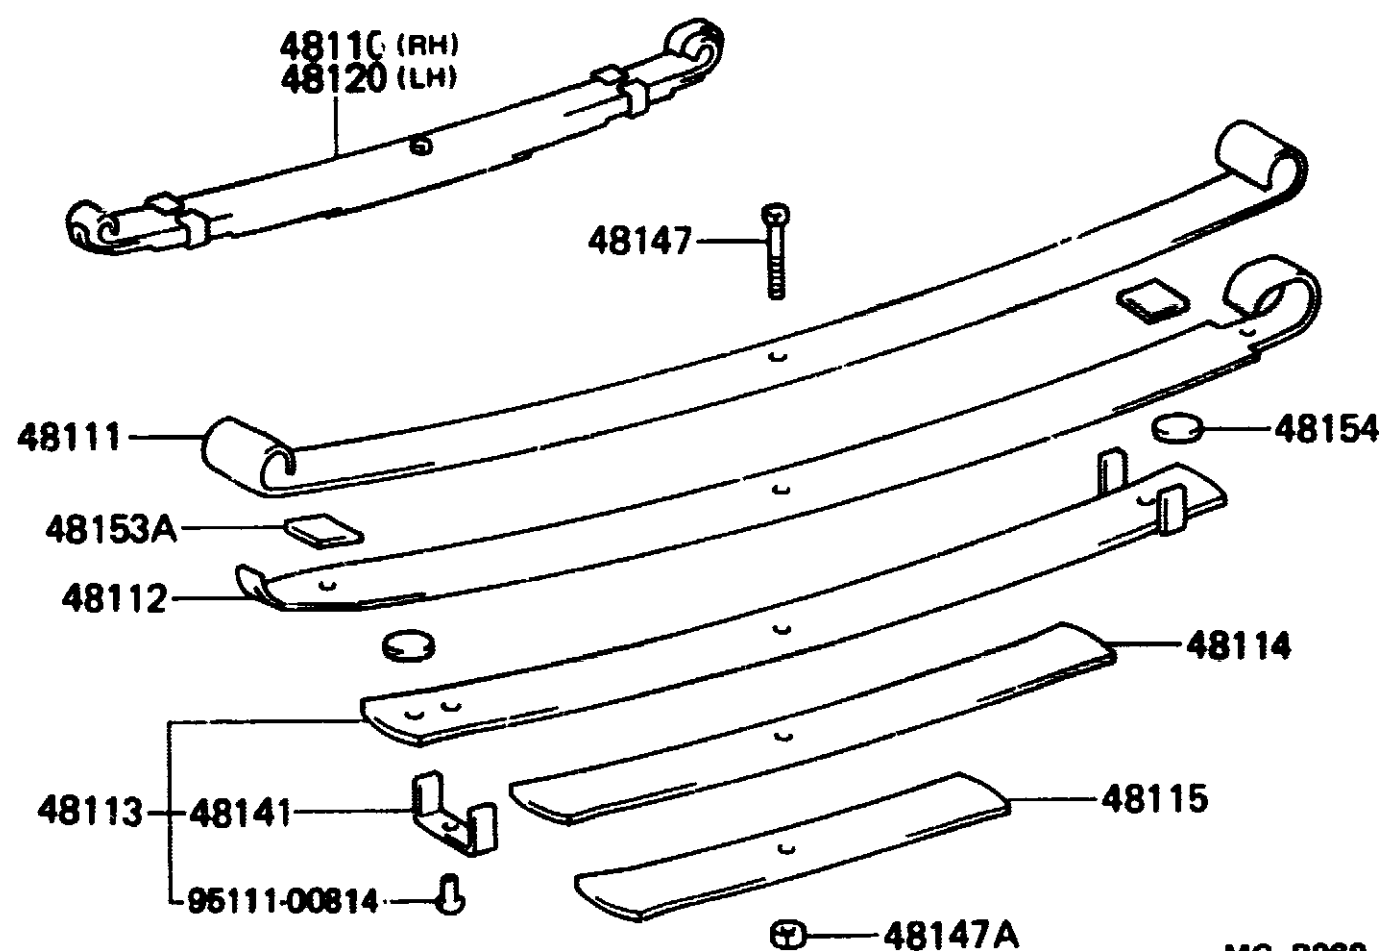

MC B868

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	48-03 FRONT SPRING & SHOCK ABSORBER						
		04481 SHACKLE KIT, FRONT SPRING					
8411-8608	BJ70			04481-60020-	2	81	140
8608-	BJ70			04481-60030-	2	141	
		04482 PIN KIT, FRONT SPRING					
8411-	BJ70			04482-60040-	2	81	
		48110 SPRING ASSY, FRONT, RH					
8411-8510	BJ70			48110-60230-	1	81	100
8510-	BJ70			48110-60231-	1	101	
		48110A BUSH (FOR FRONT SPRING SHACKLE)					
8411-	BJ70			90389-18002-	8	81	
		48110P BUSH (FOR FRONT SPRING PIN)					
8411-	BJ70			90389-18002-	4	81	
		48111 LEAF, FRONT SPRING, NO.1					
8411-	BJ70			48111-60230-	2	81	
		48112 LEAF, FRONT SPRING, NO.2					
8411-	BJ70			48112-60230-	2	81	
		48113 LEAF, FRONT SPRING, NO.3					
8411-	BJ70			# 48102-60230- (48102-60241-	2	81	
		48114 LEAF, FRONT SPRING, NO.4					
8411-	BJ70			48114-60230-	2	81	
		48115 LEAF, FRONT SPRING, NO.5					
8411-	BJ70			48115-60230-	2	81	
		48120 SPRING ASSY, FRONT, LH					
8411-8510	BJ70			48110-60230-	1	81	100
8510-	BJ70			48110-60231-	1	101	

90043 - 90311

H14



H74-28-0046

90311 - 90501

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
90043-45027-	1-I1	90117-14177-	1-L11	90202-10103-	1-C11	90311-24001-	1-B9	90363-40035-	1-D6	90430-18244-	1-I1
90044-01010-	1-B2	90113-14107-	1-L11	90210-10001-	1-K9	-28004-	1-A6	-45002-	1-D5	-20006-	2-E7
-30026-	1-F2	-14158-	1-L11	-12001-	1-G1	-32013-	1-A6	90364-17010-	1-D7	-20007-	2-E7
-60053-	1-L2	-14160-	1-L11	90213-06013-	1-K10	-33085-	1-H8	-32003-	1-J9	-37140-	1-G1
-67103-	1-L2	-14187-	1-I11	-07010-	1-K10	-38134-	1-A8	-32007-	1-E6	90440-17021-	2-E1
90096-90001-	1-L4	-14188-	1-I11	90214-42030-	1-K8	-47001-	1-G8	-34006-	1-C7	-2-F1	
90099-02205-	1-K3	90119-08353-	1-M6	90215-09003-	1-H6	-48008-	1-D8	-38012-	1-C7	90445-12078-	1-L2
-02209-	1-I3	-10208-	1-B2	-42025-	1-I6	-48009-	1-M6	-44065-	1-D6	-22011-	2-E7
-04945-	1-H4	-10262-	1-M6	90240-06158-	1-H10	-48010-	1-M6	90365-32002-	1-E6	90446-06013-	2-L9
-05157-	2-I9	-12045-	1-L6	-08042-	1-A10	-48012-	1-M6	-40001-	1-E6	90447-12001-	1-B5
-07103-	1-J3	-12046-	1-L6	-08128-	1-G7	-50002-	1-K1	-40002-	1-D6	-12016-	1-B5
-10018-	1-L4	-12047-	1-L6	-10025-	2-F7	-50007-	1-K1	-47013-	1-D8	-14030-	2-E7
-10087-	1-E4	-12048-	1-L6	-10027-	1-G7	-62001-	1-J8	90366-17001-	1-F11	-14031-	2-E7
-10107-	1-L3	90170-08022-	1-D2	-10157-	1-G7	-95001-	1-K1	-30011-	1-A8	90460-01001-	1-E9
-10119-	1-L3	-09167-	2-D9	90249-08018-	1-F5	-95003-	1-K1	-35011-	1-G8	-26001-	1-E9
		-22058-	1-J9						1-D7	-50016-	1-M2
-10137-	1-I3	-22058-	1-L9	-08068-	1-K10	90312-17001-	1-A6	-35053-	1-D7	90461-10387-	1-C8
-12010-	1-I4	90171-14042-	1-K9	-10017-	1-C10	-32002-	1-J9	-40004-	1-A8	1-H8	
-13001-	1-H4	90175-08008-	1-F3	90250-05008-	1-C9	90313-13001-	1-F7		1-G8	90467-05031-06	2-M5
-13002-	1-E4	90176-08016-	2-H9	-05202-	1-D6	-93011-	1-F11	90368-45066-	1-A8	-05031-13	2-M5
-14015-	1-J4	90179-06070-	2-I9	-06009-	1-E6	90331-12002-	1-G6		1-G8	-05032-08	2-B4
-14055-	1-J3	-10070-	1-D3	-07057-	1-J8	-16050-	1-G6	-45087-	1-J8	-06048-08	2-D4
-32089-	2-L9	-11007-	2-H7	-08024-	1-H7		1-M6	-49084-	1-J8	-08011-	2-A2
-32103-	2-J9	-12044-	1-B2	-08120-	1-I1	-18001-	1-G6	90369-22004-	1-K9		2-J1
-33075-	2-K9	-12086-	1-G9		1-K1	-21001-	1-F1	-38003-	1-I2	-08030-	2-A2
-33534-	1-L2	-22005-	1-L6	-10006-	1-M6	-40024-	1-F1	90374-30003-	1-J9	-09006-	2-J1
-52066-	1-J3	-22011-	1-A8	-10192-	1-B2	-51032-	1-H1	90385-10064-	1-D11	-09012-23	2-B4
90101-08055-	1-J11		1-G8	-10214-	1-G6	-56001-	1-C2	-12029-	1-A10	-09012-36	2-B4
-10439-	1-I10	-26002-	1-D6	-10215-	1-M5	90340-25001-	1-L9	-19057-	1-I11	-09014-	2-J1
-12021-	1-J10		1-E6	-12146-	1-M5	90341-10004-	1-I6		1-M11	-09030-	2-M1
-12060-	1-H10	-26004-	1-D6	-12216-	1-A6	-12008-	1-I6	90386-08002-	1-F5	-11085-	1-L2
90105-08142-	1-I6	90189-04024-	1-H3			-15001-	1-F7	-08155-	2-G7	-12014-13	2-A3
-10039-	2-E1	90201-06177-	1-D2	-12216-	1-M5	-18006-	1-B8	-13192-	1-C10	-12014-16	2-A3
-10103-	2-F1	-08106-	1-I4	90253-15005-	1-I1	1-H8			1-F5	-16001-	1-E10
-10194-	2-E1	-10092-	1-H6	90254-05004-	1-F7	1-M5		90387-08002-	1-A9	-16002-	1-G10
-11013-	1-B2	-10227-	1-C2	-05016-	1-F7	1-M6		-08099-	1-C11	-31110-	1-C11
-11013-	1-L7	-22005-	1-M6		1-G6	-18057-	1-B8	-09006-	1-J11	-32002-	1-L9
-12053-	1-A8	-22007-	1-A8	90280-03015-	1-I6	1-H8		-10004-	1-C10	-42001-	1-L2
	1-G8		1-G8	-05008-	1-F6	1-M5			1-F5	90468-12003-	1-H10
-13004-	1-B2	-26003-	1-D6	90301-14001-	1-B9	1-M6		90389-18002-	1-H11	-18071-	2-L5
-16003-	1-B2	-30003-	1-J9	-18004-	1-B6	1-I1			1-L11	90480-01069-	1-B11
90106-12022-	1-E11	-35002-	1-C7	-18018-	1-B6	-18089-	2-E7	90401-14060-	1-A5	-15296-	2-L1
90109-06008-	1-D10	-40551-	1-A8	-20001-	1-H2	-20003-	2-E7	-18002-	1-E2	-17158-	1-A10
-16001-	1-H1	-40552-	1-A8	-22001-	1-C9	-20004-	2-E7	90404-10018-	1-B8	-17401-	1-G7
90113-08001-	1-H6	-40553-	1-A8	-27003-	1-C7	90345-52001-	1-I1	-10019-	1-H8	90501-05141-	1-J4
	1-I6	-40555-	1-A8	-32002-	1-J9	-53001-	1-I1	-10028-	1-F5	-10067-	1-I6
-10003-	1-D8	-40554-	1-A8	-33002-	1-J9	-53020-	1-E11	90405-09089-	1-G10	-10083-	1-G9
90114-11124-	1-M6	-40555-	1-G8			-54005-	1-F1	-09090-	1-G10	-10745-	1-A10
		-40556-	1-A8	-34004-	1-C7	90360-06004-	1-D6				
90116-08123-	1-D2	-40557-	1-A8	-51001-	1-K9	-06021-	1-K9	-09091-	1-G10	-12099-	1-G9
-08146-	1-H5	-40558-	1-A8	-53002-	1-C9	-08009-	1-I6	-09094-	1-G10	-12103-	1-C9
-08325-	1-J8	-40559-	1-A8	-60001-	1-B9	-10003-	1-F7	90407-10003-	1-D10	-12447-	1-C9
-10048-	1-K1	-40560-	1-A8	-60122-	1-M8		1-I6	90413-04005-	1-J7	-13011-	1-I6
-10056-	1-B3	-40561-	1-A8	-63001-	1-K9	90361-05001-	1-I6	-10042-	1-B11	-14029-	1-F7
-10074-	1-A8		1-G8	-64002-	1-J9	-06049-	1-D6	-10106-	1-C11	-14069-	1-H6
-10075-	1-A8		1-G8	-65145-	1-J9	-10037-	1-I6	-10174-	1-B11	-14076-	1-H6
	1-G8		1-A8	-77001-	1-C4	90363-12002-	1-D5	90430-04003-	2-K4	-16163-	1-D2
-10076-	1-A8		1-G8	90310-09001-	1-B6	-17004-	1-C9	-06104-	1-D10	-20012-	1-J10
-10087-	1-B3		1-A8	-36001-	1-L9	-20024-	1-K9	-07001-	2-J4	-23014-	1-C9
-10098-	1-B3		1-G8	90311-13066-	1-H7	-28001-	1-M8	-09253-	1-D10	-23018-	1-C2
-12007-	1-E11		1-A8	-16002-	1-I6	-35013-	1-C7		1-E10	-29003-	1-F7
90117-14016-	1-I11		1-G8	-18001-	1-K9		1-D7	-10022-	1-H7	-40205-	2-J4
-14017-	1-I11		1-A8	-19002-	1-K9	-35017-	1-D6	-18008-	1-M5	-45011-	1-M8
-14176-	1-L11		1-G8	-22005-	1-F7	-35022-	1-D6		1-M6	-45114-	1-L9
						-40018-	1-D6	-18012-	1-E2	-47003-	1-C2

ILLUSTRATED INDEX

H16

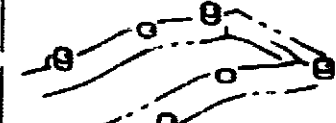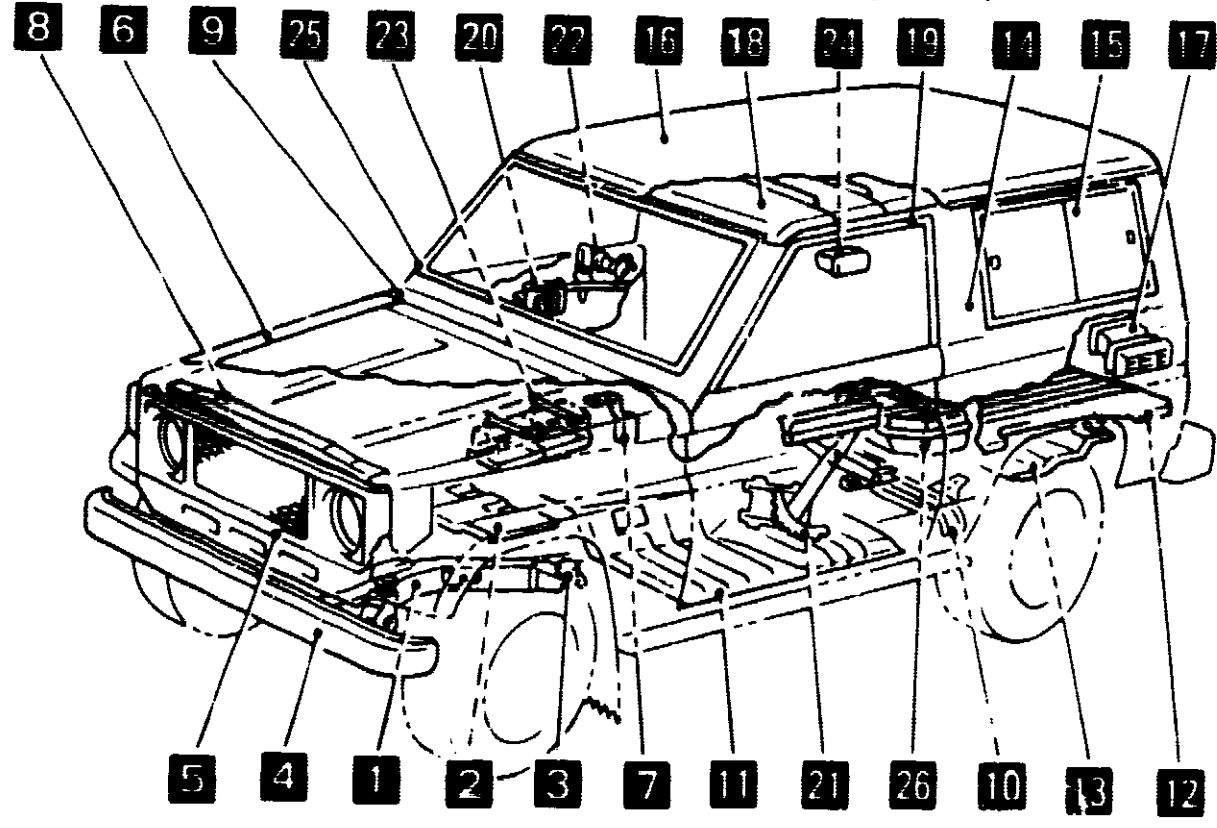2-A1 (51-51) 1  Frame	2-C1 (51-52) 2  Crossmember & Under Cover	2-E1 (52-51) 3  Cab & Body Mounting	2-G1 (52-52) 4  Front Bumper & Stay	2-I1 (53-51) 5  Radiator Grille	2-J1 (53-53) 6  Hood & Front Fender	2-L1 (53-54) 7  Hood Lock & Hinge
2-H5 (67-65) 22  Lock Cylinder Set	BODY GROUP (1/2) 					
2-A5 (67-54) 21  Front Door Regulator & Hinge						
2-L4 (57-53) 20  Front Door Lock & Handle						
2-F4 (67-51) 19  Front Door Panel & Glass	2-G6 (74-54) 23  Battery Carrier	2-I6 (74-56) 24  Ash Receptacle	2-K6 (75-57) 25  Moulding	2-C7 (77-51) 26  Fuel Tank & Tube	2-M1 (53-55) 8  Front Fender Apron	2-F2 (55-53) 9  Cowl Panel & Glass
2-D4 (64-52) 18  Roof Headling & Pad	2-A4 (61-55) 17  Rear & Roof Ventilator	2-K3 (61-53) 16  Roof Panel & Back Panel	2-I3 (61-52) 15  Side Window	2-E3 (61-51) 14  Side Member	2-G2 (57-51) 10  Floor Member	2-H2 (58-51) 11  Front Floor Panel & Member
					2-M2 (58-53) 13  Floor Insulator	2-K2 (58-52) 12  Rear Floor Panel & Member

MB H741



PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-8509	11431E 3B..BJ70	PLUG, TIGHT, NO.5 (FOR CYLINDER BLOCK) OD=14		96411-11400- (96411-41400-)	3	81	
C 8509-8612	3B..BJ70	OD=14, OIL HOLE			1		
8509-	3B..BJ70	OD=14, WATER JACKET		96411-41400-	2		
C 8612-	3B..BJ70	OD=14, OIL HOLE			1		
8411-	11432A 3B..BJ70	PLUG, W/HEAD TAPER SCREW, NO.1		90043-45027-	3	81	
8411-	11432B 3B..BJ70	PLUG, W/HEAD TAPER SCREW, NO.2		90345-53001-	1	81	
8411-	11432C 3B..BJ70	PLUG, W/HEAD TAPER SCREW, NO.3		90345-52001-	1	81	
8411-	11434 3B..BJ70	PIN, STRAIGHT (FOR TIMING GEAR COVER SET)		90250-08120-	4	81	
8411-	11434C 3B..BJ70	PIN, STRAIGHT (FOR CYLINDER HEAD SET)		90253-15005-	2	81	
8411-	11434D 3B..BJ70	PIN, STRAIGHT (FOR ENGINE REAR OIL SEAL)		90250-08120-	2	81	
8411-	11452 3B..BJ70	GUIDE, OIL LEVEL GAGE		11452-56050-	1	81	
8411-	11459 3B..BJ70	SUPPORT, OIL LEVEL GAGE GUIDE		11459-56040-	1	81	
8411-	11462 3B..BJ70	LINER, CYLINDER		11461-58020-	4	81	
8411-8505	11475 3B..BJ70	SHIM, CYLINDER LINER T=0.05		11475-58010-	33	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-8505	11475 3B..BJ70	SHIM, CYLINDER LINER CONTINUED T=0.10		11476-58010-	33	81	
8411-	12101 3B..BJ70	PAN SUB-ASSY, OIL		12101-56060-	1	81	
8411-	12101A 3B..BJ70	PLUG (FOR OIL PAN DRAIN)		90341-18089-	1	81	
8411-	12101B 3B..BJ70	GASKET (FOR OIL PAN DRAIN PLUG)		90430-18244-	1	81	
8411-	13613C 3B..BJ70	NOZZLE, OIL		90915-01015-	1	81	
8411-	15301 3B..BJ70	GAGE SUB-ASSY, OIL LEVEL		15301-56040-	1	81	
8411-	15605 3B..BJ70	VALVE SUB-ASSY, OIL CHECK		15605-58010-	1	81	
8411-	15708 3B..BJ70	NOZZLE, SUB-ASSY OIL, NO.1		15708-58020-	4	81	



GENUINE TOYOTA PARTS

(8411-)

TEMPATO TYPE

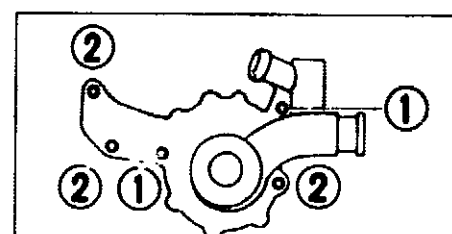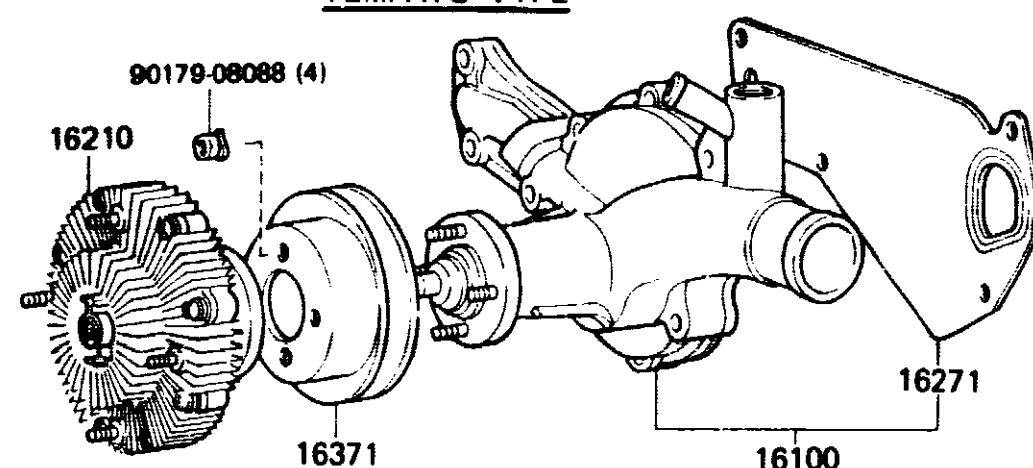

①		90119-08273 (2)
②		90119-08272 (3)

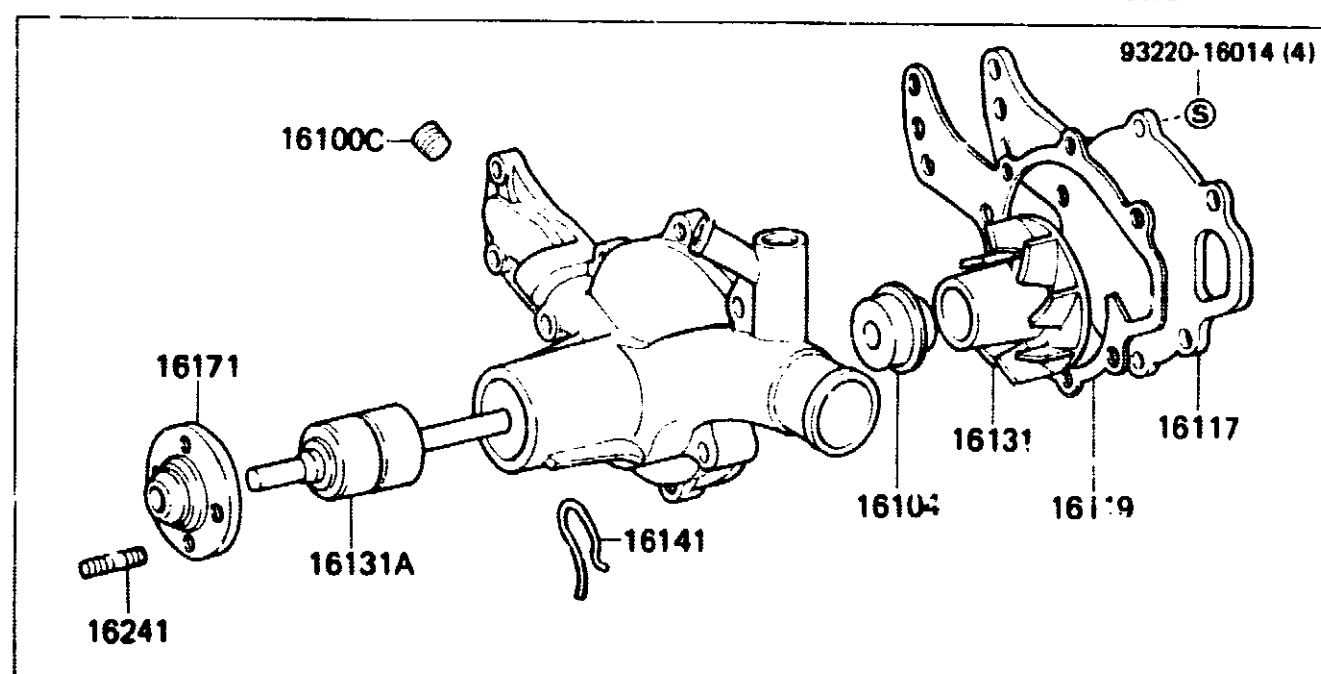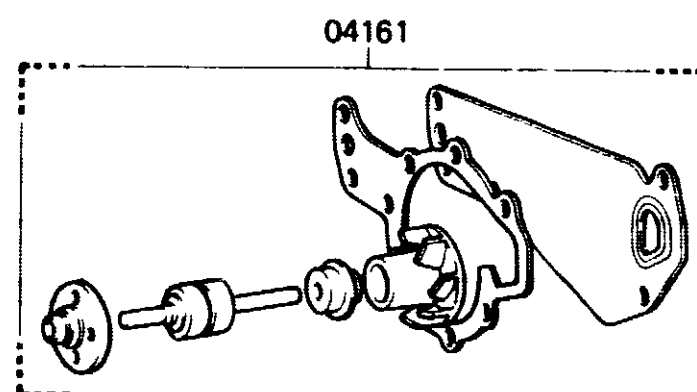

MA 7965-B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	16-01 WATER PUMP						
8411-	04161	PUMP KIT, WATER		04161-56080-	1	81	
8411-	3B..BJ70						
8411-	16100	PUMP ASSY, WATER		16100-59105-	1	81	
8411-	3B..BJ70						
8411-	16100C	PLUG, W/HEAD TAPER SCREW		15184-15010-	1	81	
8411-	3B..BJ70						
8411-8507	16104	SEAL SET, WATER PUMP		# 16104-52011- (16104-52012-	1	81	
8507-	3B..BJ70			16104-52013-	1		
8411-	16117	PLATE, WATER PUMP		16117-56040-	1	81	
8411-	3B..BJ70						
8411-	16119	GASKET, WATER PUMP BODY		16119-56040-	1	81	
8411-	3B..BJ70						
8411-	16131	ROTOR, WATER PUMP		16131-56040-	1	81	
8411-	B..BJ70						
8411-	16131A	BEARING, WATER PUMP		90369-38003-	1	81	
8411-	3B..BJ70						
8411-	16141	WIRE, WATER PUMP BEARING RETAINING		16141-76010-	1	81	
8411-	3B..BJ70						
8411-	16171	SEAT, WATER PUMP PULLEY		16171-61071-	1	81	
8411-	3B..BJ70						
8411-	16210	COUPLING ASSY, FLUID		16210-56040-	1	81	
8411-	3B..BJ70						
8411-	16241	BOLT, STUD (FOR WATER PUMP COUPLING)		16198-41170-	4	81	
8411-	3B..BJ70						

1-13

GENUINE TOYOTA PARTS

12V 55A, 24V 30A



MEF490B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	19-03 ALTERNATOR						
	+-----+ 27020 ALTERNATOR ASSY +-----+						
8411-8510	3B..BJ70	12V 55A		27020-56190-	1	81	100
8411-8510	3B..BJ70	12V 55A, W/ PS		27020-56240-	1	81	100
8510-8608	3B..BJ70	24V 30A		27020-56390-	1	101	140
8510-	3B..BJ70	24V 30A, W/ PS		27020-56400-	1	101	
	+-----+ 27036 TERMINAL SUB-ASSY, LEAD WIRE, ALTERNATOR +-----+						
8510-	3B..BJ70	24V 30A		27036-56390-	1	101	
	+-----+ 27113 PLATE, BEARING RETAINER, ALTERNATOR +-----+						
8411-	3B..BJ70	12V 55A, 24 V 30A		27312-57060-	1	81	
	+-----+ 27212 RING, SPACE (FOR ALTERNATOR ROTOR) +-----+						
8411-	3B..BJ70	12V 55A, 24 V 30A		27333-57060-	1	81	
	+-----+ 27310 FRAME ASSY, DRIVE END, ALTERNATOR +-----+						
8411-8608	3B..BJ70	12V 55A, 24 V 30A		27310-56110-	1	81	140
8411-	3B..BJ70	12V 55A, 24 V 30A, W/PS		27310-56180-	1	81	
	+-----+ 27310A COLLAR OR NUT (FOR ALTERNATOR DRIVE END FRAME) +-----+						
8411-	3B..BJ70	12V 55A, 24 V 30A		27412-57060-	1	81	
	+-----+ 27310B BEARING (FOR ALTERNATOR DRIVE END FRAME) +-----+						
8411-	3B..BJ70	12V 55A, 24 V 30A		90099-10137-	1	81	
	+-----+ 27310C FELT (FOR ALTERNATOR DRIVE END FRAME) +-----+						
8411-	3B..BJ70	12V 55A, 24 V 30A		90099-02209-	2	81	
	+-----+ 27313 COVER, ALTERNATOR FELT, INNER NO.2 +-----+						
8411-	3B..BJ70	12V 55A, 24 V 30A		27313-57060-	1	81	


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-8608	+-----+ 22680A +-----+ 3B..BJ70	NIPPLE SUB-ASSY, OVERFLOW (FOR PNEUMATIC BELLOWS)		22197-77140-	1	81	140
8411-8608	+-----+ 22680B +-----+ 3B..BJ70	WASHER (FOR PNEUMATIC BELLOWS)		90201-08106-	2	81	140
8411-8608	+-----+ 22686 +-----+ 3B..BJ70	COVER, PNEUMATIC BELLOWS		22686-48061-	1	81	140
8411-	+-----+ 22691 +-----+ 3B..BJ70	BALL, SPEED CONTROL		90099-12010-	6	81	
8411-	+-----+ 22692 +-----+ 3B..BJ70	SLIDER (FOR SPEED CONTROL)		22692-56041-	1	81	
8411-	+-----+ 22693 +-----+ 3B..BJ70	GUIDE, BALL		22693-77130-	1	81	
8411-	+-----+ 22694 +-----+ 3B..BJ70	BEARING SUB-ASSY		22694-77130-	1	81	
8411-	+-----+ 22694A +-----+ 3B..BJ70	SPRING, SPEED CONTROL		22449-48030-	1	81	
8411-	+-----+ 22697 +-----+ 3B..BJ70	ARM SUB-ASSY		22697-56041-	1	81	
8411-	+-----+ 22697A +-----+ 3B..BJ70	SEAL, OIL (FOR NO.3 LEVER)		85613-31010-	1	81	
8411-	+-----+ 22698 +-----+ 3B..BJ70	PIN, SHIFTING		22698-77131-	1	81	
8411-8608	+-----+ 22699 +-----+ 3B..BJ70	BRACKET SUB-ASSY, ADJUSTING		22699-56130-	1	81	140
8411-8608	+-----+ 22703 +-----+ 3B..BJ70	COVER, GOVERNOR		22703-77140-	1	81	140

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8608-	+-----+ 22703 CONTINUED 3B..BJ70 COVER, GOVERNOR			22703-56040-	1	141	

(8411-)

(8411-)

ILLUST.NO. 10F2

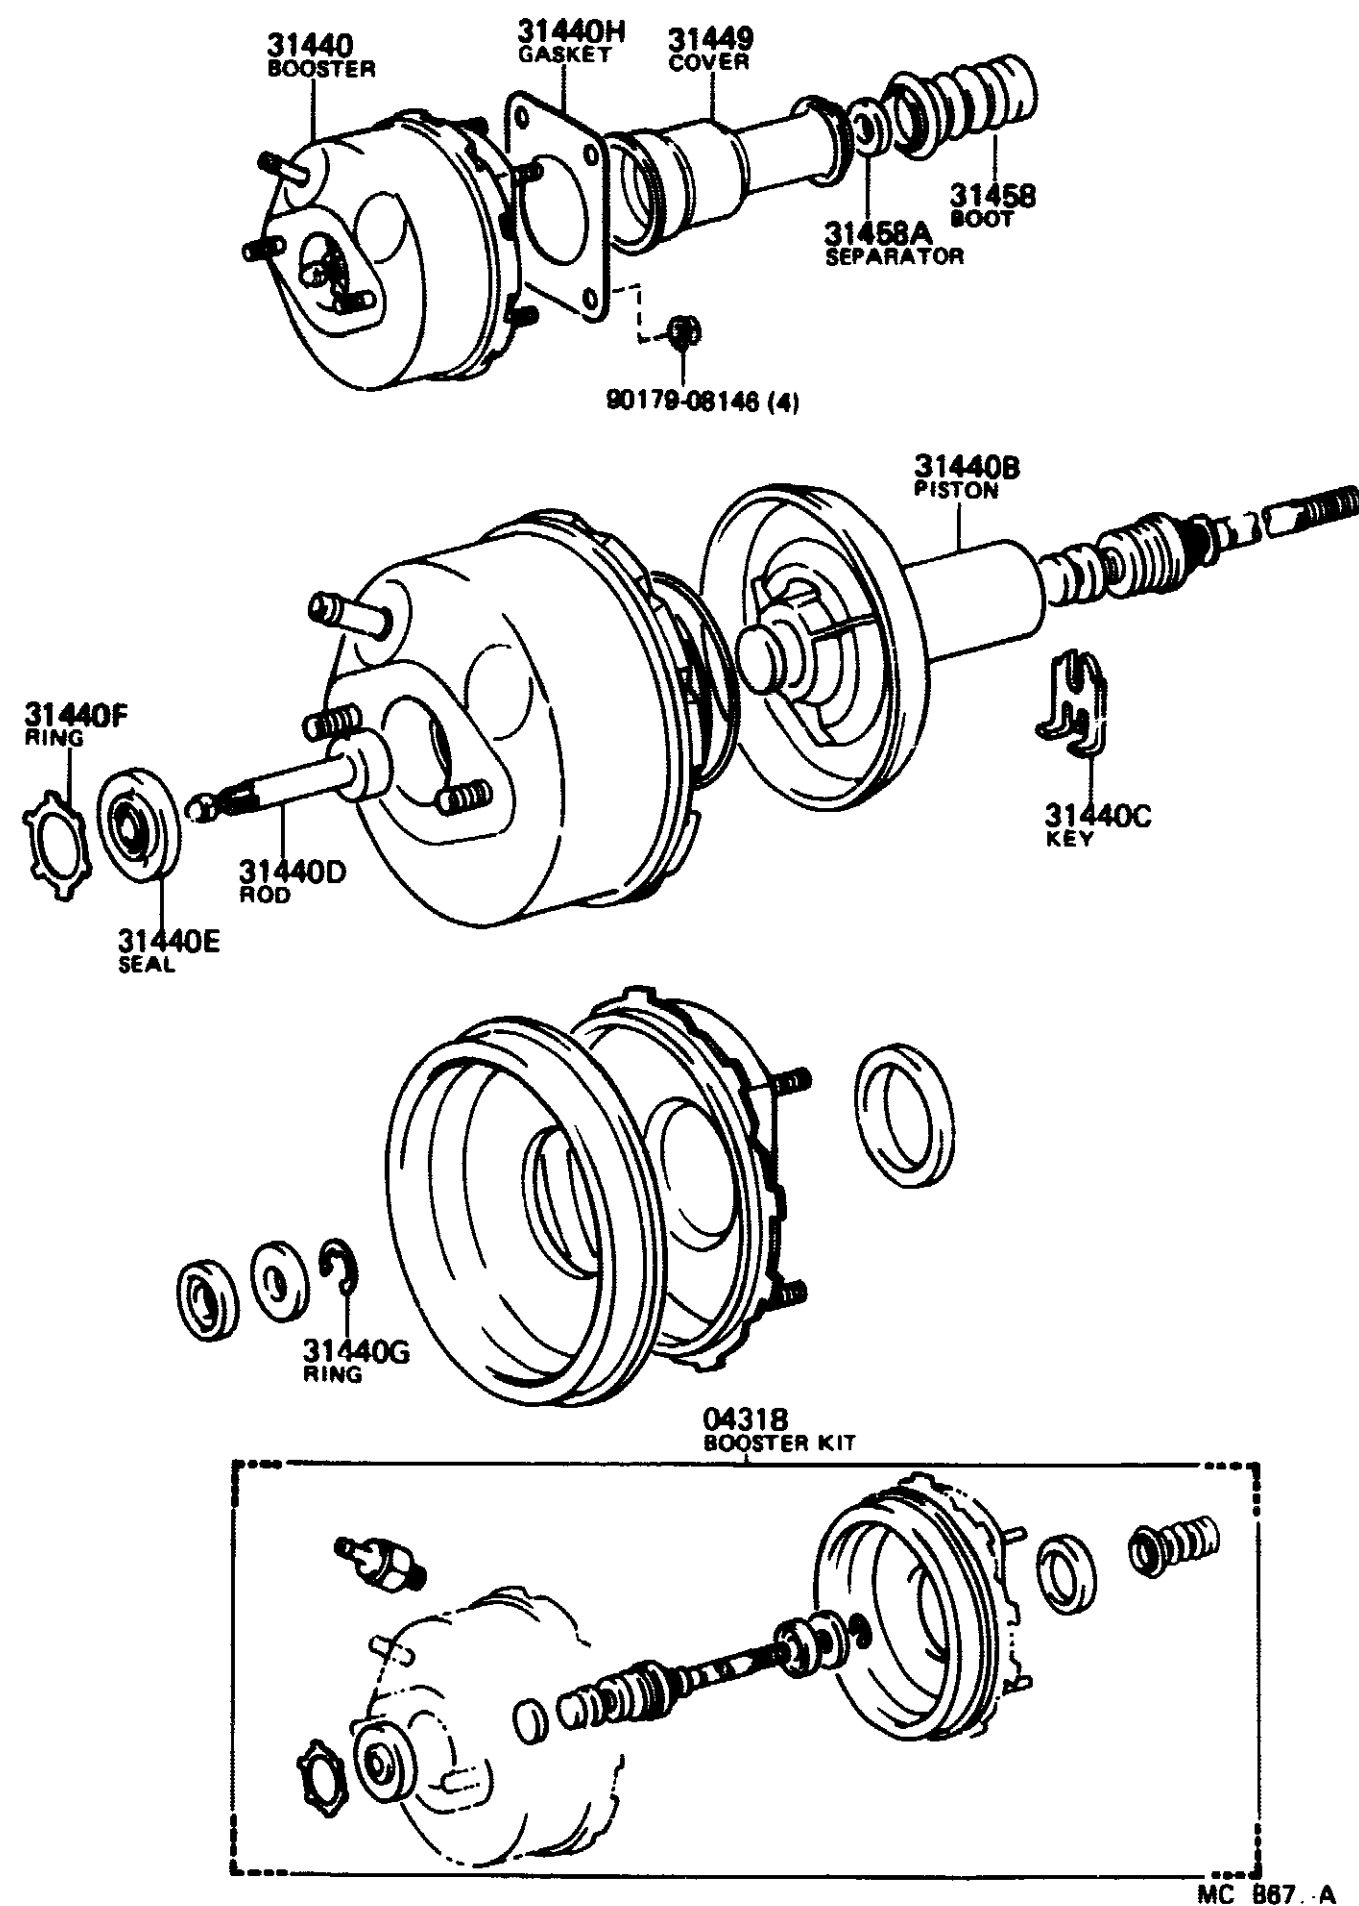

ILLUST.NO. 20F2

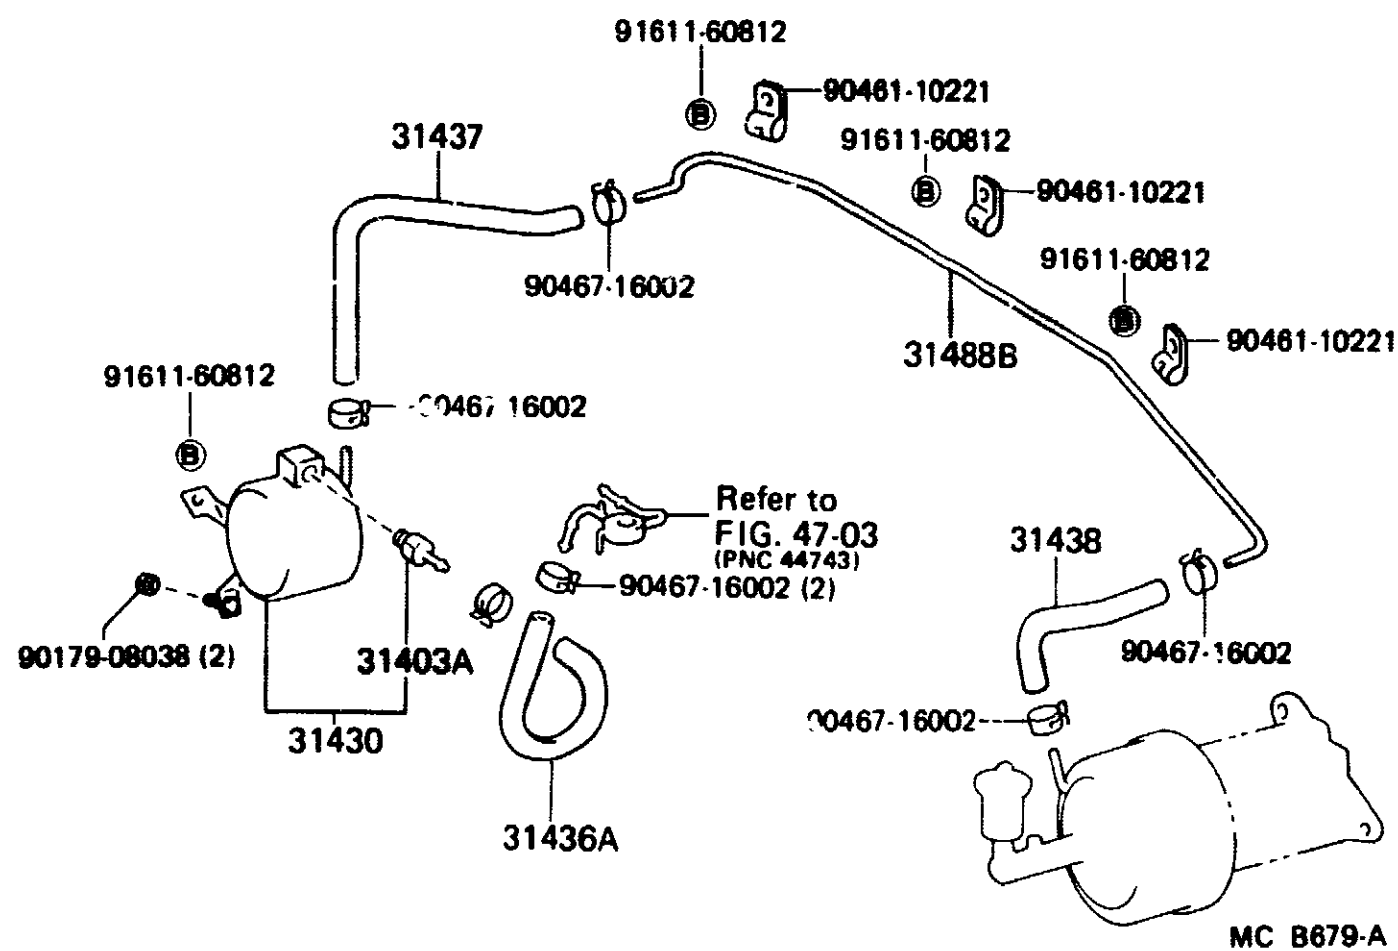


FIG. 33-07

GENUINE TOYOTA PARTS

1-16

GENUINE TOYOTA PARTS

M74-15-0618

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	33245C BJ70	SEAL, OIL (FOR 5TH SHIFT ARM SHAFT)		90311-16002-	1	81	
8411-	33245D BJ70	RING, SHAFT SNAP (FOR 3RD & 4TH SHIFT FORK SHAFT)		90520-14002-	1	81	
8411-8608	33251 BJ70	LEVER, SHIFT & SELECT		33251-60030-	1	81	140
8608-	BJ70			33251-60031-	1	141	
8411-8703	33251A BJ70	LEVER, SHIFT, INNER NO.1		33251-60021-	1	81	
8703-	BJ70			33251-60022-	1		
8411-8608	33251C BJ70	BOLT, SET (FOR SHIFT & SELECT LEVER)		90113-08001-	2	81	140
8608-	BJ70			90105-08142-	2	141	
8411-8608	33251D BJ70	WASHER, LOCK (FOR SHIFT & SELECT LEVER)		90215-09003-	2	81	140
8411-8608	33261C BJ70	SHAFT, SHIFT & SELECT LEVER		33261-60020-	1	81	140
8608-	BJ70			33261-60021-	1	141	
8411-	33264B BJ70	ROLLER, NO.1 (FOR SHIFT INTER LOCK)		90361-10037-	2	81	
8411-	33264C BJ70	BALL (FOR SHIFT INTER LOCK)		90360-10003-	2	81	
8411-	33265A BJ70	ROLLER, NO.2 (FOR INTER LOCK)		90361-05001-	2	81	
8411-	33275C BJ70	BALL (FOR SHIFT DETENT)		90360-10003-	4	81	


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	33275E BJ70	SPRING, COMPRESSION (FOR SHIFT DETENT BALL)		90501-13011-	4	81	
8411-	33276 BJ70	SEAT, SHIFT DETENT BALL SPRING, NO.2		90341-10004-	1	81	
8411-	33276A BJ70	SPRING, COMPRESSION, NO.2 (FOR SHIFT DETENT BALL)		90501-10067-	1	81	
8411-	33276B BJ70	BALL, SHIFT DETENT, NO.2		90360-08009-	1	81	
8411-	33280 BJ70	PIN ASSY, REVERSE RESTRICT		33280-60010-	1	81	
8411-	33283D BJ70	PLUG (FOR REVERSE RESTRICT PIN)		90341-12008-	1	81	
8411-	33283G BJ70	PIN, SLOTTED SPRING (FOR REVERSE RESTRICT PIN)		90254-05016-	1	81	
8411-8608	33521 BJ70	HOUSING, SHIFT LEVER		33521-60020-	1	81	140
8608-	BJ70			33521-60021-	1	141	
8411-	33531C BJ70	BOOT, DUST (FOR 5TH SHIFT ARM SHAFT)		33531-36040-	1	81	

(8411-)


(8411-)

ILLUST.NO. 10F2

ILLUST.NO. 20F2

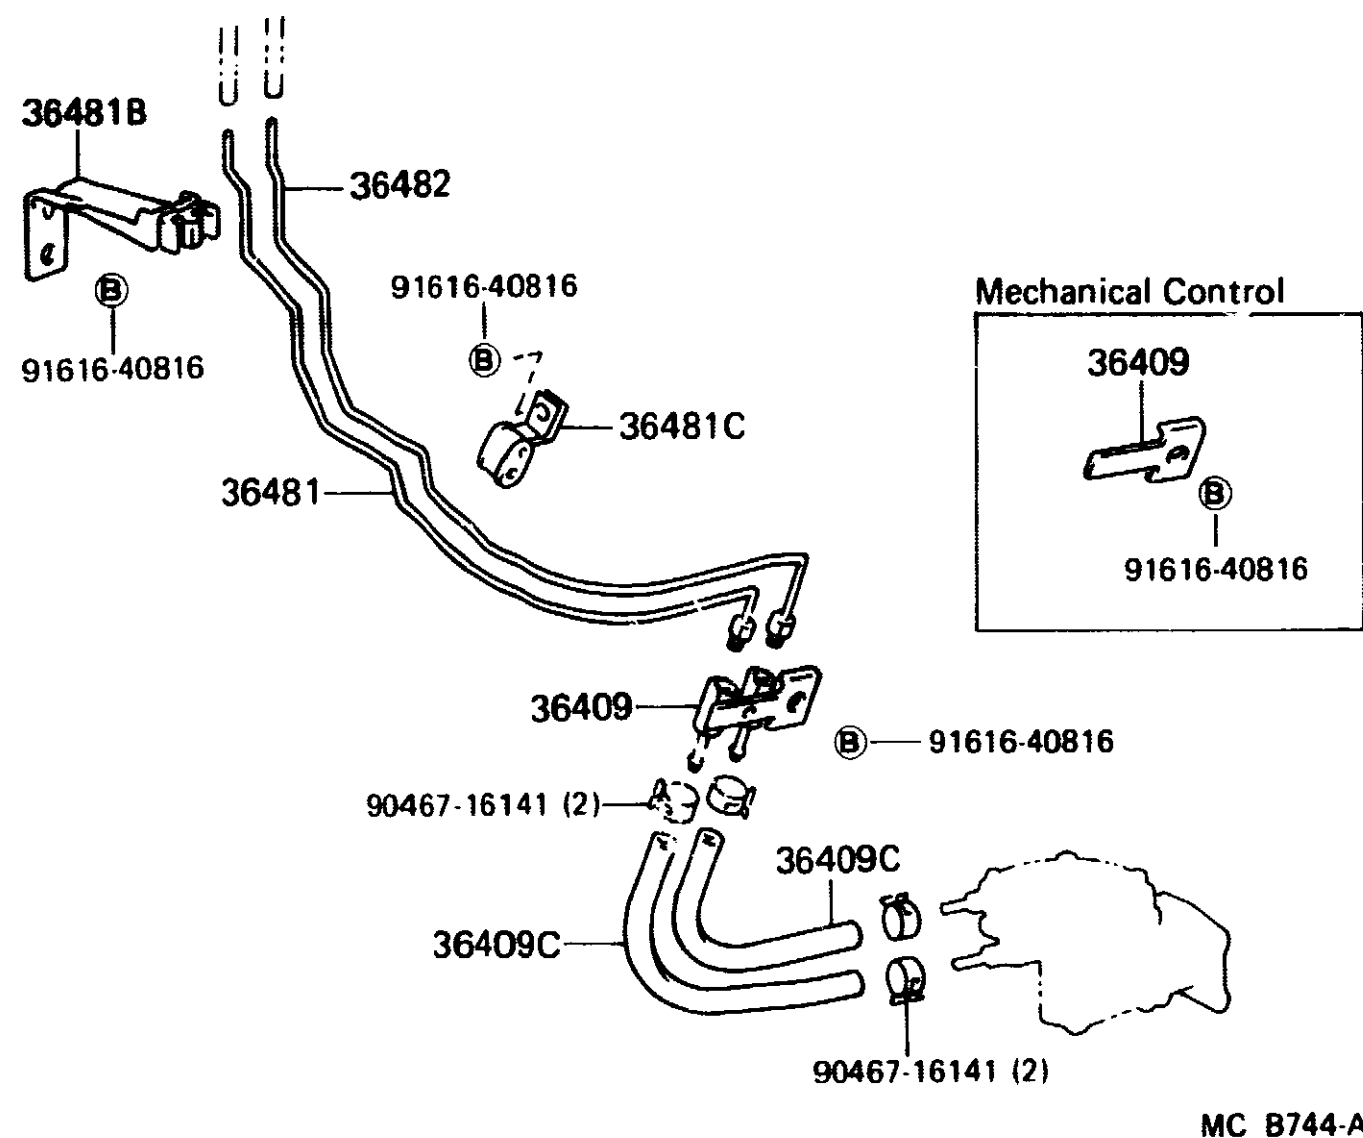

MC B744-A

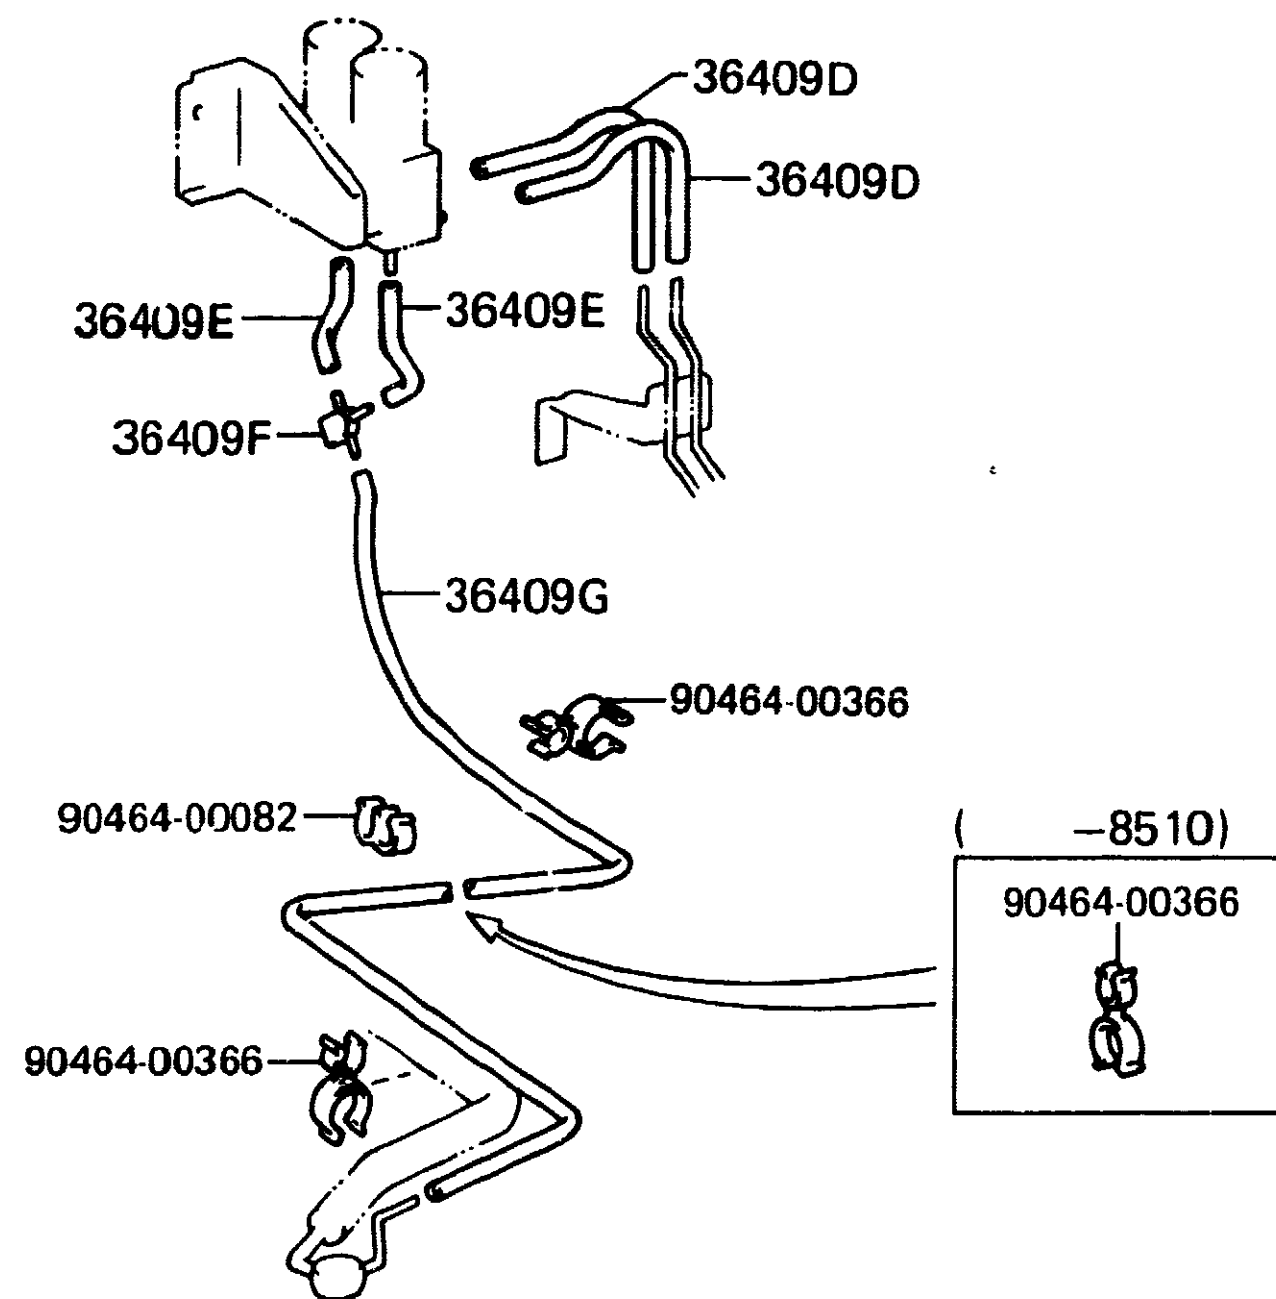

MC B745-B

1-18

GENUINE TOYOTA PARTS

43411 (RH)
43412 (LH)

43411C

43413

43411B

MC B775

PROD. DATE	M O D E L S	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	43-02 DRIVE SHAFT						
8411-	+ + + + 43411 SHAFT, FRONT AXLE, INNER RH			43411-60020-	1	81	
8411-	+ + + + 43411B RING, SHAFT SNAP (FOR FRONT DRIVE INNER SHAFT INNER)			90520-28036-	2	81	
8411-	+ + + + 43411C RING, SHAFT SNAP (FOR FRONT DRIVE INNER SHAFT OUTER)			90520-27091-	2	81	
8411-	+ + + + 43412 SHAFT, FRONT AXLE, INNER LH			43412-60020-	1	81	
8411-8512	+ + + + 43413 SHAFT, DRIVE			# 43405-60015- (43405-60016-)	2	81	
8512-	BJ70			43405-60016-	2		

(8411-)

ILLUST. NO. 30F3

90105-12104 (4)

44110

90179-12029 (4)

94511-02200 — (W)

44251


44111A

04445

04044

04455A

M.C B791-8

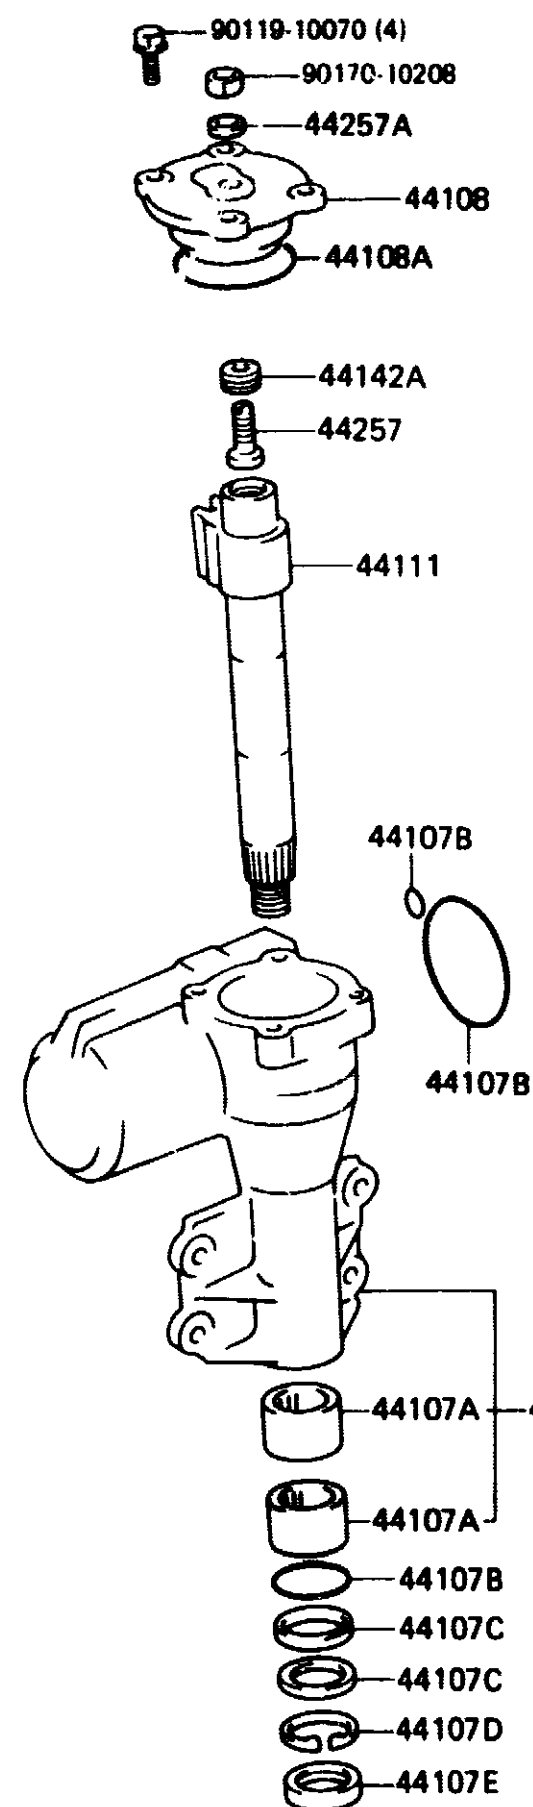

Exploded view diagram of a mechanical assembly. The diagram shows the following components and their part numbers:

- 90119-10070 (4)
- 90159-50010
- 44116
- 44114C
- 44115
- 44114B
- 44114A
- 44105
- 44105A
- 44105B
- 44101H
- 44101D
- 44141C
- 44141A
- 44104
- 44141B
- 44142
- 44101J
- 44101I

MC B'92

MCB791B

MCB792

PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	47750 BJ70	CYLINDER ASSY, DISC BRAKE, LH		47750-60021-	1	81	
8411-	47781 BJ70	COVER, DISC BRAKE DUST, FRONT RH		47703-60020-	1	81	
8411-	47781A BJ70	BOLT (FOR DUST COVER TO STEERING KNUCKLE ARM S ETTING)		90101-10439-	16	81	
8411-	47782 BJ70	COVER, DISC BRAKE DUST, FRONT LH		47704-60020-	1	81	
8411-	47786 BJ70	REINFORCEMENT, DUST COVER, RH		47786-60020-	1	81	
8411-	47787 BJ70	REINFORCEMENT, DUST COVER, LH		47787-60020-	1	81	

[illegible]

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	48141 BJ70	CLIP, FRONT SPRING, NO.1		48141-60062-	4	81	
8411-	48147 BJ70	BOLT, FRONT SPRING, CENTER		48289-60010-	2	81	
8411-	48147A BJ70	NUT, FRONT SPRING CENTER BOLT		48284-60062-	2	81	
8411-	48153A BJ70	SILENCER, FRONT SPRING, NO.1		48153-60230-	4	81	
8411-	48154 BJ70	SILENCER, FRONT SPRING, NO.2		48154-60230-	4	81	
8411-	48304 BJ70	BUMPER SUB-ASSY, FRONT SPRING, NO.1		48304-60050-	1	81	
8411-	48305 BJ70	BUMPER SUB-ASSY, FRONT SPRING, NO.2		48305-60020-	1	81	
8411-	48346 BJ70	STOPPER, BUMPER, FRONT		48346-60010-	2	81	
8411-	48411 BJ70	BRACKET, FRONT SPRING (FOR FRONT RH)		48411-60050-	1	81	
8411-	48412 BJ70	BRACKET, FRONT SPRING (FOR FRONT LH)		48412-60010-	1	81	
8411-	48414 BJ70	BRACKET, FRONT SPRING (FOR REAR RH)		48433-60020-	1	81	
8411-	48415 BJ70	BRACKET, FRONT SPRING (FOR REAR LH)		48434-60020-	1	81	
8411-	48475 BJ70	PLATE, DISTANCE (FOR FRONT)		48475-60020-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	48505 BJ70	SEAT, FRONT SPRING, RH		48048-60020-	1	81	
8411-8608	48505A BJ70	BOLT, U (FOR FRONT SPRING)		L=195, W/DI# 90118-14187- STANCE PLA (90117-14016- TE	2	81	140
8411-8608	BJ70	L=185 # 90118-14188- (90117-14017-)			4	81	140
8608-	BJ70	L=195, W/DI 90117-14016- STANCE PLA TE			2	141	
8608-	BJ70	L=185 90117-14017-			4	141	
8411-	48506 BJ70	SEAT, FRONT SPRING, LH		48049-60020-	1	81	
8411-	48510 BJ70	ABSORBER ASSY, SHOCK, FRONT RH		48511-60120-	1	81	
8411-	48510A BJ70	CUSHION, FRONT SHOCK ABSORBER		90948-01003-	4	81	
8411-	48510B BJ70	RETAINER, CUSHION, NO.1 (FOR FRONT SHOCK ABSORBER)		90948-02002-	4	81	
8411-	48510C BJ70	RETAINER, CUSHION, NO.2 (FOR FRONT SHOCK ABSORBER)		90948-02017-	2	81	
8411-	48510D BJ70	WASHER, FRONT SHOCK ABSORBER CUSHION, NO.1		90948-03011-	2	81	
8411-8510	48510E BJ70	WASHER, FRONT SHOCK ABSORBER CUSHION, NO.2		90948-03015-	2	81	100
8411-	48510H BJ70	BUSH (FOR FRONT SHOCK ABSORBER)		90385-19057-	4	81	
8411-	48512A BJ70	BRACKET, FRONT SHOCK ABSORBER, UPPER RH		48512-60040-	1	81	

90502 - 90999

I 14











M74-28-0047

90999 - 99915

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
90502-29001-	1-J6	90562-18151-	1-H5	90937-01198-	1-K7	90999-70061-	1-F11	96411-12800-	1-H1		
90506-09035-	2-A6	-30002-	1-J9	-01199-	1-K7	-73088-	1-B2	-13000-	1-H1		
-12031-	1-J10	-31002-	1-J9	-01200-	1-K7	91121-51070-	1-C10	-13500-	1-H1		
-16053-	2-M5	-32002-	1-J9	90942-01007-	2-D1	-1-F5	1-F5	-41200-	1-F1		
-18031-	1-J10	-48001-	1-J9	-01047-	1-E8	91131-50828-	1-F5	1-G6	1-G6		
-20033-	1-K10	-67001-	1-J9	-02052-	1-D8	-50835-	2-G7	-41400-	1-I1		
-23009-	1-M8	90564-70001-	1-C7	-02053-	1-J8	91611-60610-	1-M6	-41800-	1-G6		
-26011-	1-J10	-70002-	1-C7	-03079-	1-E8	-60828-	1-K5	-42500-	1-F1		
-26014-	1-J10	-70003-	1-C7	-03080-	1-E8	-60855-	1-D2	-42800-	1-F1		
90507-12022-	1-C10	-70004-	1-C7	-03081-	1-E8	-60865-	1-D2	1-H1	1-H1		
-14001-	1-A9	-70005-	1-C7	-03082-	1-E8	-61020-	1-M6	-43000-	1-H1		
-14015-	1-F5	-70006-	1-C7	-03083-	1-E8	91651-60830-	1-M6	-43500-	1-H1		
-16007-	2-A6	-70007-	1-C7	-03084-	1-E8	-61030-	1-L6	96431-53828-	1-H1		
90508-16079-	2-M5	-70008-	1-C7	-03085-	1-E8	-61040-	1-L6	96432-23814-	1-H1		
-16080-	2-M5	-70009-	1-C7	-03086-	1-E8	92132-60825-	1-B3	96710-01008-	1-H4		
-29017-	2-G7	-70010-	1-C7	-03107-	1-E8	94115-71200-	1-J10	96711-19010-	1-H6		
90520-07001-	1-H6	-70011-	1-C7	-05009-	1-E8	94183-60800-	1-J11	-19010-	1-H7		
-08098-	1-H6	-70012-	1-C7	90945-02034-	1-M8	94184-61200-	1-M9	1-J9	1-J9		
-14002-	1-I6	-70013-	1-C7	90948-01003-	1-I11	95161-10416-	1-B2	-19013-	1-C9		
-15001-	1-C9	90910-02046-	1-F1	-02002-	1-I11	-10519-	1-B2	-19014-	1-C9		
-17042-	1-M8	-09070-	1-H1	-02015-	1-J11	1-C2	1-C2	-19016-	1-B9		
-27091-	1-I8	-09072-	1-H1	-02017-	1-I11	95332-04020-	1-B4	-24053-	1-M8		
-28036-	1-I8	90913-02051-	1-C2	-02032-	1-J11	-06010-	2-E7	96740-02063-	1-M3		
-29024-	1-L7	-03019-	1-D2	-02033-	1-D11	-06020-	2-E7	96940-33005-	1-B11		
-29025-	1-L7	-05021-	1-D2	-03011-	1-I11	-06030-	2-E7	1-C11	1-C11		
-29026-	1-L7	90915-01015-	1-I1		1-M11	-06040-	1-H8	-33505-	1-C11		
-29027-	1-L7	90916-03059-	1-L2	-03015-	1-I11	-06060-	1-B8	-33605-	1-C11		
-30214-	1-E6	90917-06012-	1-D3		1-M11	1-H8	1-H8	-39855-	1-B11		
-30216-	1-E6	-10020-	2-F7	90949-01323-	1-H8	-08020-	2-E7	97600-30307-	1-C7		
-30218-	1-E6	90923-02072-	1-M3	90950-01155-	2-D2	2-F7	2-F7	99132-11075-	2-A8		
-31001-	1-J8	-02073-	1-M3	90980-05022-	2-A10	-08040-	2-E7	-11270-	2-J7		
-33107-	1-D7	-05014-	1-H2	-05052-	2-A10	S 95333-06022-	2-E7	2-M7	2-M7		
-33110-	1-D7	90930-03058-	1-L9	-05067-	2-A10	S -06040-	1-H8	-12034-	2-K8		
-36015-	1-D6	-03075-	1-M6	-05086-	2-A10	S -06060-	1-B8	2-M8	2-M8		
-36016-	1-D6	-03097-	1-C8	-05106-	2-A10	S -08020-	2-E7	-12080-	2-J7		
-36250-	1-E6		1-H8	-05110-	2-A10	S 2-F7	2-F7	-12100-	2-C8		
-36251-	1-E6	90931-01017-	1-F5	90981-01046-	2-I7	95411-19930-	1-J7	-21270-	2-M7		
-36252-	1-E6	-01020-	1-F5	-11020-	2-B8	-19995-	1-J7	99134-12030-	2-K8		
-36253-	1-E6	90937-01117-	1-D8		2-L7	95441-09190-	1-G10	2-M8	2-M8		
-36254-	1-E6	-01118-	1-D8	-12005-	2-C8	-09260-	1-J7	-13060-	2-C8		
-36255-	1-E6	-01119-	1-D8	-12015-	2-B8	-09300-	1-J7	99142-87175-	2-E8		
90521-01002-	1-M8	-01120-	1-D8		2-L7	-09420-	1-J5	99343-01195-	1-A3		
-34002-	1-A2	-01121-	1-D8	-16014-	2-J7	95444-09240-	1-G10	-11510-	1-A3		
-44002-	1-B9	-01122-	1-D8		2-M7	96111-10490-	1-L2	99556-20055-	2-L10		
	1-J9	-01132-	1-K7	-16015-	2-M7	-10510-	1-M2	-20080-	2-L10		
-75023-	1-D7	-01136-	1-K7	-16016-	2-A8	-10560-	1-M2	-20100-	2-L10		
90522-40043-	1-H10	-01140-	1-K7	-16019-	2-J7	-10570-	1-M2	-30055-	2-L10		
-48044-	1-H10	-01147-	1-K7		2-C8	-10710-	1-F3	-30100-	2-L10		
90523-15025-	1-H6	-01148-	1-K7	90982-05031-	2-E8	-10800-	1-F3	99911-10250-	1-B1		
90530-06001-	2-A3	-01149-	1-K7	-08233-	2-I8	-10830-	1-F3	-11200-	1-B1		
90541-03005-	2-D2	-01150-	1-K7	-08249-	2-I8	96132-30600-	1-B8	-20250-	1-B1		
-03015-	2-D2	-01151-	1-K7	-09002-	2-C9	1-H8	1-H8	99913-11500-	1-A1		
-05018-	2-F7	-01152-	1-K7	-09003-	2-C9	96151-01700-	1-C9	-12000-	1-A1		
-06008-	1-C10	-01153-	1-K7	-09004-	2-C9	-02000-	1-E10	99914-10810-	1-A1		
	1-F5	-01154-	1-K7	-09005-	2-C9	96152-00300-	1-M8	-11012-	1-A1		
	2-G7	-01155-	1-K7	90987-01003-	2-E9	96160-00500-	1-K10	-11214-	1-A1		
-09038-	2-G4	-01156-	1-K7	-01004-	2-E9	-01000-	1-J5	-11417-	1-A1		
90560-10406-	1-G7	-01157-	1-K7	-02004-	2-E9	96411-11200-	1-F1	99915-10700-	1-A1		
-12233-	2-E1	-01158-	1-K7	-02005-	2-E9	-11400-	1-I1				
-34001-	1-D7	-01184-	1-K7	-02006-	2-E9	-11600-	1-G6				
-35008-	1-C7	-01191-	1-K7	-03001-	2-E9	1-M6	1-M6				
-36001-	1-D6	-01192-	1-K7	-03002-	2-E9	-11800-	1-G6				
-38003-	1-D7	-01193-	1-K7	90999-00085-	2-H5	-12500-	1-F1				
90561-04010-	1-G9	-01194-	1-K7	-00106-	2-H5	-12800-	1-F1				

ILLUSTRATED INDEX

I 16

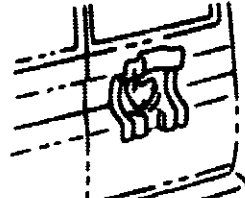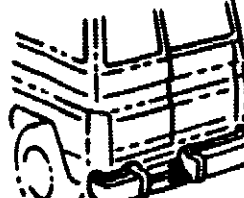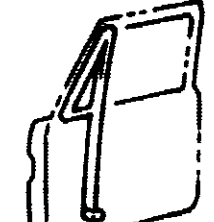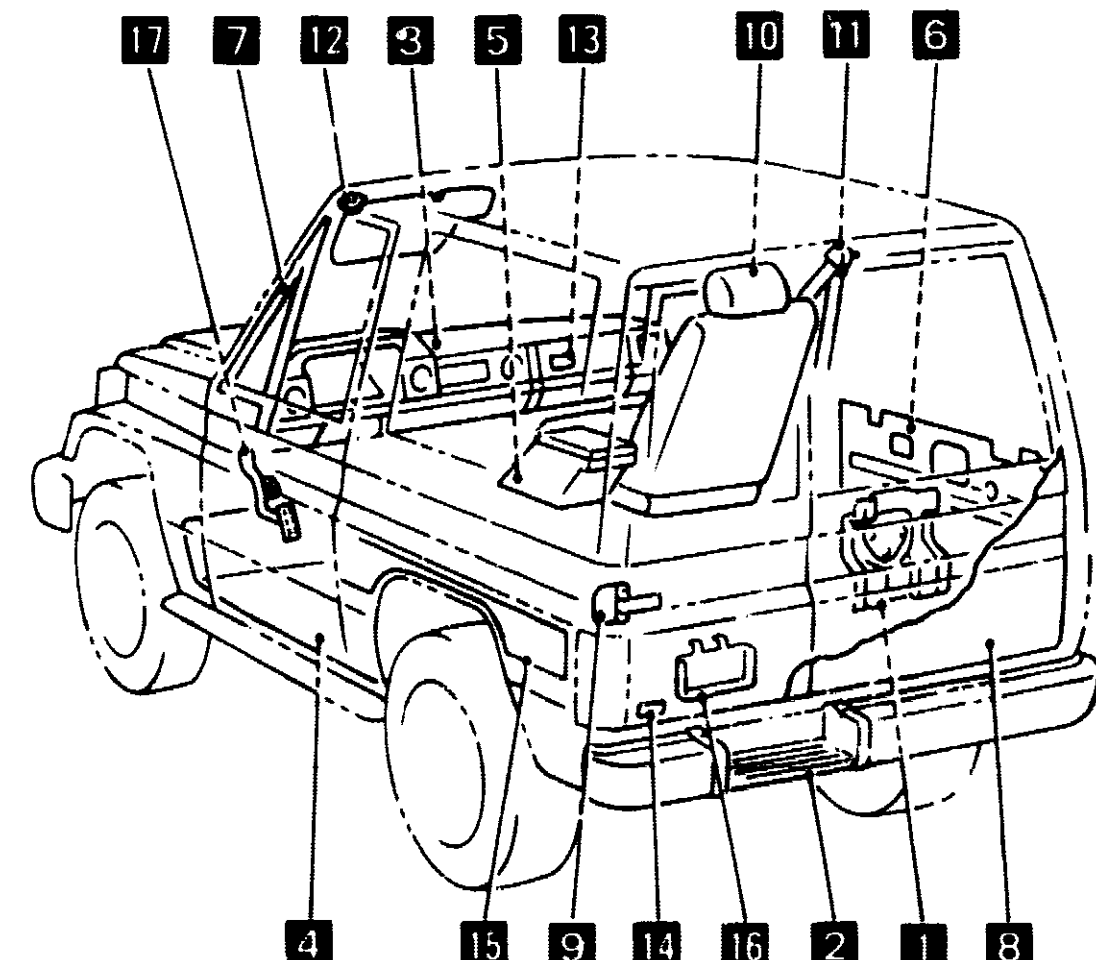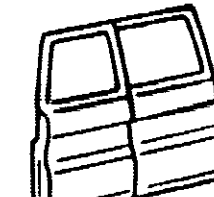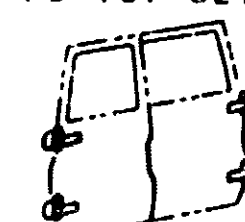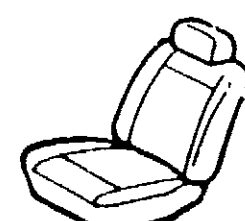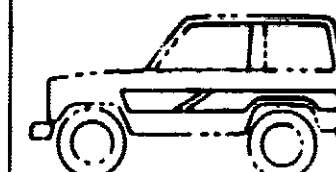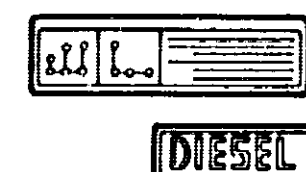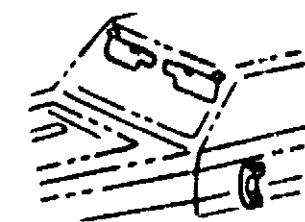2-D1 (51-53) 1  Spare wheel Carrier	2-H1 (52-53) 2  Rear Bumper & Stay	2-B2 (55-51) 3  Instrument Panel	2-A3 (58-54) 4  Floor Mat & Pad	2-C3 (58-55) 5  Console Box	2-B4 (64-51) 6  Inside Trim Board	2-J4 (67-52) 7  Ventilator Window
BODY GROUP (2/2) 						2-C5 (67-61) 8  Back Door Panel & Glass
						2-F5 (67-62) 9  Rear Door Lock & Hinge
						2-J5 (71-51) 10  Seat & Seat Track
						2-C6 (71-52) 11  Seat Belt
2-G7 (78-51) 17  Accelerator Link	2-B7 (75-54) 16  Tool Box & License Bracket	2-M6 (75-53) 15  Body Stripe	2-J6 (75-51) 14  Emblem & Name Plate	2-H6 (74-55) 13  Caution Plate	2-E6 (74-51) 12  Armrest & Visor	

MB H743

FIG. 11-06 TIMING GEAR COVER & REAR END
PLATE

1-J1



M74-11-0132

(8411-)

(8411-)

ILLUST. NO. 10F2

ILLUST. NO. 20F2

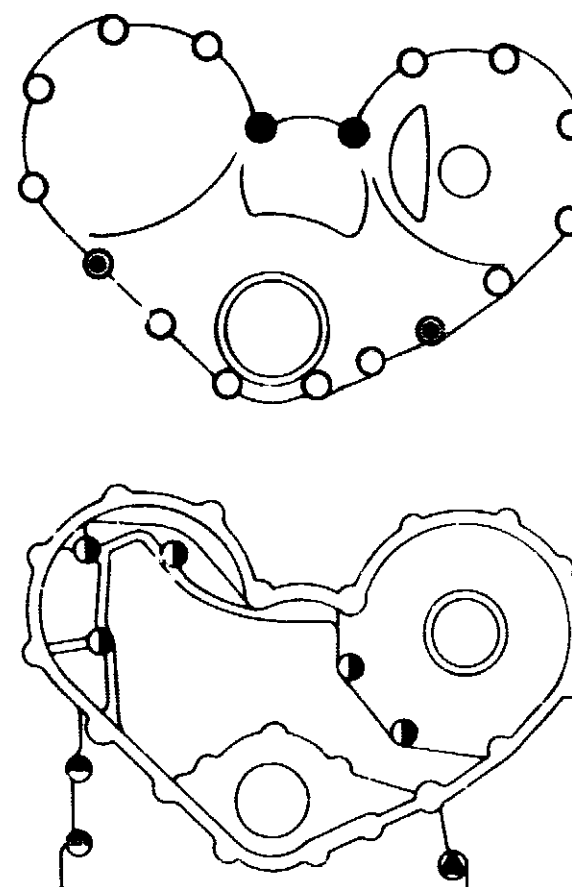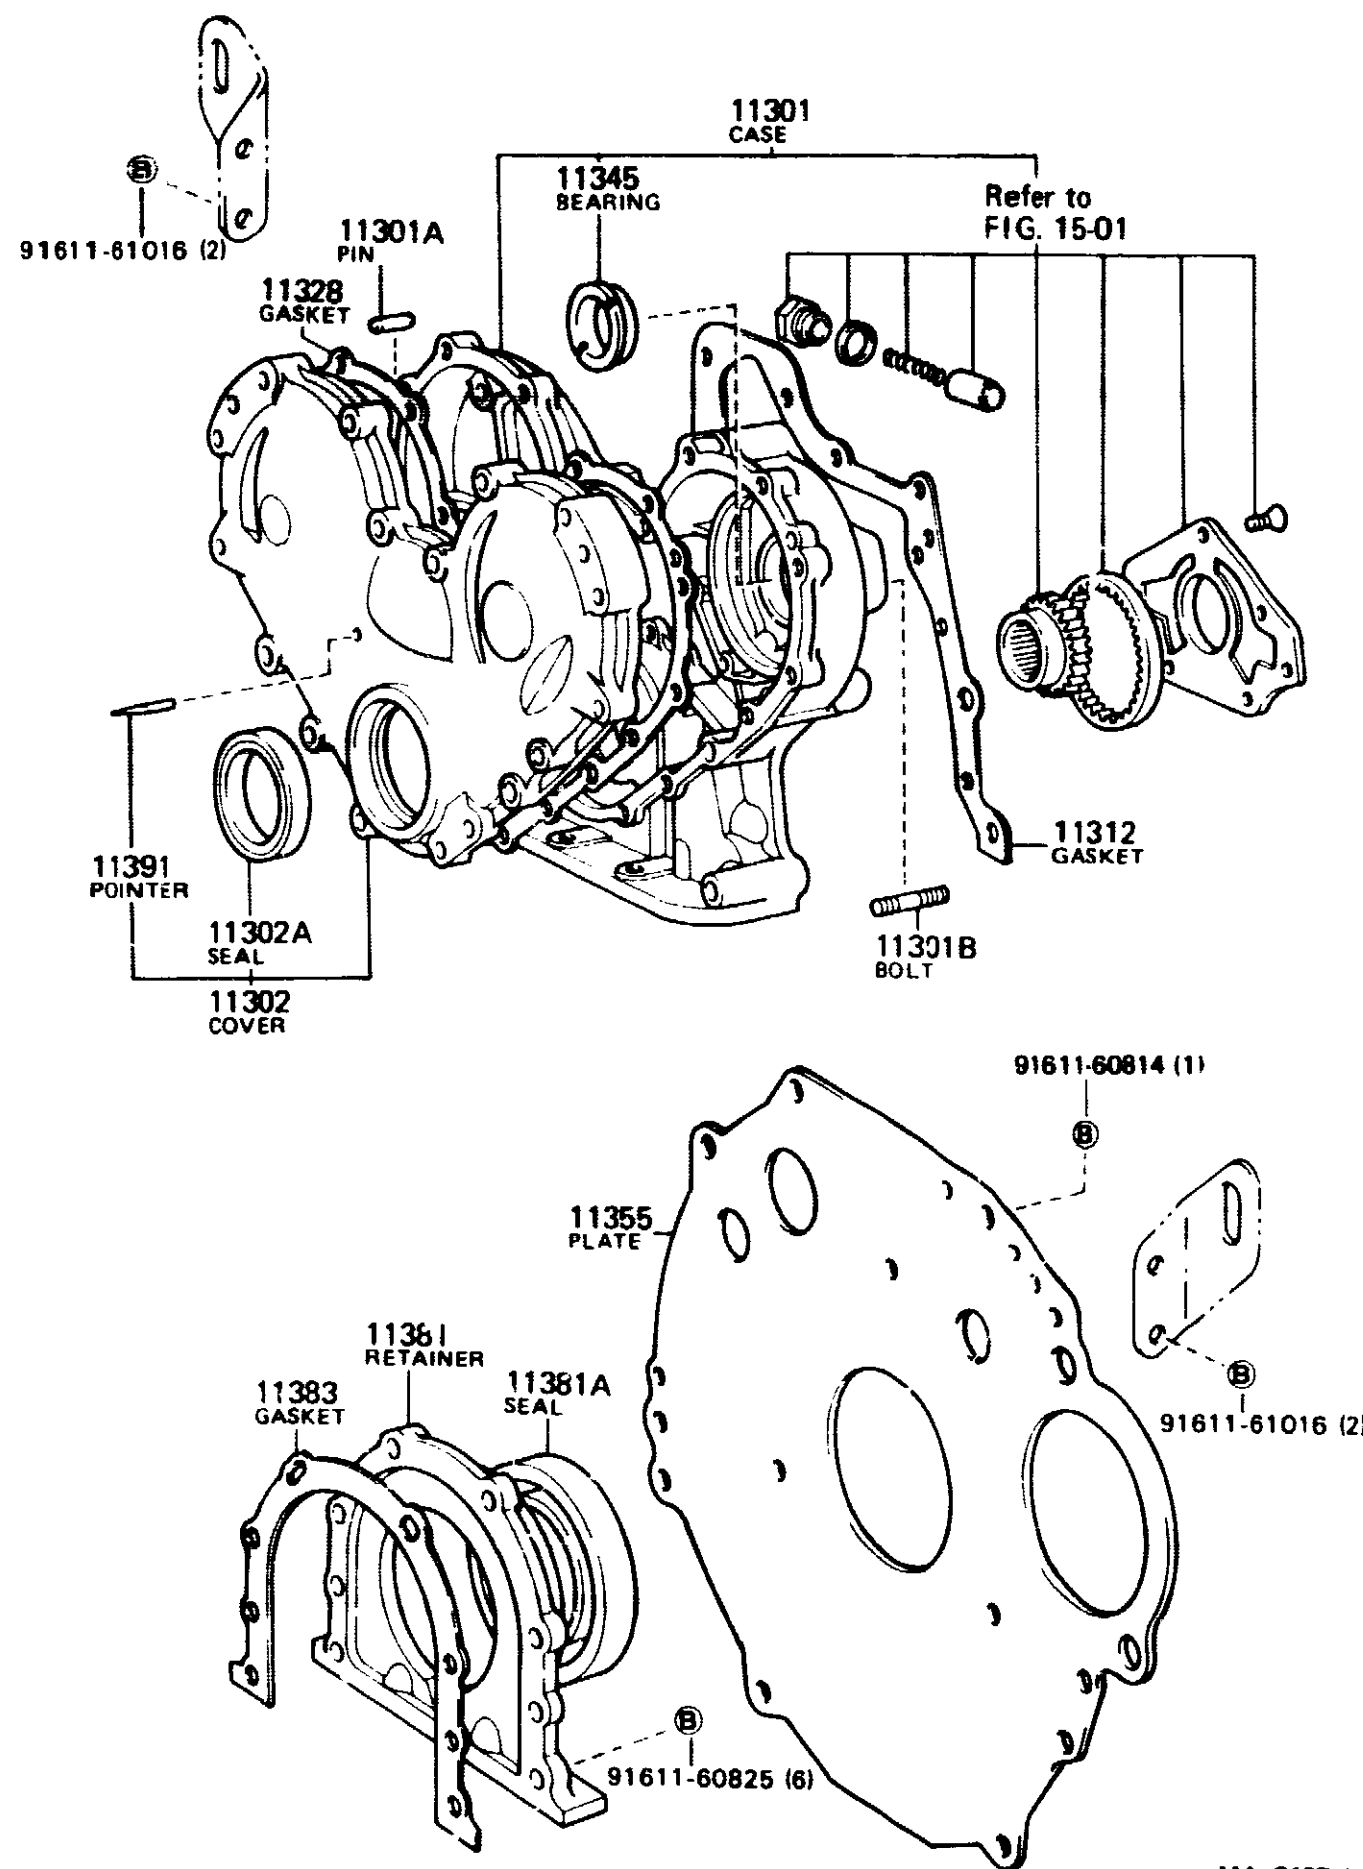

○	Ⓑ	91511-60835 (13)
●	Ⓑ	90119-08145 (2)
●	Ⓑ	90119-10073 (2)

①	Ⓑ	91611-60825 (5)
②	Ⓑ	91611-61060 (2)
③	Ⓑ	90119-10073 (1)

MA 6198

MA 6197-A

MA6197A



MA6198

PROD. DATE	MODELS	DESCRIPTION	PART NUMBER	QTY	REV. REF. CODE	
					FROM	UP TO
8411-	27315	COVER, ALTERNATOR FELT, INNER NO.1	27315-57060-	1	81	
	3B..BJ70	12V 55A, 24V 30A				
8411-8510	27330	ROTOR ASSY, ALTERNATOR	27330-64030-	1	81	100
	3B..BJ70	12V 55A				
8510-	3B..BJ70	24V 30A	27330-56390-	1	101	
8411-	27330B	RING, SNAP (FOR ALTERNATOR ROTOR)	90090-07103-	1	81	
	3B..BJ70	12V 55A, 24V 30A				
8411-	27350	FRAME ASSY, RECTIFIER END	27350-56110-	1	81	
	3B..BJ70	12V 55A, 24V 30A				
8411-	27350B	CONDENSER, ALTERNATOR	90099-52066-	1	81	
	3B..BJ70	12V 55A, 24V 30A				
8411-	27351	BUSH (FOR ALTERNATOR RECTIFIER END FRAME)	27351-56013-	1	81	
	3B..BJ70	12V 55A, 24V 30A				
8411-	27352	COVER, FRAME BRUSH	27388-57070-	1	81	
	3B..BJ70	12V 55A, 24V 30A				
8411-8510	27353	HOLDER, W/RECTIFIER POSITIVE, ALTERNATOR	27353-57070-	1	81	100
	3B..BJ70	12V 55A				
8510-	3B..BJ70	24V 30A	27353-56390-	1	101	
8411-8510	27356	HOLDER, W/RECTIFIER NEGATIVE, ALTERNATOR	27356-54170-	1	81	100
	3B..BJ70	12V 55A				
8510-	3B..BJ70	24V 30A	27353-56390-	1	101	
8411-8510	27370	HOLDER ASSY, ALTERNATOR BRUSH	27373-57070-	1	81	100
	3B..BJ70	12V 55A				
8510-	3B..BJ70	24V 30A	27373-57120-	1	101	

PROD. DATE	MODELS	DESCRIPTION	PART NUMBER	QTY	REV. REF. CODE	
					FROM	UP TO
8411-	27371	BRUSH, ALTERNATOR	27371-56070-	2	81	
	3B..BJ70	12V 55A, 24V 30A				
8411-	27372	SPRING, ALTERNATOR BRUSH	27372-56070-	2	81	
	3B..BJ70	12V 55A, 24V 30A				
8411-8510	27410	STATOR ASSY, ALTERNATOR	27410-57070-	1	81	100
	3B..BJ70	12V 55A				
8510-	3B..BJ70	24V 30A	27410-56390-	1	101	
8411-	27411	PULLEY, ALTERNATOR	27411-57060-	1	81	
	3B..BJ70	12V 55A, 24V 30A				
8411-	27441	FAN, ALTERNATOR	27441-56090-	1	81	
	3B..BJ70	12V 55A, 24V 30A				
8411-8510	27700A	REGULATOR ASSY, GENERATOR	27700-57060-	1	81	100
	3B..BJ70	12V 55A				
8510-	3B..BJ70	24V 30A	27700-57050-	1	101	
8411-	29342A	PACKING, VACUUM PUMP	90099-14055-	1	81	
	3B..BJ70	12V 55A, 24V 30A				

(8411-)

GENUINE TOYOTA PARTS

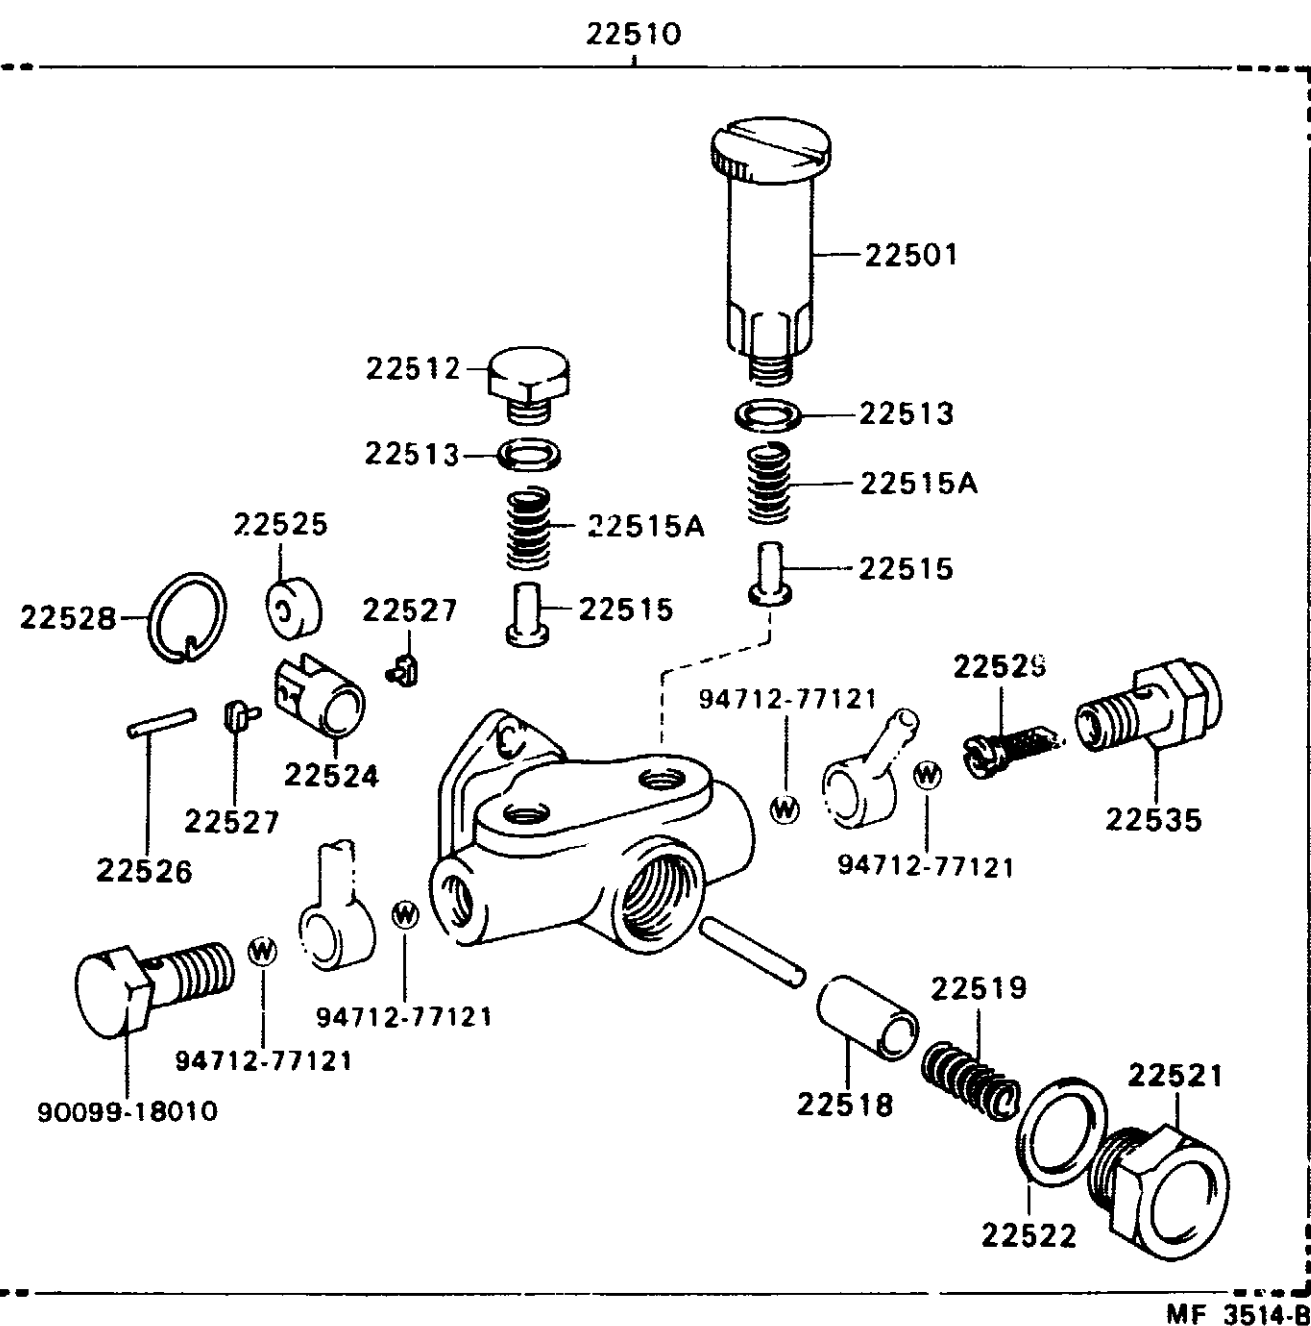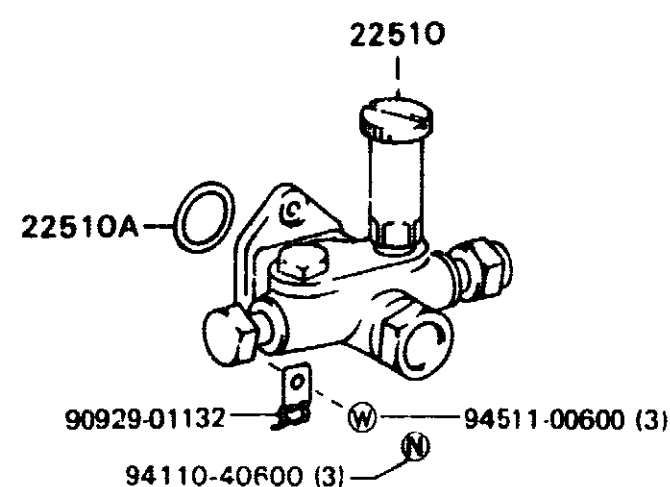

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	22-06 FUEL FEED PUMP						
8411-	22501	PUMP SUB-ASSY, PRIMING		22501-77021-	1	81	
8411-	3B..BJ70						
8411-	22510	PUMP ASSY, FUEL FEED		22510-56040-	1	81	
8411-	3B..BJ70						
8411-	22510A	RING, O (FOR FUEL FEED PUMP)		90999-14015-	1	81	
8411-	3B..BJ70						
8411-	22512	PLUG, FEED PUMP CHECK VALVE CHAMBER		22512-77020-	1	81	
8411-	3B..BJ70						
8411-	22513	GASKET, CHECK VALVE CHAMBER PLUG		22513-77020-	2	81	
8411-	3B..BJ70						
8411-	22515	VALVE, FEED PUMP CHECK		22515-77021-	2	81	
8411-	3B..BJ70						
8411-	22515A	SPRING, FEED PUMP CHECK VALVE		90501-05141-	2	81	
8411-	3B..BJ70						
8411-	22518	PISTON, FEED PUMP		RED # 22518-56010- (22518-77020-)	1	81	
8411-	3B..BJ70						
8411-	3B..BJ70	YELLOW # 22518-56011- (22518-77020-)			1	81	
8411-	3B..BJ70	GREEN # 22518-56012- (22518-77020-)			1	81	
8411-	3B..BJ70	WHITE # 22518-56013- (22518-77020-)			1	81	
8411-	3B..BJ70	BLUE 22518-77020-			1	81	
8411-	22519	SPRING, FEED PUMP PISTON		22519-48010-	1	81	
8411-	3B..BJ70						
8411-	22521	PLUG, FEED PUMP PISTON CHAMBER		22521-77021-	1	81	
8411-	3B..BJ70						

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	31-04 CLUTCH BOOSTER						
8411-	04318	BOOSTER KIT, CLUTCH		04318-60020-	1	81	
8411-	BJ70						
8411-	31403A	VALVE ASSY, VACUUM CHECK (FOR CLUTCH VACUUM)		44730-60040-	1	81	
8411-	BJ70						
8411-	31430	RESERVOIR ASSY, CLUTCH VACUUM		31430-60030-	1	81	
8411-	BJ70						
8411-	31436A	HOSE, NO. 1 (FOR CLUTCH BOOSTER VACUUM)		31437-60060-	1	81	
8411-	BJ70						
8411-	31437	HOSE, NO. 2 (FOR CLUTCH BOOSTER VACUUM)		95441-09420-	1	81	
8411-	BJ70						
8411-	31438	HOSE, NO. 3 (FOR CLUTCH BOOSTER VACUUM)		31436-60040-	1	81	
8411-	BJ70						
8411-	31440	BOOSTER ASSY, CLUTCH W/AIR CLEANER		31440-60040-	1	81	
8411-	BJ70						
8411-	31440B	PISTON, BOOSTER (FOR CLUTCH BOOSTER)		44642-87502-	1	81	
8411-	BJ70						
8411-	31440C	KEY, VALVE STOPPER (FOR CLUTCH BOOSTER)		44635-12480-	1	81	
8411-	BJ70						
8411-	31440D	ROD SUB-ASSY, BOOSTER PISTON (FOR CLUTCH BOOSTER)		44606-12520-	1	81	
8411-	BJ70						
8411-	31440E	SEAL, BOOSTER BODY NO. 1 (FOR CLUTCH BOOSTER)		44621-28120-	1	81	
8411-	BJ70						
8411-	31440F	RING, CIRCULAR INTERNAL (FOR CLUTCH BOOSTER)		44628-28120-	1	81	
8411-	BJ70						

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	31440G	RING, E (FOR CLUTCH BOOSTER AIR VALVE)		96160-01000-	1	81	
8411-	BJ70						
8411-	31440H	GASKET, CLUTCH BOOSTER BRACKET		44785-14010-	1	81	
8411-	BJ70						
8411-	31449	COVER, CLUTCH BOOSTER PISTON		31449-60010-	1	81	
8411-	BJ70						
8411-	31458	BOOT, CLUTCH BOOSTER PISTON COVER		31458-60010-	1	81	
8411-	BJ70						
8411-8610	31453A	SEPARATOR, AIR CLEANER (FOR CLUTCH BOOSTER)		44672-22120-	1	81	
8411-	BJ70						
8411-	31488B	TUBE, VACUUM HOSE TO VACUUM HOSE		31488-60070-	1	81	
8411-	BJ70						


FIG.33-12 SHIFT LEVER & RETAINER

1-J6

M74-13-0034

GENUINE TOYOTA PARTS

(8411-)

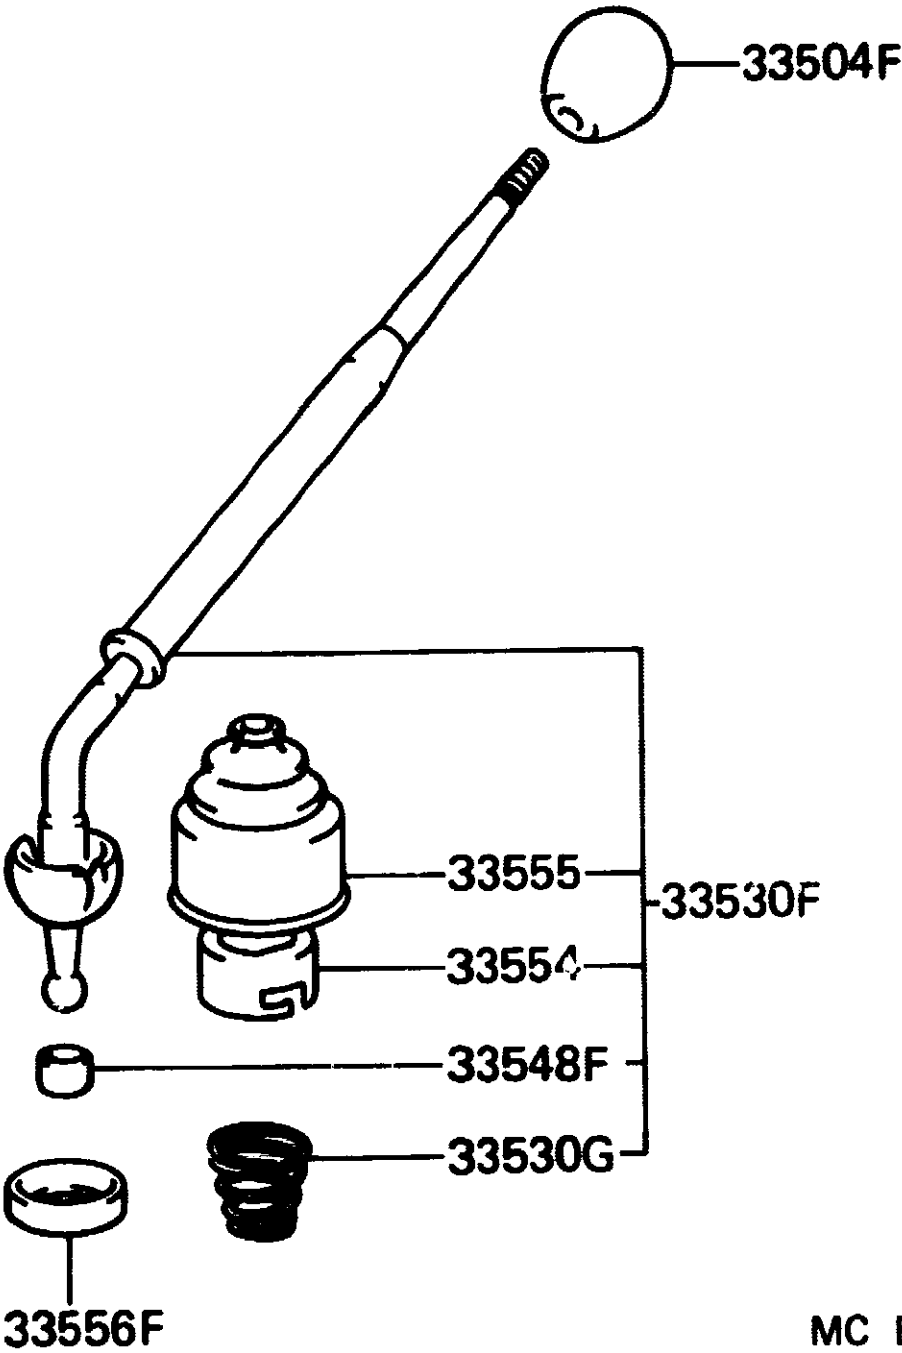

PROD.DATE	M O D E L S	DESCRIPTION	R / P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
FIG.	33-12 SHIFT LEVER & RETAINER						
	33504F	KNOB SUB-ASSY, SHIFT LEVER (FOR FLOOR SHIFT)					
8411-8510	BJ70	BLACK		33504-22111-01	1	81	100
8411-	BJ70	W/URETHANE STEERING WHEEL		33504-60060-	1	81	
	33530F	LEVER ASSY, SHIFT (FOR FLOOR SHIFT)					
8411-	BJ70			33530-60100-	1	81	
	33530G	SPRING, CONICAL (FOR SHIFT LEVER)					
8411-	BJ70			90502-29001-	1	81	
	33548F	BUSH, SHIFT LEVER (FOR FLOOR SHIFT)					
8411-	BJ70			33548-60020-	1	81	
	33554	CAP, SHIFT LEVER					
8411-	BJ70			33554-60021-	1	81	
	33555	BOOT, SHIFT LEVER					
8411-	BJ70			33555-55011-	1	81	
	33556F	SEAT, TRANSMISSION SHIFT LEVER BALL					
8411-8510	BJ70			33505-60010- (33505-60011-)	1	81	
8510-	BJ70			33505-60011-	1		

FIG. 36-16

GENUINE TOYOTA PARTS

1-J7

M74-15-0625

GENUINE TOYOTA PARTS

PROD. DATE	M O D E L S		DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	FROM	UP TO
FIG.	36-16 TRANSFER VACUUM PIPING								
	+-----+								
	36409	SUPPORT SUB-ASSY, VACUUM TUBE UNION							
	+-----+								
8411-	BJ70		ELECTRIC C ONTROL TRA NSFER		36409-60030-	1	81		
8411-	BJ70		MECHANICAL CONTROL T RANSFER		36489-60030-	1	81		
	+-----+								
	36409C	HOSE, VACUUM, NO.1 (FOR FRONT DRIVE SHIFT)							
	+-----+								
8411-	BJ70		L=260		95441-09260-	1	81		
8411-	BJ70		L=300		95441-09300-	1	81		
	+-----+								
	36409D	HOSE, VACUUM, NO.2 (FOR FRONT DRIVE SHIFT)							
	+-----+								
8411-	BJ70		XH,L=150		95411-19930-	2	81		
	+-----+								
	36409E	HOSE, VACUUM, NO.3 (FOR FRONT DRIVE SHIFT)							
	+-----+								
8411-	BJ70		XH,L=80		95411-19930-	2	81		
	+-----+								
	36409F	WAY, 3 (FOR FRONT DRIVE SHIFT)							
	+-----+								
8411-	BJ70				90413-04005-	1	81		
	+-----+								
	36409G	HOSE, VACUUM, NO.4 (FOR FRONT DRIVE SHIFT)							
	+-----+								
8411-	BJ70		XH,L=850		95411-19995-	1	81		
	+-----+								
	36481	TUBE, FRONT DRIVE VACUUM, NO.1							
	+-----+								
8411-	BJ70				36481-60070-	1	81		
	+-----+								
	36481B	CLAMP, FRONT DRIVE VACUUM TUBE, NO.1							
	+-----+								
8411-	BJ70				47371-60040-	1	81		
	+-----+								
	36481C	CLAMP, FRONT DRIVE VACUUM TUBE, NO.2							
	+-----+								
8411-	BJ70				47372-35010-	1	81		
	+-----+								
	36482	TUBE, FRONT DRIVE VACUUM, NO.2							
	+-----+								
8411-	BJ70				36482-60070-	1	81		

*H.L.=Cut hose to length as specified in remarks

FIG.43-03 FRONT AXLE HUB


1-J8

M74-13-0042

(8411-)

Disc Brake

GENUINE TOYOTA PARTS

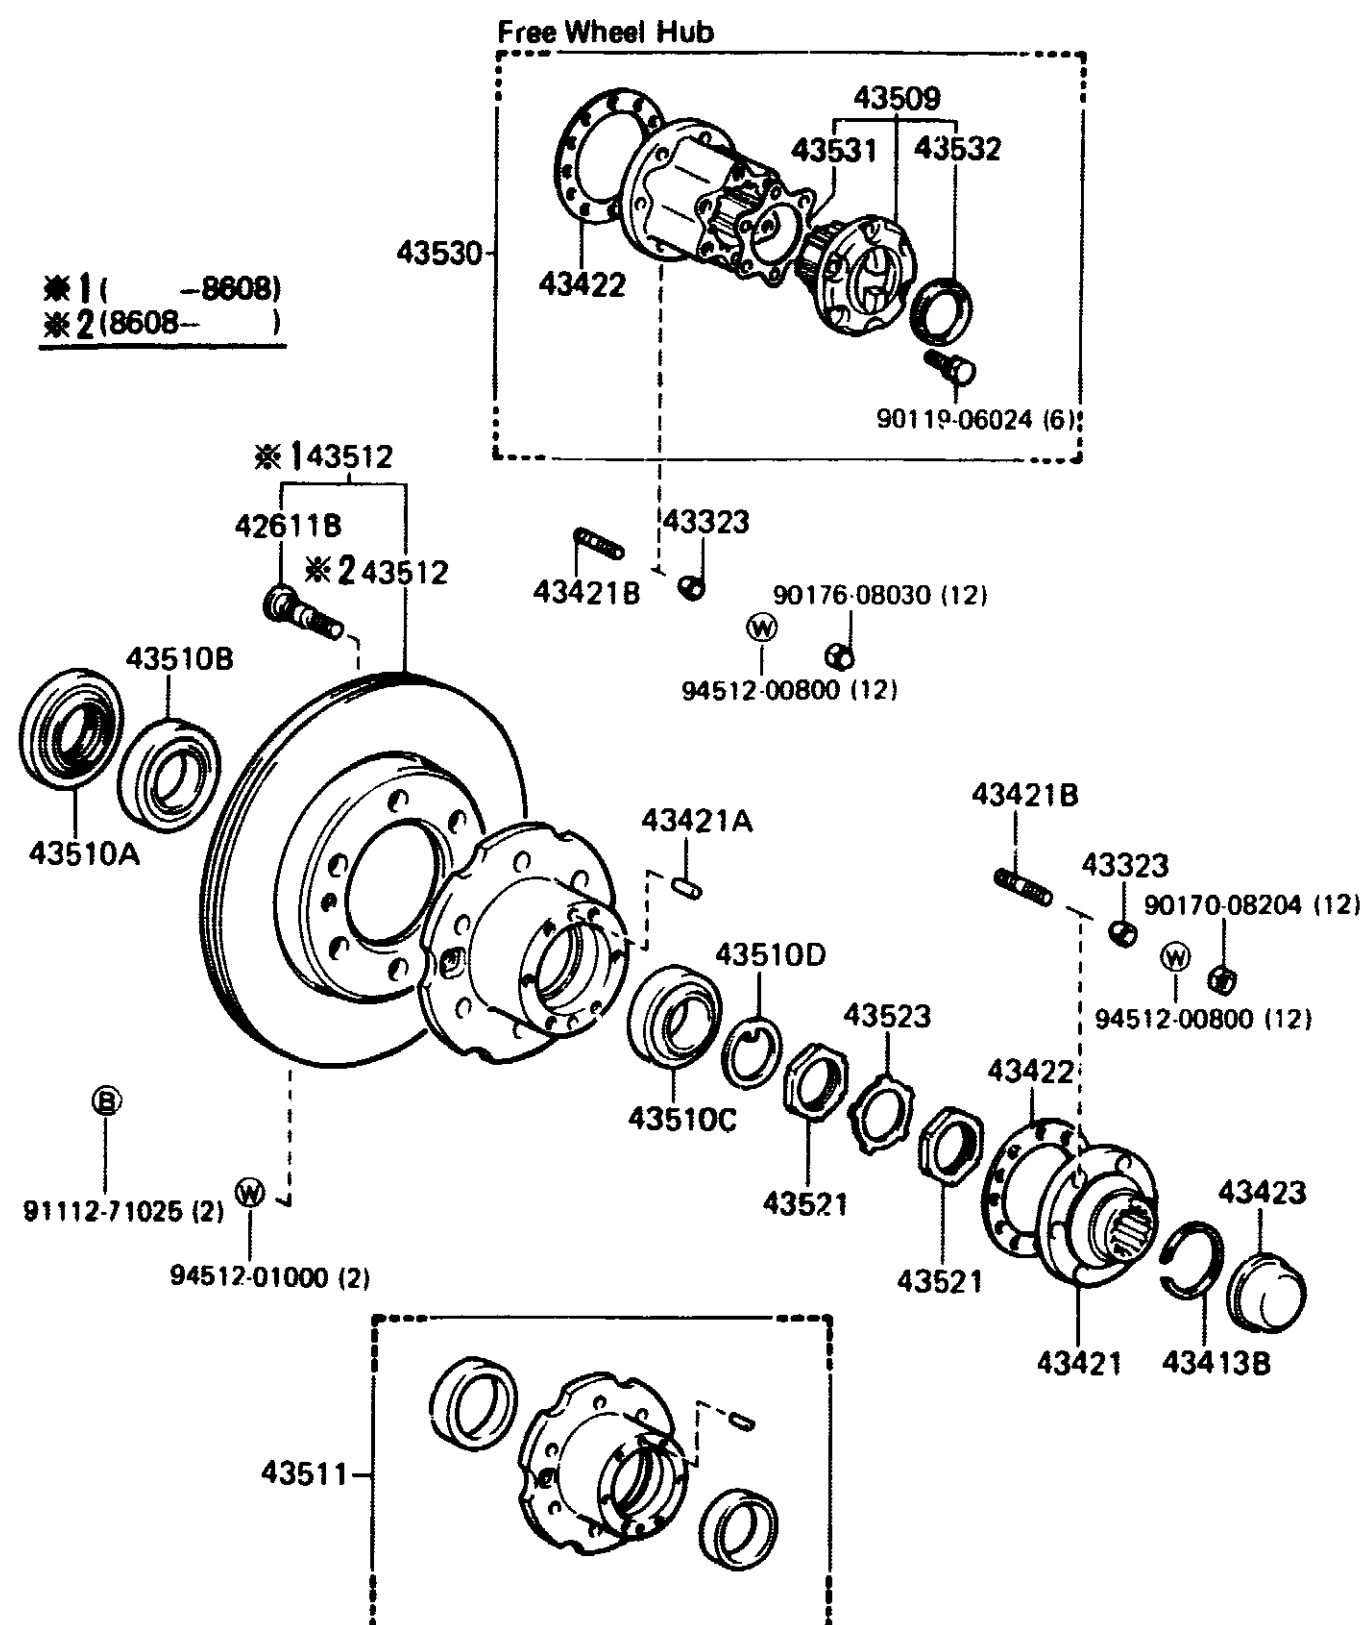


MC D689

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	43-03 FRONT AXLE HUB						
8411-	BJ70	42611B BOLT, HUB (FOR FRONT AXLE)		90942-02053-	12	81	
8411-	BJ70	43323 WASHER, CONE (FOR FRONT AXLE SHAFT)		42323-60010-	12	81	
8411-	BJ70	43413B RING, DRIVE SHAFT SNAP		90520-31001-	2	81	
8411-8608	BJ70	43421 FLANGE, FRONT AXLE OUTER SHAFT		43421-60013-	2	81	140
8411-	BJ70	43421A PIN, STRAIGHT (FOR OUTER SHAFT FLANGE)		90250-07057-	4	81	
8411-	BJ70	43421B BOLT, STUD (FOR OUTER SHAFT FLANGE)		90116-08325-	12	81	
8411-	BJ70	43422 GASKET, FRONT AXLE OUTER SHAFT FLANGE		43422-60020-	2	81	
8411-8608	BJ70	43423 CAP, FRONT AXLE OUTER SHAFT FLANGE		43423-60011-	2	81	140
8411-	BJ70	43509 COVER SUB-ASSY, FREE WHEEL HUB		43509-60015-	1	81	
8411-	BJ70	43510A SEAL, OIL (FOR FRONT AXLE HUB)		90311-62001-	2	81	
8411-	BJ70	43510B BEARING, TAPERED ROLLER (FOR FRONT AXLE INNER BEARING)		90368-49084-	2	81	
8411-	BJ70	43510C BEARING, TAPERED ROLLER (FOR FRONT AXLE OUTER BEARING)		90368-45087-	2	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	45-05 STEERING GEAR & LINK						
8411-8510	BJ70	WORM KIT, POWER STEERING		04044-60080-	1	81	100
8510-	BJ70			04044-60120-	1	101	
8411-	BJ70	GASKET KIT, POWER STEERING GEAR (FOR RECIRCULATING BALL)		04445-60030-	1	81	
8411-	BJ70	GASKET KIT, POWER STEERING CROSS SHAFT OVERHAUL		04455-60020-	1	81	
8411-	BJ70	WASHER, PLATE (FOR STEERING WORM)		90201-30003-	1	81	
8411-	BJ70	BEARING, THRUST NEEDLE ROLLER (FOR STEERING WORM)		90374-30003-	1	81	
8411-	BJ70	RING (FOR STEERING WORM)		90562-48001-	2	81	
8411-	BJ70	PLUG SUB-ASSY, ADJUSTER		44104-22011-	1	81	
8411-	BJ70	HOUSING SUB-ASSY, VALVE		44105-30060-	1	81	
8411-	BJ70	RING, O (FOR VALVE HOUSING)		90301-32002-	1	81	
8411-	BJ70	RING (FOR VALVE HOUSING)		90562-30002-	1	81	
8411-	BJ70	HOUSING SUB-ASSY, POWER STEERING GEAR		44107-60060-	1	81	
8411-	BJ70	BEARING, NEEDLE ROLLER (FOR POWER STEERING GEAR HOUSING)		90364-32003-	2	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	BJ70	RING, O (FOR POWER STEERING GEAR HOUSING)		90301-33002-	1	81	
8411-	BJ70	OD=40.7, T=3.5		90301-65145-	1	81	
8411-	BJ70	OD=70, T=2.5		96711-19010-	1	81	
8411-	BJ70	OD=13.6, T=1.9		90562-31002-	1	81	
8411-	BJ70	RING (FOR POWER STEERING GEAR HOUSING)		90562-32002-	1	81	
8411-	BJ70	OD=34.1, T=4		90562-32002-	1	81	
8411-	BJ70	OD=40, T=3		90521-44002-	1	81	
8411-	BJ70	RING, HOLE SNAP (FOR POWER STEERING GEAR HOUSING)		90312-32002-	1	81	
8411-	BJ70	SEAL, OIL (FOR POWER STEERING GEAR HOUSING)		44108-60010-	1	81	
8411-	BJ70	COVER SUB-ASSY, SIDE		90301-64002-	1	81	
8411-	BJ70	RING, O (FOR SIDE COVER)		44110-60080-	1	81	100
8411-	BJ70	GEAR ASSY, POWER STEERING		44110-60081-	1	101	
8411-8510	BJ70			44111-60020-	1	81	100
8510-	BJ70			44111-60040-	1	101	
8411-8510	BJ70	SHAFT, CROSS		44111A-60020-	1	81	100
8510-	BJ70			90170-22058-	1	81	
8411-	BJ70	NUT, HEXAGON (FOR CROSSSHAFT TO PITMAN ARM SETTING)		90562-67001-	1	81	
8411-	BJ70	RING (FOR POWER PISTON NUT)					

(8411-)

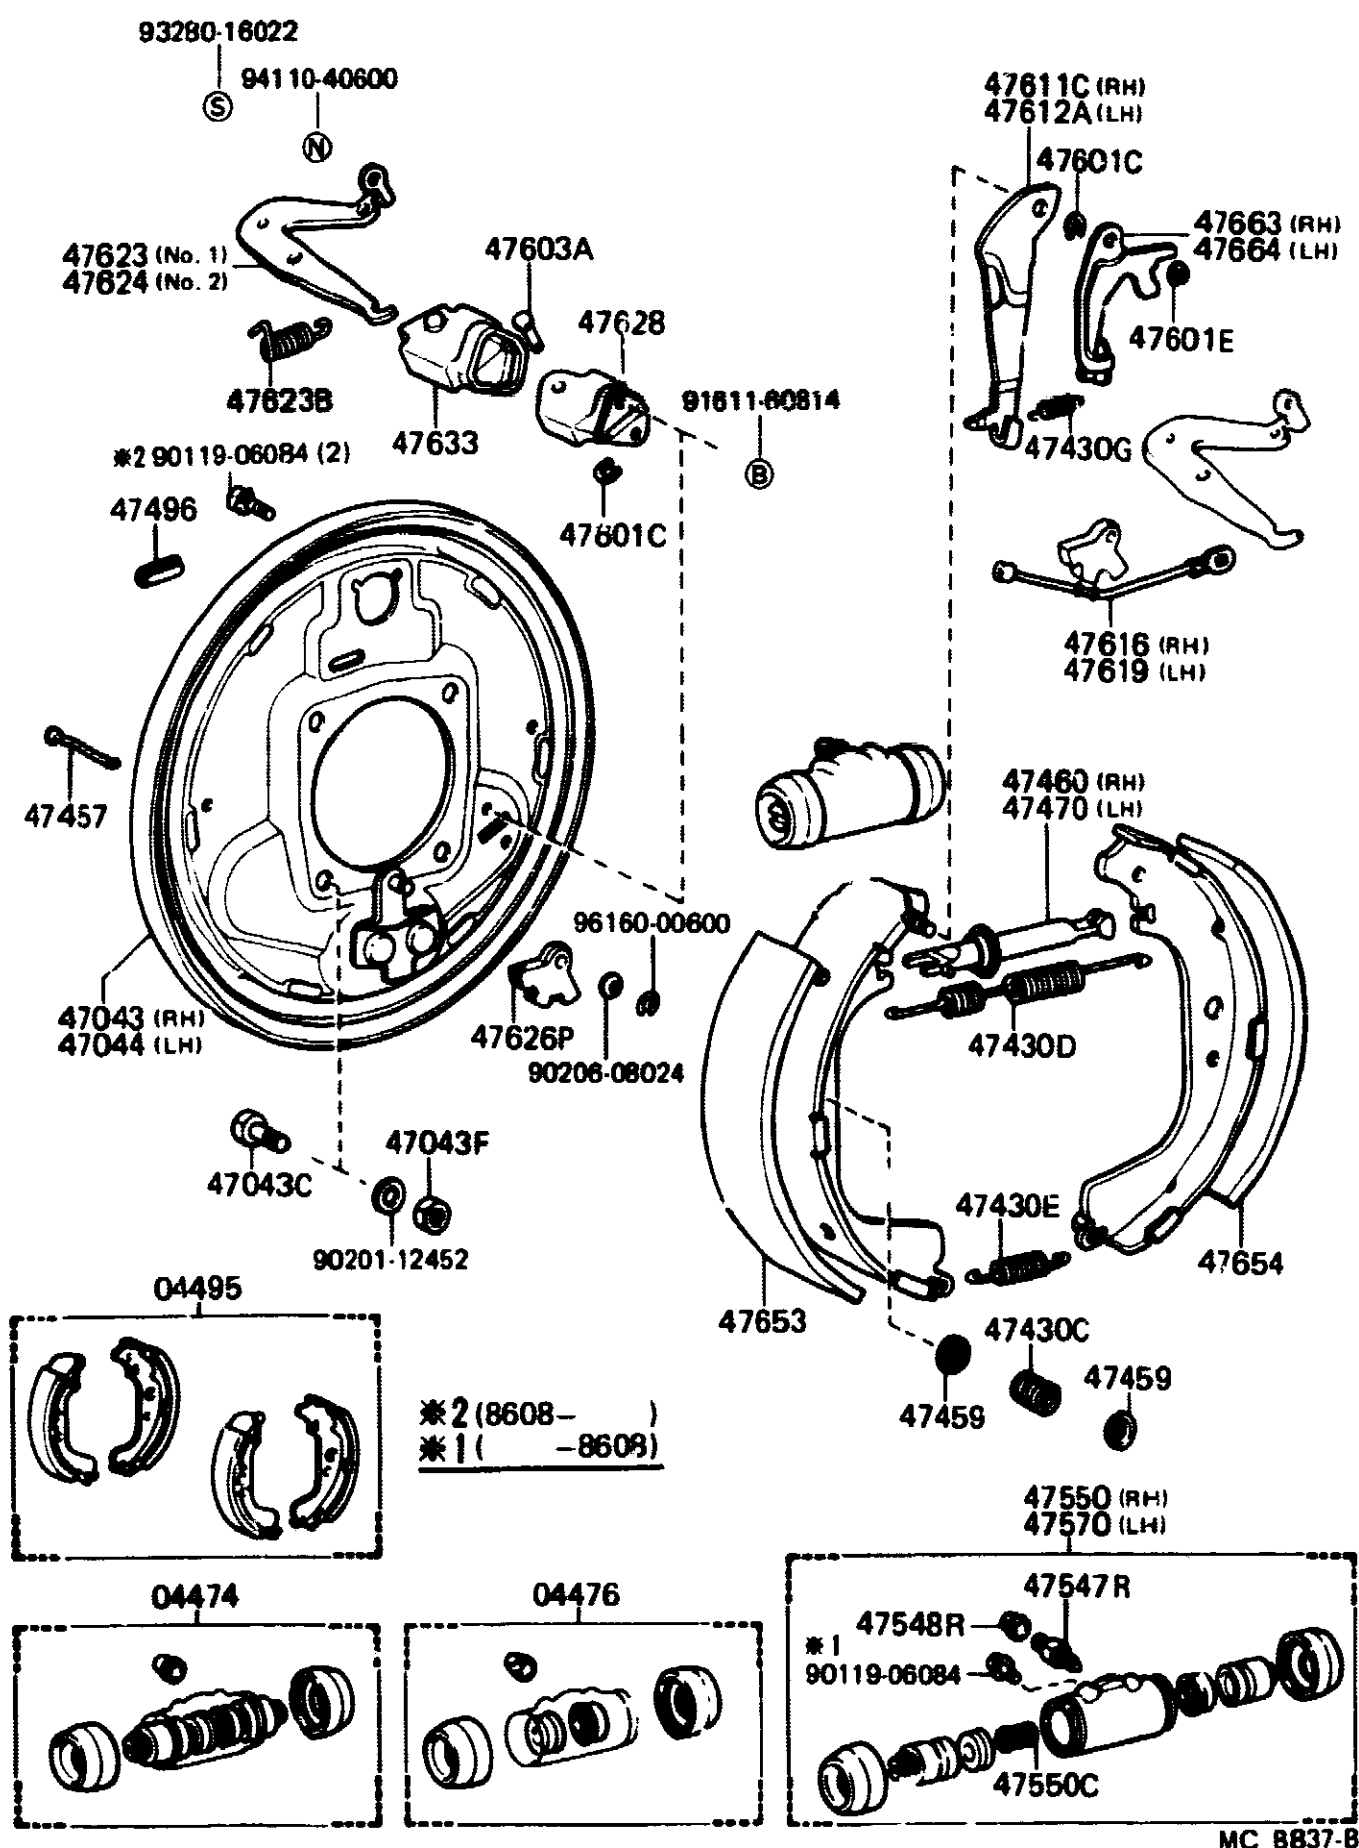

MC B837-B

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	47-06 REAR BACKING PLATE & WHEEL CYLINDER						
8411-	BJ70	04474 CYLINDER KIT, REAR WHEEL		04474-60010-	2	81	
8411-	BJ70	04476 CUP KIT, REAR WHEEL CYLINDER		04476-60050-	2	81	
8411-	BJ70	04495 SHOE KIT, REAR BRAKE		04495-60010-	1	81	
8411-	BJ70	47043 PLATE SUB-ASSY, BRAKE BACKING, REAR RH		47043-60050-	1	81	
8411-	BJ70	47043C BOLT (FOR BACKING PLATE TO REAR AXLE HOUSING SETTING)		90101-12021-	8	81	
8411-	BJ70	47043F NUT (FOR BACKING PLATE TO REAR AXLE HOUSING SETTING)		94115-71200-	8	81	
8411-	BJ70	47044 PLATE SUB-ASSY, BRAKE BACKING, REAR LH		47044-60010-	1	81	
8411-	BJ70	47430C SPRING (FOR REAR BRAKE SHOE HOLD DOWN)		90501-20012-	4	81	
8411-	BJ70	47430D SPRING, TENSION (FOR REAR BRAKE SHOE RETURN)	RH	90506-26011-	1	81	
8411-	BJ70		LH	90506-26014-	1	81	
8411-	BJ70	47430E SPRING, TENSION (FOR REAR BRAKE SHOE RETURN)		90506-18031-	2	81	
8411-	BJ70	47430G SPRING, TORSION (FOR REAR BRAKE AUTOMATIC ADJUST LEVER)		90506-12031-	2	81	
8411-	BJ70	47457 PIN, SHOE HOLD DOWN SPRING (FOR REAR BRAKE)		47447-60010-	4	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	+-----+ 48513 +-----+ BJ70	BRACKET, FRONT SHOCK		ABSORBER, UPPER LH	1	81	
8411-	+-----+ 48520 +-----+ BJ70	ABSORBER ASSY, SHOCK,		FRONT LH	1	81	
8411-8605	+-----+ 48811 +-----+ BJ70	BAR, STABILIZER, FRONT			1	81	
8605-	BJ70				1		
8411-	+-----+ 48811A +-----+ BJ70	BUSH (FOR FRONT STABILIZER BAR)			2	81	
8411-8605	+-----+ 48815 +-----+ BJ70	BUSH, STABILIZER, FRONT			2	81	
8605-	BJ70				2		
8411-	+-----+ 48817 +-----+ BJ70	CUSHION, FRONT STABILIZER			8	81	
8411-	+-----+ 48817A +-----+ BJ70	RETAINER, CUSHION, NO.1 (FOR FRONT STABILIZER BAR)			2	81	
8411-	+-----+ 48817B +-----+ BJ70	RETAINER, CUSHION, NO.2 (FOR FRONT STABILIZER BAR)			8	81	
8411-	+-----+ 48817D +-----+ BJ70	BOLT (FOR FRONT STABILIZER)			2	81	
8411-	+-----+ 48817F +-----+ BJ70	NUT (FOR FRONT STABILIZER BAR)			2	81	
8411-8605	+-----+ 48823B +-----+ BJ70	COVER, FRONT STABILIZER BRACKET			2	81	
8605-8608	BJ70				2		
8608-	BJ70				2		

PROD. DATE	M O D E L S	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	48824 BRACKET, STABILIZER, FRONT BJ70			48825-60020-	2	81	

ILLUSTRATED INDEX

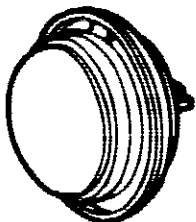
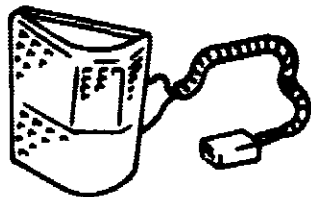
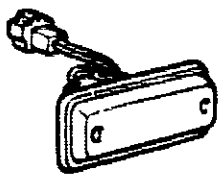
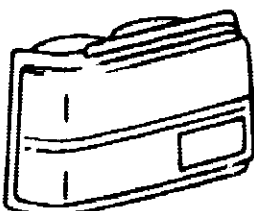
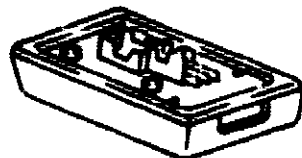
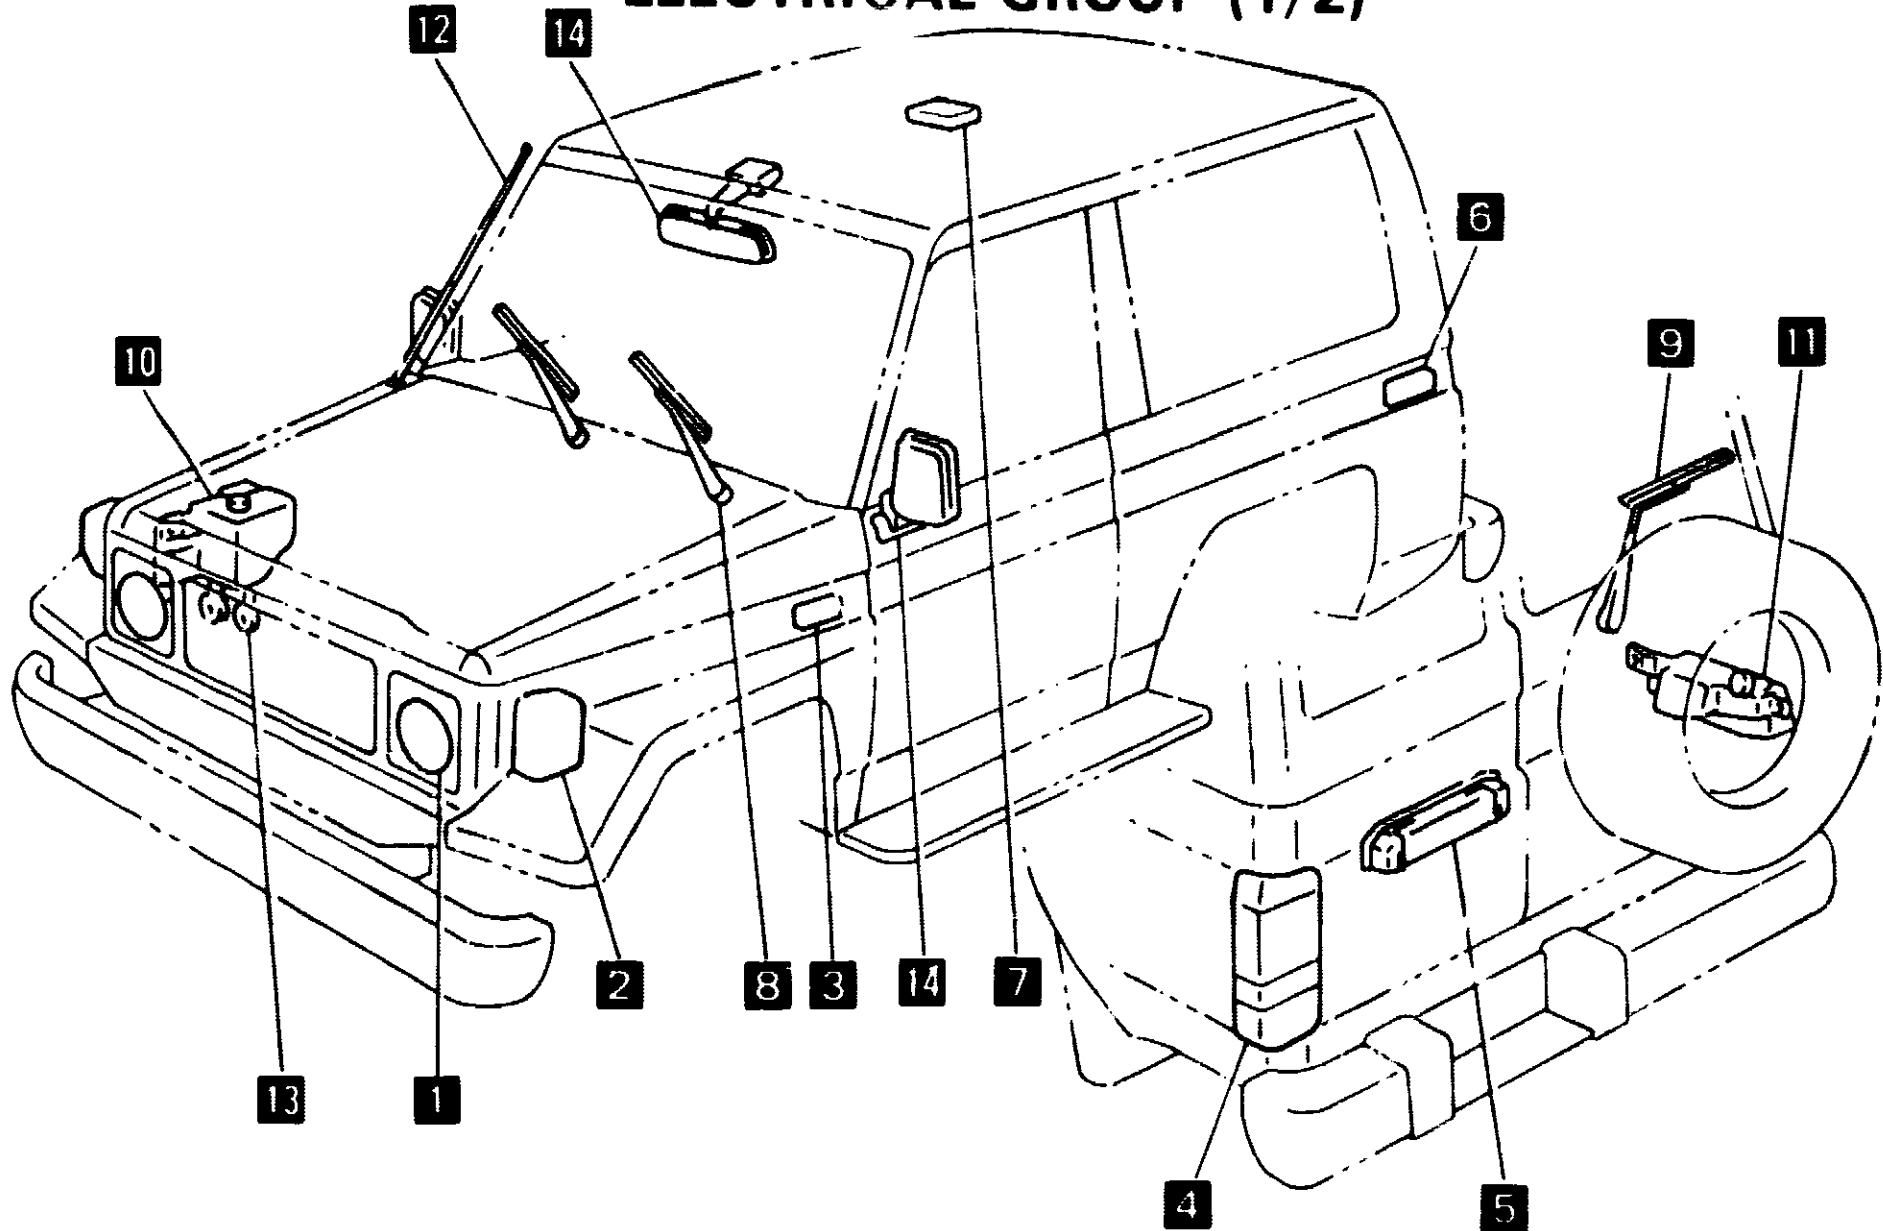
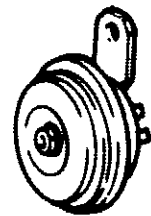
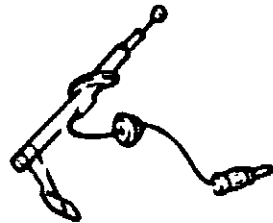
2-I7 (81-01) 1	2-J7 (81-03) 2	2-L7 (81-06) 3	2-M7 (81-11) 4	2-A8 (81-13) 5	2-B8 (81-14) 6	2-C8 (81-21) 7
						
Headlamp	Front Turn Signal Lamp	Side Turn Signal Lamp	Rear Combination Lamp	License Plate Lamp	Rear Side Marker Lamp	Interior Lamp
ELECTRICAL GROUP (1/2) 						
				2-E10 (87-01) 14	2-D10 (86-11) 13	2-C10 (86-04) 12
						
				Mirror	Horn	Antenna

FIG. 11-06

GENUINE TOYOTA PARTS

1-K1

GENUINE TOYOTA PARTS


H74-15-0591

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	11-06	TIMING GEAR COVER & REAR END PLATE					
8411-	11301	CASE SUB-ASSY, TIMING GEAR		11301-56031-	1	81	
8411-	11301A	PIN, STRAIGHT (FOR TIMING GEAR CASE)		90250-08120-	2	81	
8411-	11301B	BOLT, STUD (FOR TIMING GEAR CASE)		90116-10048-	3	81	
8411-	11302	COVER SUB-ASSY, TIMING CHAIN OR BELT		11302-56030-	1	81	
8411-8502	11302A	SEAL, OIL (FOR TIMING GEAR COVER)		90311-50002- (90311-50007-)	1	81	
8503-				90311-50007-	1		
8411-	11312	GASKET, FRONT END PLATE		11312-56031-	1	81	
8411-	11328	GASKET, TIMING GEAR (OR CHAIN) COVER		11328-56030-	1	81	
8411-	11345	BEARING, INJECTION PUMP GEAR THRUST		11345-48010-	1	81	
8411-8502	11355	PLATE, REAR END		11355-56052-	1	81	126
8502-				11355-56053-	1	127	
8411-	11381	RETAINER, ENGINE REAR OIL SEAL		11381-56031-	1	81	
8411-8502	11381A	SEAL, ENGINE REAR OIL		90311-95001-	1	81	
8502-				90311-95003-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	11383	GASKET, ENGINE REAR OIL SEAL RETAINER		11383-56031-	1	81	
8411-	11391	POINTER, TIMING		11391-56020-	1	81	

(8411-)

ILLUST.NO. 10F2

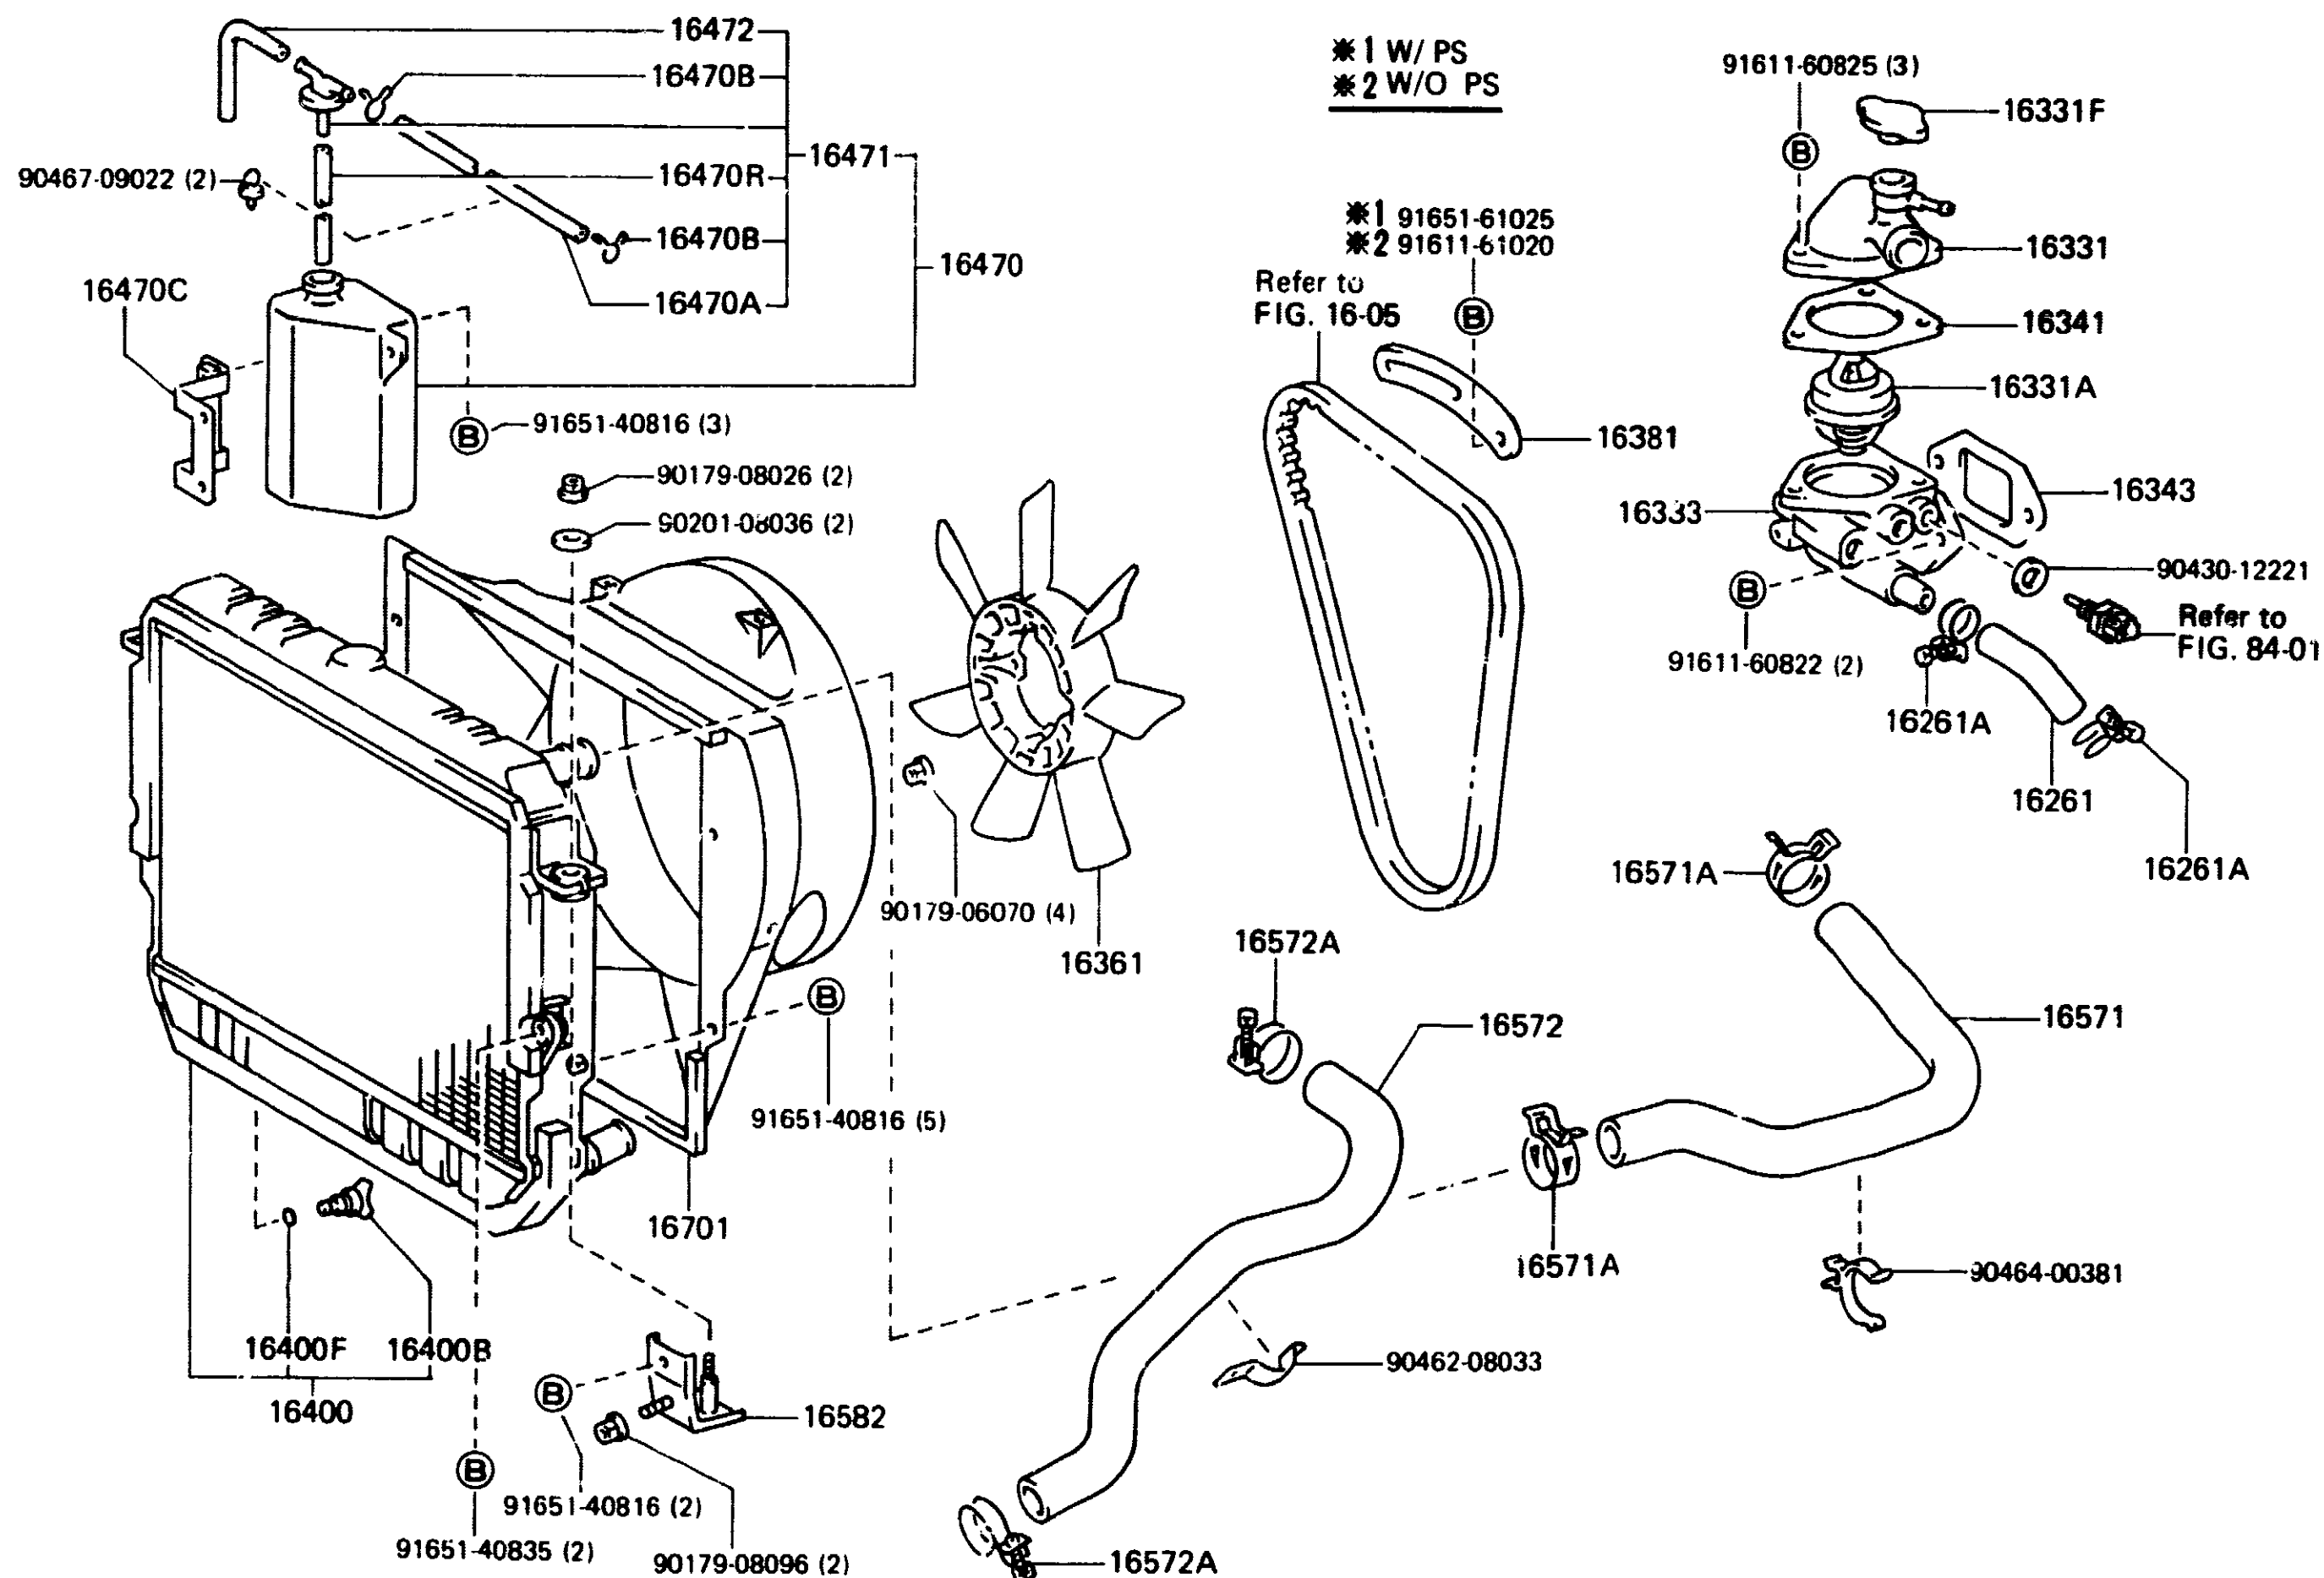


MA 8017-A

MA8017A

(8411-)

12V 4.5KW. 24V 4.5KW

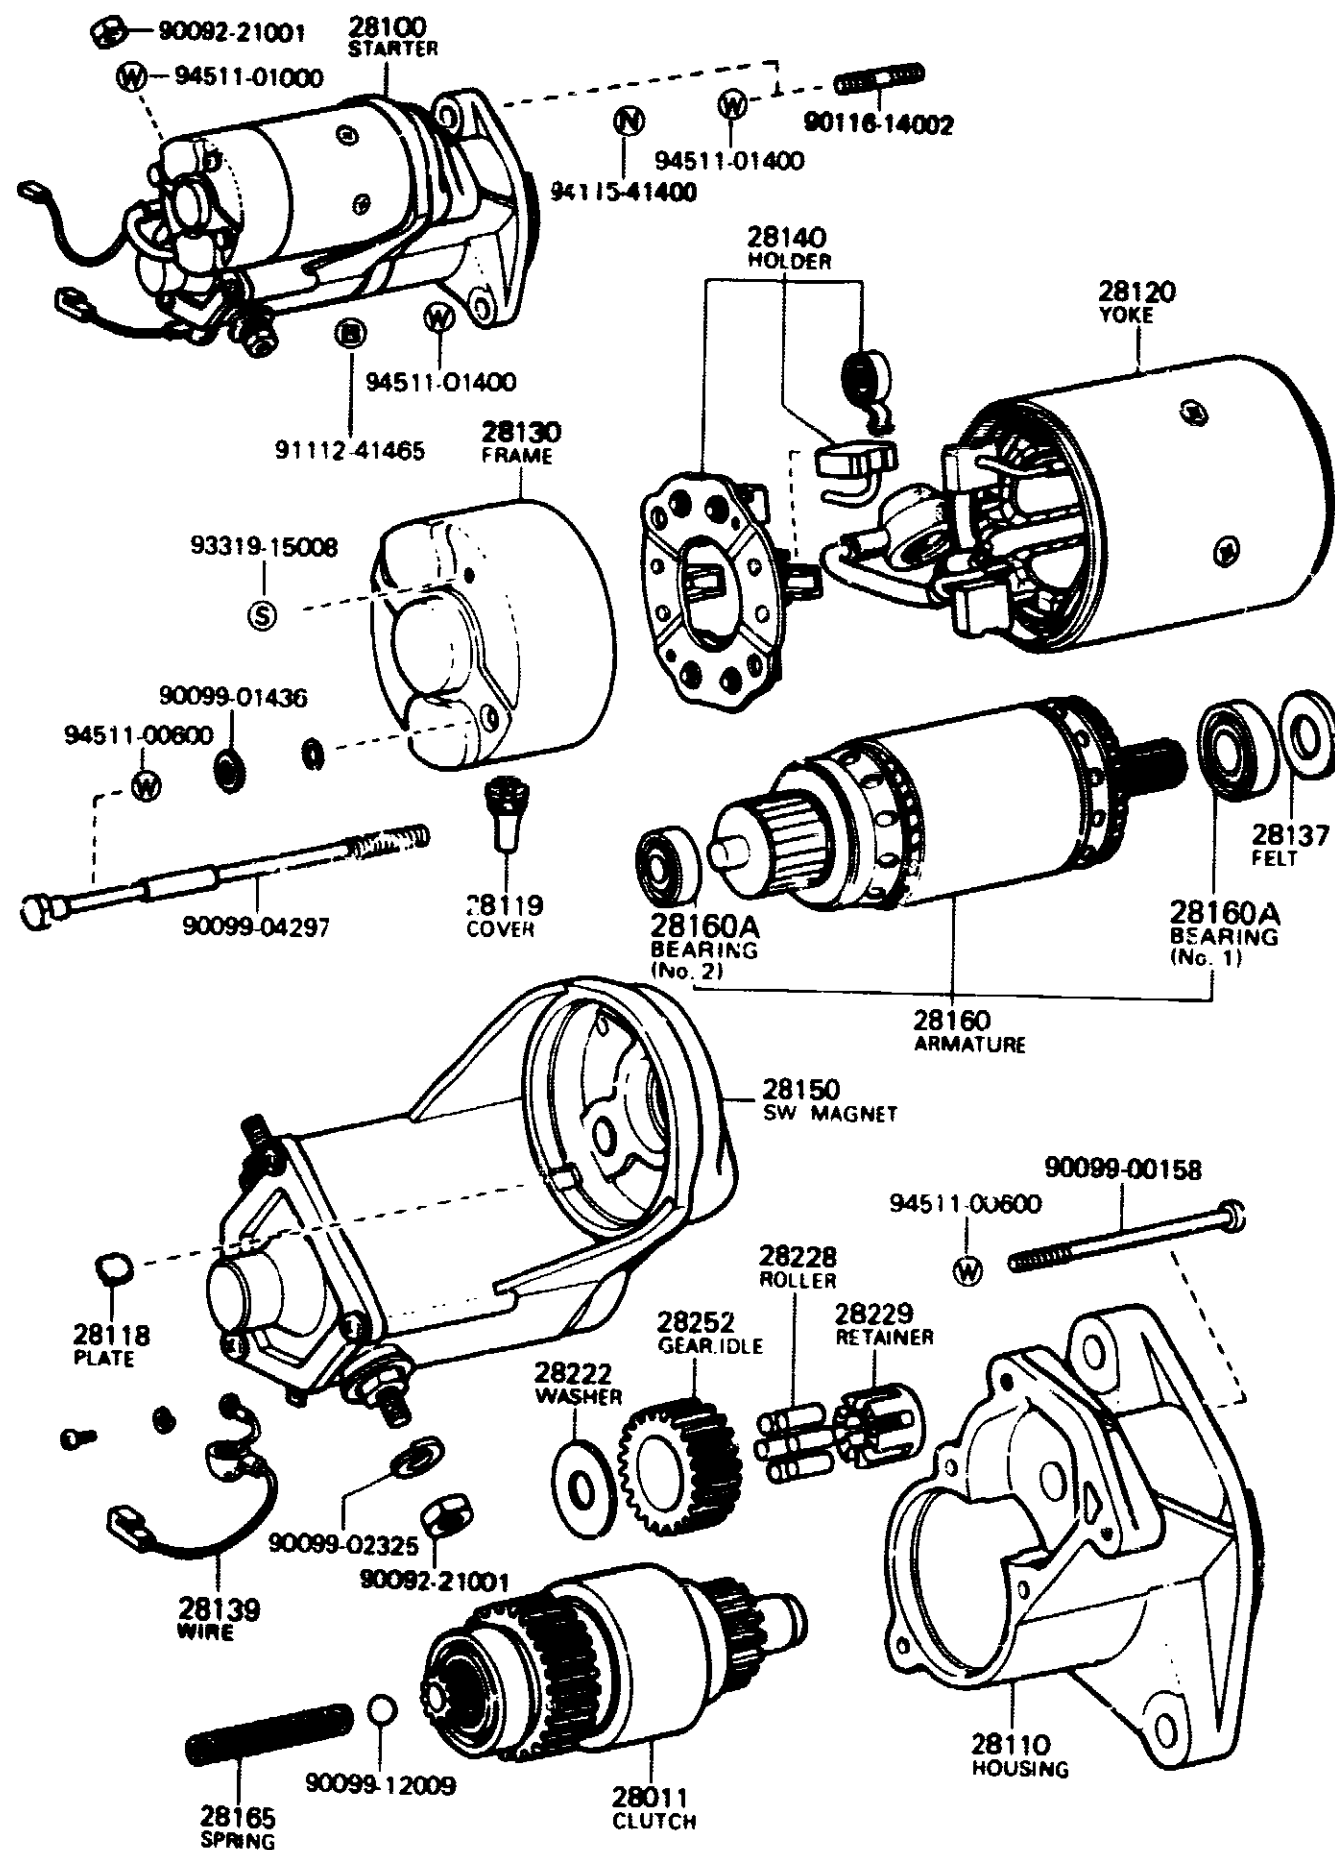


ME F462-B

GENUINE TOYOTA PARTS


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QT.	REV. REF. CODE	
						FROM	UP TO
FIG.	19-04 STARTER						
	28011	CLUTCH SUB-ASSY, STARTER					
8411-	3B..BJ70	12V 2.5KW, 24V 4.5KW		28011-54010-	1	81	
	28100	STARTER ASSY					
8411-8510	3B..BJ70	12V 2.5KW		28100-56190-	1	81	100
8510-8608	3B..BJ70	24V 4.5KW		28100-56180-	1	101	140
8608-	3B..BJ70	24V 4.5KW		28100-56181-	1	141	
	28110	HOUSING ASSY, STARTER DRIVE					
8411-	3B..BJ70	12V 2.5KW, 24V 4.5KW		28115-56180-	1	81	
	28118	PLATE (FOR STARTER YOKE)					
8411-	3B..BJ70	12V 2.5KW, 24V 4.5KW		28118-77090-	1	81	
	28119	COVER, END FRAME					
C 8411-8702	3B..BJ70	12V 2.5KW, 24V 4.5KW		28119-77090- (28199-77090-	1	81	
C 8702-	3B..BJ70	12V 2.5KW, 24V 4.5KW			1		
	28120	YOKE ASSY, STARTER					
8411-8510	3B..BJ70	12V 2.5KW		28120-47040- (28120-56081-	1	81	100
8510-	3B..BJ70	24V 4.5KW		28120-77090- (28120-56071-	1	101	
	28130	FRAME ASSY, STARTER COMMUTATOR END					
8411-	3B..BJ70	12V 2.5KW, 24V 4.5KW		28130-54010-	1	81	
	28137	WASHER, FELT, STARTER					
8411-	3B..BJ70	12V 2.5KW, 24V 4.5KW		90099-02205-	1	81	
	28139	WIRE, LEAD, NO.1 (FOR STARTER)					
8411-8608	3B..BJ70	12V 2.5KW, 24V 4.5KW		28139-47070-	1	81	140

(8411-)

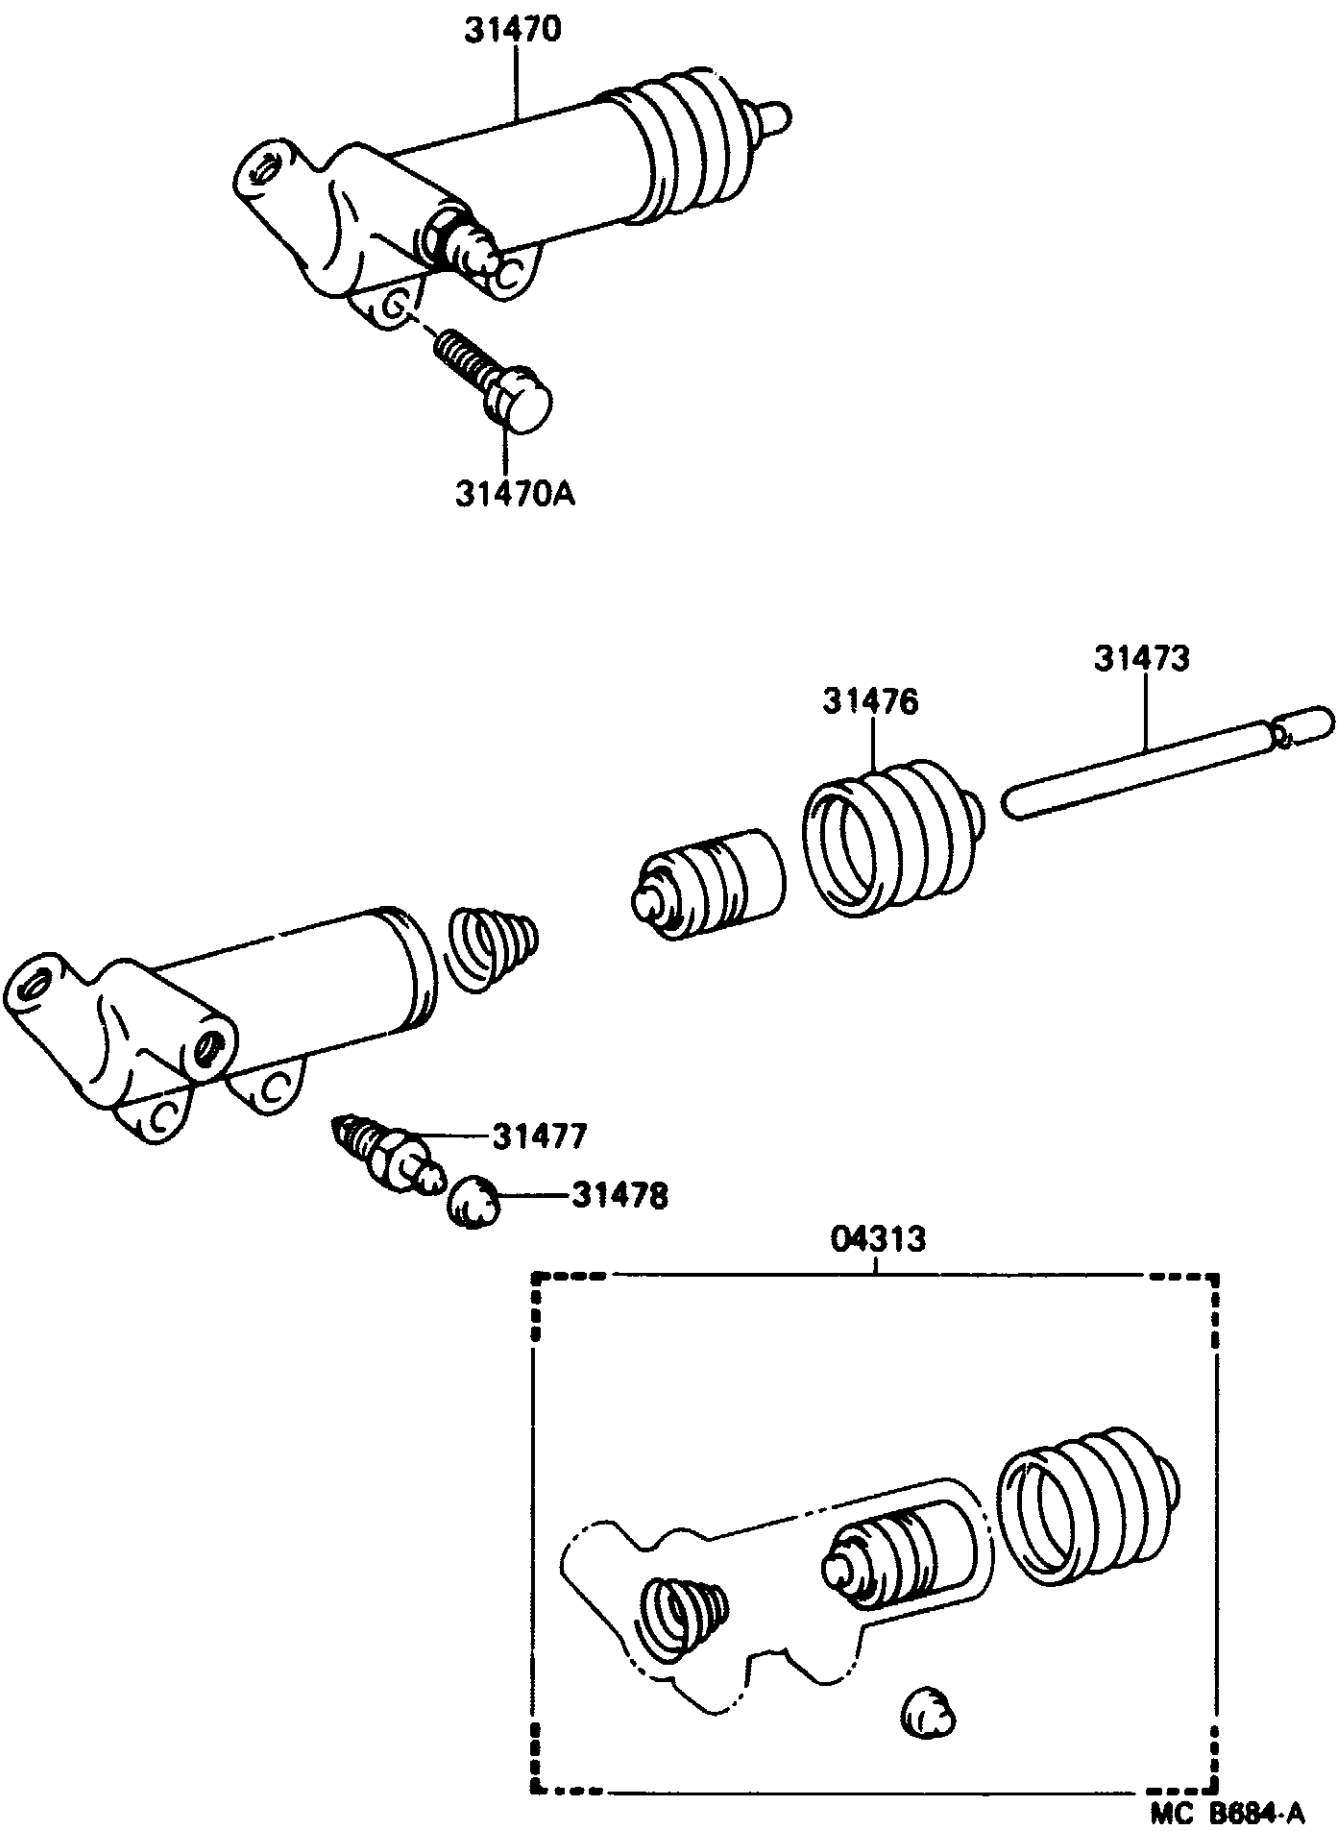

PROD.DATE	M O D E L S	DESCRIPTION	R / P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
FIG.	31-05 CLUTCH RELEASE CYLINDER						
8411-	04313	CYLINDER KIT, CLUTCH RELEASE					
	BJ70			04313-60060-	1	81	
8411-8510	31470	CYLINDER ASSY, CLUTCH RELEASE					
	BJ70			31470-60120-	1	81	100
8510-	BJ70			31470-60130-	1	101	
8411-	31470A	BOLT (FOR CLUTCH RELEASE CYLINDER SETTING)					
	BJ70			91611-60828-	2	81	
8411-8510	31473	ROD, CLUTCH RELEASE CYLINDER PUSH, NO.1					
	BJ70			31473-60100-	1	81	100
8510-	BJ70			31473-60110-	1	101	
8411-	31476	BOOT, CLUTCH RELEASE CYLINDER					
	BJ70			31476-60050-	1	81	
8411-	31477	PLUG, BLEEDER (FOR RELEASE CYLINDER)					
	BJ70			47547-12010-	1	81	
8411-	31478	CAP, BLEEDER PLUG (FOR RELEASE CYINDER)					
	BJ70			31478-30010-	1	81	


(8411-)

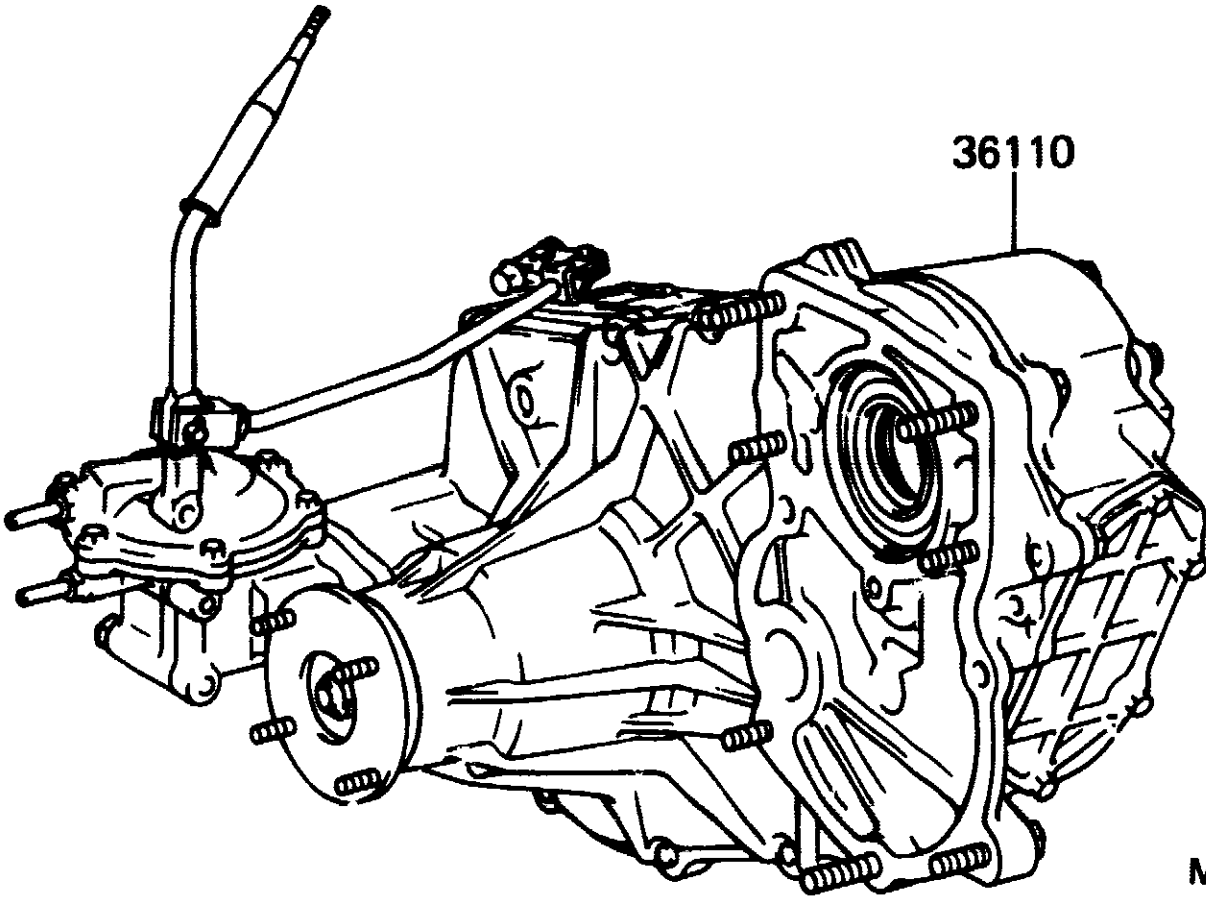

MC B733-A

PROD. DATE	M O D E L S	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	36-08 TRANSFER ASSEMBLY & GASKET KIT						
	+ +</						

(8411-)

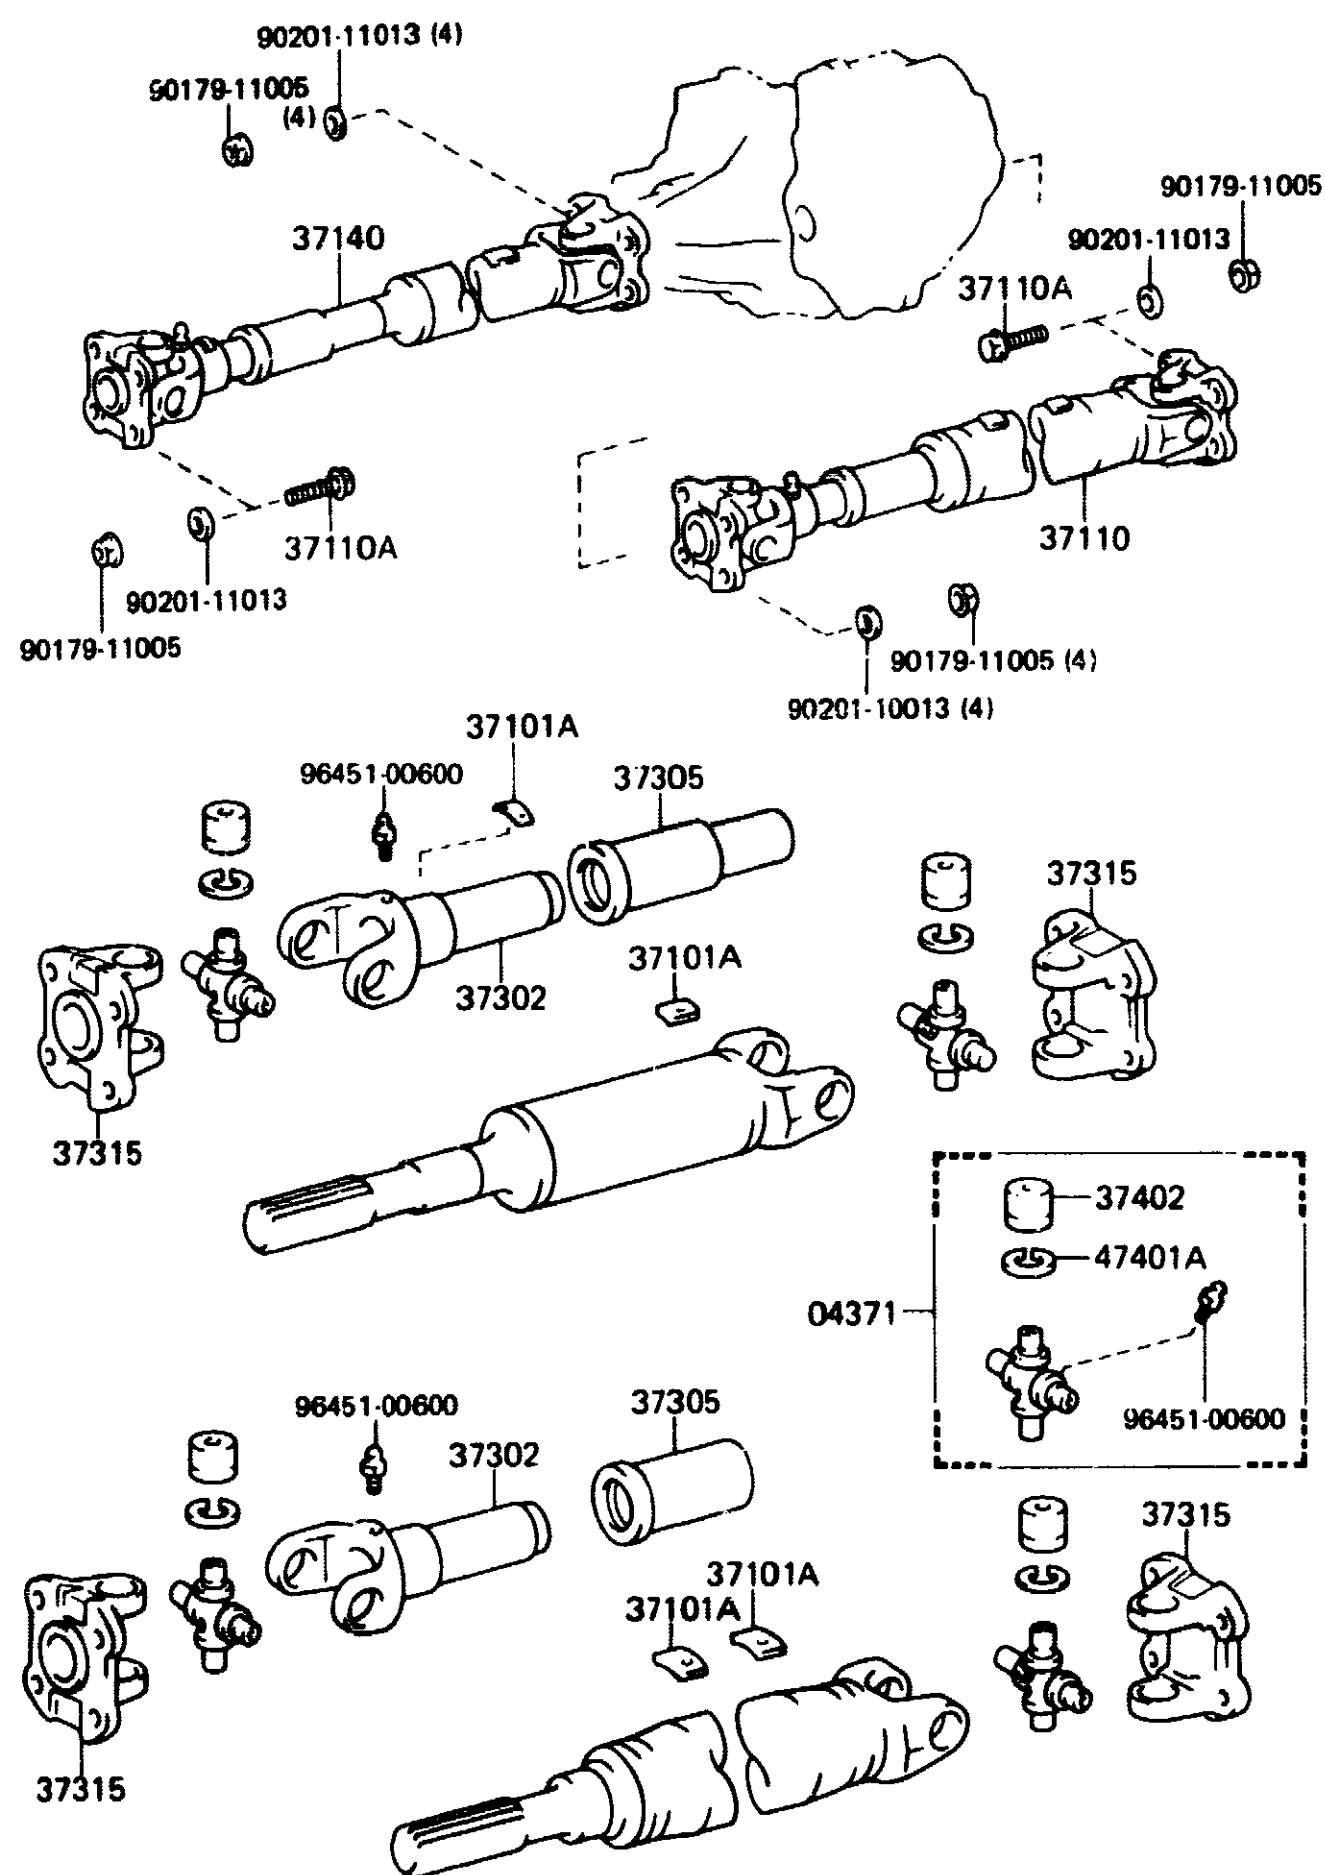

MC B756-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	37-01 PROPELLER SHAFT & UNIVERSAL JOINT						
	04371	SPIDER KIT, UNIVERSAL JOINT (FOR PROPELLER SHAFT)					
8411-	BJ70			04371-36030-	4	81	
	37101A	PIECE, BALANCE (FOR PROPELLER SHAFT)					
8411-8608	BJ70	20G		90937-01136-	33	81	140
8411-8608	BJ70	30G		90937-01140-	33	81	140
8411-8608	BJ70	18G		90937-01153-	33	81	140
8411-8608	BJ70	18G		90937-01154-	33	81	140
8411-8608	BJ70	22G		90937-01155-	33	81	140
8411-8608	BJ70	24G		90937-01156-	33	81	140
8411-8608	BJ70	26G		90937-01157-	33	81	140
8411-8608	BJ70	28G		90937-01158-	33	81	140
8411-8608	BJ70	24G, FR SLEEVE YOKE		90937-01198-	33	81	140
8411-8608	BJ70	28G, FR SLEEVE YOKE		90937-01199-	33	81	140
8411-8608	BJ70	32G, FR SLEEVE YOKE		90937-01200-	33	81	140
8411-	BJ70	10G		90937-01132-	33	81	
8411-	BJ70	2G		90937-01147-	33	81	
8411-	BJ70	4G		90937-01148-	33	81	
8411-	BJ70	6G		90937-01149-	33	81	
8411-	BJ70	8G		90937-01150-	33	81	
8411-	BJ70	12G		90937-01151-	33	81	
8411-	BJ70	14G		90937-01152-	33	81	
8411-	BJ70	4G, FR SLEEVE YOKE		90937-01184-	33	81	
8411-	BJ70	8G, FR SLEEVE YOKE		90937-01191-	33	81	
8411-	BJ70	12G, FR SLEEVE YOKE		90937-01192-	33	81	
8411-	BJ70	16G, FR SLEEVE YOKE		90937-01193-	33	81	
8411-	BJ70	20G, FR SLEEVE YOKE		90937-01194-	33	81	

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
8411-	44114B BJ70	RING, O (FOR POWER PISTON NUT)		90301-63001-	1	81	
8411-	44114C BJ70	BALL (FOR POWER PISTON NUT)		90360-06021-	44	81	
8411-8510	44115 BJ70	GUIDE, BALL		44115-60020-	2	81	100
8510-	44115 BJ70			44115-22010-	2	101	
8411-8510	44116 BJ70	CLAMP, BALL GUIDE		44116-60020-	1	81	100
8510-	44116 BJ70			44116-22010-	1	101	
8411-	44141A BJ70	RING, O (FOR ADJUSTER PLUG)		90301-51001-	1	81	
8411-	44141B BJ70	SEAL, OIL (FOR ADJUSTER PLUG)		90311-19002-	1	81	
8411-	44141C BJ70	BEARING (FOR ADJUSTER PLUG)		90369-22004-	1	81	
8411-	44142 BJ70	NUT, LOCK		44142-22010-	1	81	
8411-	44142A BJ70	NUT, LOCK, NO.1		44142-22020-	1	81	
8411-8510	44210 BJ70	VALVE ASSY, POWER STEERING CONTROL		44120-60060-	1	81	100
8510-	44210 BJ70			44120-60100-	1	101	
8411-	44251 BJ70	ARM, PITMAN		45411-60120-	1	81	
8411-	44257 BJ70	SCREW, CROSSSHAFT ADJUSTING		45357-22010-	1	81	

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
8411-	44257A BJ70	WASHER, SEAL (FOR CROSSSHAFT ADJUSTING SCREW)		90210-10001-	1	81	
8411-	45044 BJ70	END SUB-ASSY, STEERING RELAY ROD, RH		45045-69045-	1	81	
8411-	45044A BJ70	NUT, CASTLE (FOR RELAY ROD)		90171-14042-	2	81	
8411-	45045 BJ70	END SUB-ASSY, STEERING RELAY ROD, LH		45044-69085-	1	81	
8411-	45046 BJ70	END SUB-ASSY, TIE ROD, RH		45046-69115-	1	81	
8411-	45046A BJ70	NUT, CASTLE (FOR TIE ROD END)		90171-14042-	2	81	
8411-	45047 BJ70	END SUB-ASSY, TIE ROD, LH		45047-69065-	1	81	
8411-8608	45240 BJ70	WORM ASSY, STEERING		45240-60040-	1	81	140
8411-8608	45240A BJ70	BEARING (FOR STEERING WORM)		90363-20024-	2	81	140
8411-8608	45240B BJ70	SEAL, OIL (FOR STEERING WORM)		90311-18001-	1	81	140
8411-8608	45242 BJ70	SCREW, WORM BEARING ADJUSTING		45242-60020-	1	81	140
8411-8608	45243 BJ70	NUT, WORM BEARING ADJUSTING SCREW LOCK		45243-60020-	1	81	140
8411-8608	45301 BJ70	HOUSING SUB-ASSY, STEERING GEAR		45301-60070-	1	81	140




PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	47459 BJ70	CUP, SHOE HOLD DOWN SPRING (FOR REAR BRAKE)		47449-30020-	8	81	
8411-	47460 BJ70	ADJUSTER ASSY, SHOE, RH (FOR REAR BRAKE)		47061-60011-	1	81	
8411-	47470 BJ70	ADJUSTER ASSY, SHOE, LH (FOR REAR BRAKE)		47062-60011-	1	81	
8411-	47496 BJ70	PLUG, HOLE (FOR REAR BRAKE)		47491-20011-	2	81	
8411-	47547R BJ70	PLUG, BLEEDER (FOR DRUM BRAKE, REAR)		47547-60020-	2	81	
8411-	47548R BJ70	CAP, BLEEDER PLUG (FOR DRUM BRAKE, REAR)		31478-30010-	2	81	
8411-8608	47550 BJ70	CYLINDER ASSY, REAR WHEEL BRAKE (FOR RH, FRONT OR UPPER)		47550-69105- (47550-60120-)	1	81	140
8608-	BJ70			47550-60120-	1	141	
8411-	47550C BJ70	SPRING, COMPRESSION (FOR REAR WHEEL BRAKE CYLINDER)		47509-60010-	2	81	
8411-8608	47570 BJ70	CYLINDER ASSY, REAR WHEEL BRAKE (FOR LH, FRONT OR UPPER)		47550-69105- (47550-60120-)	1	81	140
8608-	BJ70			47550-60120-	1	141	
8411-	47601C BJ70	WASHER, C (FOR REAR BRAKE)	T=1.2	90213-06013-	2	81	
8411-	BJ70		T=1.6	90213-07010-	2	81	
8411-	47601E BJ70	RING, E (FOR REAR BRAKE)		96160-00500-	2	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	47603A BJ70	PIN, W/HOLE (FOR REAR BRAKE)		90249-08068-	2	81	
8411-	47611C BJ70	LEVER, PARKING BRAKE SHOE, RH		47611-60010-	1	81	
8411-	47612A BJ70	LEVER, PARKING BRAKE SHOE, LH		47612-60010-	1	81	
8411-	47616 BJ70	WIRE, PARKING BRAKE, RH		47616-60010-	1	81	
8411-	47619 BJ70	WIRE, PARKING BRAKE, LH		47616-60010-	1	81	
8411-	47623 BJ70	CRANK, PARKING BRAKE BELL, NO.1		47624-60010-	1	81	
8411-	47623B BJ70	SPRING, TENSION (FOR PARKING BRAKE BELL CRANK RETURN)		90506-20033-	4	81	
8411-	47624 BJ70	CRANK, PARKING BRAKE BELL, NO.2		47625-60010-	1	81	
8411-	47626P BJ70	PULLEY, PARKING BRAKE SEGMENTAL		47626-60010-	2	81	
8411-	47628 BJ70	BRACKET, BELLCRANK		47628-35020-	2	81	
8411-	47633 BJ70	BOOT, PARKING BRAKE BELLCRANK		47633-35020-	2	81	
8411-	47653 BJ70	LINING, REAR BRAKE SHOE (FOR FRONT OR UPPER)		47655-60010-	2	81	
8411-	47654 BJ70	LINING, REAR BRAKE SHOE (FOR REAR OR LOWER)		47655-60010-	2	81	

(8411-)

(8411-)

ILLUST.NO. 10F2

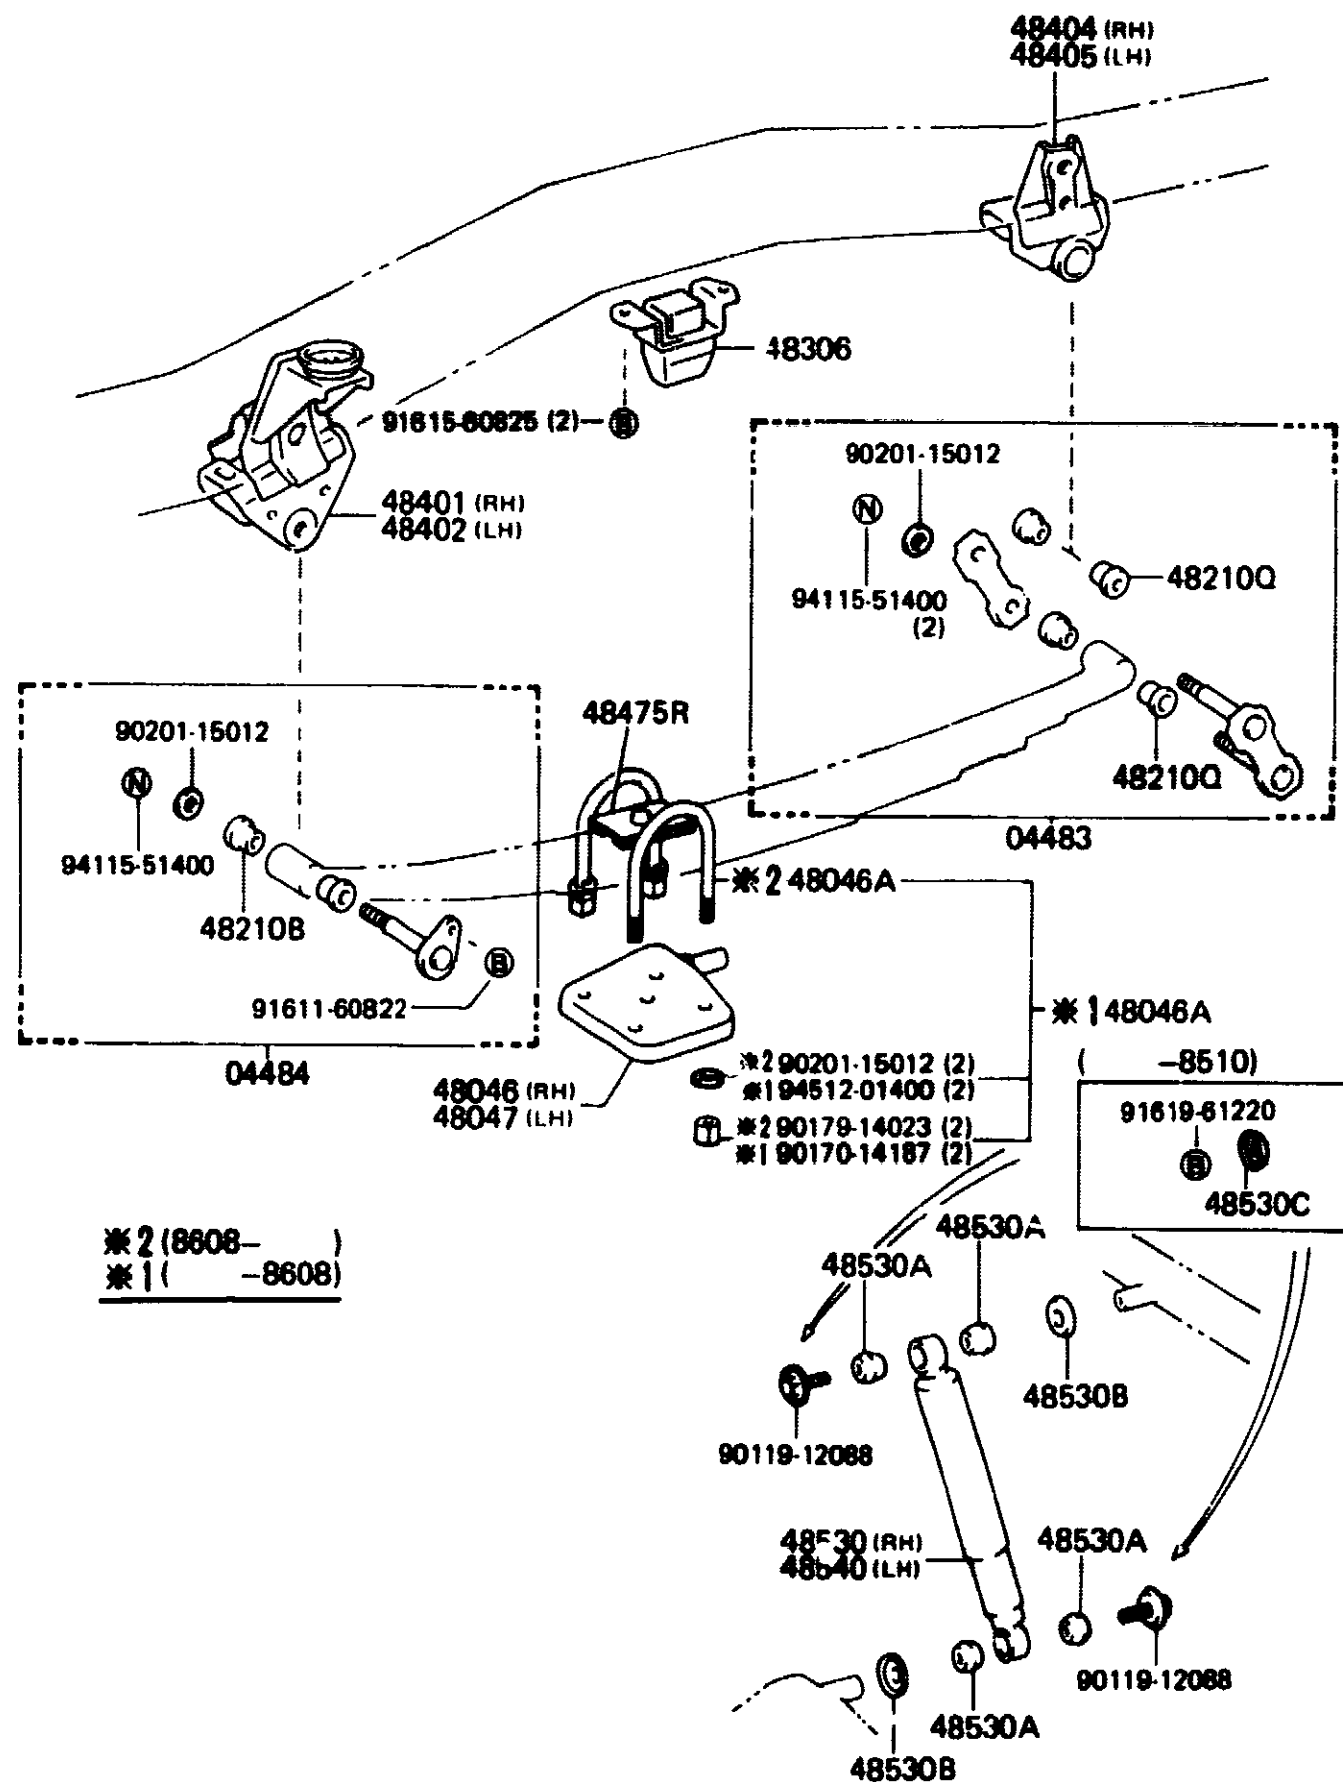


*2 (8608-)
*1 (-8608)

MC B870-F

MCB870F

ILLUST.NO. 20F2

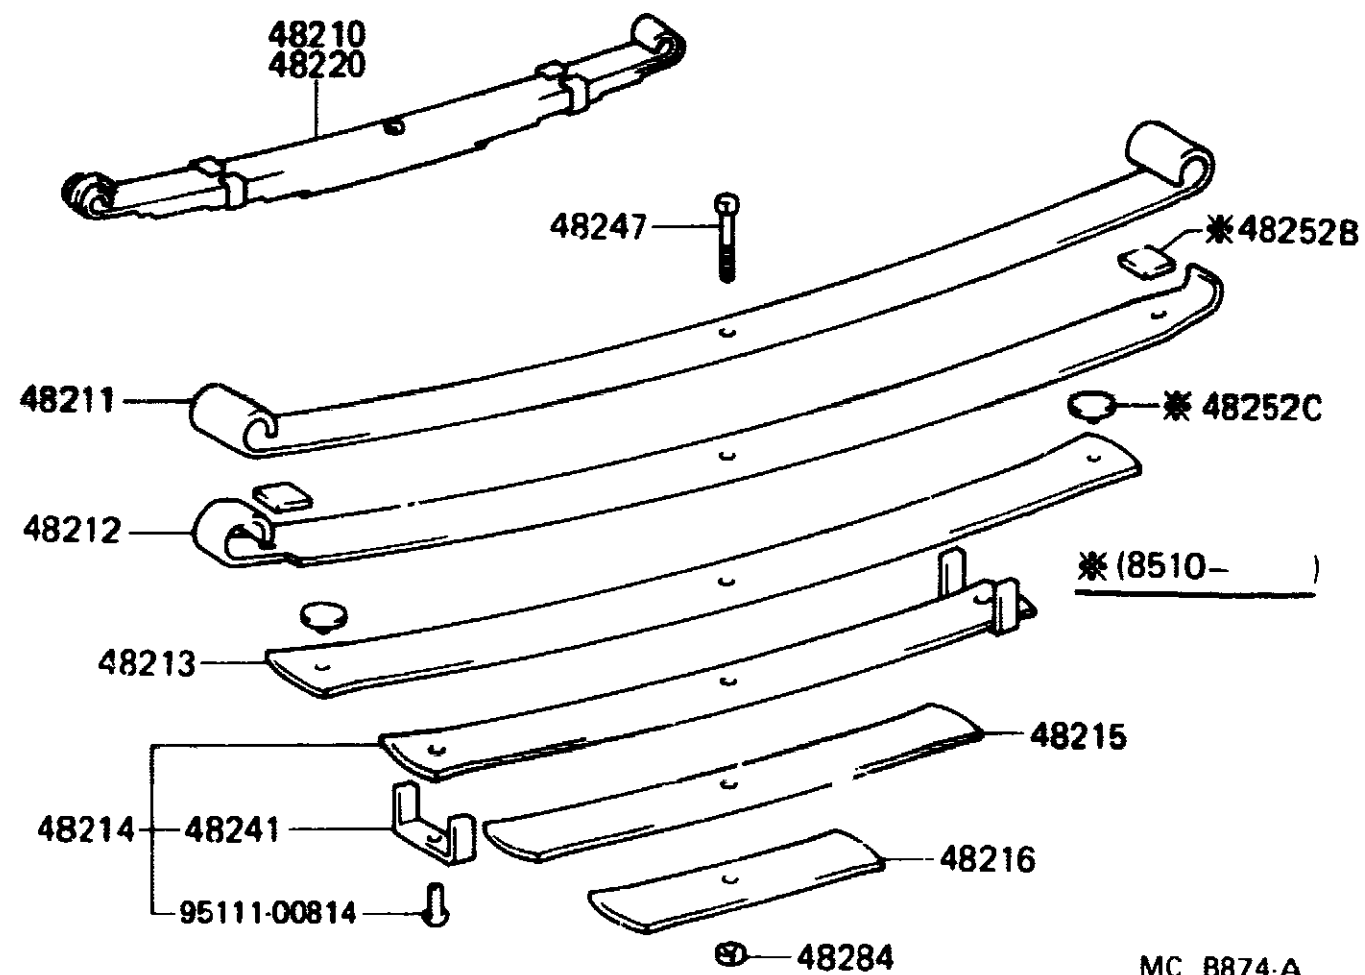


MC B874-A

MCB874A


K16

1

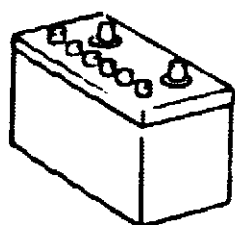


Battery & Cable

2

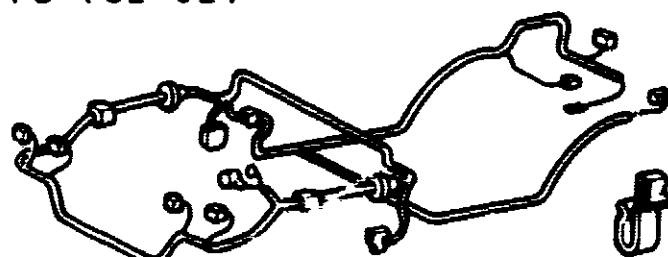


Wiring & Clamp

23

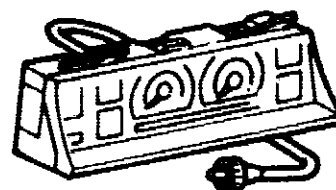


Meter

4

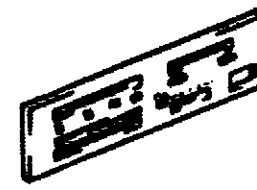


Indicator

5

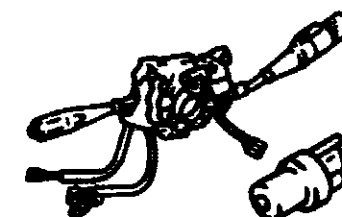

Switch & Relay


6

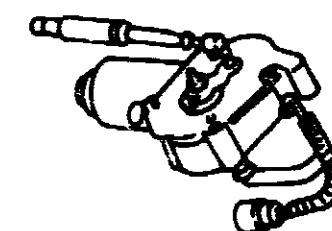**EDIC**

This diagram illustrates the assembly of a vehicle chassis and front end. The main chassis is shown with various components labeled with numbers in black boxes:


- 1**: Points to the front suspension assembly.
- 2**: Points to the front fender area.
- 3**: Points to the front end assembly, including the hood and headlights.
- 4**: Points to the front end assembly, including the hood and headlights.
- 5**: Points to the front end assembly, including the hood and headlights.
- 6**: Points to the front suspension assembly.
- 7**: Points to the front suspension assembly.
- 8**: Points to the front end assembly, including the hood and headlights.
- 9**: Points to the front end assembly, including the hood and headlights.
- 16**: Points to the front end assembly, including the hood and headlights.

7

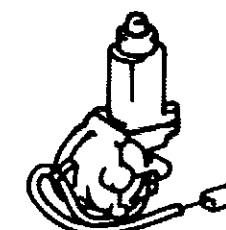


Door Motor & Door Solenoid

8

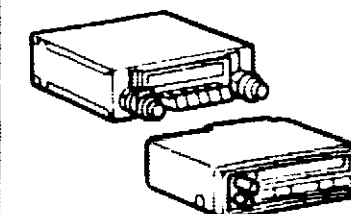


Radio & Tape Player

9

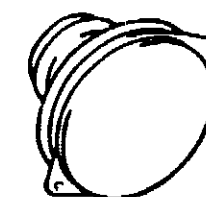

Speaker

10

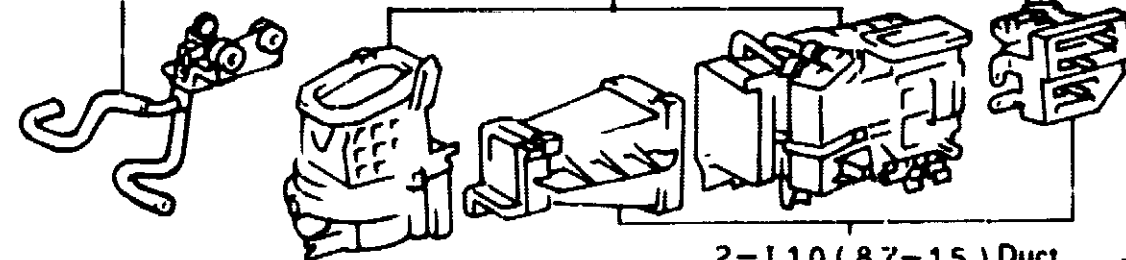


2-F 10
(87-11)
Set


2-110(87-15) Duct

GENUINE TOYOTA PARTS

(8411-)

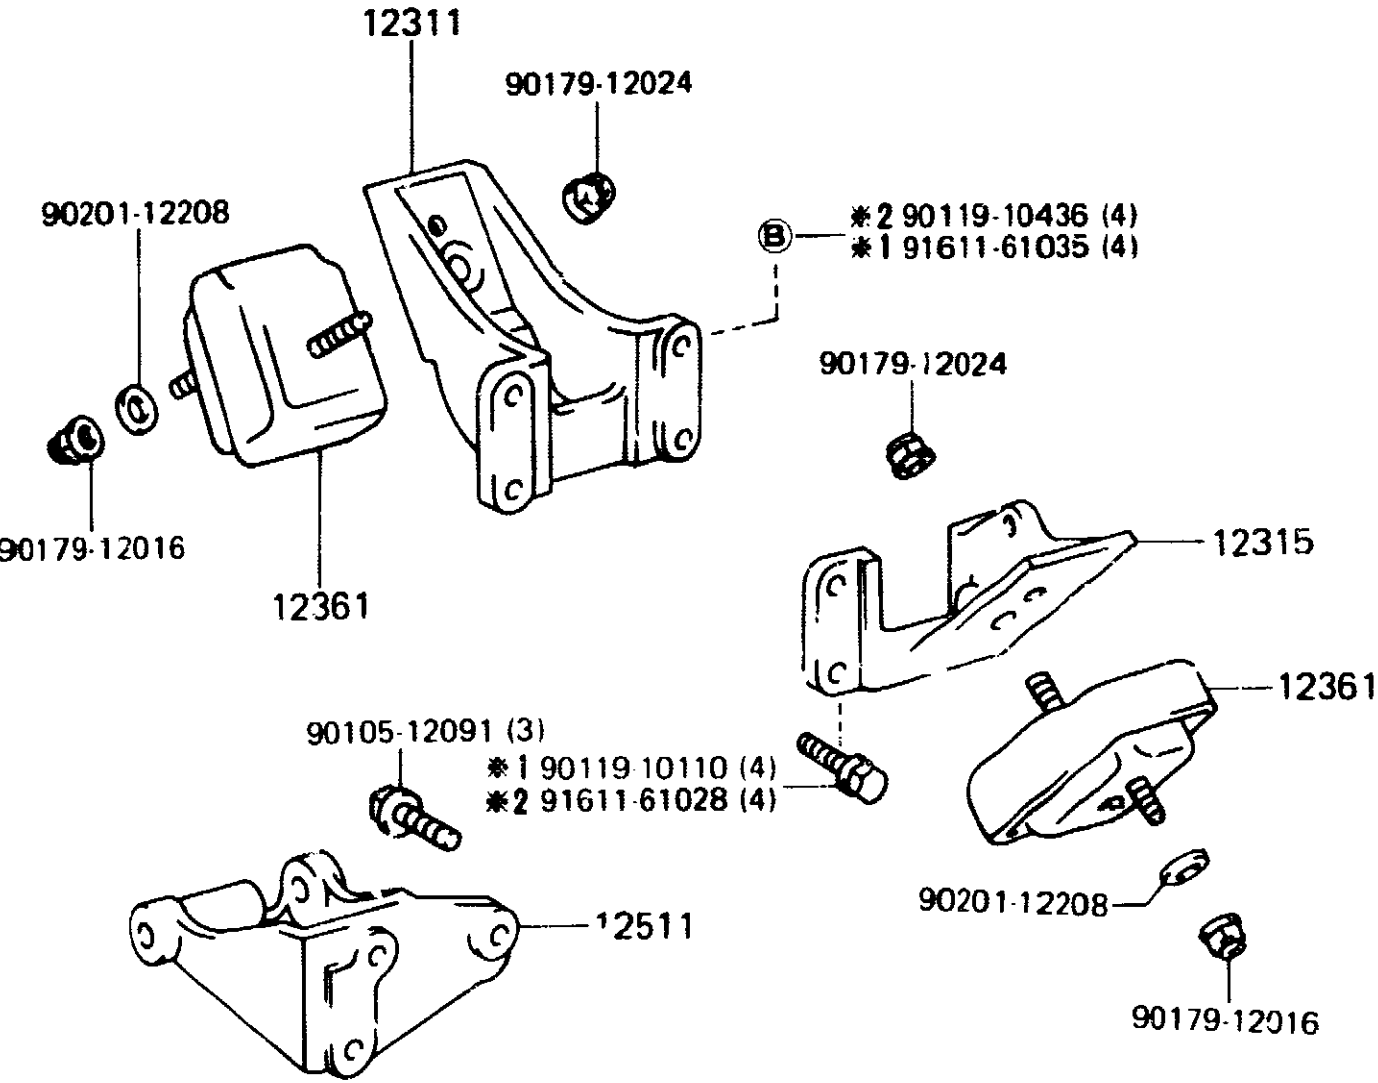

*1 (-8510)
*2 (8510-)

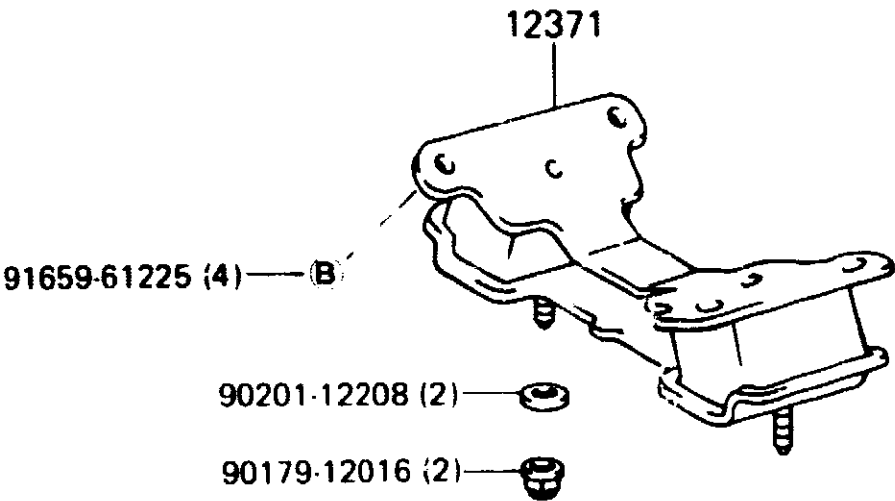

MA 7960-C

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
C 8411-8612	FIG. 11-07 MOUNTING	+-----+ 12311 BRACKET, ENGINE MOUNTING, FRONT NO.1 +-----+		12311-58031-	1	81	
C 8612-		+-----+ 12315 BRACKET, ENGINE MOUNTING, FRONT NO.1 +-----+		12315-58020-	1	81	
8411-		+-----+ 12361 INSULATOR, ENGINE MOUNTING, FRONT +-----+		12361-58030-	2	81	142
8411-8607		+-----+ 12371 INSULATOR, ENGINE MOUNTING, REAR NO.1 +-----+		12371-58020-	1	81	
8607-		+-----+ 12511 BRACKET, ALTERNATOR, NO.1 +-----+		12511-56040-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	16-03 RADIATOR & WATER OUTLET						
8411-	16261 HOSE, WATER BY-PASS			16261-56012-	1	81	
8411-	3B..BJ70						
8411-8609	16261A CLAMP OR CLIP, HOSE (FOR WATER BY-PASS HOSE)			90044-60053-	2	81	
8609-	3B..BJ70			90044-67103-	2		
8411-	16331 OUTLET, WATER			16331-58010-	1	81	
8411-	3B..BJ70						
8411-	16331A THERMOSTAT			90916-03059-	1	81	
8411-	3B..BJ70	XWAX 88-100					
8411-	16331F CAP SUB-ASSY (FOR WATER OUTLET)			16401-71010-	1	81	
8411-	3B..BJ70						
8411-	16333 HOUSING, WATER OUTLET			16333-56060-	1	81	
8411-	3B..BJ70						
8411-	16341 GASKET, WATER OUTLET			16341-56020-	1	81	
8411-	3B..BJ70						
8411-	16343 GASKET, WATER OUTLET HOUSING			16343-56020-	1	81	
8411-	3B..BJ70						
8411-	16361 FAN			16361-38010-	1	81	
8411-	3B..BJ70						
8411-8608	16381 BAR, FAN BELT ADJUSTING			16381-56030-	1	81	140
8411-	3B..BJ70	W/PS		16381-58020-	1	81	
8411-	16400 RADIATOR ASSY			16400-58160-	1	81	
8411-	3B..BJ70						

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	16400B PLUG, RADIATOR DRAIN COCK			16417-24200-	1	81	
8411-	3B..BJ70						
8411-	16400F PACKING (FOR RADIATOR DRAIN COCK)			16418-24200-	1	81	
8411-	3B..BJ70						
8411-	16470 TANK ASSY, RADIATOR RESERVE			16470-58040-	1	81	
8411-	3B..BJ70						
8411-	16470A HOSE (FOR RADIATOR RESERVE TANK)			90099-33534-	1	81	
8411-	3B..BJ70	XH,L=960					
8411-	16470B CLAMP OR CLIP (FOR RADIATOR RESERVE TANK HOSE)			90467-11085-	2	81	
8411-	3B..BJ70						
8411-	16470C BRACKET (FOR RADIATOR RESERVE TANK)			16611-68020-	1	81	
8411-	3B..BJ70						
8411-	16470R HOSE, NO.2 (FOR RADIATOR RESERVE TANK)			90445-12078-	1	81	
8411-	3B..BJ70	XH,L=220					
8411-	16471 CAP SUB-ASSY, RESERVE TANK			16405-58020-	1	81	
8411-	3B..BJ70						
8411-8609	16472 HOSE, BREATHER			85338-30010-	1	81	
8609-	3B..BJ70			85338-74040-	1		
8411-	16571 HOSE, RADIATOR, INLET			16571-58040-	1	81	
8411-	3B..BJ70						
8411-8609	16571A CLAMP OR CLIP, HOSE (FOR RADIATOR INLET)			90467-42001-	2	81	
8609-8702	3B..BJ70			96111-10490-	2		
8702-	3B..BJ70			90467-42001-	2		
8411-	16572 HOSE, RADIATOR, OUTLET			16572-58040-	1	81	
8411-	3B..BJ70						

*WAX () = WAX TYPE (Opening temperature - Fully open temperature)


*H.L = Cut hose to length as specified in remarks

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8608-	28139	WIRE, LEAD, NO.1 (FOR STARTER)		28139-77110-	1	141	
	CONTINUED 3B..BJ70						
8411-	28140	HOLDER ASSY, STARTER BRUSH		28140-77090-	1	81	
	3B..BJ70						
8411-8510	28150	SWITCH ASSY, MAGNET STARTER		28150-56190-	1	81	100
	3B..BJ70						
8510-8608	3B..BJ70	24V 4.5KW		28150-56180-	1	101	140
8608-	3B..BJ70	24V 4.5KW		28150-56181-	1	141	
8411-8510	28160	ARMATURE ASSY, STARTER		28160-47040-	1	81	100
	3B..BJ70						
8510-	3B..BJ70	24V 4.5KW		28160-77090-	1	101	
8411-	28160A	BEARING, STARTER ARMATURE		90099-10107-	1	81	
	3B..BJ70						
8411-	3B..BJ70	12V 2.5KW, 24V 4.5KW, NO.1		90099-10119-	1	81	
8411-	28165	SPRING, STARTER MAGNET SWITCH RETURN		28165-77090-	1	81	
	3B..BJ70						
8411-	28222	WASHER, STARTER IDLE GEAR CLUTCH		28222-77090-	1	81	
	3B..BJ70						
8411-	28228	ROLLER, STARTER IDLE GEAR CLUTCH		28228-56080-	5	81	
	3B..BJ70						
8411-	28229	RETAINER, STARTER IDLE GEAR		28229-56080-	1	81	
	3B..BJ70						

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	28252	GEAR, STARTER IDLE		28254-77090-	1	81	
	3B..BJ70						
		12V 2.5KW, 24V 4.5KW					

GENUINE TOYOTA PARTS

(8411-)

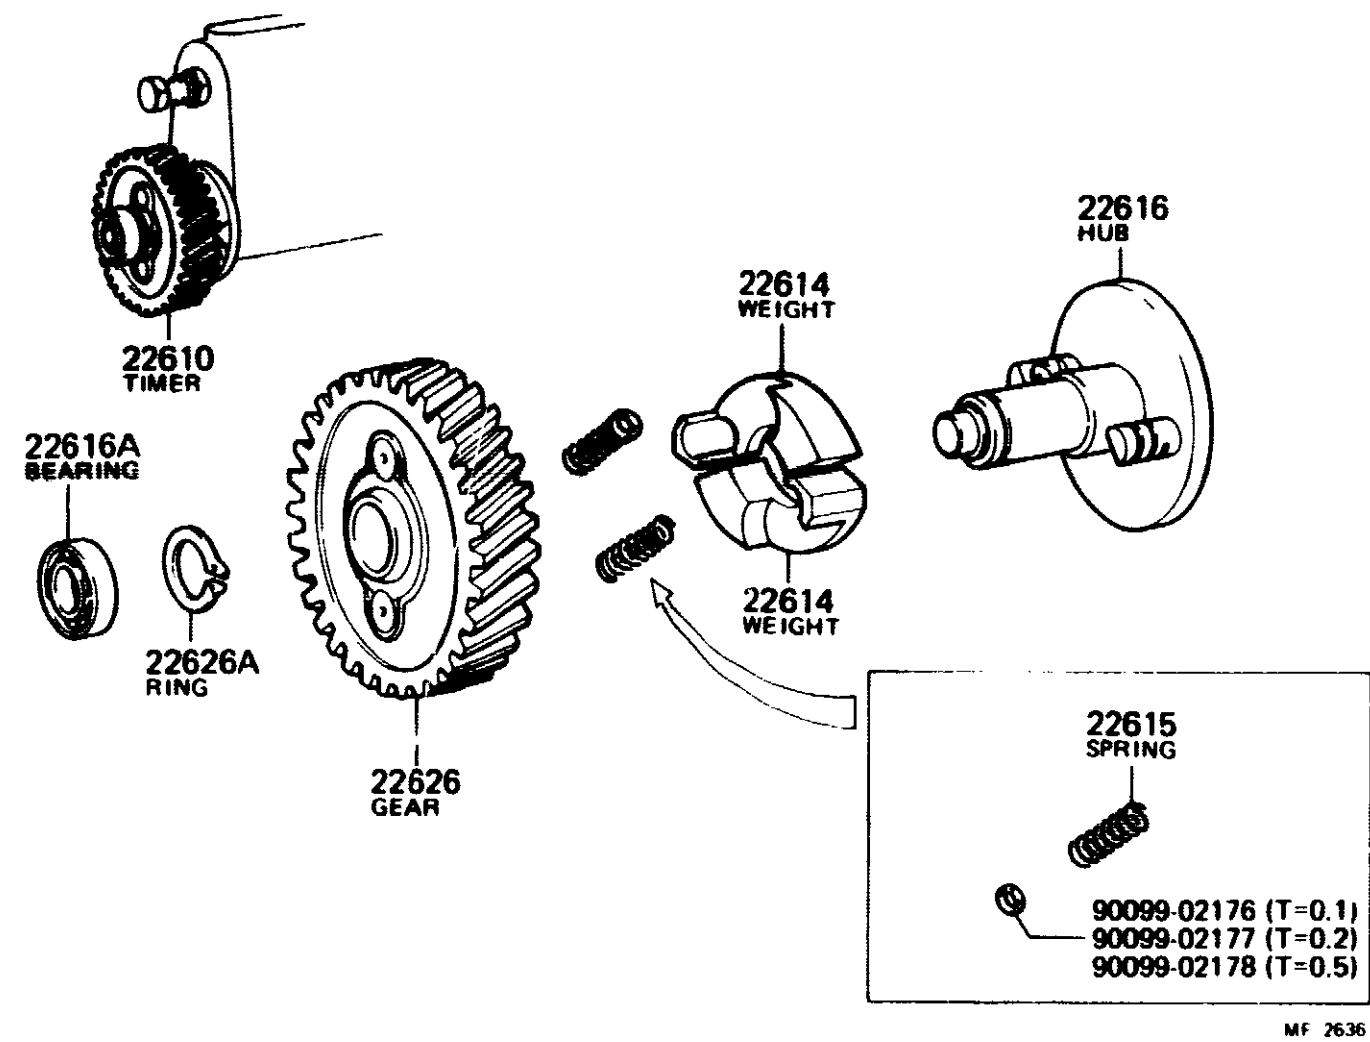

PROD. DATE	M O D E L S		DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
							FROM	UP TO
FIG.	22-07 AUTOMATIC TIMER							
	+-----+							
	22610	TIMER ASSY, AUTOMATIC						
	+-----+							
8411-	3B..BJ70				22610-58010-	1	81	
	+-----+							
	22614	WEIGHT, TIMER						
	+-----+							
8411-	3B..BJ70				22614-56020-	2	81	
	+-----+							
	22615	SPRING, TIMER						
	+-----+							
8411-	3B..BJ70				22615-56040-	2	81	
	+-----+							
	22616	HUB, TIMER						
	+-----+							
8411-	3B..BJ70				22616-56030-	1	81	
	+-----+							
	22616A	BEARING (FOR TIMER HUB)						
	+-----+							
8411-	3B..BJ70				90099-10115-	1	81	
	+-----+							
	22626	GEAR, DRIVE						
	+-----+							
8411-	3B..BJ70				22626-56050-	1	81	
	+-----+							
	22626A	RING, CLAMP (FOR DRIVE GEAR)						
	+-----+							
8411-	3B..BJ70				90096-90001-	1	81	


FIG.33-01 TRANSAXLE OR TRANSMISSION ASSY &
GASKET KIT (MTM)

1-L5


M74-13-0030

GENUINE TOYOTA PARTS

(8411-)

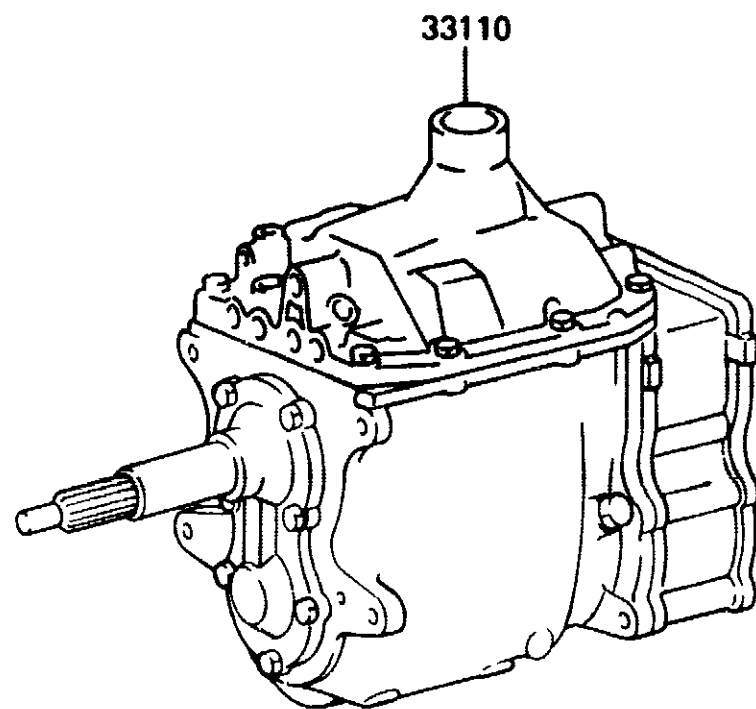

04331

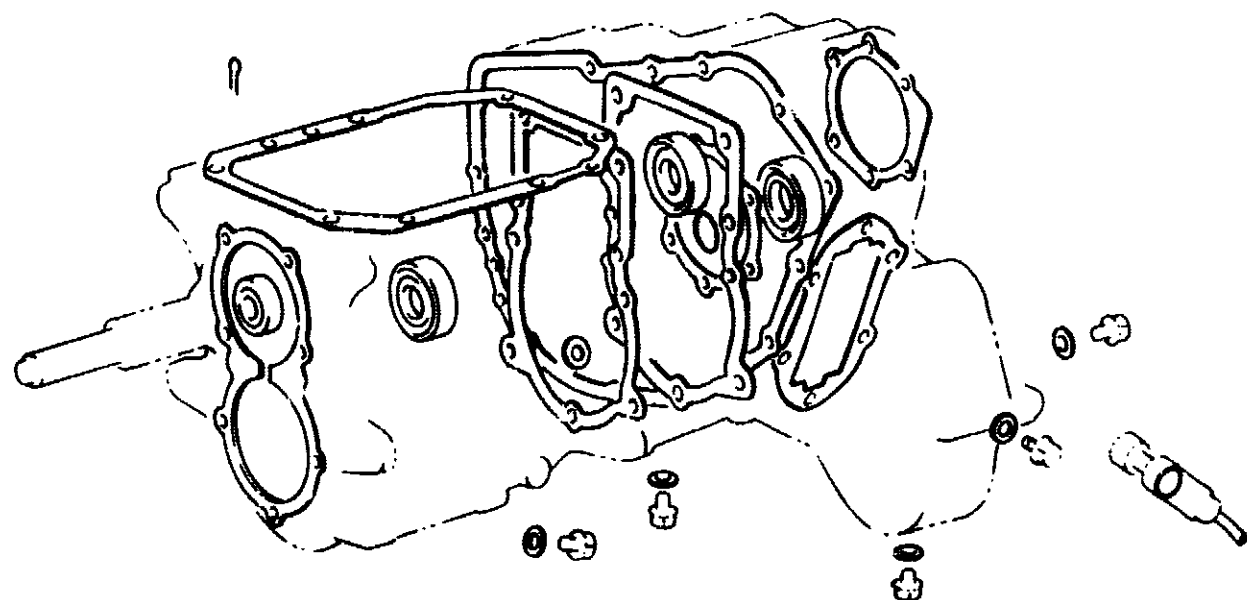

MC B687-B

MCB687B


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	33-01	TRANSAXLE OR TRANSMISSION ASSY & GASKET KIT (MTM)					
		04331 GASKET KIT, MANUAL TRANSMISSION OVERHAUL					
8411-8510	BJ70			# 04331-60080- (04331-60150-	1	81	100
C 8510-8608	BJ70			# 04331-60081- (04331-60160-	1	101	
C 8608-	BJ70			04331-60160-	1		
		33110 TRANSMISSION ASSY, MANUAL					
8411-8510	BJ70			33030-60620-	1	81	100
8510-	BJ70			33030-60500-	1	101	

HOUSING

1-L6

GENUINE TOYOTA PARTS

(8411-)

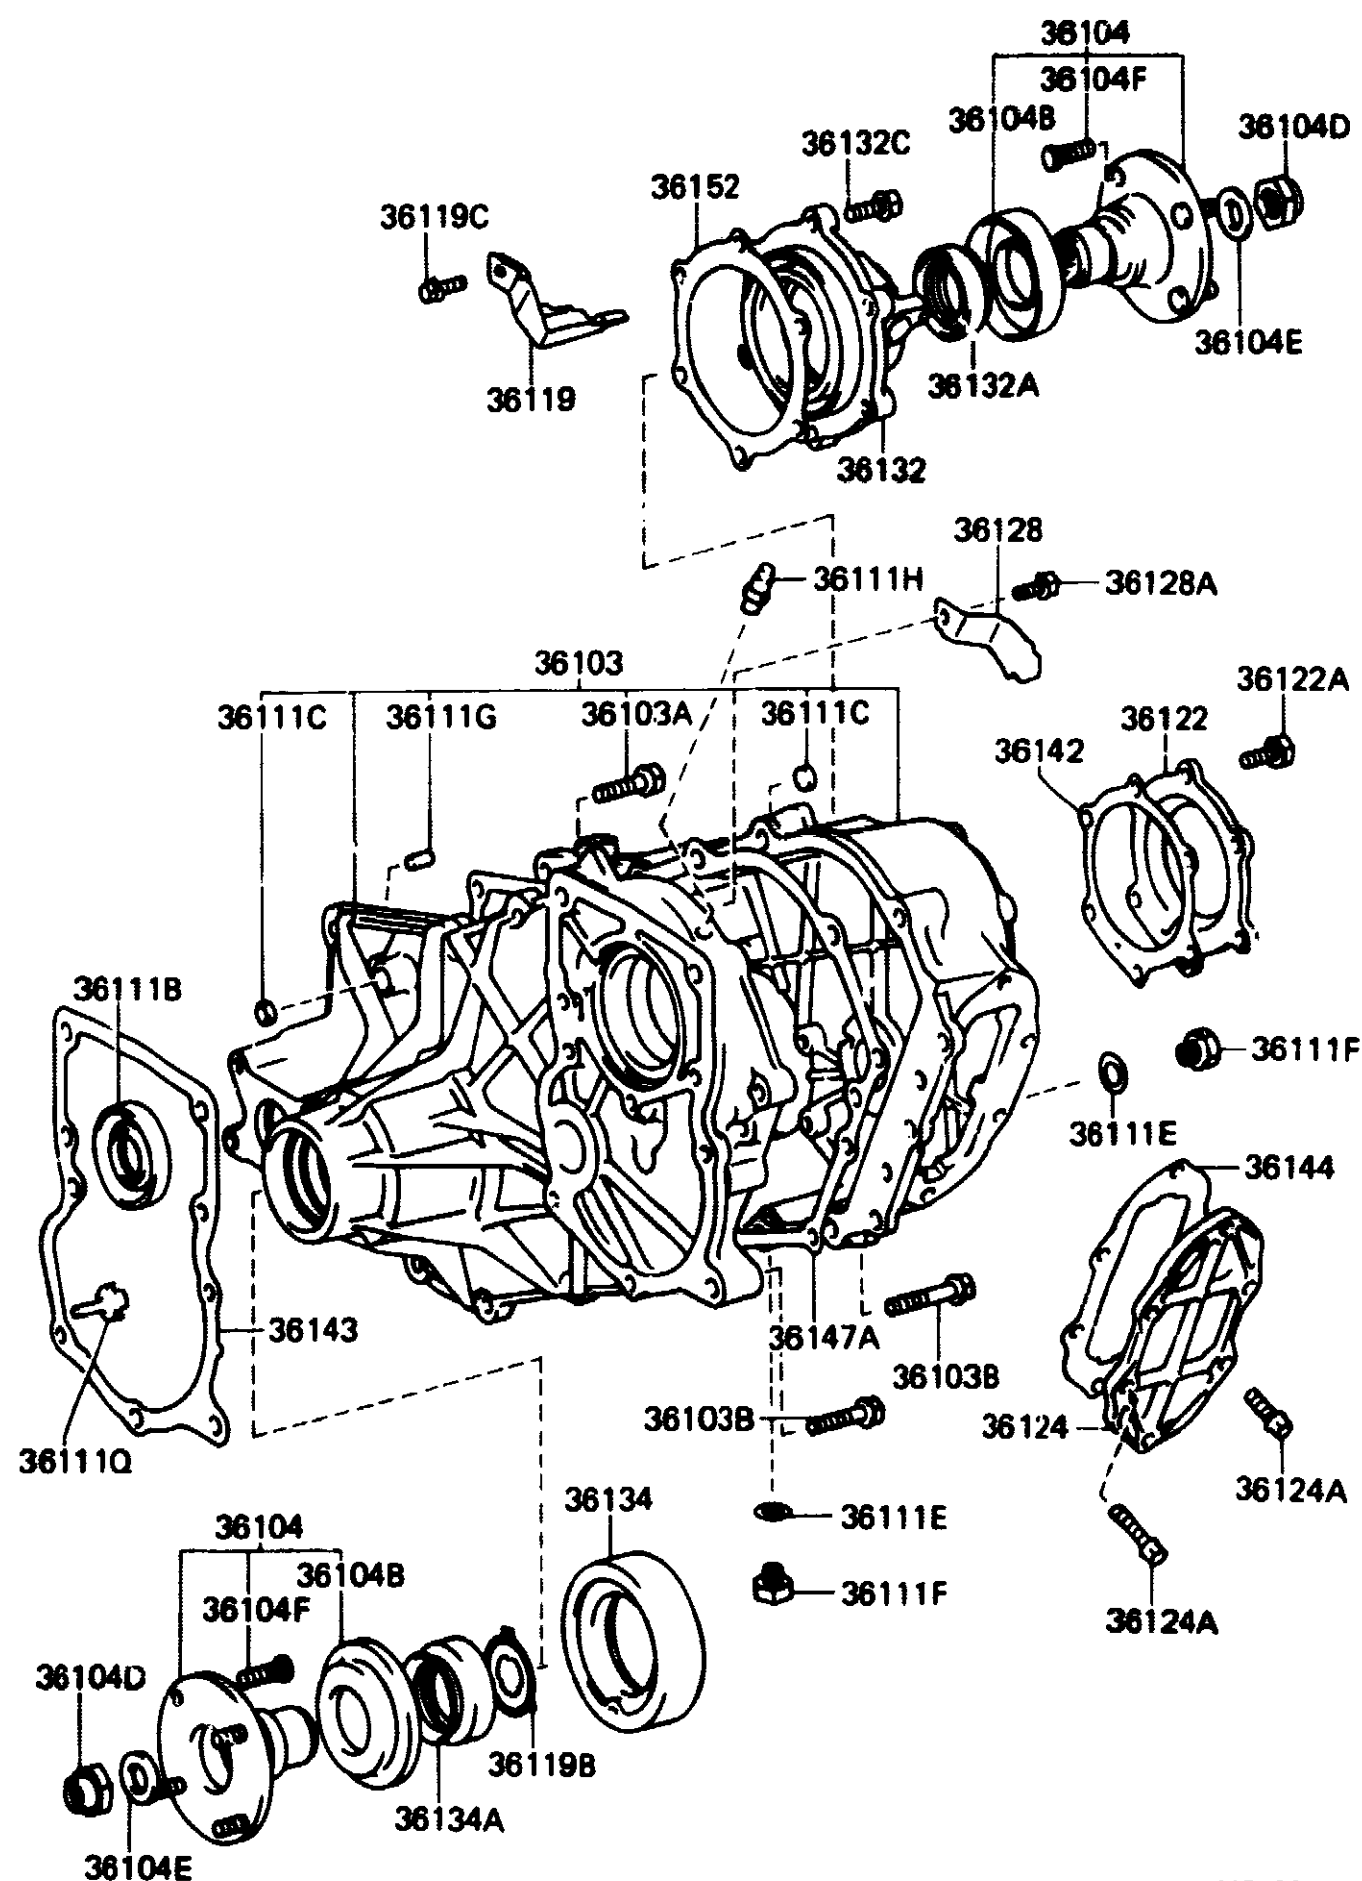

MC B734-B

PROD. DATE	M O D E L S	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	36-09	TRANSFER CASE & EXTENSION HOUSING					
	+-----+						
	36103	CASE SUB-ASSY, TRANSFER					
	+-----+						
8411-8510	BJ70	MECHANICAL TYPE		36103-60070-	1	81	100
8411-8510	BJ70	ELECTRIC TYPE		36103-60080-	1	81	100
8510-	BJ70	MECHANICAL TYPE		36103-60140-	1	101	
8510-	BJ70	ELECTRIC TYPE		36103-60150-	1	101	
	+-----+						
	36103A	BOLT (FOR TRANSFER CASE)					
	+-----+						
8411-	BJ70	X10-1.25PX 30-30		91651-61030-	3	81	
8411-	BJ70	X10-1.25PX 40-30		91651-61040-	8	81	
	+-----+						
	36103B	BOLT (FOR TRANSFER CASE) & ADAPTER SETTING					
	+-----+						
8411-	BJ70	X12-1.25PX 128-30 (W/C OATING)		90119-12045-	3	81	
8411-	BJ70	X12-1.25PX 173-30 (W/C OATING)		90119-12046-	2	81	
8411-	BJ70	X12-1.25PX 128-30		90119-12047-	1	81	
8411-	BJ70	X12-1.25PX 173-30		90119-12048-	1	81	
	+-----+						
	36104	FLANGE, COMPANION (FOR TRANSFER OUTPUT SHAFT)					
	+-----+						
8411-	BJ70	RR		33309-60040-	1	81	
8411-	BJ70	FR		33309-60070-	1	81	
	+-----+						
	36104B	DEFLECTOR, DUST (FOR TRANSFER OUTPUT SHAFT)					
	+-----+						
8411-	BJ70	FR		33325-60010-	1	81	
8411-	BJ70	RR		33325-60020-	1	81	
	+-----+						
	36104D	NUT (FOR TRANSFER OUTPUT SHAFT)					
	+-----+						
8411-	BJ70			90179-22005-	2	81	

* $\bigcirc - \bigcirc P \times \bigcirc - \bigcirc =$ Outside diameter - Pitch $\times$ Bolt length - Thread length


MCB 734B

(8411-)

(8411-)

ILLUST. NO. 10F2


ILLUST. NO. 20F2

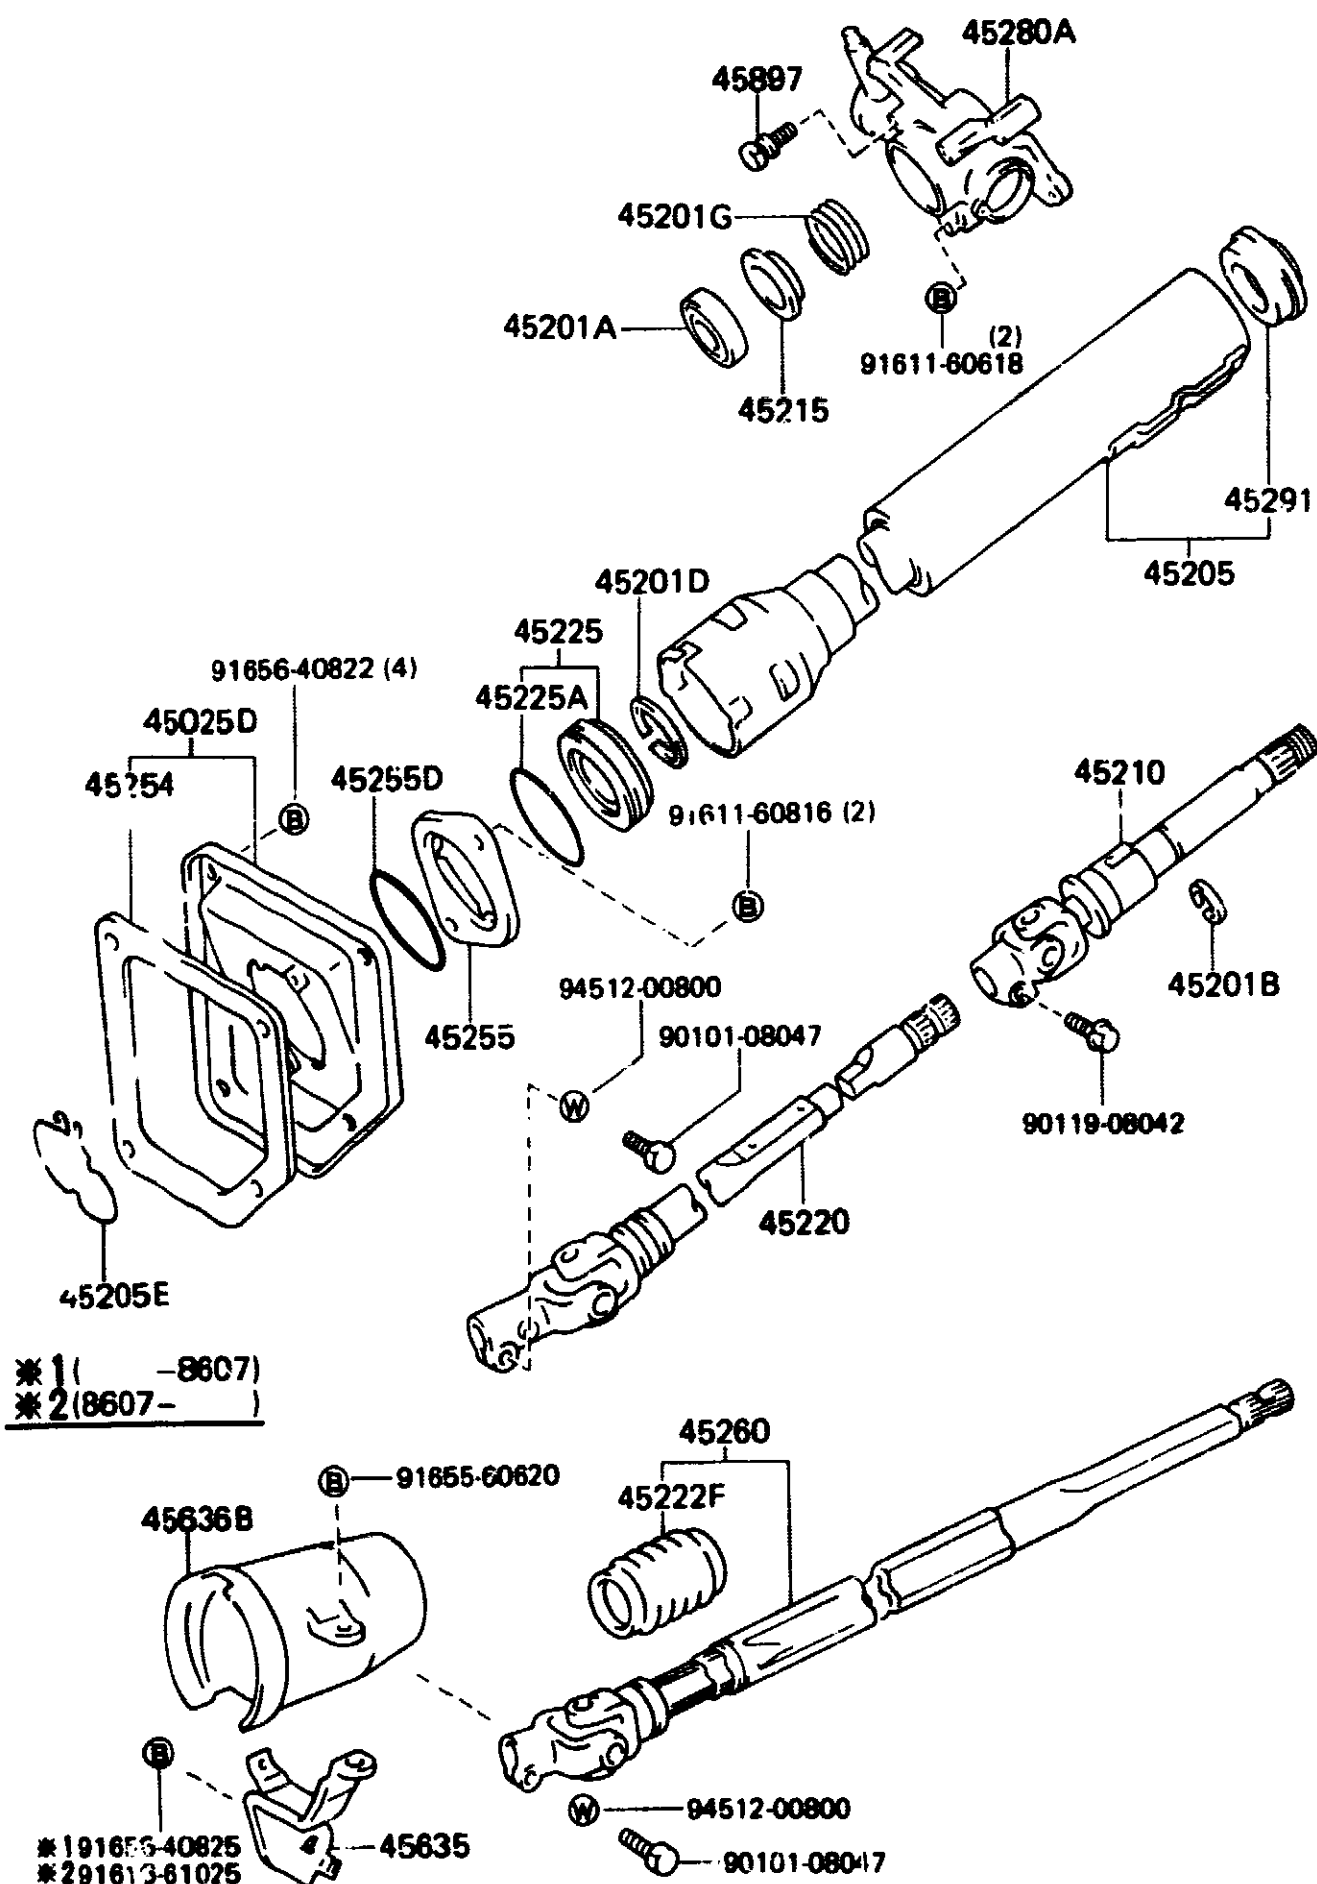

MC 8942-D

MCB942D

W/ Tilt Steering

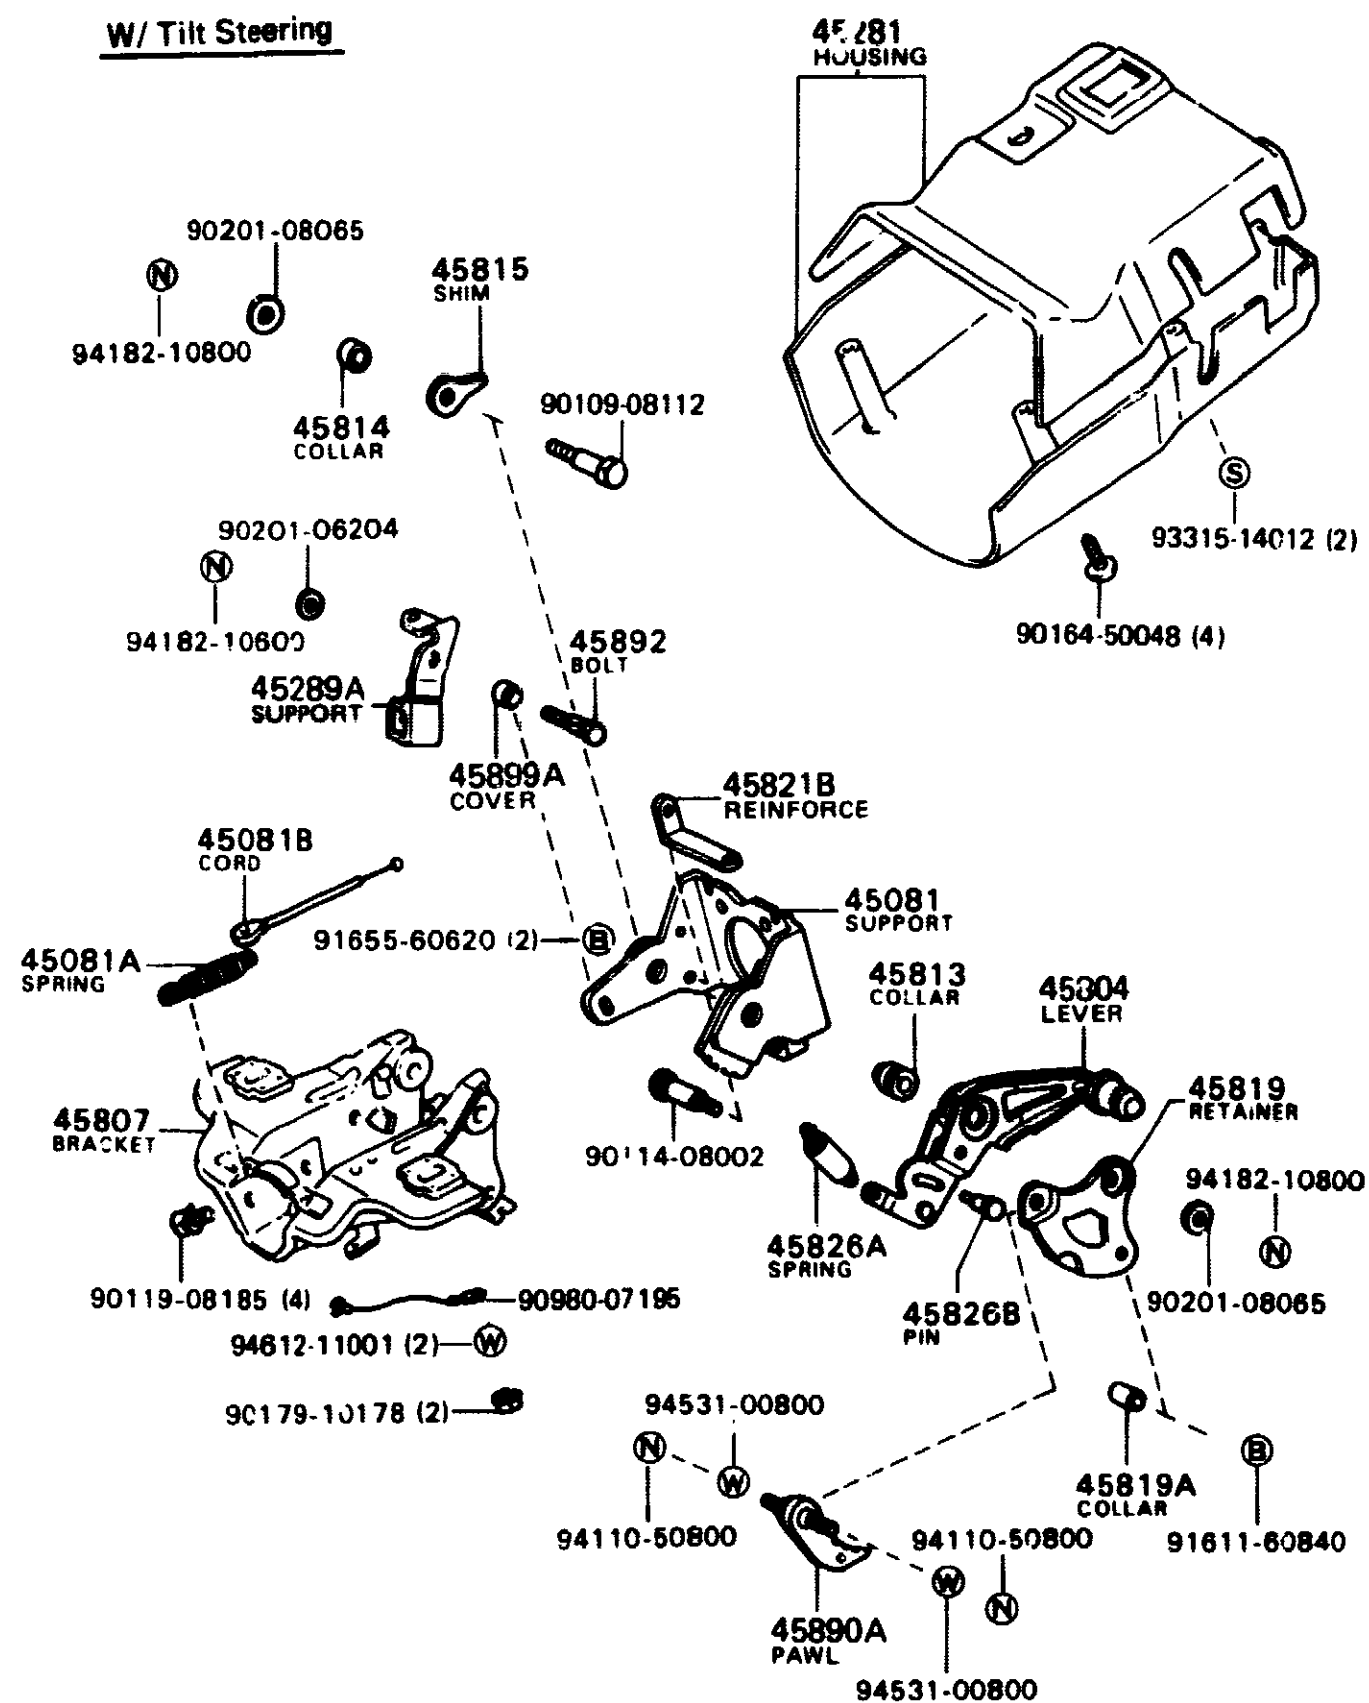

MC 8786-A

MCB786A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-8608	BJ70	SEAL, OIL (FOR SECTOR SHAFT)		90310-36001-	1	81	140
8411-8608	BJ70	HOUSING ASSY, STEERING GEAR		45310-60080-	1	81	140
8411-8608	BJ70	COVER, SECTOR SHAFT END					
8411-8608	BJ70	MARK 1		45304-26010-	1	81	140
8411-8608	BJ70	MARK 2		45304-26020-	1	81	140
8411-8608	BJ70	MARK 3		45304-26030-	1	81	140
8411-8608	BJ70	MARK 4		45304-26040-	1	81	140
8411-8608	BJ70	GASKET, SECTOR SHAFT END COVER		45332-26010-	1	81	140
8411-8608	BJ70	NUT, HEXAGON (FOR SECTOR SHAFT TO PITMAN ARM SE TTING)		90170-22058-	1	81	140
8411-8608	BJ70	WASHER, SECTOR SHAFT THRUST					
8411-8608	BJ70	T=1.95		45352-37010-	1	81	140
8411-8608	BJ70	T=2.00		45353-37010-	1	81	140
8411-8608	BJ70	T=2.05		45354-37010-	1	81	140
8411-8608	BJ70	SCREW, SECTOR SHAFT ADJUSTING		45357-36010-	1	81	140
8411-8608	BJ70	PLUG, STEERING GEAR HOUSING OIL		90930-03058-	1	81	140
8411-8608	BJ70	ARM, PITMAN		45411-60120-	1	81	140
8411-	BJ70	ROD ASSY, STEERING RELAY		45450-69085-	1	81	
8411-	BJ70	CLAMP, STEERING RELAY ROD END		45466-55020-	2	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	BJ70	ROD, STEERING RELAY		45451-60100-	1	81	
8411-	BJ70	SEAL, STEERING LINK DUST, RH		45458-60010-	1	81	
8411-	BJ70	CLIP (FOR STEERING LINK DUST SEAL)		90467-32002-	4	81	
8411-	BJ70	SEAL, STEERING LINK DUST, LH		45457-60010-	1	81	
8411-	BJ70	ROD ASSY, TIE		45460-69135-	1	81	
8411-	BJ70	ROD, STEERING TIE		45461-60100-	1	81	
8411-	BJ70	CLAMP, TIE ROD END		45466-36010-	2	81	
8411-	BJ70	SEAT, BALL STUD		45473-35010-	4	81	
8411-	BJ70	SEAT, STEERING LINK JOINT SPRING		45475-35010-	2	81	
8411-	BJ70	SPRING, COMPRESSION (FOR STEERING LINK JOINT)		90501-45114-	2	81	
8411-	BJ70	PLUG, STRAIGHT SCREW (FOR STEERING LINK JOINT)		90340-25001-	2	81	
8411-	BJ70	ARM, STEERING KNUCKLE, NO.1		45611-60060-	1	81	
8411-	BJ70	ARM, STEERING KNUCKLE, NO.2		45612-60060-	1	81	

PROD. DATE	MODELS	DESCRIPTION	P/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	48-04 REAR SPRING & SHOCK ABSORBER						
8411-	+	+					
	04483	SHACKLE KIT, REAR SPRING					
8411-	+	+					
	BJ70			04483-60060-	1	81	
8411-	+	+					
	04484	PIN KIT, REAR SPRING					
8411-	+	+					
	BJ70			04484-60010-	1	81	
8411-	+	+					
	48046	SEAT SUB-ASSY, SPRING U BOLT, RH					
8411-	+	+					
	BJ70			48046-60060-	1	81	
8411-	+	+					
	48046A	BOLT, U (FOR REAR SPRING)					
8411-8510	+	+					
	BJ70	L=180, W/DI STANCE PLATE		90118-14160-	2	81	100
8411-8608	+	+					
	BJ70	L=165		90118-14158- (90117-14001-)	4	81	140
8510-8608	+	+					
	BJ70	L=175, W/DI STANCE PLATE		90118-14107- (90117-14177-)	2	101	140
8608-	+	+					
	BJ70	L=165		90117-14176- (90117-14001-)	4	141	
8608-	+	+					
	BJ70	L=175, W/DI STANCE PLATE		90117-14177-	2	141	
8411-	+	+					
	48047	SEAT SUB-ASSY, SPRING U BOLT, LH					
8411-	+	+					
	BJ70			48047-60060-	1	81	
8411-	+	+					
	48210	SPRING ASSY, REAR RH					
8411-8510	+	+					
	BJ70			48210-60550- (48210-60551-)	1	81	100
8510-	+	+					
	BJ70			48210-60551-	1	101	
8411-	+	+					
	48210B	BUSH (FOR REAR SPRING PIN)					
8411-	+	+					
	BJ70			90389-18002-	4	81	
8411-	+	+					
	48210Q	BUSH (FOR REAR SPRING SHACKLE)					
8411-	+	+					
	BJ70			90389-18002-	8	81	
8411-	+	+					
	48211	LEAF, REAR SPRING, NO.1					
8411-	+	+					
	BJ70			48211-60460-	2	81	

PROD. DATE	MODELS	DESCRIPTION	P/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-8510	+	+					
	48212	LEAF, REAR SPRING, NO.2					
8510-	+	+					
	BJ70			48212-60460- (48212-60461-)	2	81	100
8510-	+	+					
	BJ70			48212-60461-	2	101	
8411-8510	+	+					
	48213	LEAF, REAR SPRING, NO.3					
8510-	+	+					
	BJ70			48213-60460- (48213-60461-)	2	81	100
8510-	+	+					
	BJ70			48213-60461-	2	101	
8411-	+	+					
	48214	LEAF, REAR SPRING, NO.4					
8411-	+	+					
	BJ70			48202-60460-	2	81	
8411-	+	+					
	48215	LEAF, REAR SPRING, NO.5					
8411-	+	+					
	BJ70			48215-60460-	2	81	
8411-	+	+					
	48216	LEAF, REAR SPRING, NO.6					
8411-	+	+					
	BJ70			48216-60460-	2	81	
8411-8510	+	+					
	48220	SPRING ASSY, REAR LH					
8510-	+	+					
	BJ70			48210-60460- (48210-60461-)	1	81	100
8510-	+	+					
	BJ70			48210-60461-	1	101	
8411-	+	+					
	48241	CLIP, REAR SPRING, NO.1					
8411-	+	+					
	BJ70			48141-60200-	4	81	
8411-	+	+					
	48247	BOLT, REAR SPRING, CENTER					
8411-	+	+					
	BJ70			48289-60010-	2	81	
8510-	+	+					
	48252E	SILENCER, REAR SPRING, NO.1					
8510-	+	+					
	BJ70			48153-60230-	4	101	
8510-	+	+					
	48252C	SILENCER, REAR SPRING, NO.2					
8510-	+	+					
	BJ70			48154-60230-	4	101	
8411-	+	+					
	48284	NUT, REAR SPRING CENTER BOLT					
8411-	+	+					
	BJ70			48284-60062-	2	81	


FIGURE NUMBER INDEX

LOCATION	FIG No.	SUMMARY	LOCATION	FIG.No.	SUMMARY	LOCATION	FIG.No.	SUMMARY
TOOL GROUP			FUEL GROUP			1-I 8	43-02	DRIVE SHAFT
1-A 1	09-01	STANDARD TOOL	1-A 4	22-01	INJECTION NOZZLE	1-J 8	43-03	FRONT AXLE HUB
ENGINE GROUP			1-C 4	22-02	INJECTION PUMP ASSEMBLY	1-L 8	45-01	STEERING COLUMN & SHAFT
1-C 1	11-01	PARTIAL ENGINE ASSEMBLY	1-D 4	22-03	INJECTION PUMP BODY	1-B 9	45-02	VANE PUMP & RESERVOIR
1-D 1	11-02	SHORT BLOCK ASSEMBLY	1-G 4	22-04	PNEUMATIC GOVERNOR	1-E 9	45-03	OIL COOLER & TUBE
1-E 1	11-03	ENGINE OVERHAUL GASKET KIT	1-J 4	22-06	FUEL FEED PUMP	1-F 9	45-04	STEERING WHEEL
1-F 1	11-04	CYLINDER HEAD	1-L 4	22-07	AUTOMATIC TIMER	1-H 9	45-05	STEERING GEAR & LINK
1-H 1	11-05	CYLINDER BLOCK	1-M 4	23-02	FUEL FILTER	1-A 10	46-01	PARKING BRAKE & CABLE
1-J 1	11-06	TIMING GEAR COVER & REAR END PLATE	1-B 5	26-06	VENTURI	1-C 10	47-01	BRAKE PEDAL & BRACKET
1-L 1	11-07	MOUNTING	POWER TRAIN-CHASSIS GROUP			1-D 10	47-02	BRAKE MASTER CYLINDER
1-M 1	12-01	VENTILATION HOSE	1-D 5	31-01	CLUTCH & RELEASE FORK	1-F 10	47-03	BRAKE BOOSTER
1-A 2	13-01	CRANKSHAFT & PISTON	1-E 5	31-02	CLUTCH PEDAL & FLEXIBLE HOSE	1-H 10	47-05	FRONT DISC BRAKE CALIPER & DUST COVER
1-C 2	13-02	CAMSHAFT & VALVE	1-G 5	31-03	CLUTCH MASTER CYLINDER	1-J 10	47-06	REAR BACKING PLATE & WHEEL CYLINDER
1-E 2	15-01	OIL PUMP	1-I 5	31-04	CLUTCH BOOSTER	1-M 10	47-08	BRAKE TUBE & CLAMP
1-G 2	15-02	OIL FILTER	1-K 5	31-05	CLUTCH RELEASE CYLINDER	1-E 11	48-02	FRONT AXLE ARM & STEERING KNUCKLE
1-H 2	15-03	OIL COOLER	1-L 5	33-01	TRANSAXLE OR TRANSMISSION ASSY & GASKET KIT (MTM)	1-G 11	48-03	FRONT SPRING & SHOCK ABSORBER
1-I 2	16-01	WATER PUMP	1-M 5	33-02	CLUTCH HOUSING & TRANSMISSION CASE (MTM)	1-K 11	48-04	REAR SPRING & SHOCK ABSORBER
1-K 2	16-03	RADIATOR & WATER OUTLET	1-B 6	33-04	SPEEDOMETER DRIVEN GEAR (MTM)			
1-A 3	16-06	V-BELT	1-C 6	33-05	TRANSMISSION GEAR (MTM)			
1-B 3	17-01	MANIFOLD	1-G 6	33-07	GEAR SHIFT FORK & LEVER SHAFT (MTM)			
1-C 3	17-02	EXHAUST PIPE	1-J 6	33-12	SHIFT LEVER & RETAINER			
1-E 3	17-03	AIR CLEANER	1-K 6	36-02	TRANSFER ASSEMBLY & GASKET KIT			
1-G 3	17-09	CAUTION PLATE & NAME PLATE	1-L 6	36-09	TRANSFER CASE & EXTENSION HOUSING			
1-H 3	19-01	IGNITION COIL & SPARK PLUG	1-B 7	36-10	TRANSFER GEAR			
1-I 3	19-03	ALTERNATOR	1-E 7	36-11	TRANSFER LEVER & SHIFT ROD			
1-K 3	19-04	STARTER	1-H 7	36-12	DIAPHRAGM CYLINDER			
1-M 3	19-05	VACUUM PUMP	1-I 7	36-16	VACUUM SHIFT VALVE & TUBE			
			1-K 7	37-01	PROPELLER SHAFT & UNIVERSAL JOINT			
			1-M 7	41-01	REAR AXLE HOUSING & DIFFERENTIAL			
			1-D 8	41-02	REAR AXLE SHAFT & HUB			
			1-E 8	41-03	DISC WHEEL & WHEEL CAP			
			1-F 8	43-01	FRONT AXLE HOUSING & DIFFERENTIAL			

LAND CRUISER (U. S. A)




(8411-)

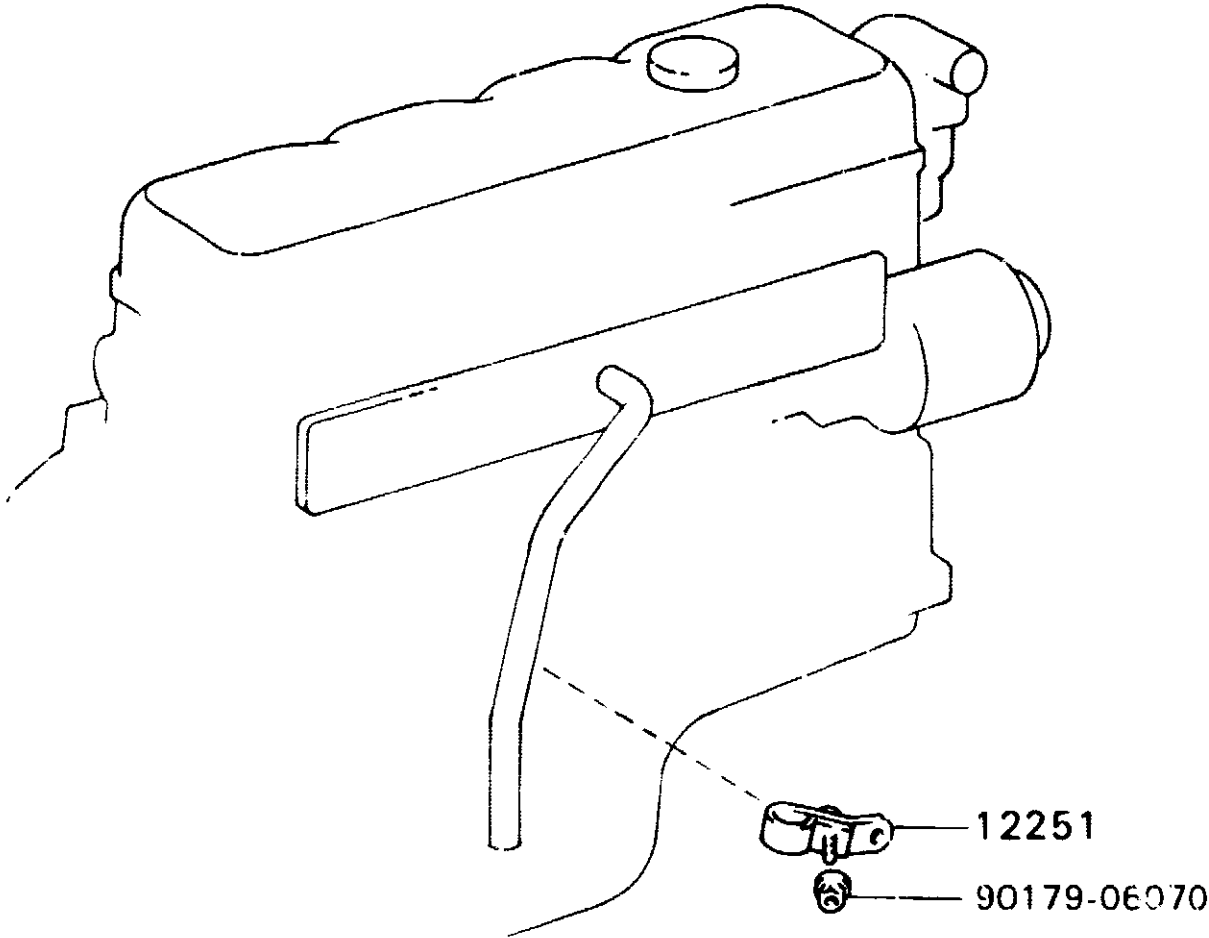

MA 7631

PROD. DATE	M O D E L S	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	12-01 VENTILATION HOSE						
		+-----+ 12251 CLAMP, VENTILATION TUBE +-----+					
8411-	3B..BJ70			12251-56040-	1	8 i	

(8411-)

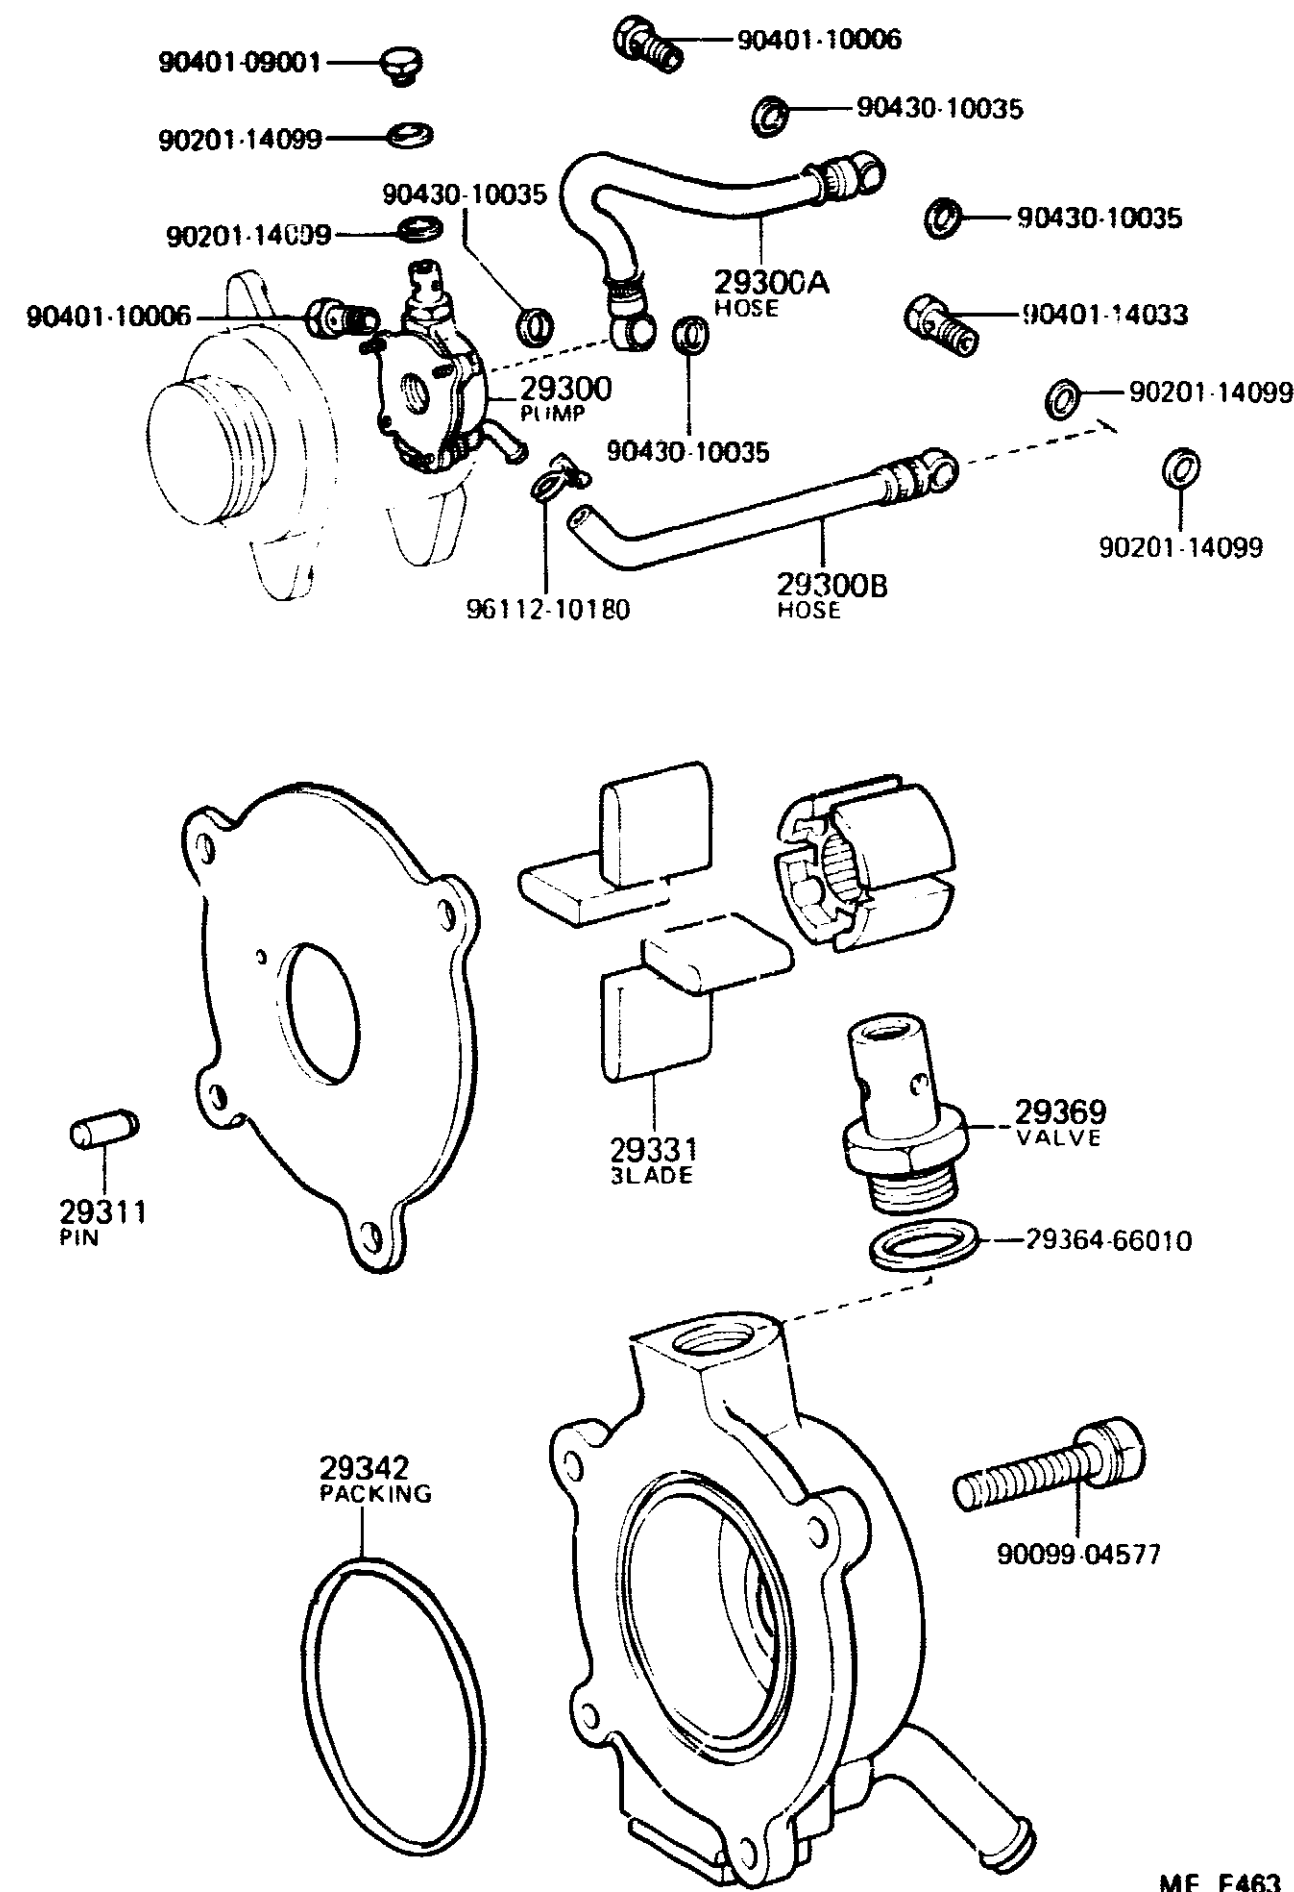

ME F463



PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
FIG.	19-05 VACUUM PUMP						
8411-	29300	PUMP ASSY, VACUUM		29300-56070-	1	81	
8411-	29300A	HOSE, VACUUM PUMP OIL INLET		90923-02072-	1	81	
8411-	29300B	HOSE, VACUUM PUMP OIL OUTLET		90923-02073-	1	81	
8411-	29311	PIN, VACUUM PUMP DOWEL, NO.1		29311-76010- (90099-08082-)	1	81	
8411-	29331	BLADE, VACUUM PUMP, A		29331-56070-	4	81	
8411-	29342	PACKING, VACUUM PUMP		96740-02063-	1	81	
8411-	29369	VALVE SUB-ASSY, CHECK		29369-56070-	1	81	

(8411-)


(8411-)

ILLUST. NO. 10F2

ILLUST. NO. 20F2

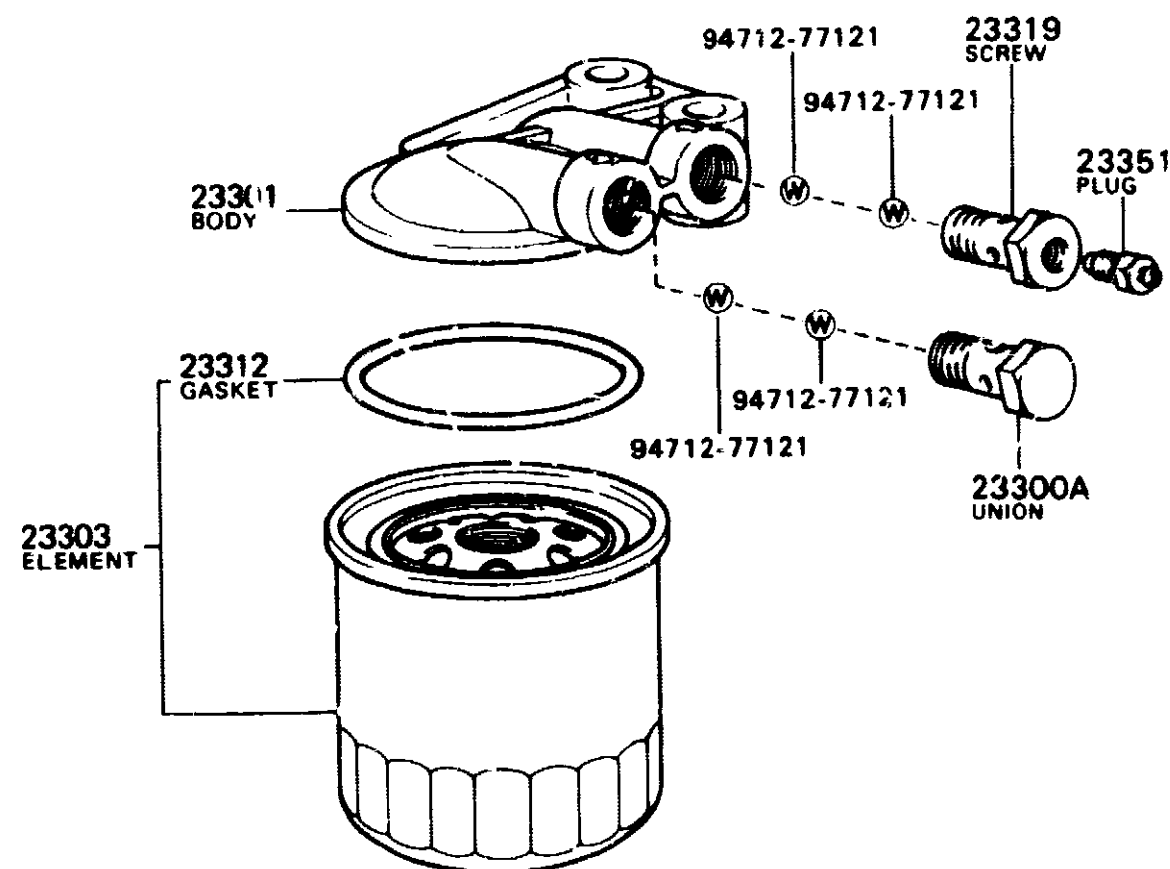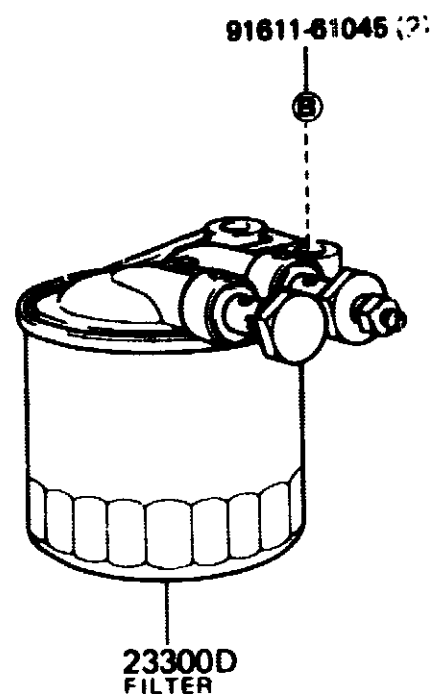

MF 3438

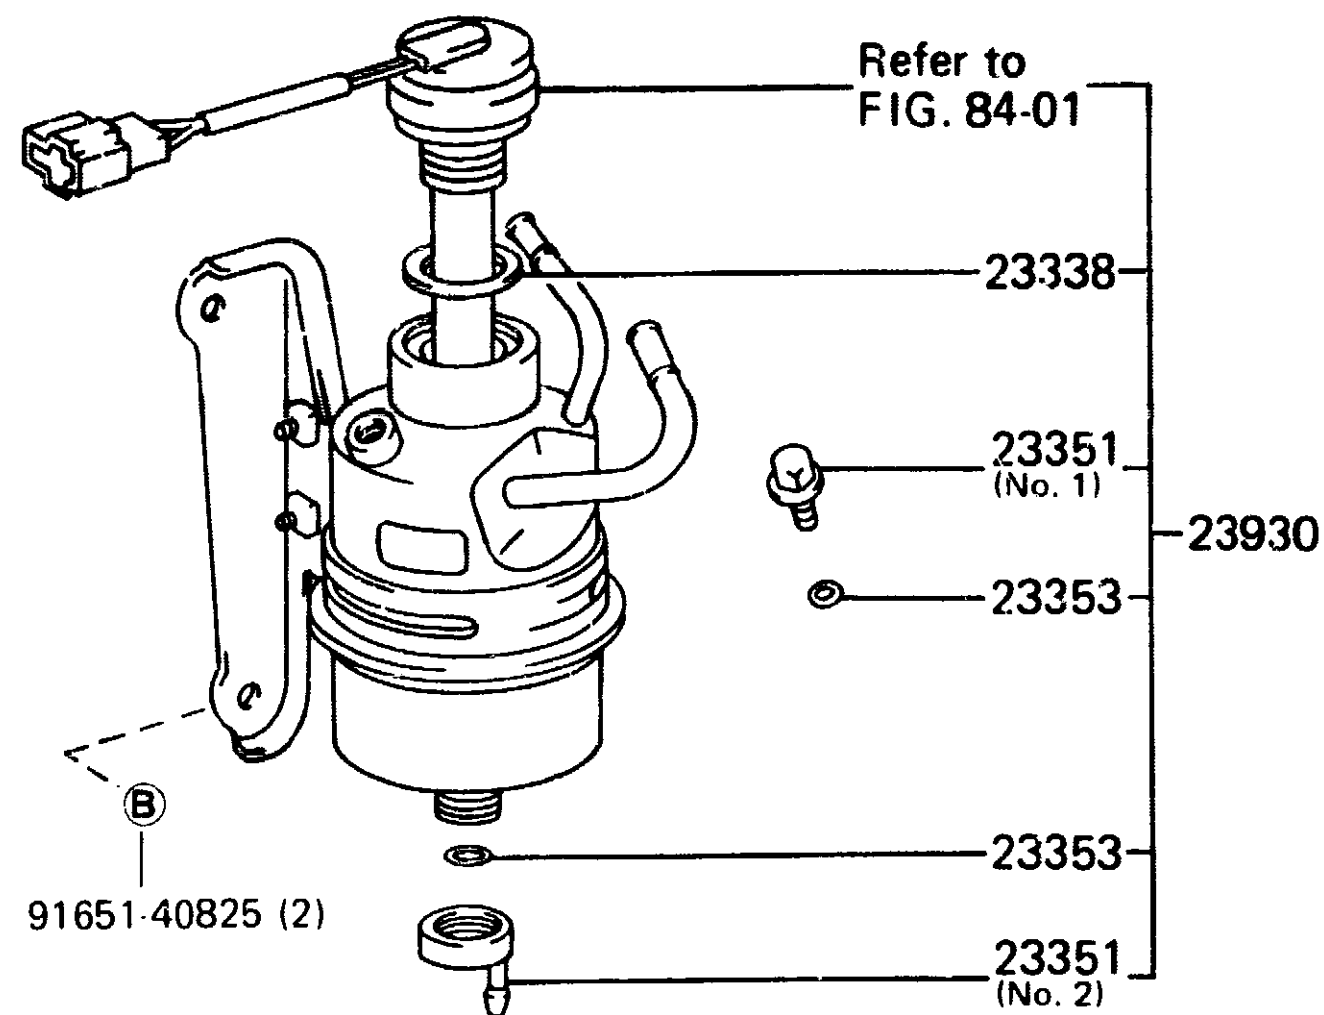

MF 3516-A


FIG.33-02 CLUTCH HOUSING & TRANSMISSION
CASE (MTM)

1-M5

M74-13-0031

GENUINE TOYOTA PARTS

(8411-)

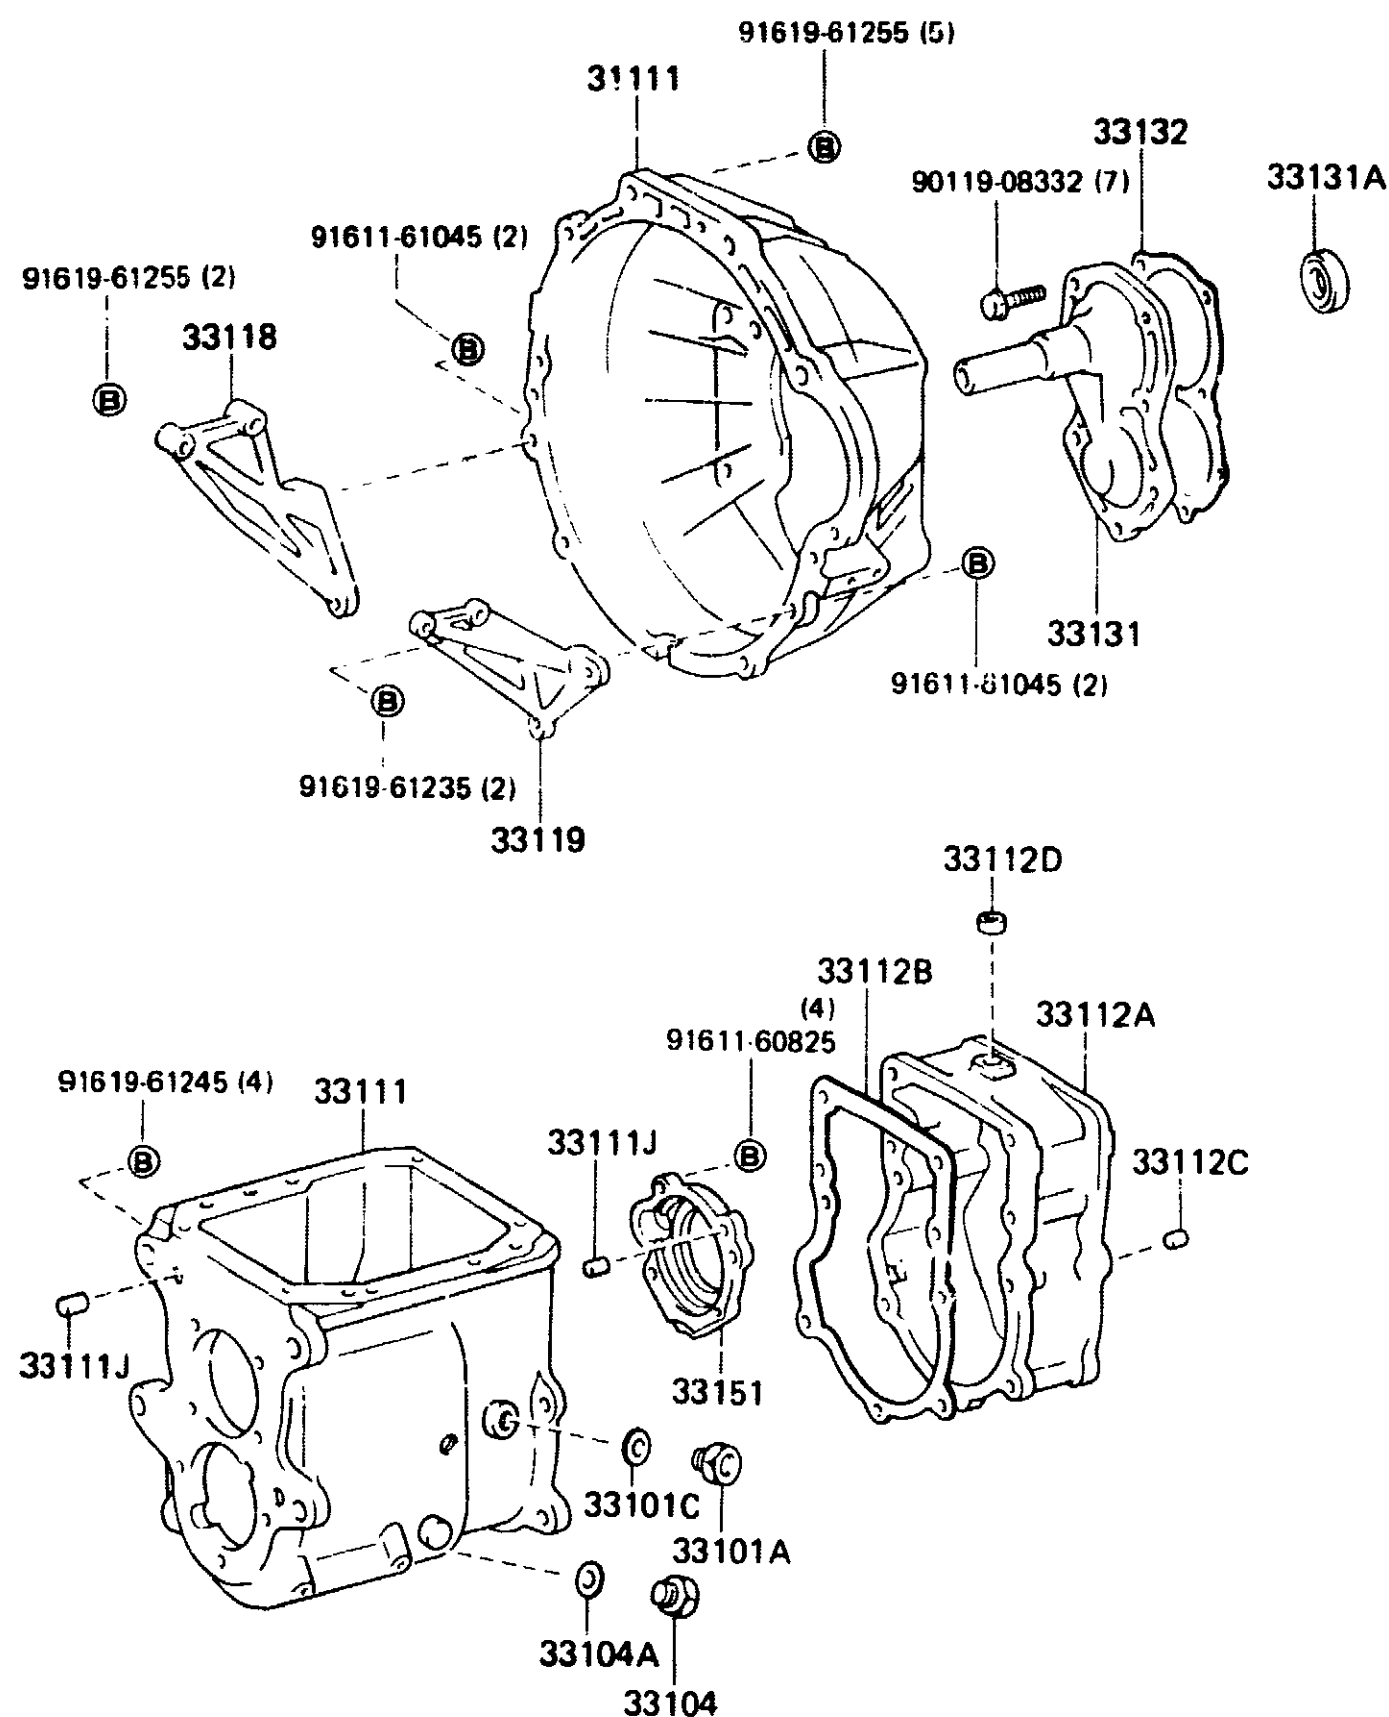

MC B695-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	33-02 CLUTCH HOUSING & TRANSMISSION CASE (MTM)						
	31111	HOUSING, CLUTCH					
8411-8505	BJ70			31111-60130-	1	81	
8411-8505	BJ70	W/TACHOMETER		31111-60140- (31111-60190-)	1	81	
8505-8510	BJ70			31111-60180-	1		100
8505-	BJ70	W/TACHOMETER		31111-60190-	1		
	33101A	PLUG (FOR MANUAL TRANSMISSION FILLER)					
8411-	BJ70			90341-18006-	1	81	
	33101C	GASKET (FOR MANUAL TRANSMISSION FILLER PLUG)					
8411-	BJ70			90430-18008-	1	81	
	33104	PLUG SUB-ASSY, DRAIN (MTM)					
8411-	BJ70			90341-18057-	1	81	
	33104A	GASKET, DRAIN PLUG (MTM)					
8411-	BJ70			90430-18008-	1	81	
	33111	CASE, MANUAL TRANSMISSION					
8411-8510	BJ70			33111-60070-	1	81	100
8510-	BJ70			33111-60080-	1	101	
	33111J	PIN, STRAIGHT (FOR MANUAL TRANSMISSION CASE)					
8411-	BJ70	L=14, OD=10		90250-10214-	1	81	
3411-	BJ70	L=17, OD=12		90250-12146-	2	81	
8411-	BJ70	L=14, OD=12		90250-12216-	1	81	
	33112A	ADAPTER, TRANSFER					
C 8411-8703	BJ70			36117-60020-	1	81	
C 8703-	BJ70			36117-60021-	1		
	33112B	GASKET, TRANSFER ADAPTER					
8411-	BJ70			33142-60020-	1	81	

FIG. 36-09

GENUINE TOYOTA PARTS

1-M6

M74-15-0619

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	+-----+ 36104E +-----+	WASHER, PLATE (FOR TRANSFER OUTPUT SHAFT)		90201-22005-	2	81	
	BJ70						
8411-	+-----+ 36104F +-----+	BOLT (FOR TRANSFER OUTPUT SHAFT COMPANION FLANGE)		90114-11124-	8	81	
	BJ70						
8411-8608	+-----+ 36111B +-----+	SEAL, OIL (FOR TRANSFER CASE)		90311-48008- (90311-48012-)	1	81	140
	BJ70						
8608-	+-----+ 36111C +-----+	PLUG (FOR TRANSFER CASE)		90311-48012-	1	141	
	BJ70						
8411-8609	+-----+ 36111E +-----+	GASKET (FOR TRANSFER CASE)		90430-18008-	2	81	
	BJ70						
8411-	+-----+ 36111F +-----+	FILLER PLUG		90341-18006-	1	81	
	BJ70						
8411-	+-----+ 36111G +-----+	DRAIN PLUG		90341-18057-	1	81	
	BJ70						
8411-	+-----+ 36111H +-----+	PIN, STRAIGHT (FOR TRANSFER CASE)		90250-10006-	2	81	
	BJ70						
8411-	+-----+ 36111I +-----+	PLUG, BREATHER (FOR TRANSFER CASE)		90930-03075-	1	81	
	BJ70						
8411-	+-----+ 36111J +-----+	PIPE, OIL RECEIVER		33124-36010-	1	81	
	BJ70						
8411-	+-----+ 36119 +-----+	RECEIVER, TRANSFER OIL, NO. 1		36119-60010-	1	81	
	BJ70						
8411-	+-----+ 36119B +-----+	RECEIVER, TRANSFER OIL, NO. 2		36119-60030-	1	81	
	BJ70						

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	+-----+ 36119C +-----+	BOLT (FOR TRANSFER OIL RECEIVER NO. 1)		91611-60610-	1	81	
	BJ70						
8411-	+-----+ 36122 +-----+	COVER, TRANSFER CASE, NO. 2		36122-60040-	1	81	
	BJ70						
8411-	+-----+ 36122A +-----+	BOLT (FOR TRANSFER CASE) COVER NO. 2		91611-61020-	6	81	
	BJ70						
8411-	+-----+ 36124 +-----+	COVER, TRANSFER POWER TAKE-OFF		36124-60020-	1	81	
	BJ70						
8411-	+-----+ 36124A +-----+	BOLT (FOR TRANSFER POWER TAKE-OFF COVER)		90119-08353- 0-23.5	2	81	
	BJ70						
8411-	+-----+ 36128 +-----+	DEFLECTOR, BREATHER OIL		36128-60021-	1	81	
	BJ70						
8411-	+-----+ 36128A +-----+	BOLT (FOR BREATHER OIL DEFLECTOR)		91611-60610-	1	81	
	BJ70						
8411-	+-----+ 36132 +-----+	RETAINER, OUTPUT SHAFT BEARING, REAR NO. 1		36132-60020-	1	81	
	BJ70						
8411-	+-----+ 36132A +-----+	SEAL, OIL (FOR OUTPUT SHAFT RETAINER)		90311-48010-	1	81	
	BJ70						
8411-	+-----+ 36132C +-----+	BOLT (FOR OUTPUT SHAFT BEARING RETAINER REAR NO. 1)		90119-10262-	6	81	
	BJ70						
8411-	+-----+ 36134 +-----+	RETAINER, OUTPUT SHAFT BEARING, FRONT		36134-60020-	1	81	
	BJ70						
8411-	+-----+ 36134A +-----+	SEAL, OIL (FOR OUTPUT SHAFT BEARING FRONT RETAINER)		90311-48009-	1	81	
	BJ70						


*○-○P×○-○=Outside diameter-Pitch×Bolt length-Thread length

(8411-)


(8411-)

ILLUST. NO. 10F2

ILLUST. NO. 20F2

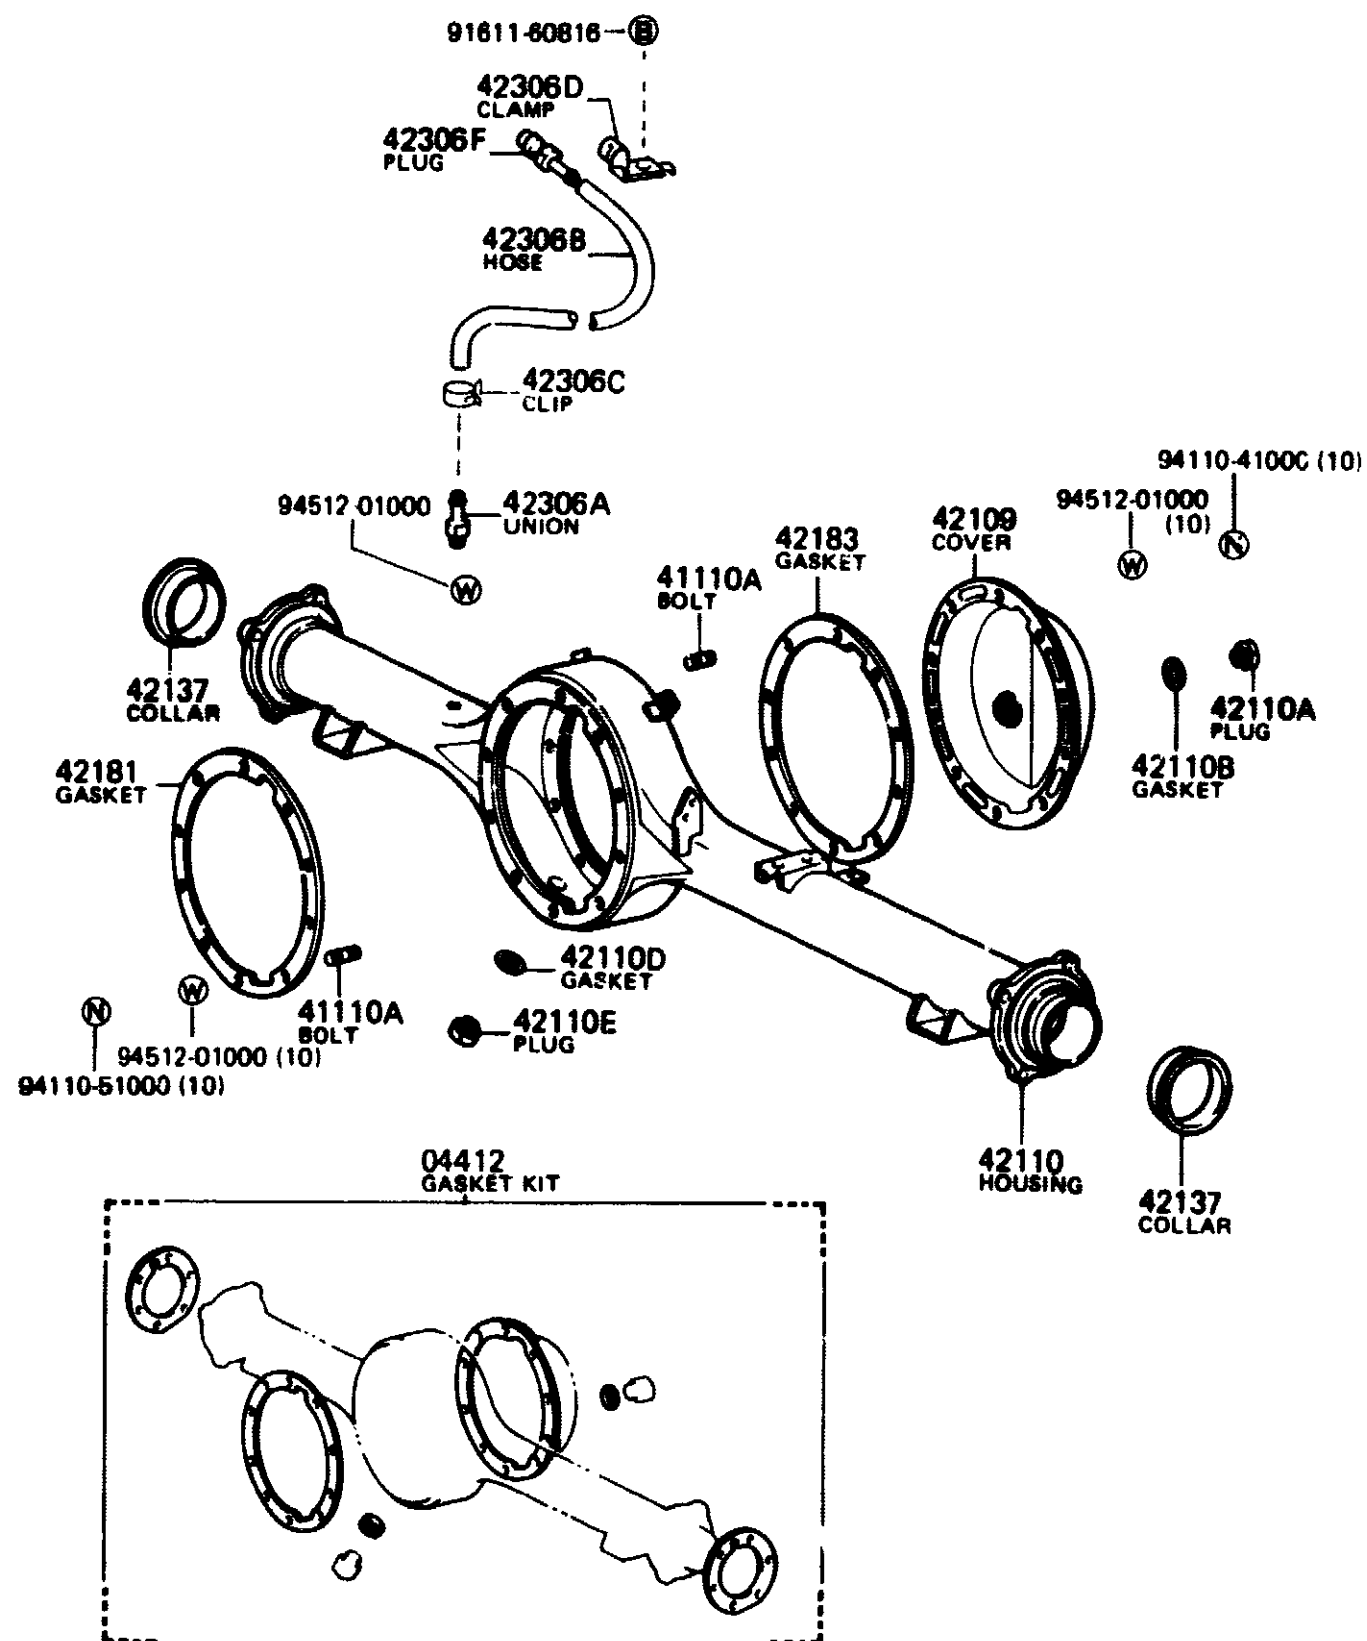Semi Floating Axle

MC B758-D

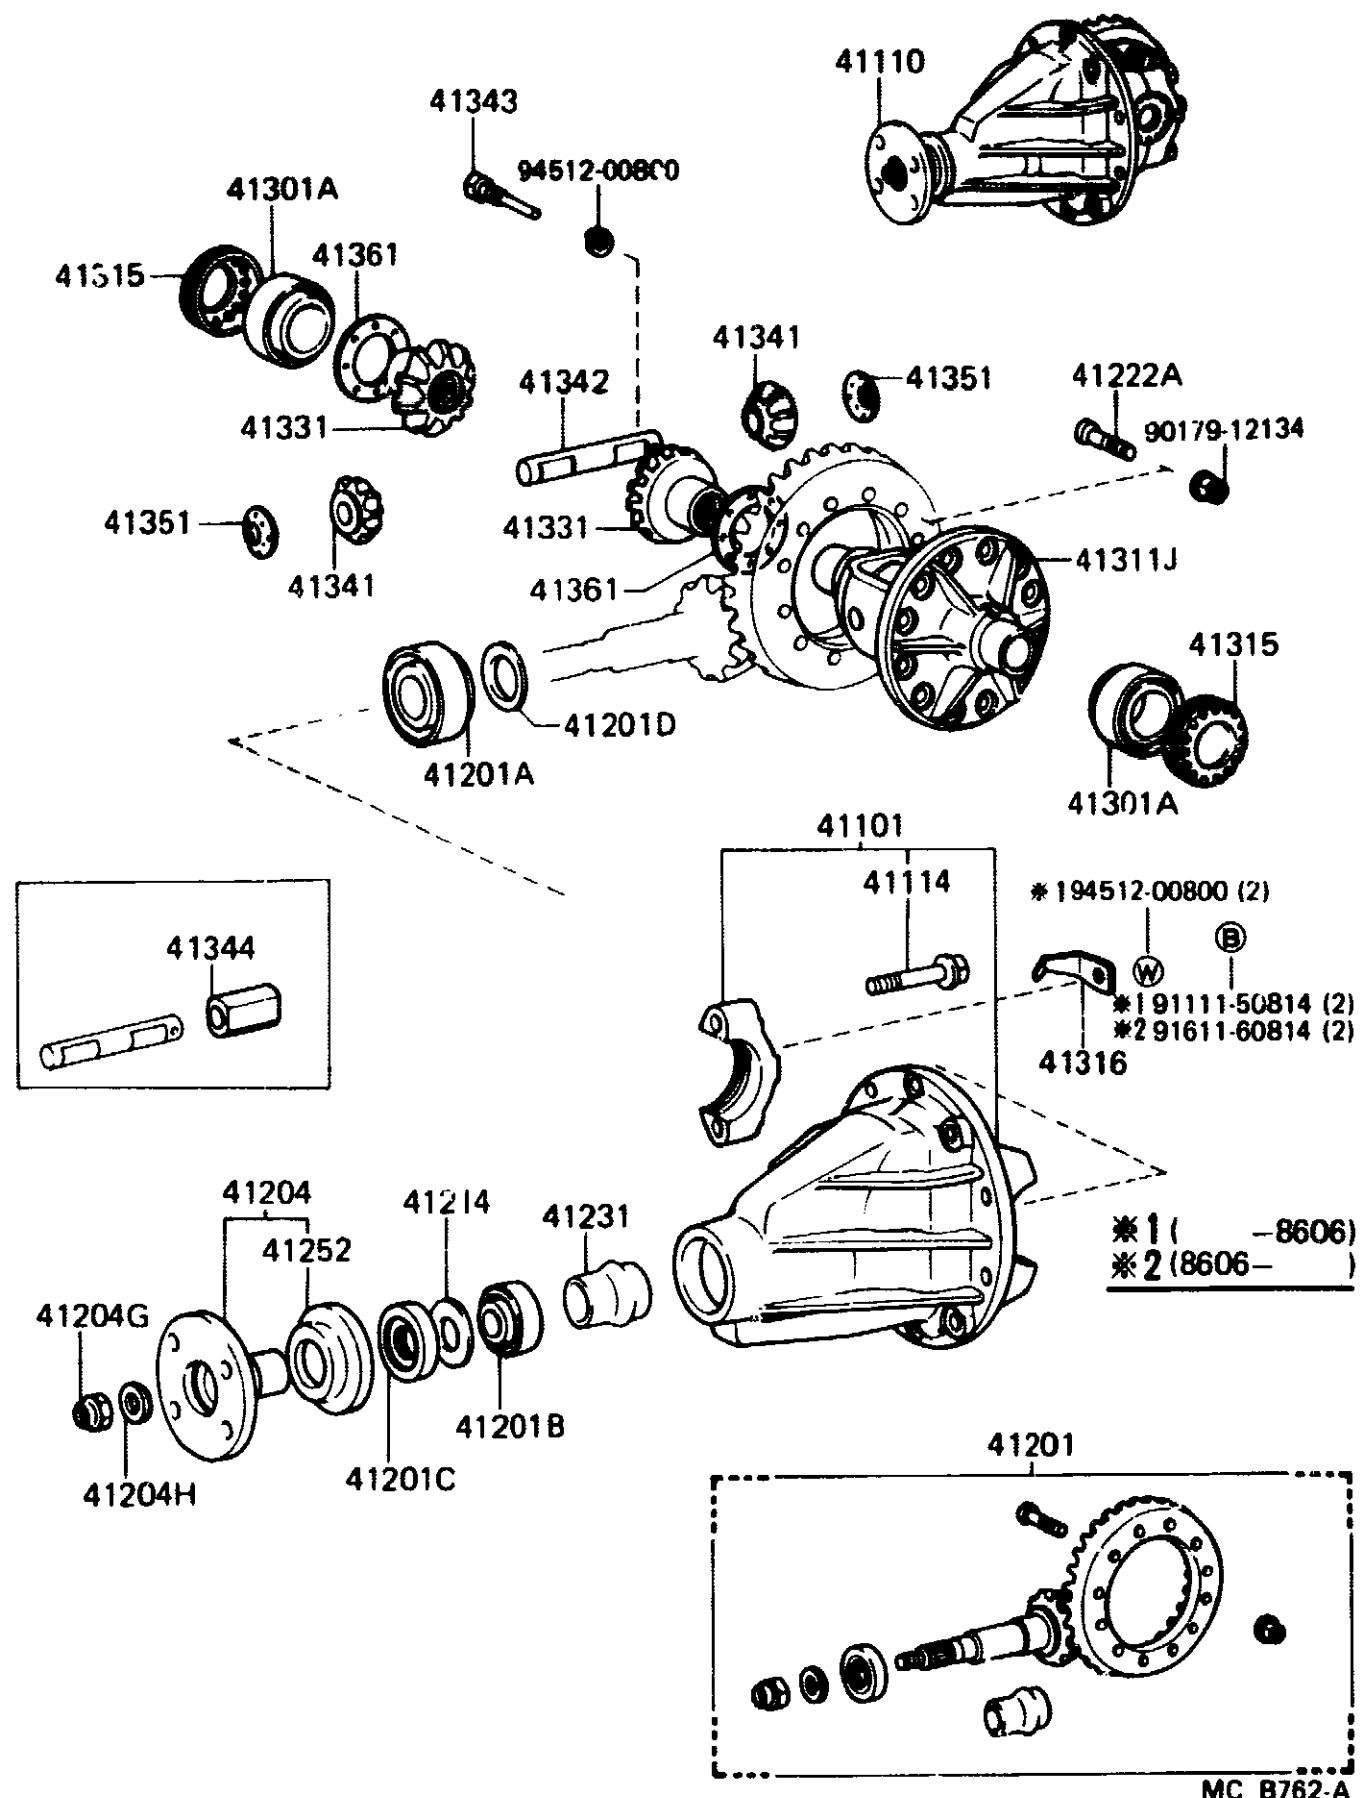

MCB762A


MCB758D

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIC.	45-01 STEERING COLUMN & SHAFT						
8411-	45025D	COVER SUB-ASSY, STEERING COLUMN HOLE, NO. 1		45025-60060-	1	81	
8411-	BJ70						
8411-	45081	SUPPORT SUB-ASSY, TILT STEERING		45081-22020-	1	81	
8411-	BJ70						
8411-	45081A	SPRING, TENSION (FOR TILT STEERING)		90506-23009-	2	81	
8411-	BJ70						
8411-	45081B	CORD (FOR TILT STEERING)		90945-02034-	2	81	
8411-	BJ70						
8411-	45201A	BEARING, RADIAL BALL (FOR STEERING MAIN SHAFT)		90363-28001-	1	81	
8411-	BJ70						
8411-	45201B	RING, SHAFT SNAP (FOR STEERING MAIN SHAFT)		90520-17042-	1	81	
8411-	BJ70						
8411-	45201D	RING (FOR STEERING MAIN SHAFT)		96152-00300-	1	81	
8411-	BJ70						
8411-	45201G	SPRING, COMPRESSION (FOR STEERING MAIN SHAFT)		90501-45011-	1	81	
8411-	BJ70						
8411-	45205	TUBE SUB-ASSY, STEERING COLUMN		45870-60050-	1	81	
8411-	BJ70						
8411-	45205E	RING, SNAP (FOR STEERING COLUMN TUBE)		90521-01002-	1	81	
8411-	BJ70						
8411-	45210	SHAFT ASSY, STEERING MAIN		45210-60060-	1	81	
8411-	BJ70						
8411-	45215	COLLAR, MAIN SHAFT BEARING THRUST		45215-22011-	1	81	
8411-	BJ70						

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	45220	SHAFT ASSY, STEERING INTERMEDIATE		45220-60100-	1	81	
8411-	BJ70						
8411-8511	45222F	COVER, DUST		45222-60030-	1	81	
8511-	BJ70			45222-60031-	1		
8411-	45225	BLOCK, BEARING		45225-60010-	1	81	
8411-	BJ70						
8411-	45225A	RING, O (FOR BEARING BLOCK)		96711-24053-	1	81	
8411-	BJ70						
8411-	45254	SHIELD, STEERING COLUMN HOLE		45254-60050-	1	81	
8411-	BJ70						
8411-	45255	PLATE, STEERING COLUMN HOLE COVER		45255-60010-	1	81	
8411-	BJ70						
8411-	45255D	RING, O (FOR STEERING COLUMN HOLE COVER PLATE)		90301-60122-	1	81	
8411-	BJ70						
8411-	45260	SHAFT ASSY, STEERING INTERMEDIATE, NO. 2		45260-60050-	1	81	
8411-	BJ70						
8411-8608	45280A	BRACKET ASSY, STEERING COLUMN, UPPER		45280-60180-	1	81	
8608-	BJ70			45280-60181-	1		
8411-	45281	HOUSING, STEERING COLUMN		45286-60928-03	1	81	
8411-	BJ70	GRAY		45286-60928-06	1	81	
8411-	BJ70	BROWN					
8411-	45289A	SUPPORT, STEERING COLUMN COVER		45289-22020-	1	81	
8411-	BJ70						
8411-8510	45291	SEAL, MAIN SHAFT UPPER DUST		45282-60010-	1	81	100
8411-	BJ70						

(8411-)

ILLUST. NO. 10F3

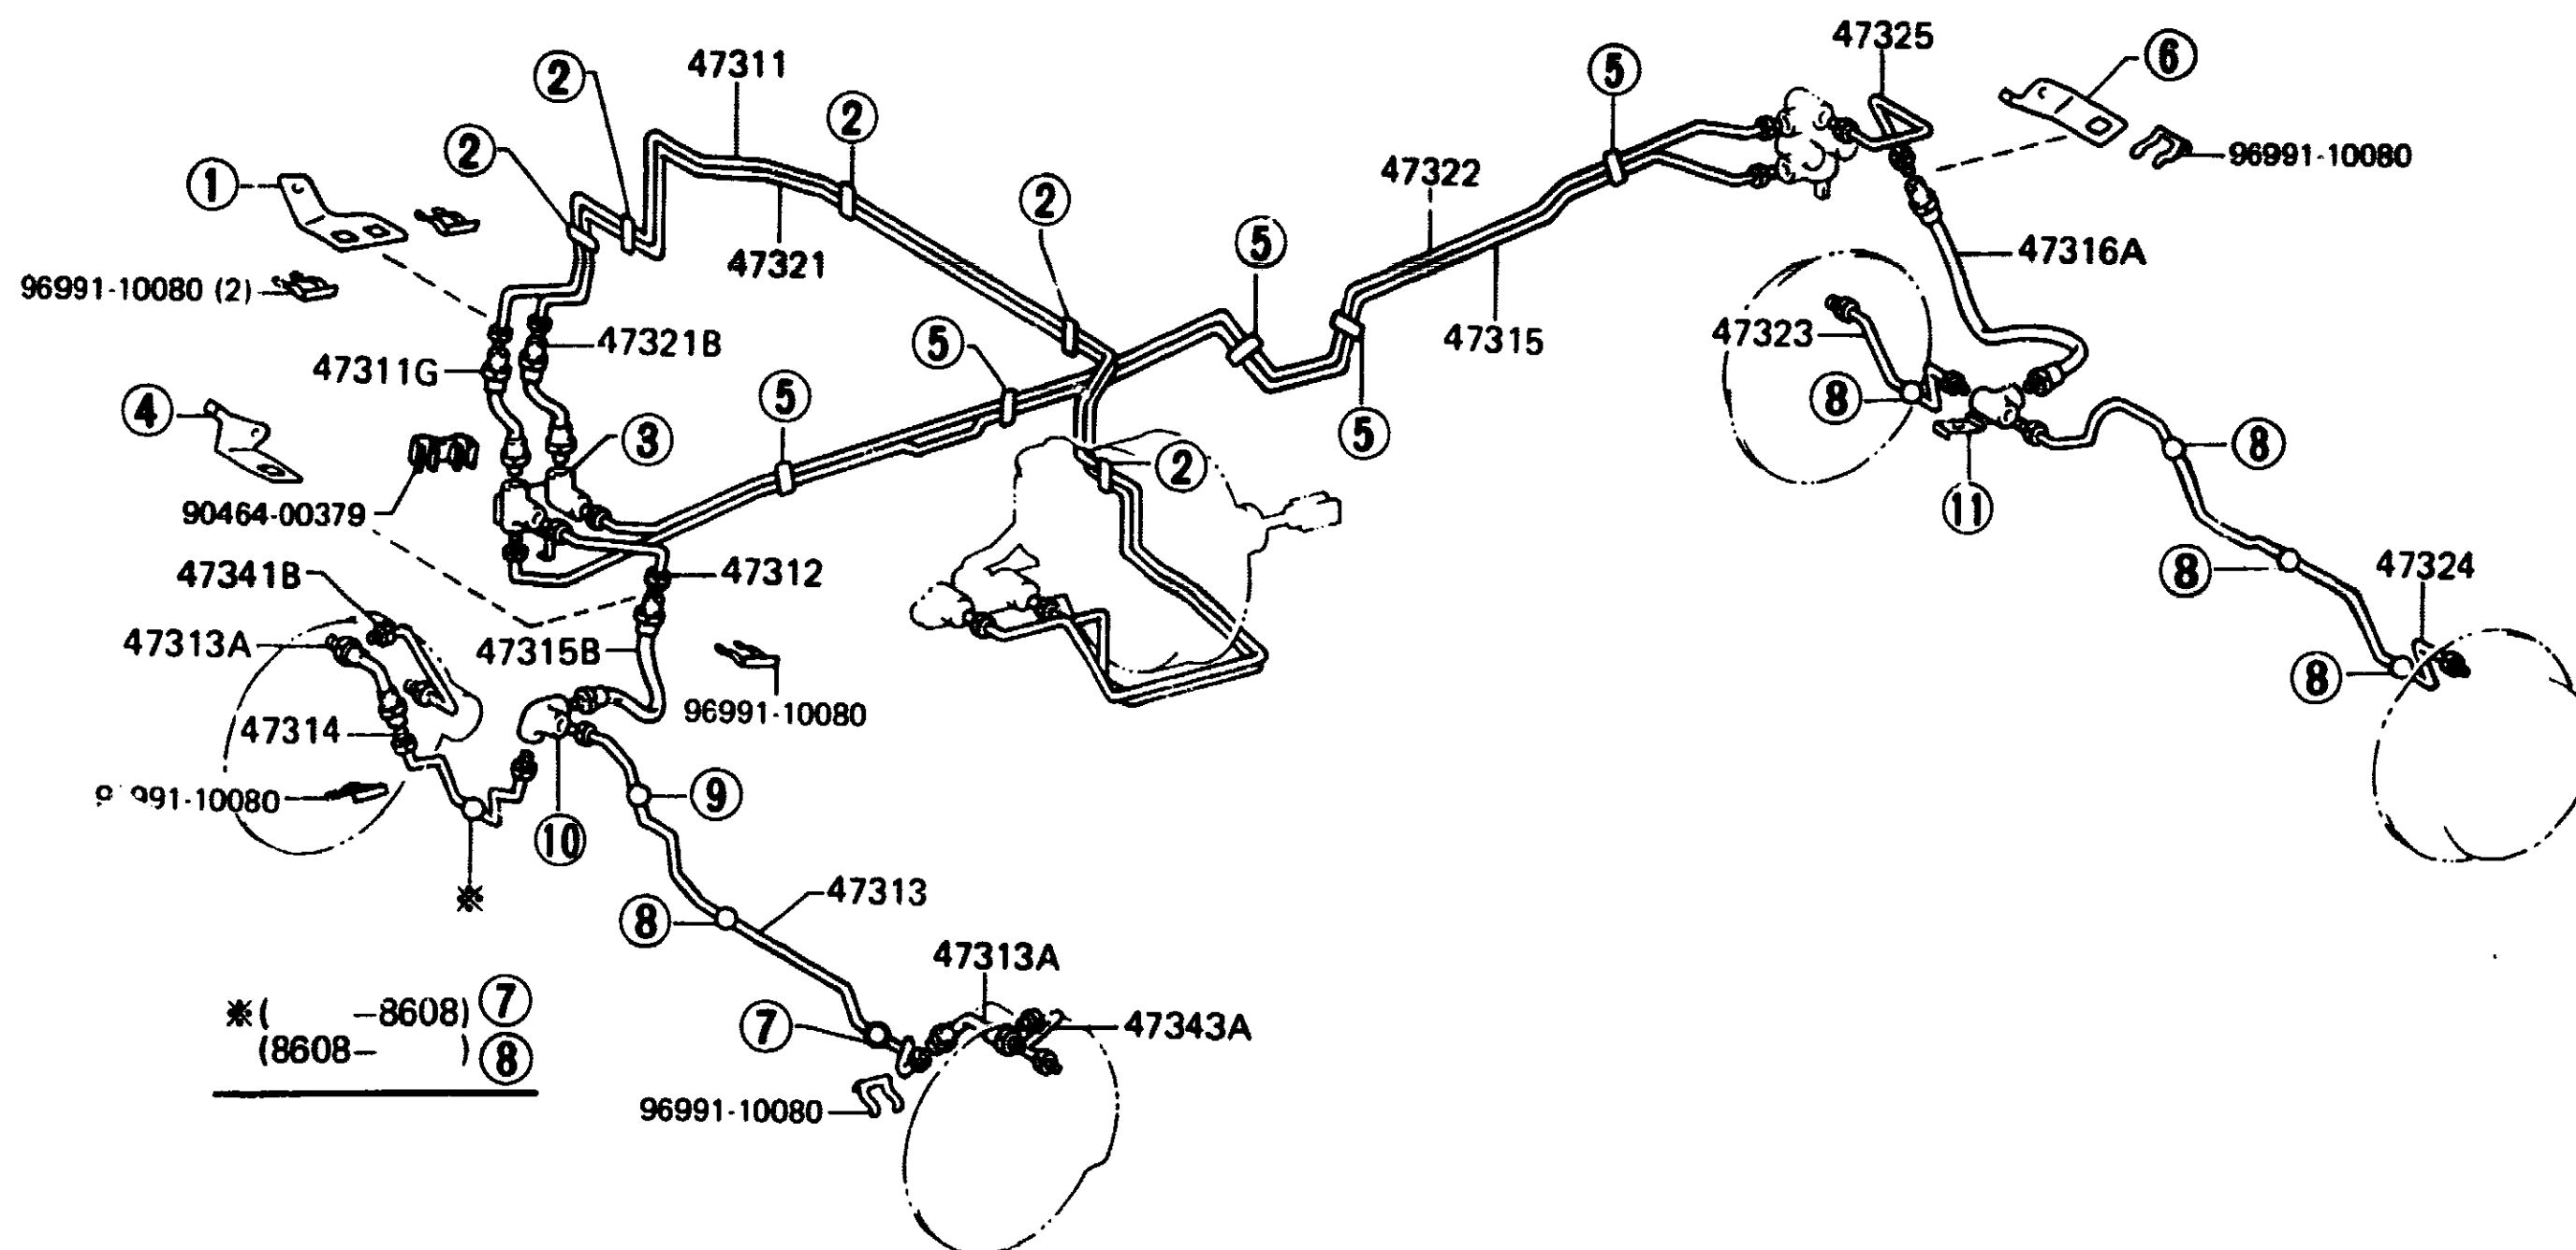

MC B849-D


FIGURE NUMBER INDEX

LOCATION	FIG.No.	SUMMARY	LOCATION	FIG.No.	SUMMARY	LOCATION	FIG.No.	SUMMARY
		BODY GROUP						ELECTRICAL GROUP
2-A1	51-51	FRAME	2-J5	71-51	SEAT & SEAT TRACK	2-I7	81-01	HEADLAMP
2-C1	51-52	SUSPENSION CROSSMEMBER & UNDER COVER	2-C6	71-52	SEAT BELT	2-J7	81-03	FRONT TURN SIGNAL LAMP
2-D1	51-53	SPARE WHEEL CARRIER	2-E6	74-51	ARMREST & VISOR	2-L7	81-06	SIDE TURN SIGNAL LAMP
2-E1	52-51	CAB MOUNTING & BODY MOUNTING	2-G6	74-54	BATTERY CARRIER	2-M7	81-11	REAR COMBINATION LAMP
2-G1	52-52	FRONT BUMPER & BUMPER STAY	2-H6	74-55	CAUTION PLATE	2-A8	81-13	REAR LICENSE PLATE LAMP
2-H1	52-53	REAR BUMPER & BUMPER STAY	2-I6	74-56	ASH RECEPTACLE	2-B8	81-14	REAR SIDE MARKER LAMP
2-I1	53-51	RADIATOR GRILLE	2-J6	75-51	EMBLEM & NAME PLATE	2-C8	81-21	INTERIOR LAMP
2-J1	53-53	HOOD & FRONT FENDER	2-K6	75-52	MOULDING	2-D8	82-01	BATTERY & BATTERY CABLE
2-L1	53-54	HOOD LOCK & HINGE	2-M6	75-53	BODY STRIPE	2-F8	82-02	WIRING & CLAMP
2-M1	53-55	FRONT FENDER APRON & DASH PANEL	2-B7	75-54	TOOL BOX & LICENSE PLATE BRACKET	2-J8	83-01	METER
2-B2	55-51	INSTRUMENT PANEL & GLOVE COMPARTMENT	2-C7	77-51	FUEL TANK & TUBE	2-M8	83-02	INDICATOR
2-F2	55-53	COWL PANEL & WINDSHIELD GLASS	2-G7	78-51	ACCELERATOR LINK	2-A9	84-01	SWITCH & RELAY
2-G2	57-51	FLOOR MEMBER				2-G9	84-05	ELECTRONIC DIESEL INJECTION CONTROL SYSTEM
2-H2	58-51	FRONT FLOOR PANEL				2-H9	85-01	WINDSHIELD WIPER
2-K2	58-52	REAR FLOOR PANEL				2-I9	85-02	REAR WIPER
2-M2	58-53	FLOOR INSULATOR				2-J9	85-03	WINDSHIELD WASHER
2-A3	58-54	FLOOR MAT & SILENCER PAD				2-L9	85-04	REAR WASHER
2-C3	58-55	CONSOLE BOX & BRACKET				2-M9	85-11	DOOR MOTOR & DOOR SOLENOID
2-E3	61-51	SIDE MEMBER				2-A10	86-01	RADIO & TAPE PLAYER
2-I3	61-52	SIDE WINDOW				2-B10	86-02	SPEAKER
2-K3	61-53	ROOF PANEL & BACK PANEL				2-C10	86-04	ANTENNA
2-A4	61-55	REAR VENTILATOR & ROOF VENTILATOR				2-D10	86-11	HORN
2-B4	64-51	INSIDE TRIM BOARD				2-E10	87-01	MIRROR
2-D4	64-52	ROOF HEADLINING & SILENCER PAD				2-F10	87-11	HEATING & AIR CONDITIONING - SET
2-F4	67-51	FRONT DOOR PANEL & GLASS				2-C10	87-12	HEATING & AIR CONDITIONING - HEATER UNIT & BLOWER
2-J4	67-52	FRONT DOOR VENTILATOR WINDOW				2-I10	87-15	HEATING & AIR CONDITIONING - CONTROL & AIR DUCT
2-L4	67-53	FRONT DOOR LOCK & HANDLE				2-K10	87-16	HEATING & AIR CONDITIONING - WATER PIPING
2-A5	67-54	FRONT DOOR WINDOW REGULATOR & HINGE						
2-C5	67-61	BACK DOOR PANEL & GLASS						
2-F5	67-62	BACK DOOR LOCK & HINGE						
2-H5	67-65	LOCK CYLINDER SET						



LAND CRUISER (U. S. A)

(8411-)

GENUINE TOYOTA PARTS

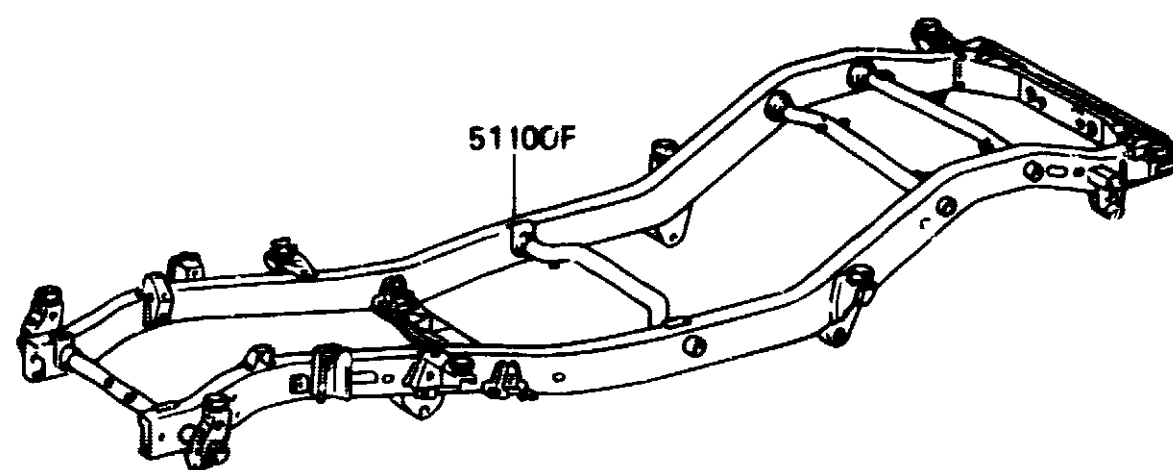

PART NAME CODE	PART NAME CODE	PART NAME CODE
① 51202	③ 51204	⑤ 51206
② 51203	④ 51205	⑥ 51207

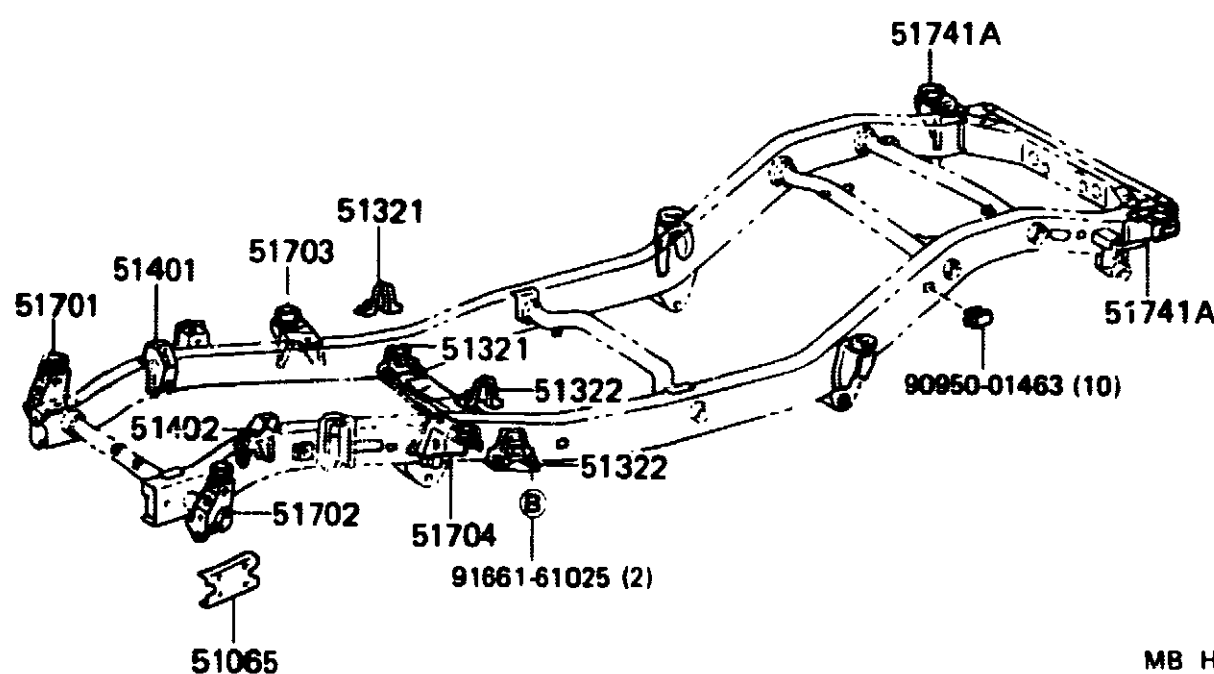
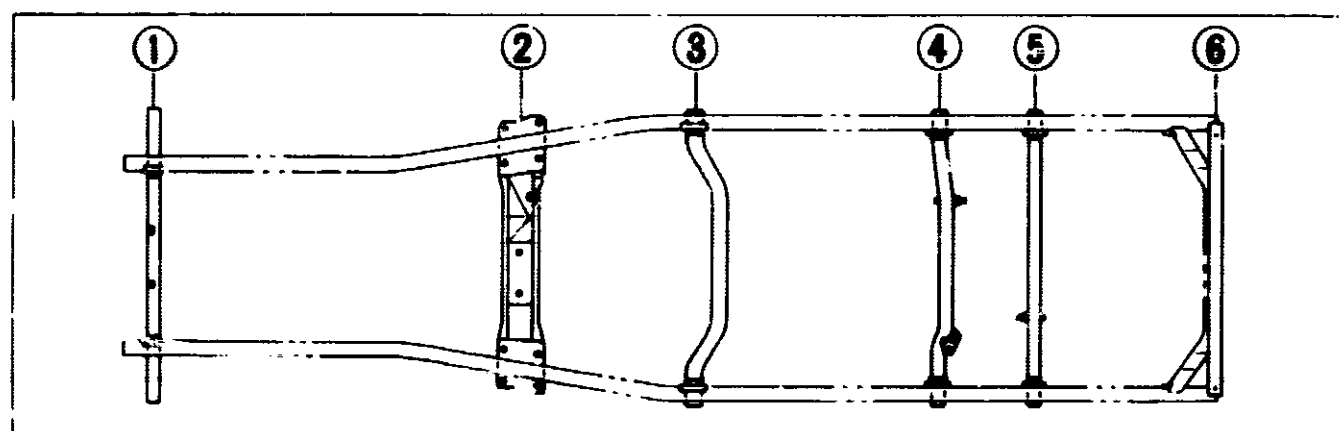


MB H619

PROD. DATE	MODELS	DESCRIPTION	PART NUMBER	QTY	REV. REF. CODE
					FROM UP TO
FIG.	51-51 FRAME				
8411-	BJ70	SUPPORT SUB-ASSY, STEERING GEAR BOX	51065-60040-	1	81
8411-8506	BJ70	FRAME SUB-ASSY	* 51002-60060- (51002-60061-	1	81 96
8506-8608	BJ70		* 51002-60061- (51002-60062- (45721-60071-	1	97 140
8608-	BJ70		51002-60062-	1	141
8411-8608	BJ70	CROSSMEMBER SUB-ASSY, FRAME, NO.1	51201-60100-	1	81 140
8608-	BJ70		51201-60101-	1	141
8411-	BJ70	CROSSMEMBER SUB-ASSY, FRAME, NO.2	51202-60110-	1	81
8411-8608	BJ70	CROSSMEMBER SUB-ASSY, FRAME, NO.3	* 51203-60130- (51203-60131-	1	81 140
8608-	BJ70		51203-60131-	1	141
8411-	BJ70	CROSSMEMBER SUB-ASSY, FRAME, NO.4	51204-60180-	1	81
8411-	BJ70	CROSSMEMBER SUB-ASSY, FRAME, NO.5	51205-60020-	1	81
8411-	BJ70	CROSSMEMBER SUB-ASSY, FRAME, NO.6	51209-60070-	1	81
8411-	BJ70	GUSSET, CROSSMEMBER, NO.2 RH	51321-60030-	2	81
8411-	BJ70	GUSSET, CROSSMEMBER, NO.2 LH	51322-60030-	2	81

GENUINE TOYOTA PARTS

(8411-)

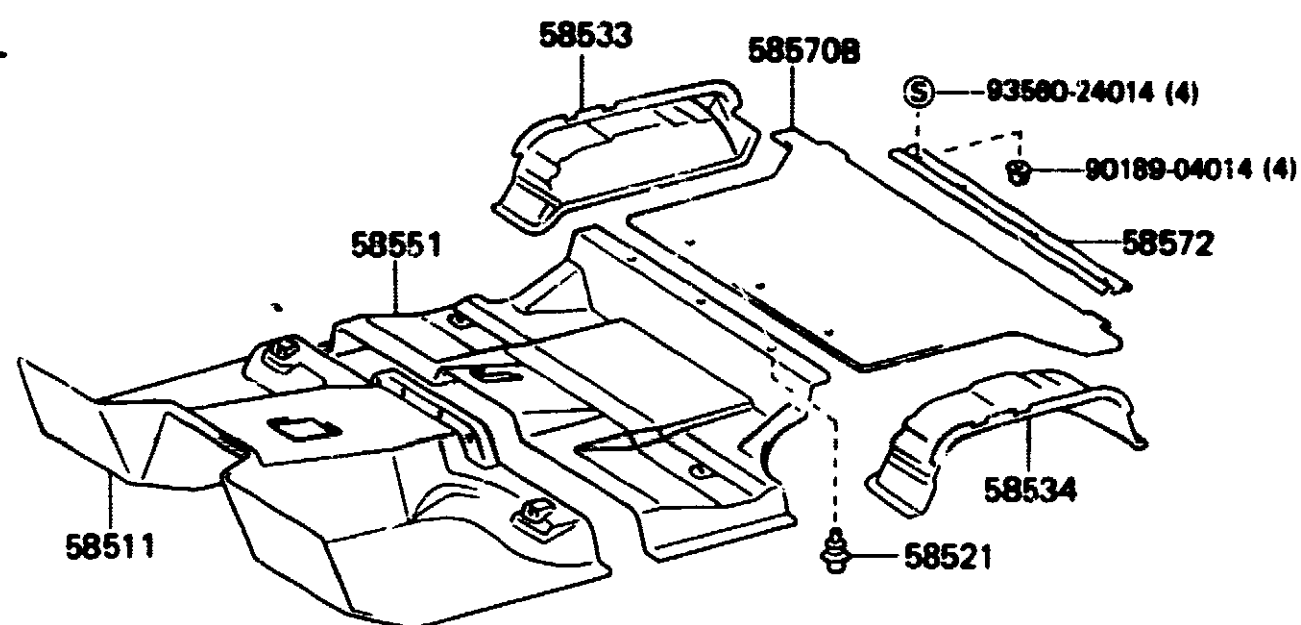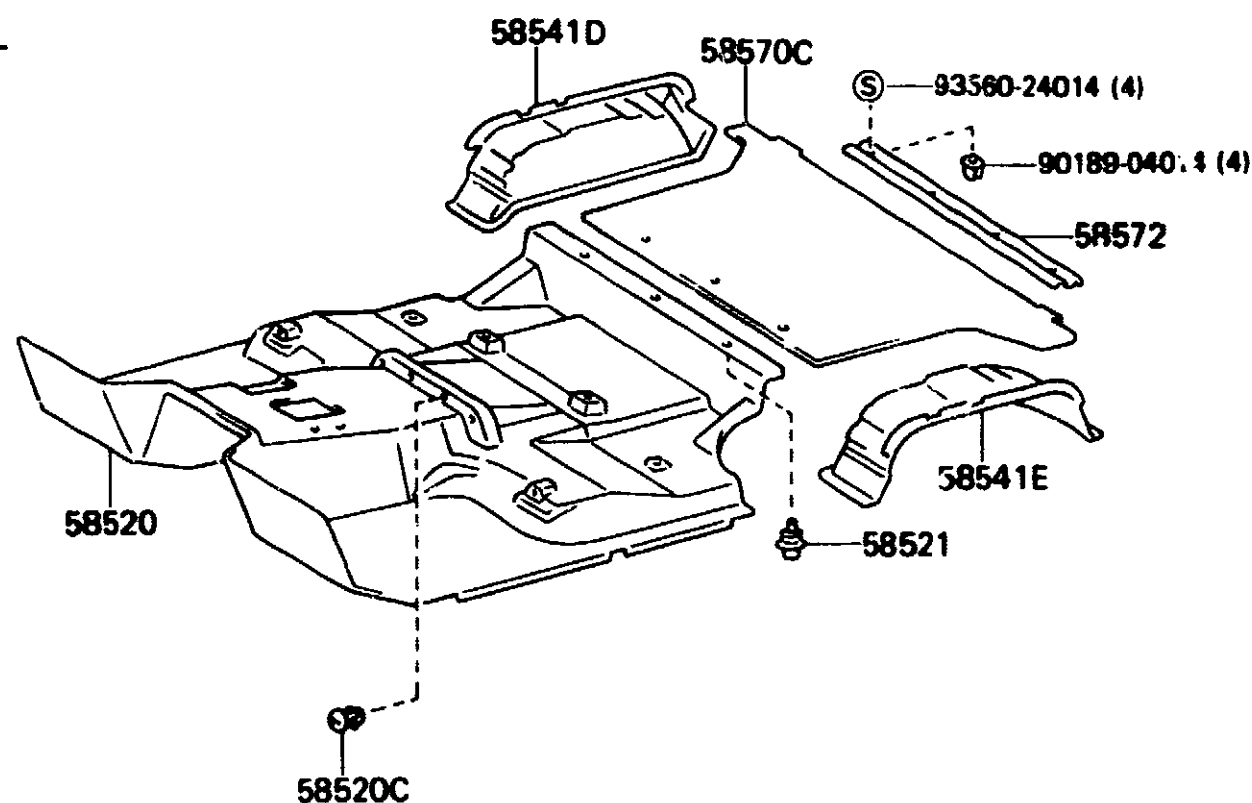MatCarpet

MB H629-B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	58-54 FLOOR MAT & SILENCER PAD						
		58511 MAT, FLOOR, FRONT					
8411-8510	BJ70	GRAY		58510-90K56-03	1	81	100
8411-8510	BJ70	BROWN		58510-90K56-06	1	81	100
		58520 CARPET ASSY, FRONT FLOOR					
8411-8608	BJ70	GRAY		58510-90K34-03	1	81	140
8411-8608	BJ70	BROWN		58510-90K34-06	1	81	140
8411-8608	BJ70	W/SUSPENSION SEAT, GRAY		58510-90K35-03	1	81	140
8411-8608	BJ70	W/SUSPENSION SEAT, BROWN		58510-90K35-06	1	81	140
8608-	BJ70	GRAY		58510-90L04-03	1	141	
8608-	BJ70	BROWN		58510-90L04-06	1	141	
8608-	BJ70	W/SUSPENSION SEAT, GRAY		58510-90L06-03	1	141	
8608-	BJ70	W/SUSPENSION SEAT, BROWN		58510-90L06-06	1	141	
		58520C CLIP (FOR FRONT FLOOR CARPET)					
8605-	BJ70	W/SUSPENSION SEAT, GRAY		90467-12014-13	2		
8605-	BJ70	W/SUSPENSION SEAT, BROWN		90467-12014-16	2		
		58521 HOOK, MALE, NO.1					
8411-	BJ70			90530-06001-	3	81	
		58533 MAT, REAR WHEEL HOUSE, RH					
8411-8510	BJ70	GRAY		62613-90K00-03	1	81	100
8411-8510	BJ70	BROWN		62613-90K00-06	1	81	100
		58534 MAT, REAR WHEEL HOUSE, LH					
8411-8510	BJ70	GRAY		62614-90K00-03	1	81	100
8411-8510	BJ70	BROWN		62614-90K00-06	1	81	100

FIG.61-55 REAR VENTILATOR & ROOF


VENTILATOR

2-A4


GENUINE TOYOTA PARTS

M74-13-0028

(8411-)

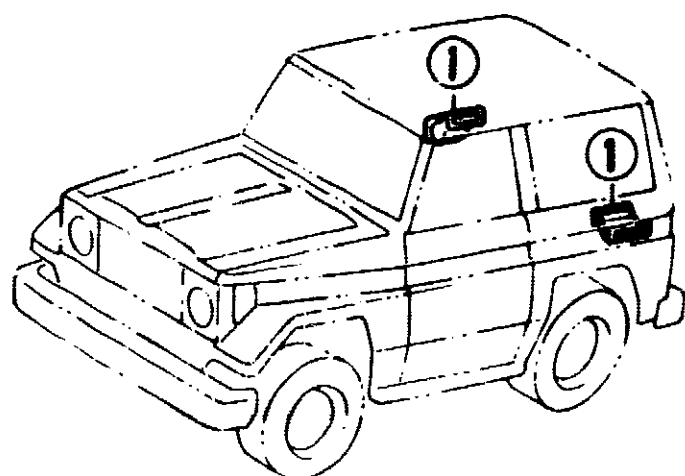

①

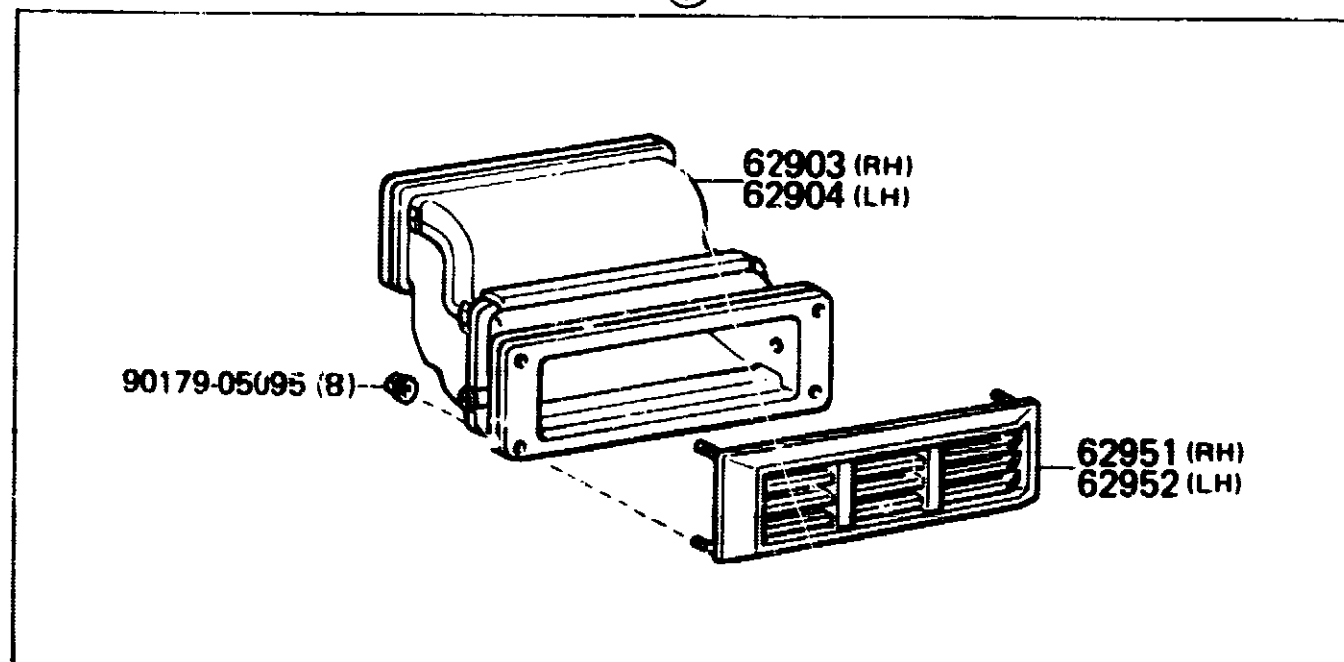

MB H465

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	61-55	REAR VENTILATOR & ROOF VENTILATOR					
8411-	BJ70	DUCT SUB-ASSY, QUARTER VENTILATOR, RH		62903-90K00-	1	81	
8411-	BJ70	DUCT SUB-ASSY, QUARTER VENTILATOR, LH		62903-90K00-	1	81	
8411-	BJ70	LOUVER, VENT INNER, RH		62951-90K00-	1	81	
8411-	BJ70	LOUVER, VENT INNER, LH		62951-90K00-	1	81	


FIG. 67-54 FRONT DOOR WINDOW REGULATOR &
HINGE

2-A5


M74-13-0073

GENUINE TOYOTA PARTS

(8411-)

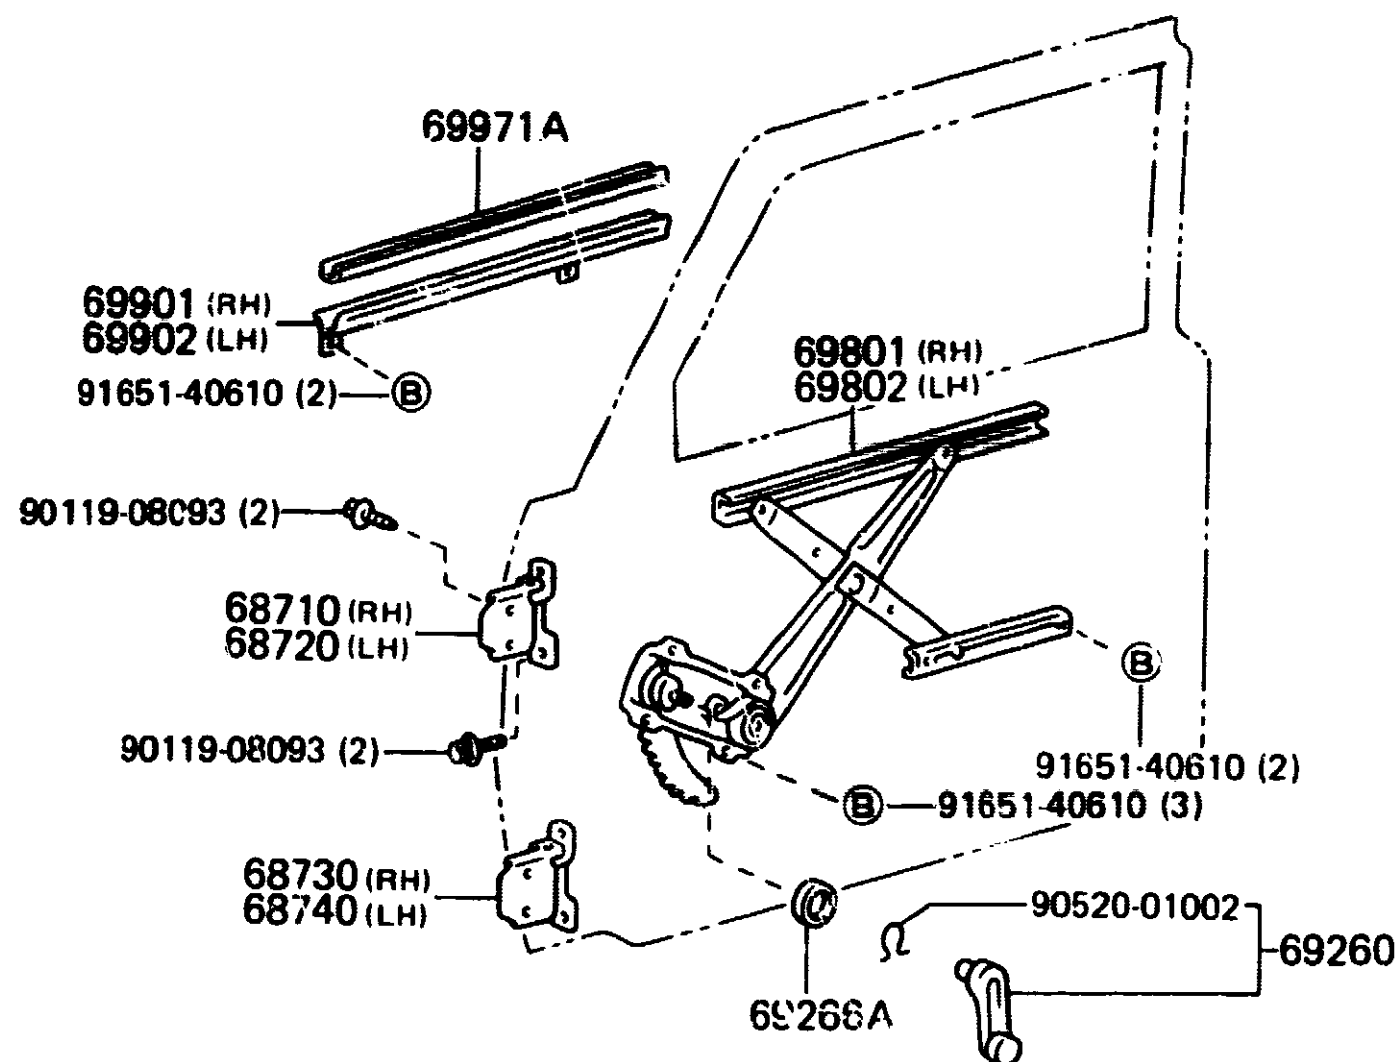

W/ Power Window

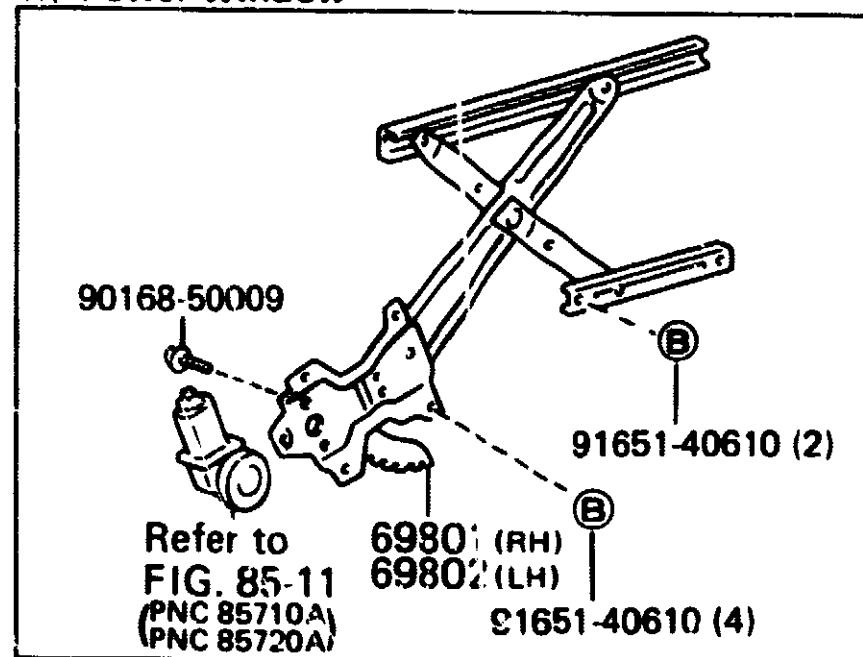

MB H477-B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	TO
FIG.	67-54	FRONT DOOR WINDOW REGULATOR & HINGE					
8411-	BJ70	HINGE ASSY, FRONT DOOR, UPPER RH		68710-14030-	1	81	
8411-	BJ70	HINGE ASSY, FRONT DOOR, UPPER LH		68720-14030-	1	81	
8411-	BJ70	HINGE ASSY, FRONT DOOR, LOWER RH		68730-24010-	1	81	
8411-	BJ70	HINGE ASSY, FRONT DOOR, LOWER LH		68740-24010-	1	81	
8411-	BJ70	HANDLE ASSY, FRONT DOOR WINDOW REGULATOR					
8411-	BJ70	BROWN		69260-10040-10	2	81	
8411-	BJ70	GRAY		69260-10040-33	2	81	
8411-	BJ70	ESCUTCHEON, DOOR REGULATOR HANDLE (FOR FRONT DOOR)		69266-22010- (69266-22010-08)	2	81	
8411-8608	BJ70	REGULATOR SUB-ASSY, FRONT DOOR WINDOW, RH		69801-90K00-	1	81	140
8411-8608	BJ70	W/XPW		69801-90K01-	1	81	140
8411-	BJ70	W/XVW, XPW		69810-90K00-	1	81	
8411-	BJ70	W/XVW		69810-90K01-	1	81	
8411-8608	BJ70	REGULATOR SUB-ASSY, FRONT DOOR WINDOW, LH		69802-90K00-	1	81	140
8411-8608	BJ70	W/XPW		69802-90K01-	1	81	140
8411-	BJ70	W/XVW, XPW		69820-90K00-	1	81	
8411-	BJ70	W/XVW		69820-90K01-	1	81	
8411-	BJ70	CHANNEL SUB-ASSY, FRONT DOOR GLASS, RH		69901-90K00-	1	81	
8411-	BJ70	W/XVW		69901-90K01-	1	81	

*PW=Power Window
*VW=Ventilator Window

FIG.71-51

GENUINE TOYOTA PARTS

2-A6

M74-15-0687

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	72138 CONTINUED BJ70	COVER, SEAT TRACK OUTER, LH BROWN		72137-90K02-06	1	81	
8411-	72140 BJ70	TRACK ASSY, LH SEAT, INNER		72140-90K00-	1	81	
8411-	BJ70	W/SUSPENSION SEAT		72140-90K03-	1	81	
8411-	72157 BJ70	COVER, SEAT TRACK BRACKET, INNER GRAY		72157-90K00-03	2	81	
8411-	BJ70	BROWN		72157-90K00-06	2	81	
8411-	72210 BJ70	CABLE ASSY, SEAT TRACK CONTROL		72210-90K00-	1	81	
8411-	72510 BJ70	ADJUSTER ASSY, RECLINING SEAT BACK, RH BLACK		72510-90K01-01	1	81	
8411-	72510A BJ70	SPRING, TENSION, NO.1 (FOR RECLINING SEAT ADJUSTER)		90507-16007-	2	81	
8411-	72520 BJ70	ADJUSTER ASSY, RECLINING SEAT BACK, LH		72520-90K00-	1	81	
8411-	72590 BJ70	CABLE ASSY, SEAT BACK CONTROL RH		72570-90K00-	1	81	
8411-	BJ70	LH		72580-90K00-	1	81	
8411-	72603 BJ70	LOCK SUB-ASSY, REAR SEAT BACK, RH GRAY		72603-90K01-03	1	81	
8411-	BJ70	BROWN		72603-90K01-06	1	81	
8411-	72604 BJ70	LOCK SUB-ASSY, REAR SEAT BACK, LH GRAY		72604-90K01-03	1	81	
8411-	BJ70	BROWN		72604-90K01-06	1	81	
8411-	72660A BJ70	SUPPORT ASSY, REAR SEAT CUSHION		72660-90K00-	2	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	72660E BJ70	SPRING (FOR REAR SEAT CUSHION SUPPORT)		90506-09035-	2	81	
8411-	72665 BJ70	COVER, REAR SEAT BACK LOCK, RH		72665-90K00-	1	81	
8411-	72666 BJ70	COVER, REAR SEAT BACK LOCK, LH		72666-90K00-	1	81	
8411-	72685 BJ70	STRIKER, REAR NO.1 SEAT LOCK		72607-90K00-	2		
8411-	72690A BJ70	STRAP ASSY, REAR SEAT LOCK RELEASE GRAY		# 72690-90K00-03 (72690-90K01-03)	1		
8411-	BJ70	BROWN		72690-90K00-06	1	81	
8411-	72694 BJ70	COVER, REAR SEAT CUSHION LOCK		72694-90K00-	2	81	
8411-	73800 BJ70	SUSPENSION ASSY, SEAT RH		73800-90K01-	1	81	
8411-	BJ70	LH		73810-90K01-	1	81	
8411-	73847 BJ70	CUSHION, SEAT SUSPENSION STOPPER		73847-90K00-	4	81	
8411-	73888 BJ70	HANDLE, SEAT SUSPENSION CONTROL		73080-90K00-	2	81	
8411-	78910 BJ70	CABLE ASSY, FOLD SEAT LOCK CONTROL, NO.1		78910-90K00-	1	81	
8411-	78920 BJ70	CABLE ASSY, FOLD SEAT LOCK CONTROL, NO.2		78920-90K00-	1	81	
8411-	78950 BJ70	BAND ASSY, FOLD SEAT STOPPER, NO.1 GRAY		78950-90K00-03	1	81	

FIG. 75-53

GENUINE TOYOTA PARTS

2-A7

M74-15-0692

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	FROM	UP TO
FIG.	75-53 BODY STRIPE							
	75971	STRIPE, SIDE, RH NO. 1						
8411-8608	BJ70	RED		75981-90K00-02	1	81	140	
8411-8608	BJ70	LIGHT GREEN		75981-90K00-07	1	81	140	
8608-	BJ70	RED		75981-90K08-02	1	141		
8608-	BJ70	BLUE		75981-90K08-04	1	141		
	75972	STRIPE, SIDE, LH NO. 1						
8411-8608	BJ70	RED		75982-90K00-02	1	81	140	
8411-8608	BJ70	LIGHT GREEN		75982-90K00-07	1	81	140	
8608-	BJ70	RED		75982-90K08-02	1	141		
8608-	BJ70	BLUE		75982-90K08-04	1	141		
	75973	STRIPE, SIDE, RH NO. 2						
8411-8608	BJ70	RED		75985-90K00-02	1	81	140	
8411-8608	BJ70	LIGHT GREEN		75985-90K00-07	1	81	140	
8608-	BJ70	RED		75985-90K08-02	1	141		
8608-	BJ70	BLUE		75985-90K08-04	1	141		
	75974	STRIPE, SIDE, LH NO. 2						
8411-8608	BJ70	RED		75986-90K00-02	1	81	140	
8411-8608	BJ70	LIGHT GREEN		75986-90K00-07	1	81	140	
8608-	BJ70	RED		75986-90K08-02	1	141		
8608-	BJ70	BLUE		75986-90K08-04	1	141		
	75975	STRIPE, SIDE, RH NO. 3						
8411-8608	BJ70	RED		75991-90K00-02	1	81	140	
8411-8608	BJ70	LIGHT GREEN		75991-90K00-07	1	81	140	
8608-	BJ70	RED		75991-90K12-02	1	141		
8608-	BJ70	BLUE		75991-90K12-04	1	141		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	FROM	UP TO
	75976	STRIPE, SIDE, LH NO. 3						
8411-8608	BJ70	RED		75992-90K00-02	1	81	140	
8411-8608	BJ70	LIGHT GREEN		75992-90K00-07	1	81	140	
8608-	BJ70	RED		75992-90K12-02	1	141		
8608-	BJ70	BLUE		75992-90K12-04	1	141		
	76971	STRIPE, SIDE, RH NO. 5						
8411-8608	BJ70	RED		75979-90K00-02	1	81	140	
8411-8608	BJ70	LIGHT GREEN		75979-90K00-07	1	81	140	
8608-	BJ70	RED		75979-90K03-02	1	141		
8608-	BJ70	BLUE		75979-90K03-04	1	141		


FIG.81-13 REAR LICENSE PLATE LAMP

2-A8

M74-13-0090

GENUINE TOYOTA PARTS

(8411-)

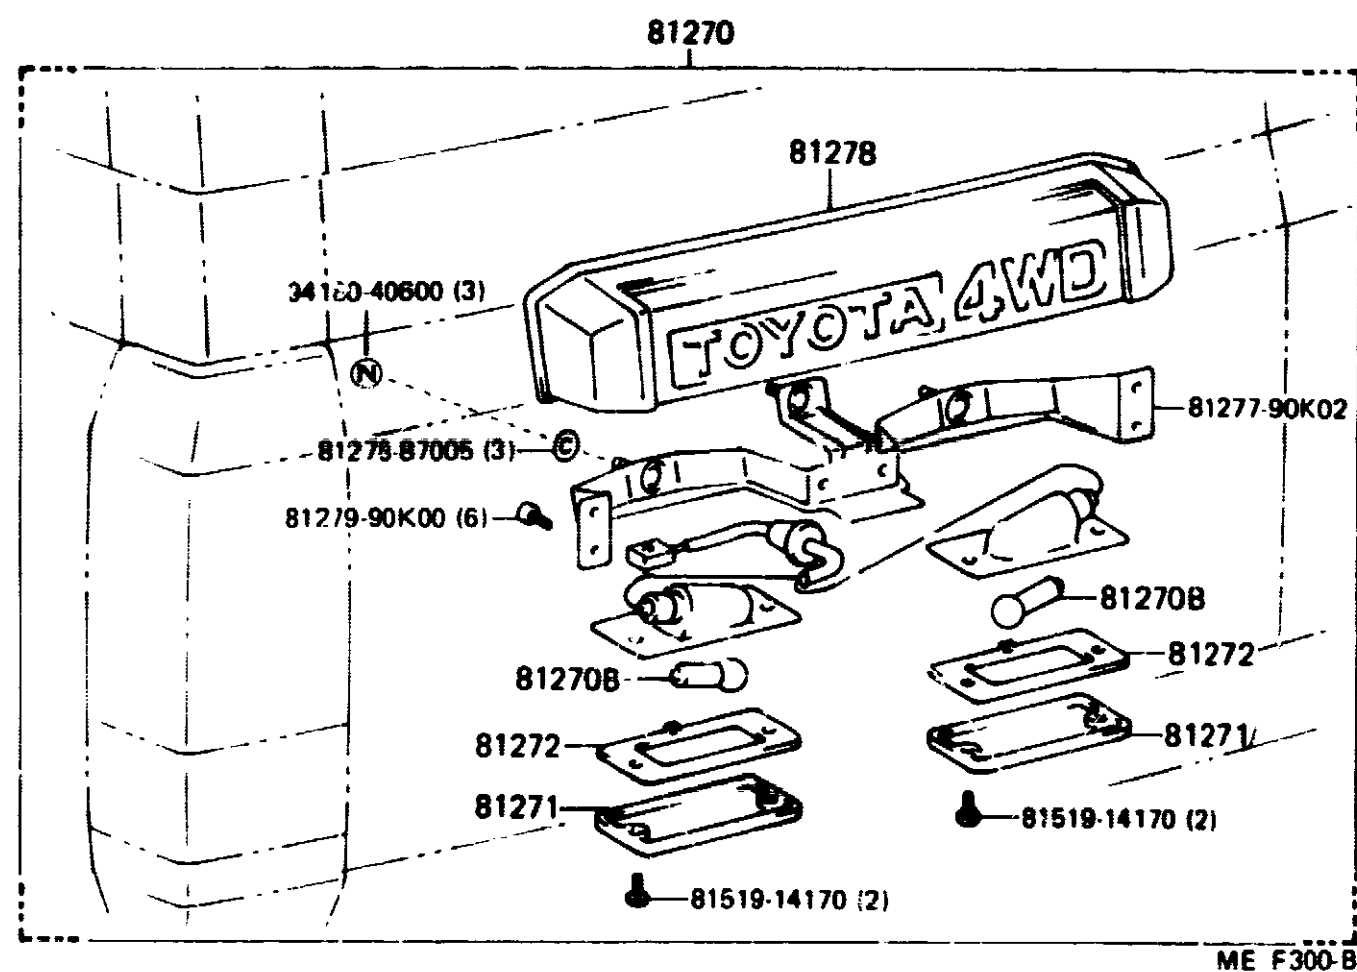



PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	81-13 REAR LICENSE PLATE LAMP						
		81270 LAMP ASSY. LICENSE PLATE					
8411-8510	BJ70			# 81270-69155- (81270-90K02-	1	81	100
8510-8608	BJ70			# 81270-69145- (81270-90K01-	1	101	140
8608-	BJ70			81270-90K01-	1	141	
		81270B BULB (FOR LICENSE PLATE LAMP)					
8411-8510	BJ70	12V 7.5W		99132-11075-	2	81	100
8510-	BJ70	24V 5W		90981-16016-	2	101	
		81271 LENS, LICENSE PLATE LAMP					
8411-	BJ70			81271-87004-	2	81	
		81272 GASKET, LICENSE PLATE LAMP LENS					
8411-	BJ70			81272-87004-	2	81	
		81278 COVER, LICENSE PLATE LAMP					
8411-	BJ70			81276-90K02-	1	81	

(8411-)

(8411-)



ILLUST.NO. 10F4

ILLUST.NO. 20F4

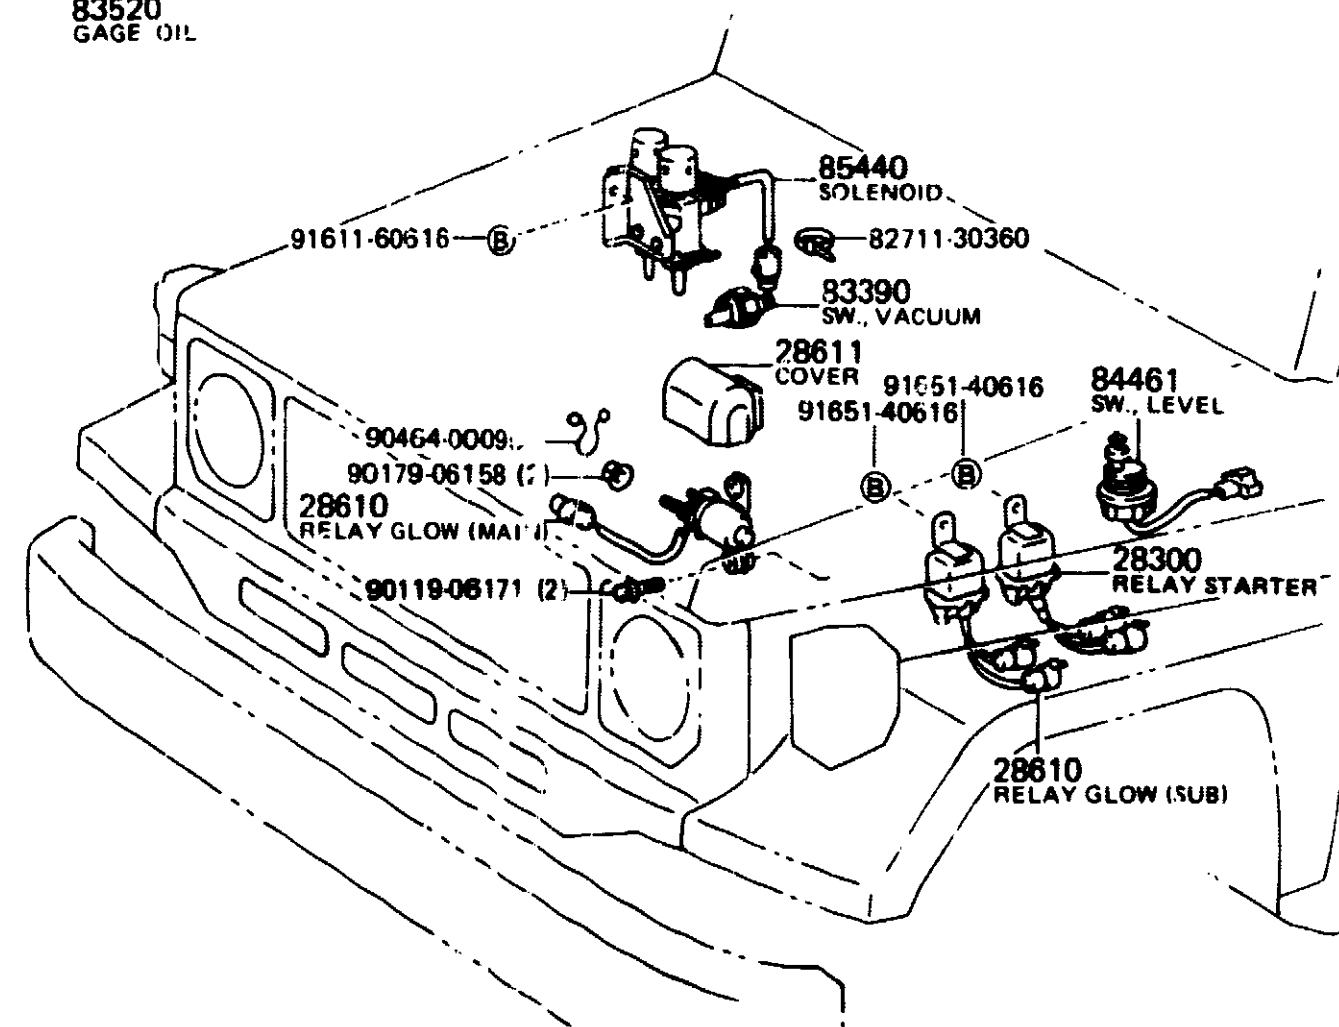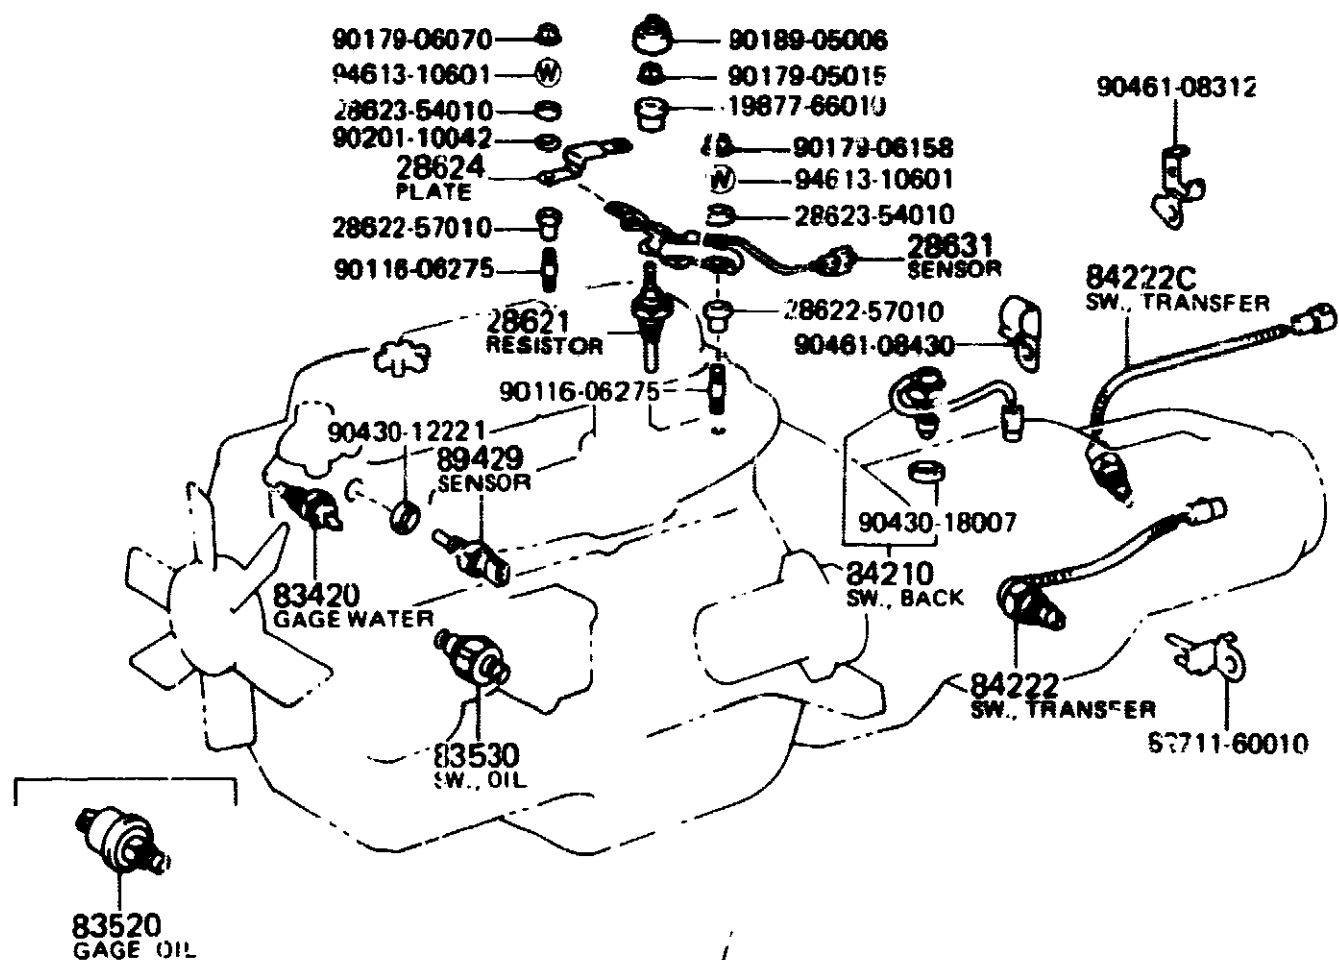

ME F433-B

MEF433B

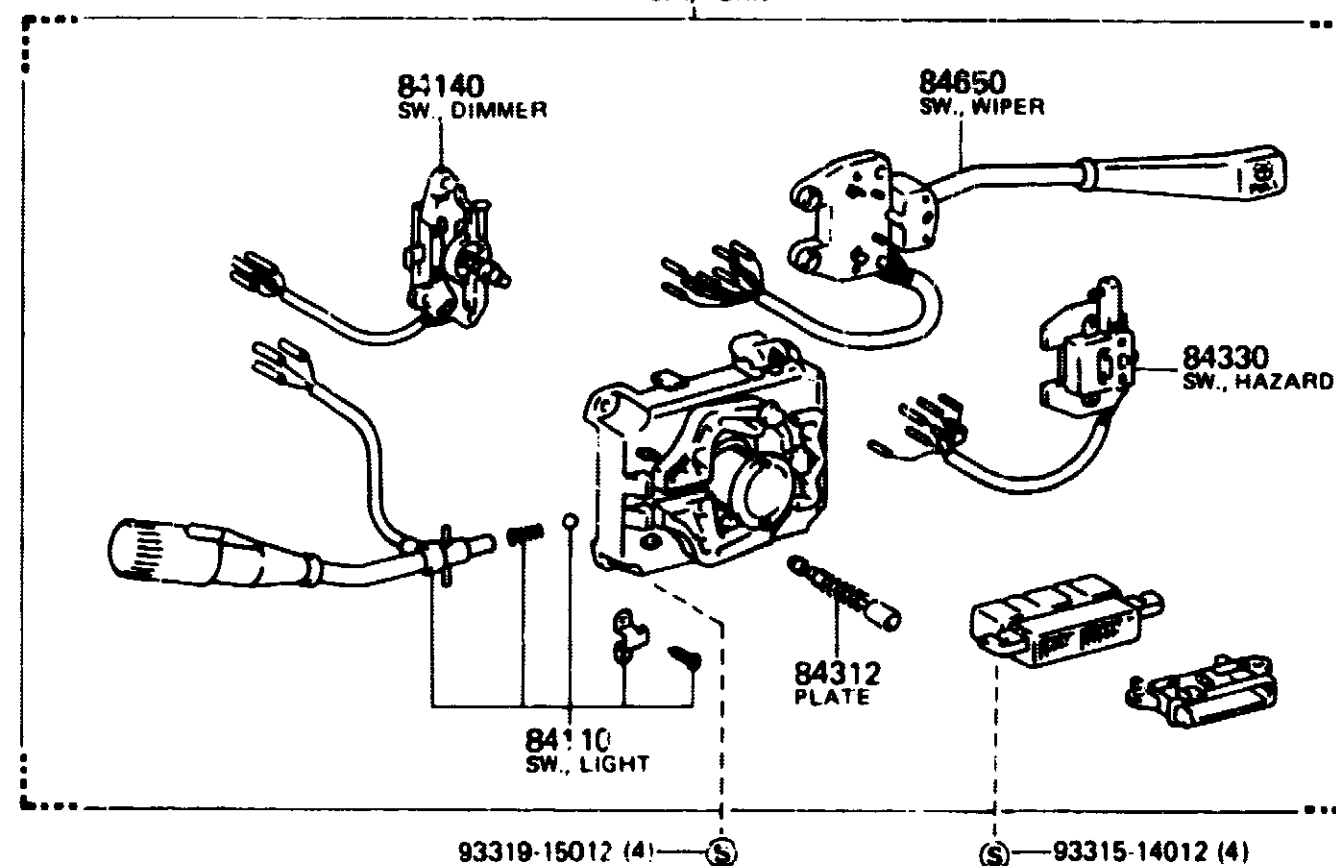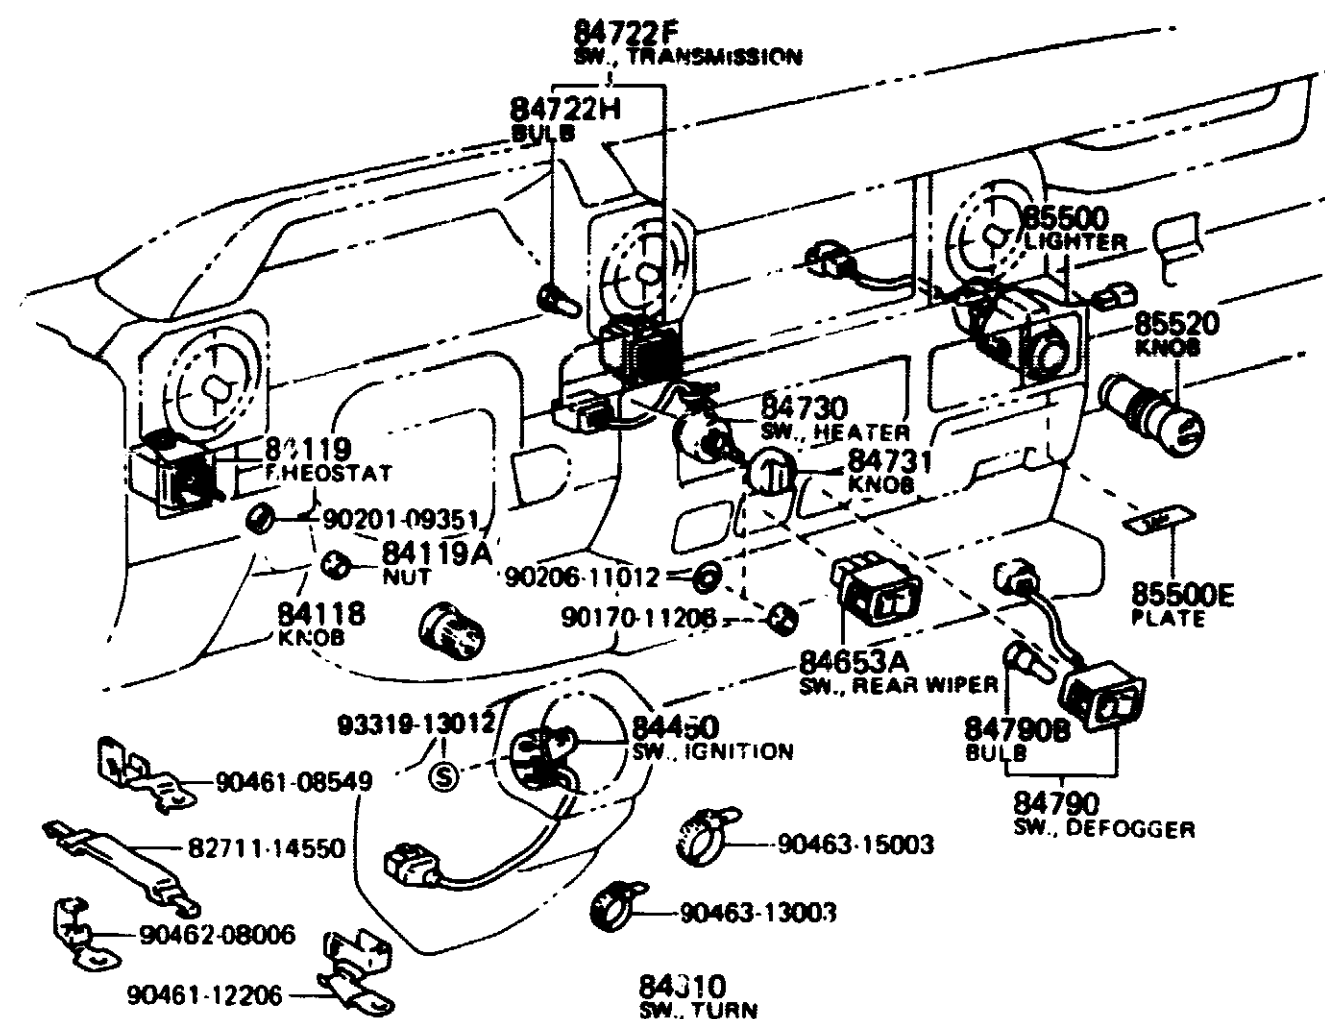

ME F434-C

MEF434C


FIG.86-01 RADIO & TAPE PLAYER

2-A10

W74-13-0101

GENUINE TOYOTA PARTS

(8411-)

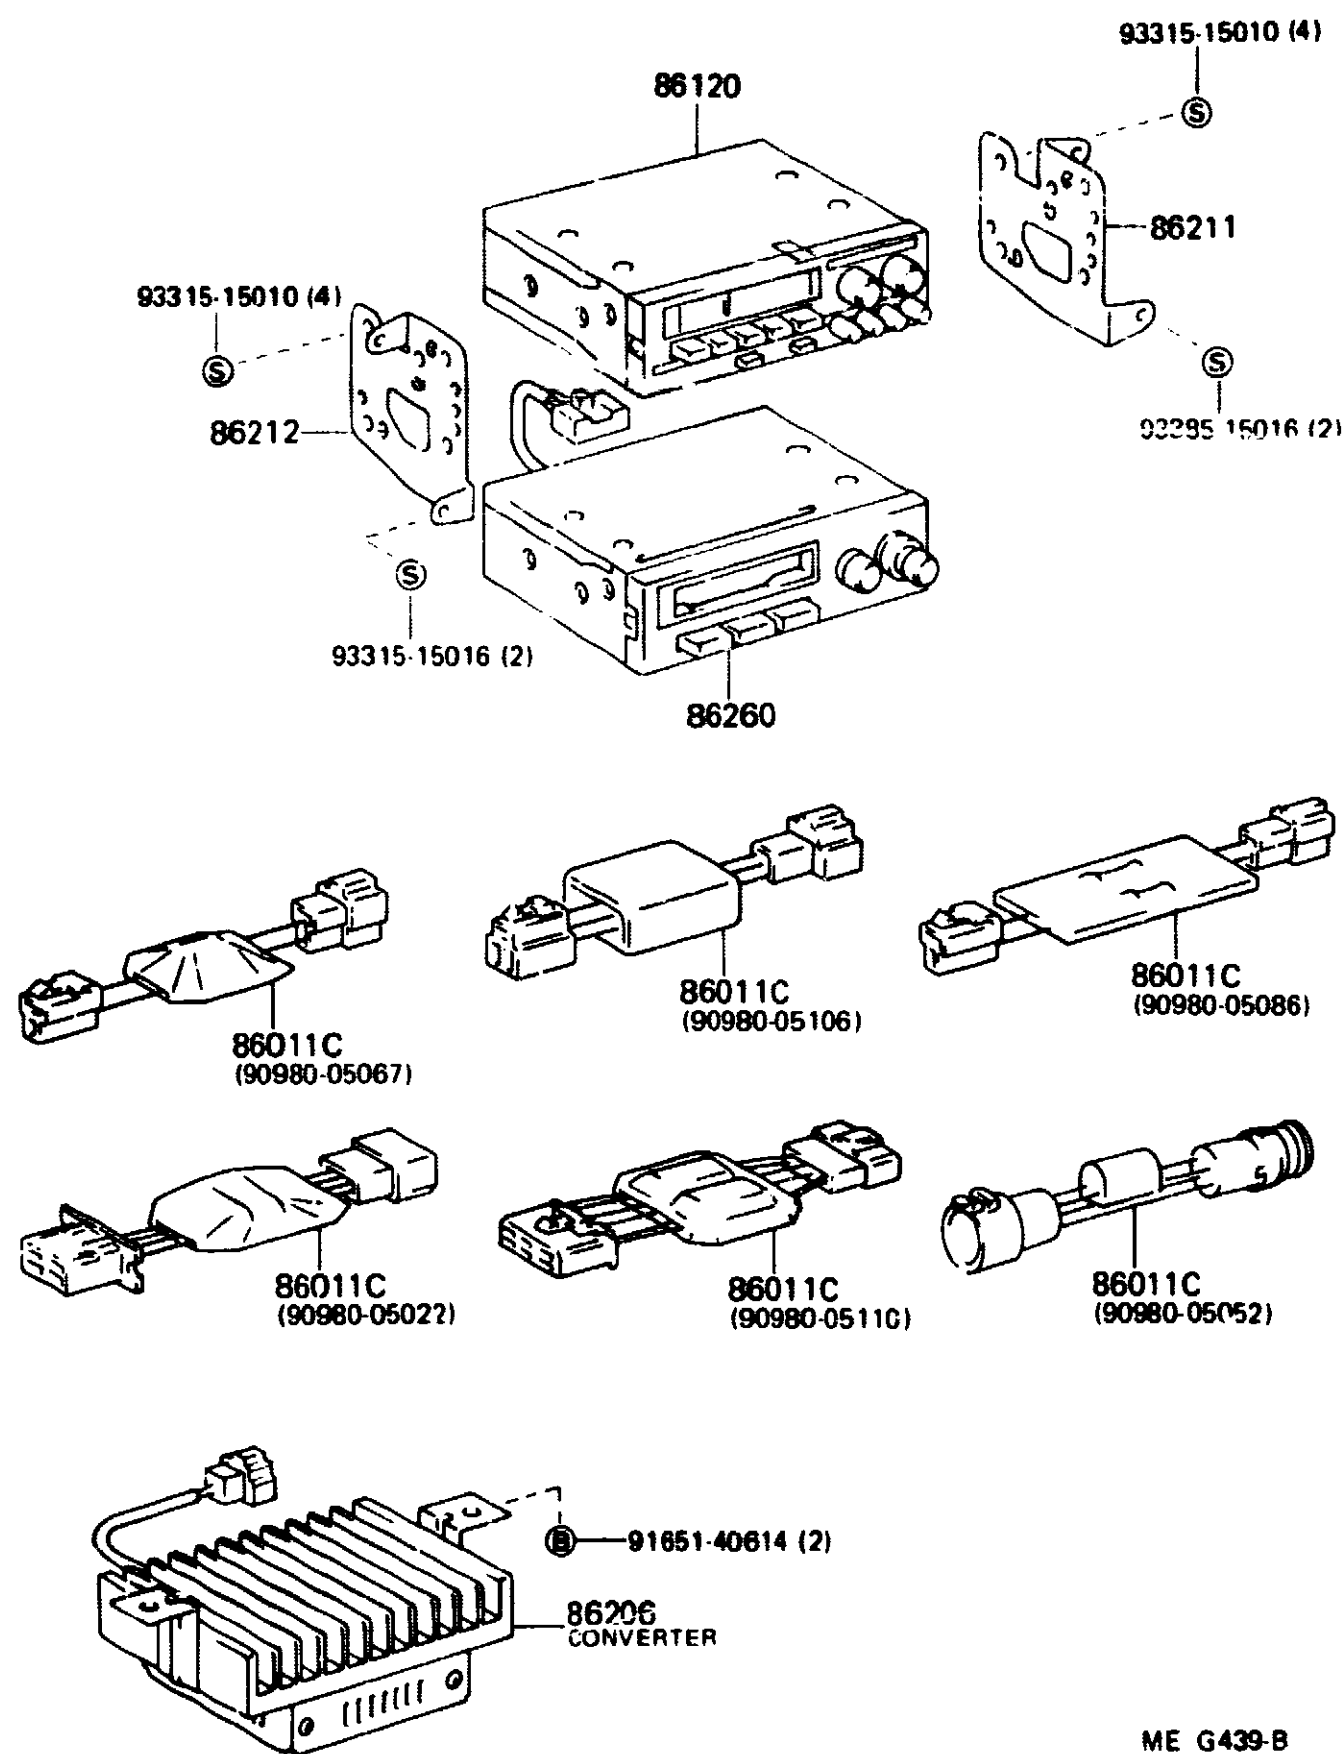

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	86-01 RADIO & TAPE PLAYER						
		86011C FILTER, NOISE					
8411-	BJ70	W/O AM/FM RADIO, WIPER MOTOR		90980-05022-	1	81	
8411-	BJ70	W/AM/FM RADIO, WIPER MOTOR		90980-05052-	1	81	
8411-	BJ70	STOP LAMP SWITCH		90980-05067-	1	81	
8411-	BJ70	HEATER		90980-05086-	1	81	
8411-	BJ70	OIL PRESSURE SWITCH		90980-05106-	1	81	
8411-	BJ70	REGULATOR		90980-05110-	1	81	
		86120 RECEIVER ASSY, RADIO					
8411-8509	BJ70	AM/FM		86120-17050-	1	31	
8411-8510	BJ70	AM		86120-17010-	1	81	100
8509-8608	BJ70	AM/FM		86120-17051-	1		140
8608-	BJ70	AM/FM MPX		86120-90K05-	1	141	
		86206 CONVERTER SUB-ASSY, BOLTAGE					
8510-	BJ70			86206-90K00-	1	101	
		86211 BRACKET, RADIO, NO.1					
8411-	BJ70			86211-90K00-	1	81	
		86212 BRACKET, RADIO, NO.2					
8411-	BJ70			86212-90K00-	1	81	
		86260 TAPE PLAYER ASSY					
8411-8608	BJ70	TEN		86260-19045-	1	81	140
8411-8608	BJ70	MATSUSHITA		86260-90K01-	1	81	140
C 8608-8612	BJ70	MATSUSHITA		86260-17010- (86260-17011-)	1	141	
8608-	BJ70	TEN		86260-16140-	1	141	
C 8612-	BJ70	MATSUSHITA		86260-17011-	1		

ABSORBER - BEARING

CONTENTS

(PART NAME - LOCATION)

ABSORBER	- BEARING	A12
BEARING	- BOOT	B12
BOOT	- BUSH	C12
BUSH	- CLIP	D12
CLIP	- CRANK	E12
CRANKSHAFT	- FORK	F12
FORK	- GASKET	G12
GASKET	- HOSE	H12
HOSE	- LEAF	I12
LEAF	- NOZZLE	J12
NOZZLE	- PIN	K12
PIN	- PLUG	L12
PLUG	- RELAY	M12
RELAY	- ROD	A13
ROD	- SHAFT	B13
SHAFT	- SPRING	C13
SPRING	- TUBE	D13
TUBE	- WIRE	E13
WIRE	- YUKE	F13

PART	NAME	LOCATION
ABSORBER ASSY, SHOCK REAR, LH		1-M11
ABSORBER ASSY, SHOCK REAR, RH		1-M11
ABSORBER ASSY, SHOCK, FRONT LH		1-J11
ABSORBER ASSY, SHOCK, FRONT RH		1-I11
ABSORBER, INNER REAR VIEW MIRROR		2-E10
ADAPTER, TRANSFER		1-M5
ADJUSTER ASSY, RECLINING SEAT BACK, LH		2-A6
ADJUSTER ASSY, RECLINING SEAT BACK, RH		2-A6
ADJUSTER ASSY, SHOE, LH (FOR REAR BRAKE)		1-K10
ADJUSTER ASSY, SHOE, RH (FOR REAR BRAKE)		1-K10
ALTERNATOR ASSY		1-I3
ANTENNA ASSY, W/HOLDER		2-C10
APRON SUB-ASSY, FRONT FENDER, LH		2-M1
APRON SUB-ASSY, FRONT FENDER, RH		2-M1
ARM ASSY, REAR WIPER		2-I9
ARM ASSY, WINDSHIELD WIPER		2-H9
ARM SUB-ASSY		1-I4
ARM SUB-ASSY, VALVE ROCKER, NO.1		1-D2
ARM SUB-ASSY, VALVE ROCKER, NO.2		1-D2
ARM, GLOVE COMPARTMENT DOOR CHECK		2-D2
ARM, PITMAN		1-K9
ARM, REVERSE SHIFT		1-L9
ARM, STEERING KNUCKLE, NO.1		1-H6
ARM, STEERING KNUCKLE, NO.2		1-L9
ARM, 5TH SHIFT		1-L9
ARMATURE ASSY, STARTER		1-L3
BAG, TOOL		1-A1
BALL (FOR POWER PISTON NUT)		1-K9
BALL (FOR SHIFT DETENT)		1-I6
BALL (FOR SHIFT INTER LOCK)		1-I6
BALL (FOR 3RD GEAR BUSH)		1-D6
BALL, SHIFT DETENT		1-F7
BALL, SHIFT DETENT, NO.2		1-I6
BALL, SPEED CONTROL		1-I4
BAND ASSY, FOLD SEAT STOPPER, NO.1		2-A6
BAND, FUEL TANK		2-F7
BAR ASSY, FRONT DOOR WINDOW DIVISION, LH		2-J4
BAR ASSY, FRONT DOOR WINDOW DIVISION, RH		2-J4
BAR, FAN BELT ADJUSTING		1-L2
BAR, STABILIZER, FRONT		1-J11
BASE, BASE DOOR CHECK		2-E5
BATTERY		2-E8
BEARING (FOR ADJUSTER PLUG)		1-K9
BEARING (FOR ALTERNATOR DRIVE END FRAME)		1-I3
BEARING (FOR COUNTER 5TH GEAR)		1-E6
BEARING (FOR INJECTION CAMSHAFT)		1-E4
BEARING (FOR INPUT SHAFT FRONT)		1-D6
BEARING (FOR INPUT SHAFT)		1-D5
BEARING (FOR OUTPUT SHAFT CENTER)		1-D6
BEARING (FOR OUTPUT SHAFT REAR)		1-D6
BEARING (FOR STEERING KNUCKLE ARM)		1-F11
BEARING (FOR STEERING WORM)		1-K9
BEARING (FOR TIMER HUB)		1-L4
BEARING (FOR TRANSFER IDLER GEAR)		1-C7
BEARING (FOR TRANSFER OUTPUT FRONT SHAFT)		1-D7
BEARING (FOR VANE PUMP SHAFT)		1-C9
BEARING (FOR 1ST GEAR NEEDLE)		1-D6
BEARING OR ROLLER (FOR COUNTER GEAR FRONT)		1-E6
BEARING OR ROLLER (FOR COUNTER GEAR REAR)		1-E6
BEARING SET, CAMSHAFT		1-C2
BEARING SET, CONNECTING ROD		1-B2
BEARING SET, CRANKSHAFT		1-A2
BEARING SUB-ASSY		1-I4

RELAY - RING

RING - ROD

PART	NAME	LOCATION
RELAY ASSY, POWER WINDOW		2-E9
RELAY ASSY, STARTER		2-C9
RELAY ASSY, WINDSHIELD WIPER		2-E9
RELAY, FRONT DRIVE		2-E9
RELAY, HEADLAMP DIMMER		2-E9
RELAY, LIGHT CONTROL		2-E9
RELAY, SEAT BELT WARNING		2-E9
RELAY, SLIDING ROOF CONTROL		2-E9
REPLACER, WHEEL CAP		1-B1
RESERVOIR ASSY, CLUTCH VACUUM		1-J5
RESERVOIR ASSY, OIL		1-D9
RESERVOIR ASSY, VACUUM		1-G10
RESERVOIR SUB-ASSY, BRAKE MASTER CYLINDER		1-D10
RESERVOIR SUB-ASSY, CLUTCH MASTER CYLINDER		1-H5
RESISTOR, GLOW PLUG		2-C9
RESISTOR, HEATER BLOWER		2-H10
RESISTOR, REAR HEATER BLOWER		2-H10
RESONATOR, INTAKE AIR		1-F3
RETAINER (FOR FRONT DOOR TRIM BOARD)		2-G4
RETAINER (FOR FRONT DOOR WEATHERSTRIP)		2-H4
RETAINER (FOR LOAD SENSING SPRING SHACKLE)		1-D11
RETAINER (FOR QUARTER INSIDE TRIM BOARD)		2-C4
RETAINER SUB-ASSY, ASH RECEPTACLE, NO.1		2-16
RETAINER, BACK DOOR LOCK CYLINDER		2-15
RETAINER, BEARING, FRONT (MTM)		1-A6
RETAINER, CABLE		1-B10
RETAINER, CUSHION, NO.1 (FOR FRONT SHOCK ABSORBER)		1-I11
RETAINER, CUSHION, NO.1 (FOR FRONT STABILIZER BAR)		1-J11
RETAINER, CUSHION, NO.2 (FOR FRONT SHOCK ABSORBER)		1-I11
RETAINER, CUSHION, NO.2 (FOR FRONT STABILIZER BAR)		1-J11
RETAINER, ENGINE REAR OIL SEAL		1-K1
RETAINER, FRONT DOOR LOCK CYLINDER		2-H5
RETAINER, FUEL FILLER LID CYLINDER		2-15
RETAINER, HEADLINING SUPPORT		2-E4
RETAINER, OUTPUT SHAFT BEARING, FRONT		1-M6
RETAINER, OUTPUT SHAFT BEARING, REAR NO.1		1-M6
RETAINER, OUTPUT SHAFT REAR BEARING (MTM)		1-A6
RETAINER, RADIATOR GRILLE NAME PLATE		2-J6
RETAINER, REAR ASH RECEPTACLE, INNER		2-16
RETAINER, REAR ASH RECEPTACLE, OUTER		2-16
RETAINER, SIDE WINDOW LOCK, NO.1		2-J3
RETAINER, SLIDING ROOF WEATHERSTRIP		2-M3
RETAINER, STARTER IDLE GEAR		1-L3
RETAINER, TILT LEVER		1-A9
RETAINER, VALVE SPRING		1-D2
RETAINER, VENT WINDOW PIVOT, UPPER		2-K1
RHEOSTAT, LIGHT CONTROL		2-D9
RING (FOR CLUTCH MASTER CYLINDER RESERVOIR)		1-H5
RING (FOR POWER PISTON NUT)		1-J9
RING (FOR POWER STEERING GEAR HOUSING)		1-J9
RING (FOR STEERING MAIN SHAFT)		1-M8
RING (FOR STEERING WORM)		1-J9
RING (FOR VALVE HOUSING)		1-J9
RING SET, PISTON		1-A2
RING SUB-ASSY, SYNCHRONIZER, NO.1		1-D6
RING, CAM (FOR VANE PUMP)		1-C9
RING, CAMSHAFT ADJUST		1-E4
RING, CIRCULAR INTERNAL		1-G10
RING, CIRCULAR INTERNAL (FOR CLUTCH BOOSTER)		1-J5
RING, CLAMP (FOR DRIVE GEAR)		1-L4
RING, COUNTER GEAR FRONT BEARING SNAP, NO.1		1-E6
RING, DRIVE SHAFT SNAP		1-J8
RING, E (FOR CLUTCH BOOSTER AIR VALVE)		1-J5
RING, E (FOR REAR BRAKE)		1-K10

PART	NAME	LOCATION
RING, E (FOR REVERSE & 5TH SHIFT HEAD)		1-H6
RING, E (FOR REVERSE SHIFT FORK SHAFT)		1-H6
RING, FEED PUMP TAPPET SNAP		1-K4
RING, FREE WHEEL HUB		1-K8
RING, FUEL INLET BOX		2-F7
RING, HOG, SMALL		2-L5
RING, HOLE SNAP (FOR PISTON PIN)		1-A2
RING, HOLE SNAP (FOR POWER STEERING GEAR HOUSING)		1-J9
RING, HOLE SNAP (FOR PUMP HOUSING OIL SEAL)		1-B9
RING, HOLE SNAP (FOR SPIDER BEARING)		1-L7
RING, HORN CONTACT		1-G9
RING, O		1-H2
RING, O (FOR ADJUSTER PLUG)		1-K9
RING, O (FOR AIR VENT PLUG)		1-A5
RING, O (FOR BEARING BLOCK)		1-M8
RING, O (FOR DIAPHRAGM PUSH ROD)		1-H7
RING, O (FOR FLOW CONTROL SPRING SEAT)		1-C9
RING, O (FOR FUEL FEED PUMP)		1-J4
RING, O (FOR MTM SPEEDOMETER SHAFT SLEEVE)		1-B6
RING, O (FOR NO.3 LEVER)		1-H4
RING, O (FOR POWER PISTON NUT)		1-K9
RING, O (FOR POWER STEERING GEAR HOUSING)		1-J9
RING, O (FOR PRESSURE PORT UNION)		1-C9
RING, O (FOR PUMP HOUSING)		1-B9
RING, O (FOR REAR SIDE PLATE)		1-C9
RING, O (FOR RESERVOIR TUBE)		1-D10
RING, O (FOR SHIFT ARM PIVOT)		1-H6
RING, O (FOR SIDE COVER)		1-J9
RING, O (FOR STEERING COLUMN HOLE COVER PLATE)		1-M8
RING, O (FOR SUCTION PORT UNION)		1-C9
RING, O (FOR TRANSFER IDLER SHAFT)		1-C7
RING, O (FOR VALVE HOUSING)		1-J9
RING, SEALED BEAM MOUNTING, NO.1 LH		2-17
RING, SEALED BEAM MOUNTING, NO.1 RH		2-17
RING, SEALED BEAM RETAINING		2-17
RING, SET (FOR FRONT DISC BRAKE PISTON)		1-H10
RING, SHAFT SNAP		1-C9
RING, SHAFT SNAP (FOR CLUTCH HUB NO.2 SETTING)		1-E6
RING, SHAFT SNAP (FOR FRONT BEARING)		1-D6
RING, SHAFT SNAP (FOR FRONT DRIVE INNER SHAFT INNER)		1-I8
RING, SHAFT SNAP (FOR FRONT DRIVE INNER SHAFT OUTER)		1-I8
RING, SHAFT SNAP (FOR REVERSE & 5TH SHIFT RETURN PLUNGER)		1-H6
RING, SHAFT SNAP (FOR SHIFT ARM SHOE)		1-H6
RING, SHAFT SNAP (FOR STEERING MAIN SHAFT)		1-M8
RING, SHAFT SNAP (FOR TRANSFER OUTPUT SHAFT)		1-D7
RING, SHAFT SNAP (FOR 1ST & 2ND SHIFT RETURN PLUNGER)		1-H6
RING, SHAFT SNAP (FOR 3RD & 4TH SHIFT FORK SHAFT)		1-I6
RING, SNAP (FOR ALTERNATOR ROTOR)		1-J3
RING, SNAP (FOR FLOW CONTROL VALVE)		1-C9
RING, SNAP (FOR RESERVOIR TUBE)		1-E10
RING, SNAP (FOR STEERING COLUMN TUBE)		1-M8
RING, SNAP (FOR TRANSFER OUTPUT FRONT BEARING)		1-D7
RING, SPACE (FOR ALTERNATOR ROTOR)		1-I3
RING, SYNCHRONIZER, NO.2		1-E6
RING, SYNCHRONIZER, NO.3		1-F6
ROD ASSY, ACCELERATOR PEDAL		2-G7
ROD ASSY, HIGH AND LOW SHIFT, NO.2		1-G7
ROD ASSY, STEERING RELAY		1-L9
ROD ASSY, TIE		1-L9
ROD SUB-ASSY, BOOSTER PISTON (FOR CLUTCH BOOSTER)		1-J5
ROD SUB-ASSY, CONNECTING		1-A2
ROD SUB-ASSY, FRONT DOOR LOCK REMOTE CONTROL, LH		2-L4
ROD SUB-ASSY, FRONT DOOR LOCK REMOTE CONTROL, RH		2-L4
ROD SUB-ASSY, HIGH & LOW SHIFT		1-F7

A14

M74-28-0039

04044 - 17168

CONTENTS

(PART NUMBER - LOCATION)

04044 - 17168 ----- A14
 17172 - 33318 ----- B14
 33321 - 45450 ----- C14
 45451 - 55791 ----- D14
 55792 - 67048 ----- E14
 67861 - 77305 ----- F14
 77310 - 90041 ----- G14
 90043 - 90501 ----- H14
 90502 - 99915 ----- I14

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
04044-60080-	1-J9	11302-56030-	1-K1	13781-56010-	1-D2
-60120-	1-J9	11312-56031-	1-K1	13811-56030-	1-D2
04111-58050-	1-E1	11328-56030-	1-K1	13812-56030-	1-D2
04112-58050-	1-E1	11345-48010-	1-K1	13901-56020-	1-D2
04161-56080-	1-I2	11355-56052-	1-K1	13951-56010-	1-D2
04311-60040-	1-H5	-56053-	1-K1	13952-56010-	1-D2
-60050-	1-H5	11381-56031-	1-K1	13953-56010-	1-D2
04313-60060-	1-K5	11383-56031-	1-K1	13958-56010-	1-D2
04318-60020-	1-J5	11391-56020-	1-K1	15077-56010-	1-F2
04331-60080-	1-L5	11400-58040-	1-D1	15104-56050-	1-E2
-60081-	1-L5	11401-59305-	1-H1	15115-56030-	1-E2
-60160-	1-L5	11452-56050-	1-I1	15121-56030-	1-E2
S 04371-36030-	1-E7	11459-56040-	1-I1	15122-56030-	1-E2
04412-60030-	1-A8	11461-58020-	1-I1	15131-24010-	1-E2
04434-60020-	1-E11	11475-58010-	1-I1	15132-76011-	1-E2
04443-60200-	1-G10	11476-58010-	1-I1	15133-20010-	1-E2
-60300-	1-G10	11701-56010-01	1-A2	15134-20010-	1-E2
04445-60030-	1-J9	-56010-02	1-A2	15184-15010-	1-I2
04446-35010-	1-B9	11704-56020-	1-A2	15193-56020-	1-E2
04455-60020-	1-J9	11705-56020-	1-A2	15301-56040-	1-I1
04474-60010-	1-J10	11707-56020-	1-A2	15403-56041-	1-E2
04476-60050-	1-J10	11802-56020-	1-C2	15600-41010-	1-G2
04477-60010-	1-B11	-56021-	1-C2	15605-58010-	1-I1
04479-30030-	1-H10	12101-56060-	1-I1	15609-58010-	1-G2
04481-60020-	1-H11	12157-10710-	1-B8	15691-56030-	1-G2
-60030-	1-H11	12180-13030-	1-G1	15701-56011-	1-H2
04482-60040-	1-H11	-70010-	1-G1	15708-58020-	1-I1
04493-60050-	1-L11	12251-56040-	1-M1	15710-56041-	1-H2
04484-60010-	1-L11	12311-58031-	1-L1	15725-56011-	1-H2
04491-60010-	1-H10	-58032-	1-L1	16100-59105-	1-I2
04493-60090-	1-D10	12315-58020-	1-L1	16104-52011-	1-I2
04495-60050-	1-J10	12361-58030-	1-L1	-52013-	1-I2
09111-60050-	1-A1	-58060-	1-L1	16117-56040-	1-I2
09114-60040-	1-A1	12371-58020-	1-L1	16119-56040-	1-I2
-60050-	1-A1	12511-56040-	1-L1	16131-56040-	1-I2
09115-60030-	1-A1	13011-58011-	1-A2	16141-76010-	1-I2
09116-35041-	1-A1	13041-58010-01	1-A2	16171-61071-	1-I2
09120-60050-	1-A1	-58010-02	1-A2	16198-41170-	1-I2
-60100-	1-A1	13101-58012-	1-A2	16210-56040-	1-I2
09135-00012-	1-A1	-58013-	1-A2	16261-56012-	1-L2
09140-27010-	1-A1	13201-59035-	1-A2	16271-56020-	1-J2
09150-60010-	1-B1	13204-58011-	1-B2	16331-58010-	1-L2
09183-00030-	1-B1	13205-58011-	1-B2	16333-56060-	1-L2
-60010-	1-D1	13207-58011-	1-B2	16341-56020-	1-L2
11011-56010-	1-A2	13265-58010-	1-B2	16343-56020-	1-L2
-56020-	1-A2	13401-58020-	1-B2	16361-38010-	1-L2
11012-56010-	1-A2	13405-56031-	1-B2	16371-56040-	1-J2
-56020-	1-A2	13453-56020-	1-B2	16381-56030-	1-L2
11013-56010-	1-A2	13470-56170-	1-B2	-58020-	1-L2
-56020-	1-A2	13477-60030-	1-B2	16400-58160-	1-L2
11101-58013-	1-F1	13478-60010-	1-B2	16401-71010-	1-L2
11106-58010-	1-A4	13504-56030-	1-B2	16405-58020-	1-L2
-58011-	1-A4	13508-56010-	1-B2	16417-24200-	1-L2
11115-58040-	1-F1	13511-56030-	1-C2	16418-24200-	1-L2
11122-56021-	1-F1	13519-56010-	1-B2	16470-58040-	1-L2
11176-56010-	1-A4	13521-56030-	1-B2	16571-58040-	1-L2
11177-56010-	1-A4	13523-56040-	1-C2	16572-58040-	1-L2
11203-56040-	1-H1	13571-56020-	1-C2	16582-68010-	1-M2
-56041-	1-H1	13572-56020-	1-B2	16611-68020-	1-L2
11211-56031-	1-G1	13711-58010-	1-C2	16711-58020-	1-M2
11213-56012-	1-Q1	13715-58011-	1-C2	17111-56130-	1-B3
11293-58010-	1-Q3	13741-56021-	1-D2	17141-56050-	1-B3
11295-46010-	1-G1	13751-56020-	1-D2	17167-56022-	1-B3
11301-56031-	1-K1			17168-58021-	1-B3

NOTICE

FRAME NUMBER AND VEHICLE IDENTIFICATION NUMBER

1. FRAME NUMBER BJ70-0012345

FRAME NUMBER IS GIVEN ON THE DASH COWL IN THE ENGINE ROOM. FUNCTION IN TOYOTA PARTS CATALOG IS LISTED IN THE REVISION REFERENCE CODE LIST TO IDENTIFY

REV. REF. CODE	ENGINE NO. OR FRAME NO.
1	BJ70-0012345

ENGINEERING CHANGE PERIOD AS BEFORE. SO, IN LOCATING PARTS CATALOG, TAKE A LOOK AT FRAME NUMBER ON CORRESPONDING VEHICLE

2. NAME PLATE

NAME PLATE IS ATTACHED TO THE DASH COWL IN THE ENGINE ROOM. MODEL COLUMN

ENGINE TOYOTA MOTOR CORPORATION	
3B	JT3BJ70VXF10012345
(b)	
MODEL BJ70LV-MRK	
(a)	

INDICATES FULL MODEL CODE, SO, FOR MODEL INFORMATION, REFER TO THE NAME PLATE AS BEFORE.

PROCEDURE TO DETERMINE FRAME NUMBER FROM NAME PLATE IS :

$$(a) + (b) = BJ70-0012345$$

3. VEHICLE IDENTIFICATION NUMBER JT3BJ70VXF10012345

VEHICLE IDENTIFICATION NUMBER IS GIVEN TO VIN PLATE ON LEFT HAND OF DASH BOARD, CERTIFICATION REGULATION PLATE ON LEFT DOOR PILLAR, AND NAME PLATE.

NOTICE

FRAME NUMBERING IS STARTED FROM DIFFERENT STARTING FRAME NUMBER PER EACH ASSEMBLY LINE.

WHEN REFERRING TO STARTING FRAME NUMBER ON REVISION REFERENCE CODE LIST, BEAR FOLLOWING MATTER IN YOUR MIND.

Starting Frame Number Per Each Assembly Line.

Assembly Line	TOYOTA MOTOR Honsyo Plant (A11)
Applicable Model	
BJ70-	0000001 ~

REV. REF. CODE	ENGINE NO. OR FRAME NO.	REV. REF. CODE	ENGINE NO. OR FRAME NO.	REV. REF. CODE	ENGINE NO. OR FRAME NO.
81	BJ70-0000001				
96	BJ70-0002806				
97	BJ70-0002807				
100	BJ70-0004200				
101	BJ70-0004201				
114	BJ70-0003997				
115	BJ70-0003998				
126	3B-0707773				
127	3B-0707774				
140	BJ70-0005765				
141	BJ70-0005766				
142	BJ70-0004937				
143	BJ70-0004938				
146	B-787901				
147	B-787902				
150	FULL DETAILS OF REVISION REFERENCE CODE ARE NOT DETERMINED. THEY WILL APPEAR ON THE NEXT ISSUE.				
151	FULL DETAILS OF REVISION REFERENCE CODE ARE NOT DETERMINED. THEY WILL APPEAR ON THE NEXT ISSUE.				

GUIDE TO CONTENTS

1. MODELS COVERED & CHARACTERISTICS C 15 (included in each fiche)
2. MARK & ABBREVIATION P 16, C 16 (included in each fiche)
3. INDEX
 - ILLUSTRATED INDEX D 16 thru K 16 (included in each fiche)
 - FIGURE NUMBER INDEX L 16, M 16 (included in each fiche)
4. ILLUSTRATIONS & TEXT ... From A 1 (included in each fiche)

The contents (illustrations & text) have been divided
into groups by function in the following sequence:

- Engine
- Fuel
- Power train - Chassis
- Body
- Electrical

5. APPENDICES

- PART NAME  LOCATION LIST A 12 thru F 13 (included in the fiche No. 2 of 2)
- PART NUMBER  LOCATION LIST A 14 thru I 14 (included in each fiche)
- REVISION REFERENCE CODE LIST A 15 (included in each fiche)
- PRODUCTION FRAME NUMBER
REFERENCE LIST B 15 (included in each fiche)

Note : SST (Special Service Tools) are not included in this parts catalog.

For related part number information can be noted in SST List, Service Bulletin
and Repair Manual.

(8411-)

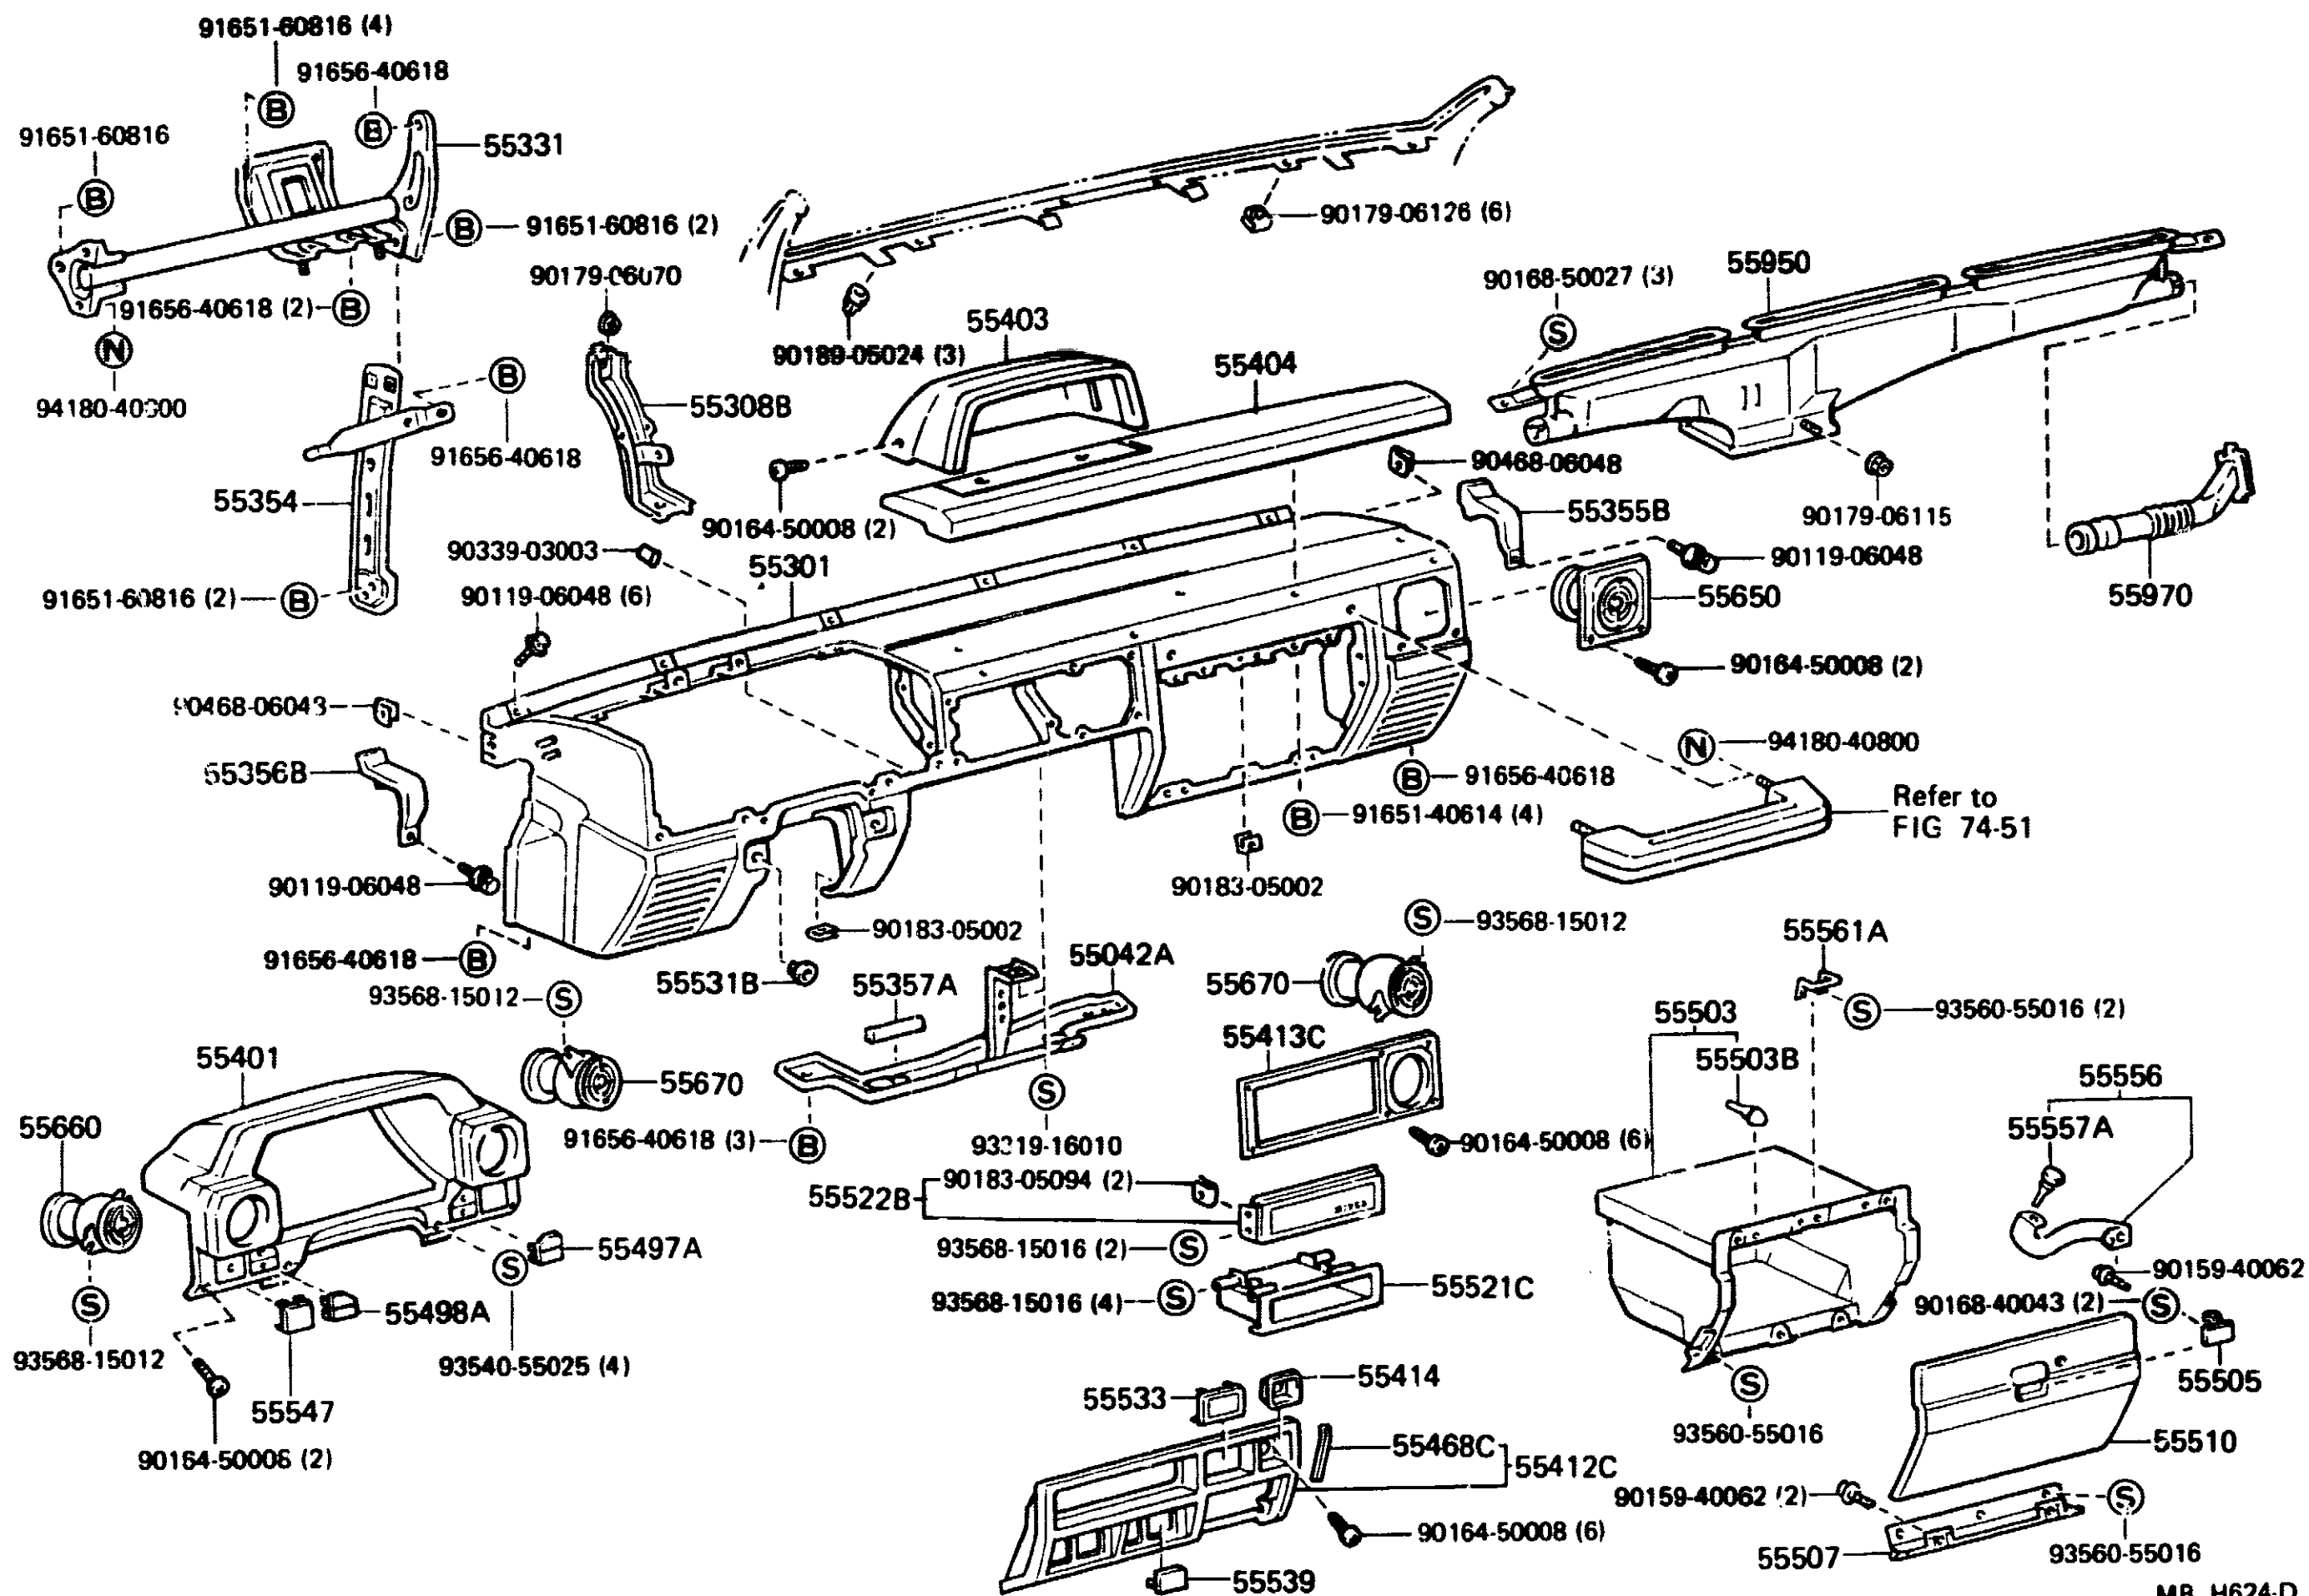



FIG.64-51 INSIDE TRIM BOARD

2-B4

M74-13-0069

(8411-)

GENUINE TOYOTA PARTS

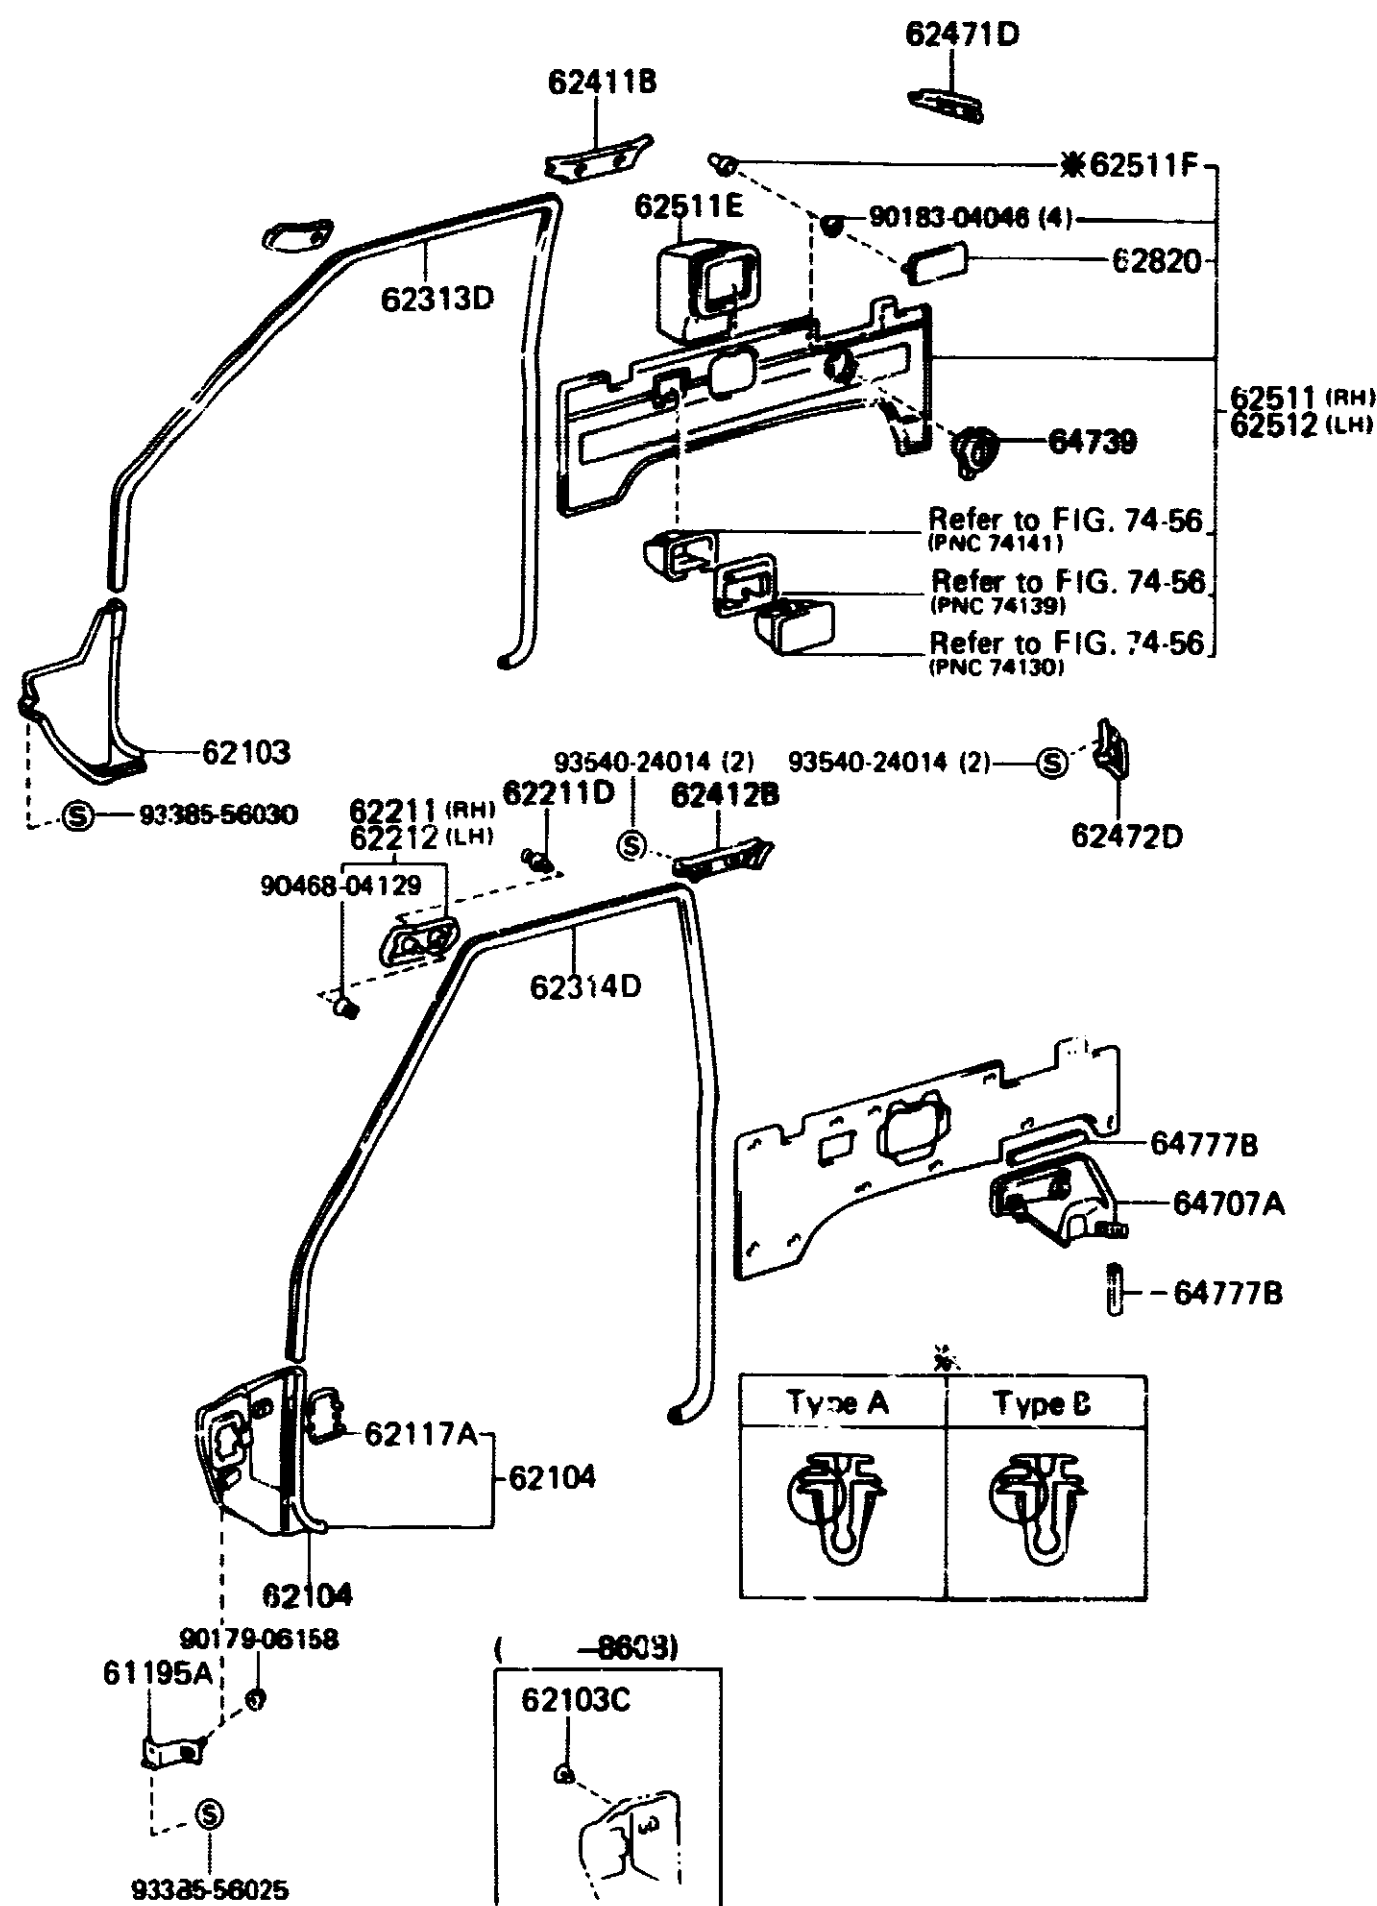

MB H633-E


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	64-51 INSIDE TRIM BOARD						
8608-	61195A	BRACKET, COWL SIDE TRIM, LH		61195-90K00-	1	141	
8411-	BJ70						
8411-	62103	BOARD SUB-ASSY, COWL SIDE TRIM, RH		62101-90K03-03	1	81	
8411-	BJ70	GRAY		62101-90K03-06	1	81	
8411-	BJ70	BROWN					
8411-8608	62103C	CLIP, COWL SIDE TRIM BOARD SET		90467-09012-23	1	81	140
8411-8608	BJ70	GRAY		90467-09012-36	1	81	140
8411-8608	BJ70	BROWN					
8411-8608	62104	BOARD SUB-ASSY, COWL SIDE TRIM, LH		62102-90K00-03	1	81	140
8411-8608	BJ70	GRAY		62102-90K00-06	1	81	140
8411-8608	BJ70	BROWN		62102-90K07-03	1	141	
8608-	BJ70	GRAY		62102-90K07-06	1	141	
8608-	BJ70	BROWN					
8411-	62117A	COVER, COWL SIDE TRIM SERVICE HOLE		62117-90K00-03	1	81	
8411-	BJ70	GRAY		62117-90K00-06	1	81	
8411-	BJ70	BROWN					
8411-	62211	GARNISH, FRONT BODY PILLAR, RH		62211-90K04-08	1	81	
8411-	BJ70	IVORY					
8411-	62211D	CLIP (FOR FRONT BODY PILLAR GARNISH)		90467-05032-08	2	81	
8411-	BJ70	IVORY					
8411-	62212	GARNISH, FRONT BODY PILLAR, LH		62212-90K00-08	1	81	
8411-	BJ70	IVORY					
8411-	62313D	TRIM, FRONT DOOR OPENING, RH		62313-90K01-03	1	81	
8411-	BJ70	GRAY		62313-90K01-06	1	81	
8411-	BJ70	BROWN					
8411-	62314D	TRIM, FRONT DOOR OPENING, LH		62313-90K01-03	1	81	
8411-	BJ70	GRAY					

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
	+ + 69902 + +	CHANNEL SUB-ASSY, FRONT DOOR GLASS, LH					
8411-	BJ70	W/XVW		69902-90K00-	1	81	
8411-	BJ70			69902-90K01-	1	81	
	+ + 69971A + +	FILLER, FRONT DOOR GLASS CHANNEL					
8411-	BJ70			69971-90K00-	2	81	

PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO

*VW=Ventilator Window

(8411-)

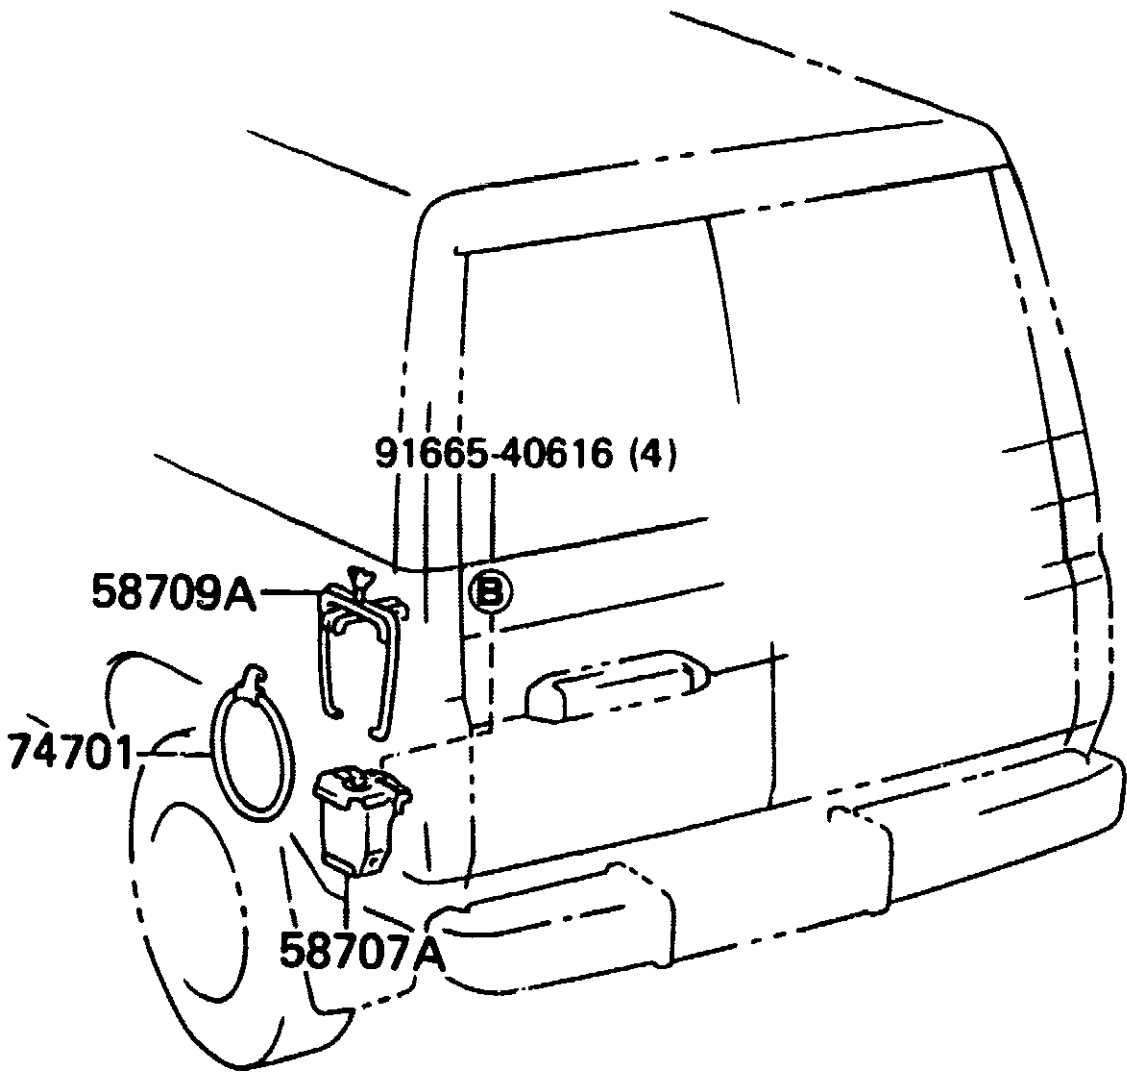

M5 H648

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
FIG.	75-54 TOOL BOX & LICENSE PLATE BRACKET						
8411-	58707A	HOLDER SUB-ASSY, JACK					
	BJ70			58707-90K00-	1	81	
8411-	58709A	CARRIER SUB-ASSY, JACK					
	BJ70			58708-90K00-	1	81	
8411-	74701	CLAMP SUB-ASSY, TOOL BAG					
	BJ70			58705-70K00-	1	81	

FIG.81-14 REAR SIDE MARKER LAMP


2-B8

M74-13-0091


GENUINE TOYOTA PARTS

(8411-)

(-8510)

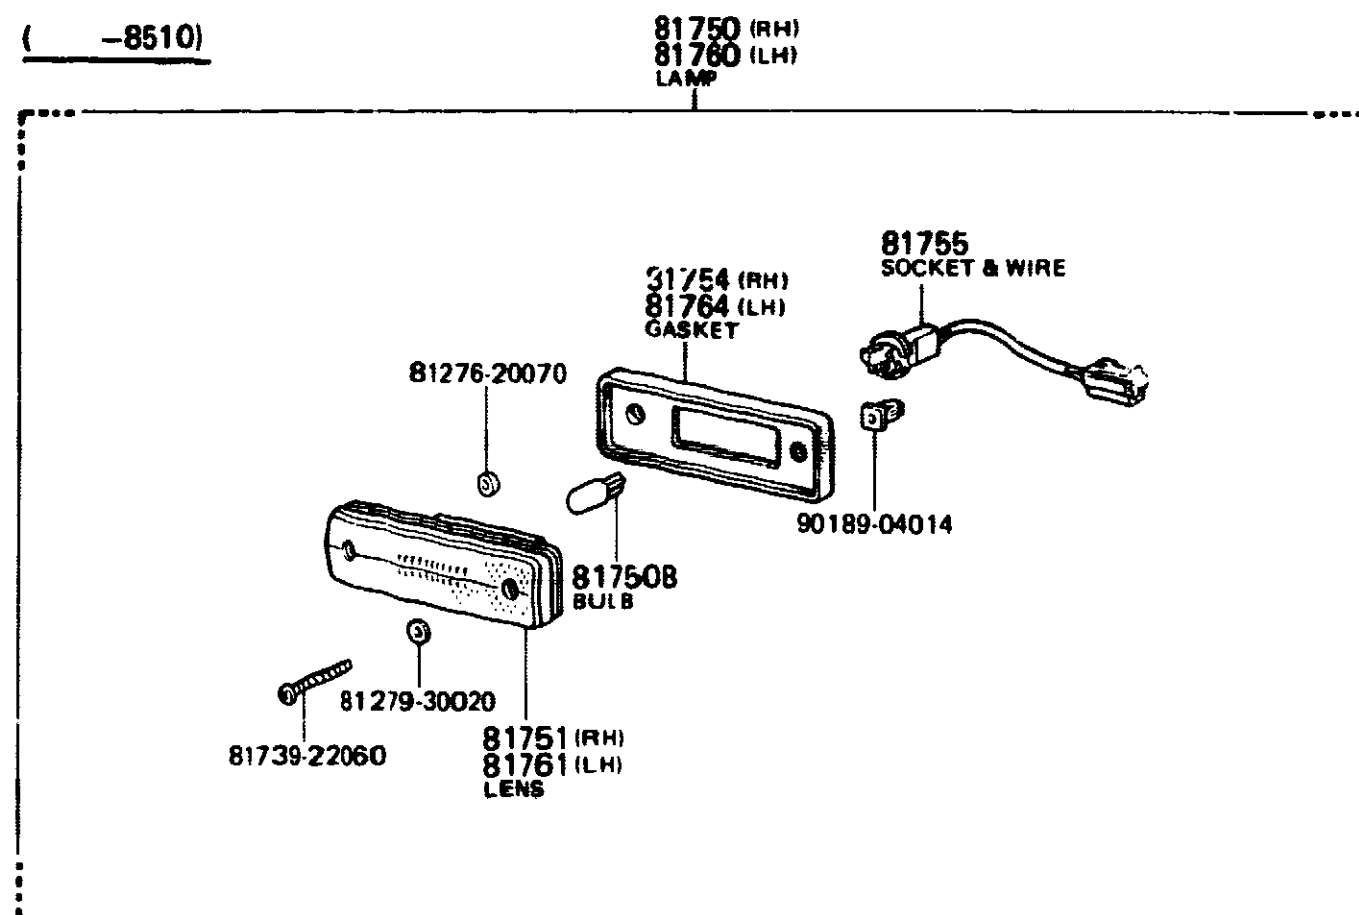

(8510-)

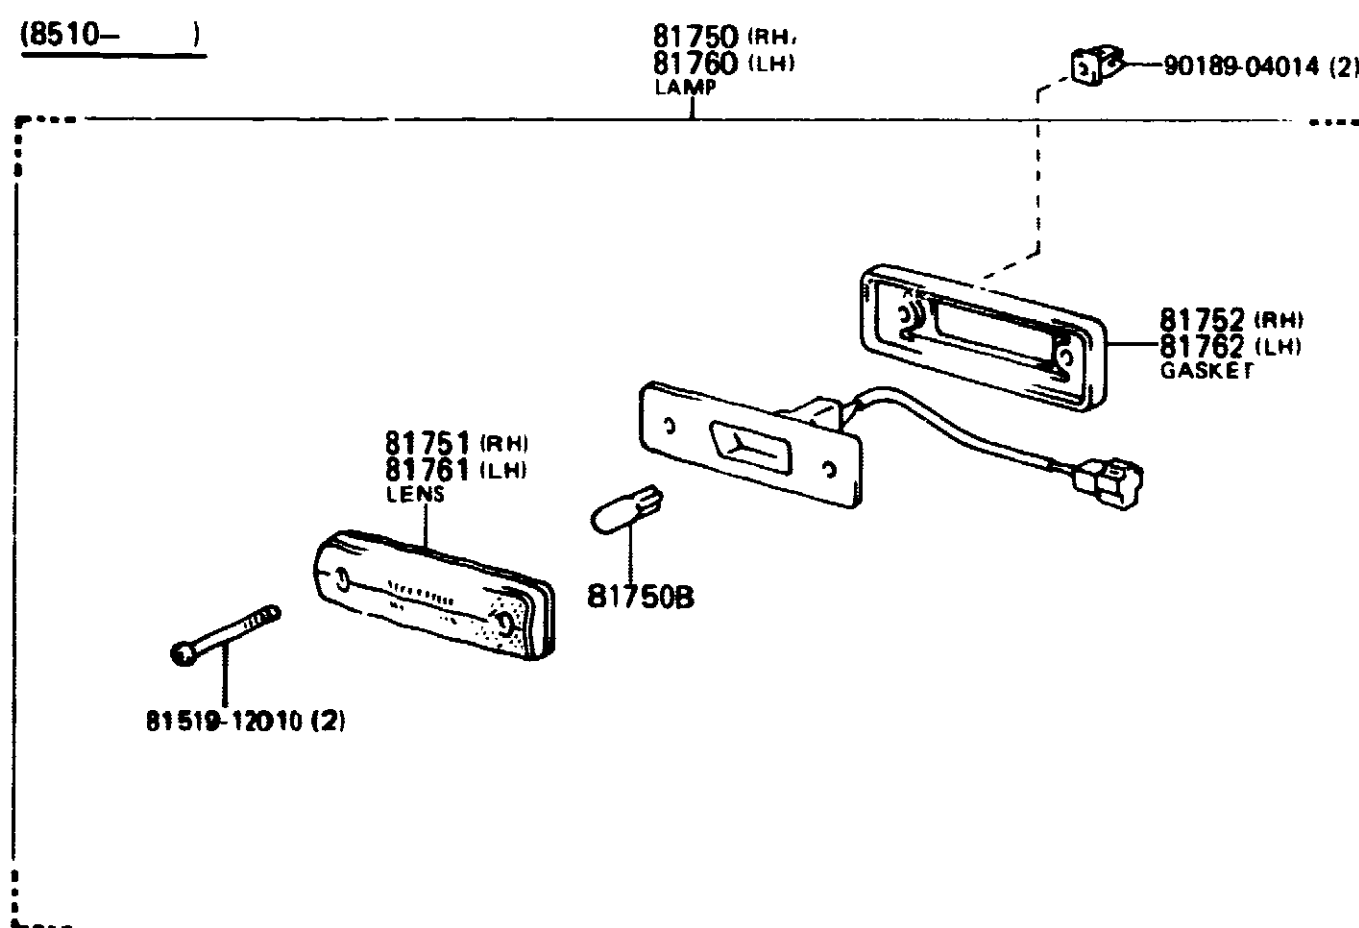

ME F426-A

PROD. DATE	MODELS	DESCRIPTION	P/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	81-14 REAR SIDE MARKER LAMP						
	+-----+ 81750	LAMP ASSY, REAR SIDE MARKER, RH					
8411-8510	BJ70			81750-29145-	1	81 100	
8510-	BJ70			81750-90A01-	1	101	
	+-----+ 81750B	BULB, REAR SIDE MARKER LAMP					
8411-8510	BJ70	12V 3.8W		90981-11020-	2	81 100	
8510-	BJ70	24V 5W		90981-12015-	2	101	
	+-----+ 81751	LENS, REAR SIDE MARKER LAMP, RH					
8411-8510	BJ70			81751-14030-	1	81 100	
8510-	BJ70			81751-89107-	1	101	
	+-----+ 81752	GASKET, REAR SIDE MARKER LAMP LENS					
8510-	BJ70			81732-90A01-	1	101	
	+-----+ 81754	GASKET, REAR SIDE MARKER LAMP BODY, RH					
8411-8510	BJ70			81754-91255-	1	81 100	
	+-----+ 81755	SOCKET AND WIRE SUB-ASSY, REAR SIDE MARKER LAMP					
8411-8510	BJ70			81755-20060-	2	81 100	
	+-----+ 81760	LAMP ASSY, REAR SIDE MARKER, LH					
8411-8510	BJ70			81750-29145-	1	81 100	
8510-	BJ70			81760-90A00-	1	101	
	+-----+ 81761	LENS, REAR SIDE MARKER LAMP, LH					
8411-8510	BJ70			81751-14030-	1	81 100	
8510-	BJ70			81761-89107-	1	101	
	+-----+ 81762	GASKET, REAR SIDE MARKER LAMP					
8510-	BJ70			81742-90A01-	1	101	
	+-----+ 81764	GASKET, REAR SIDE MARKER LAMP BODY, LH					
8411-8510	BJ70			81754-91255-	1	81 100	



MEF426A

(8411-)

(8411-)


ILLUST.NO. 30F4

ILLUST.NO. 40F4

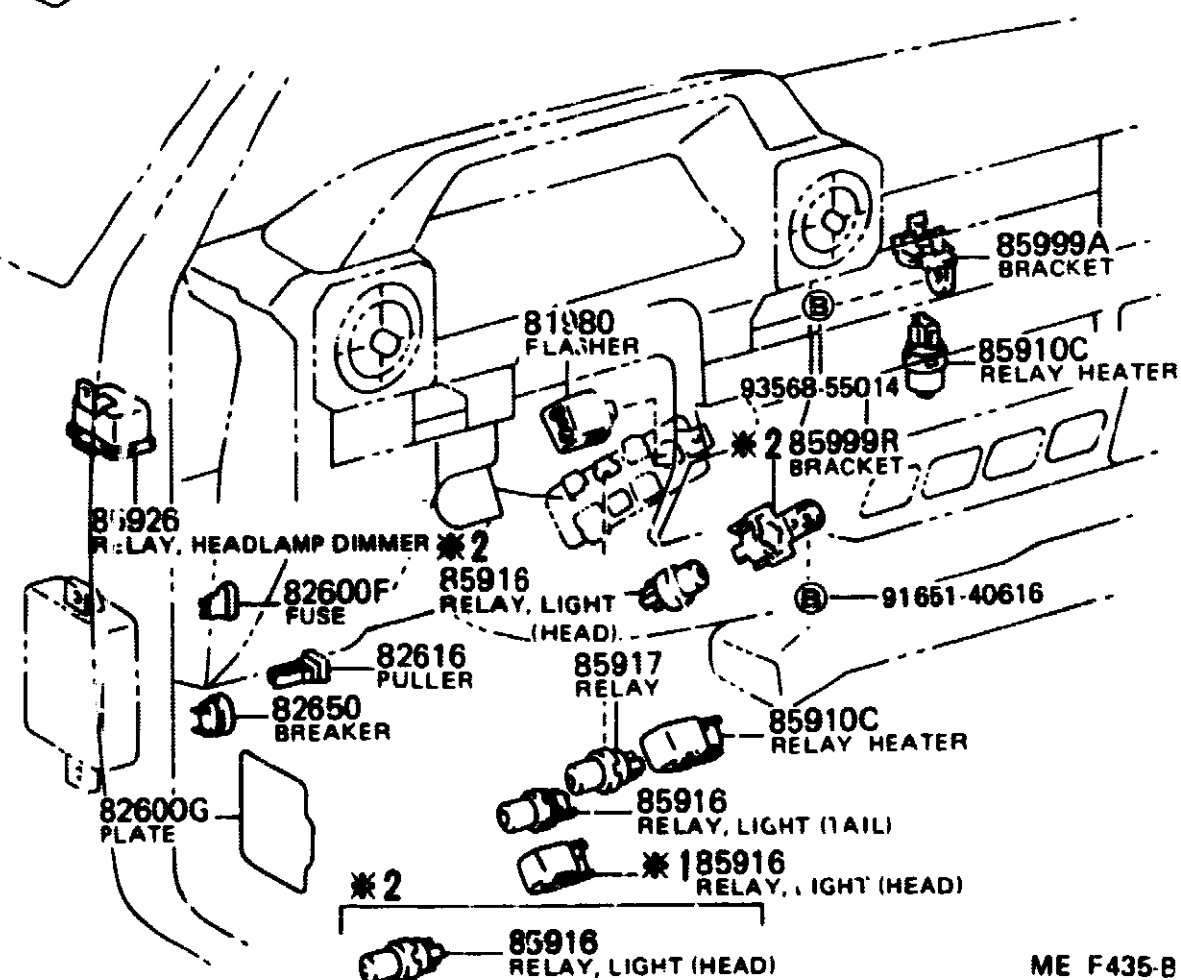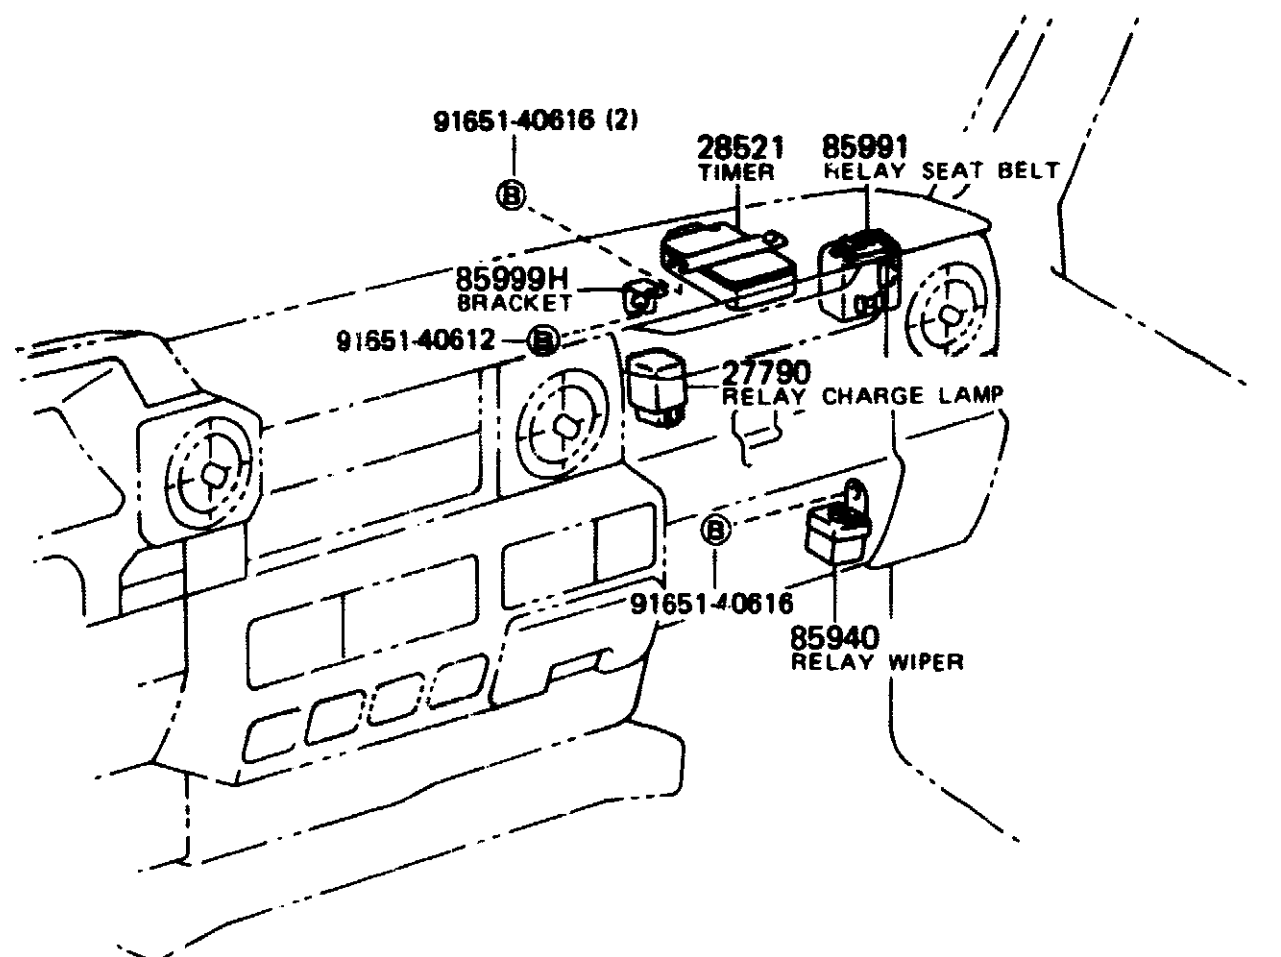

ME F435-B


MEF435B

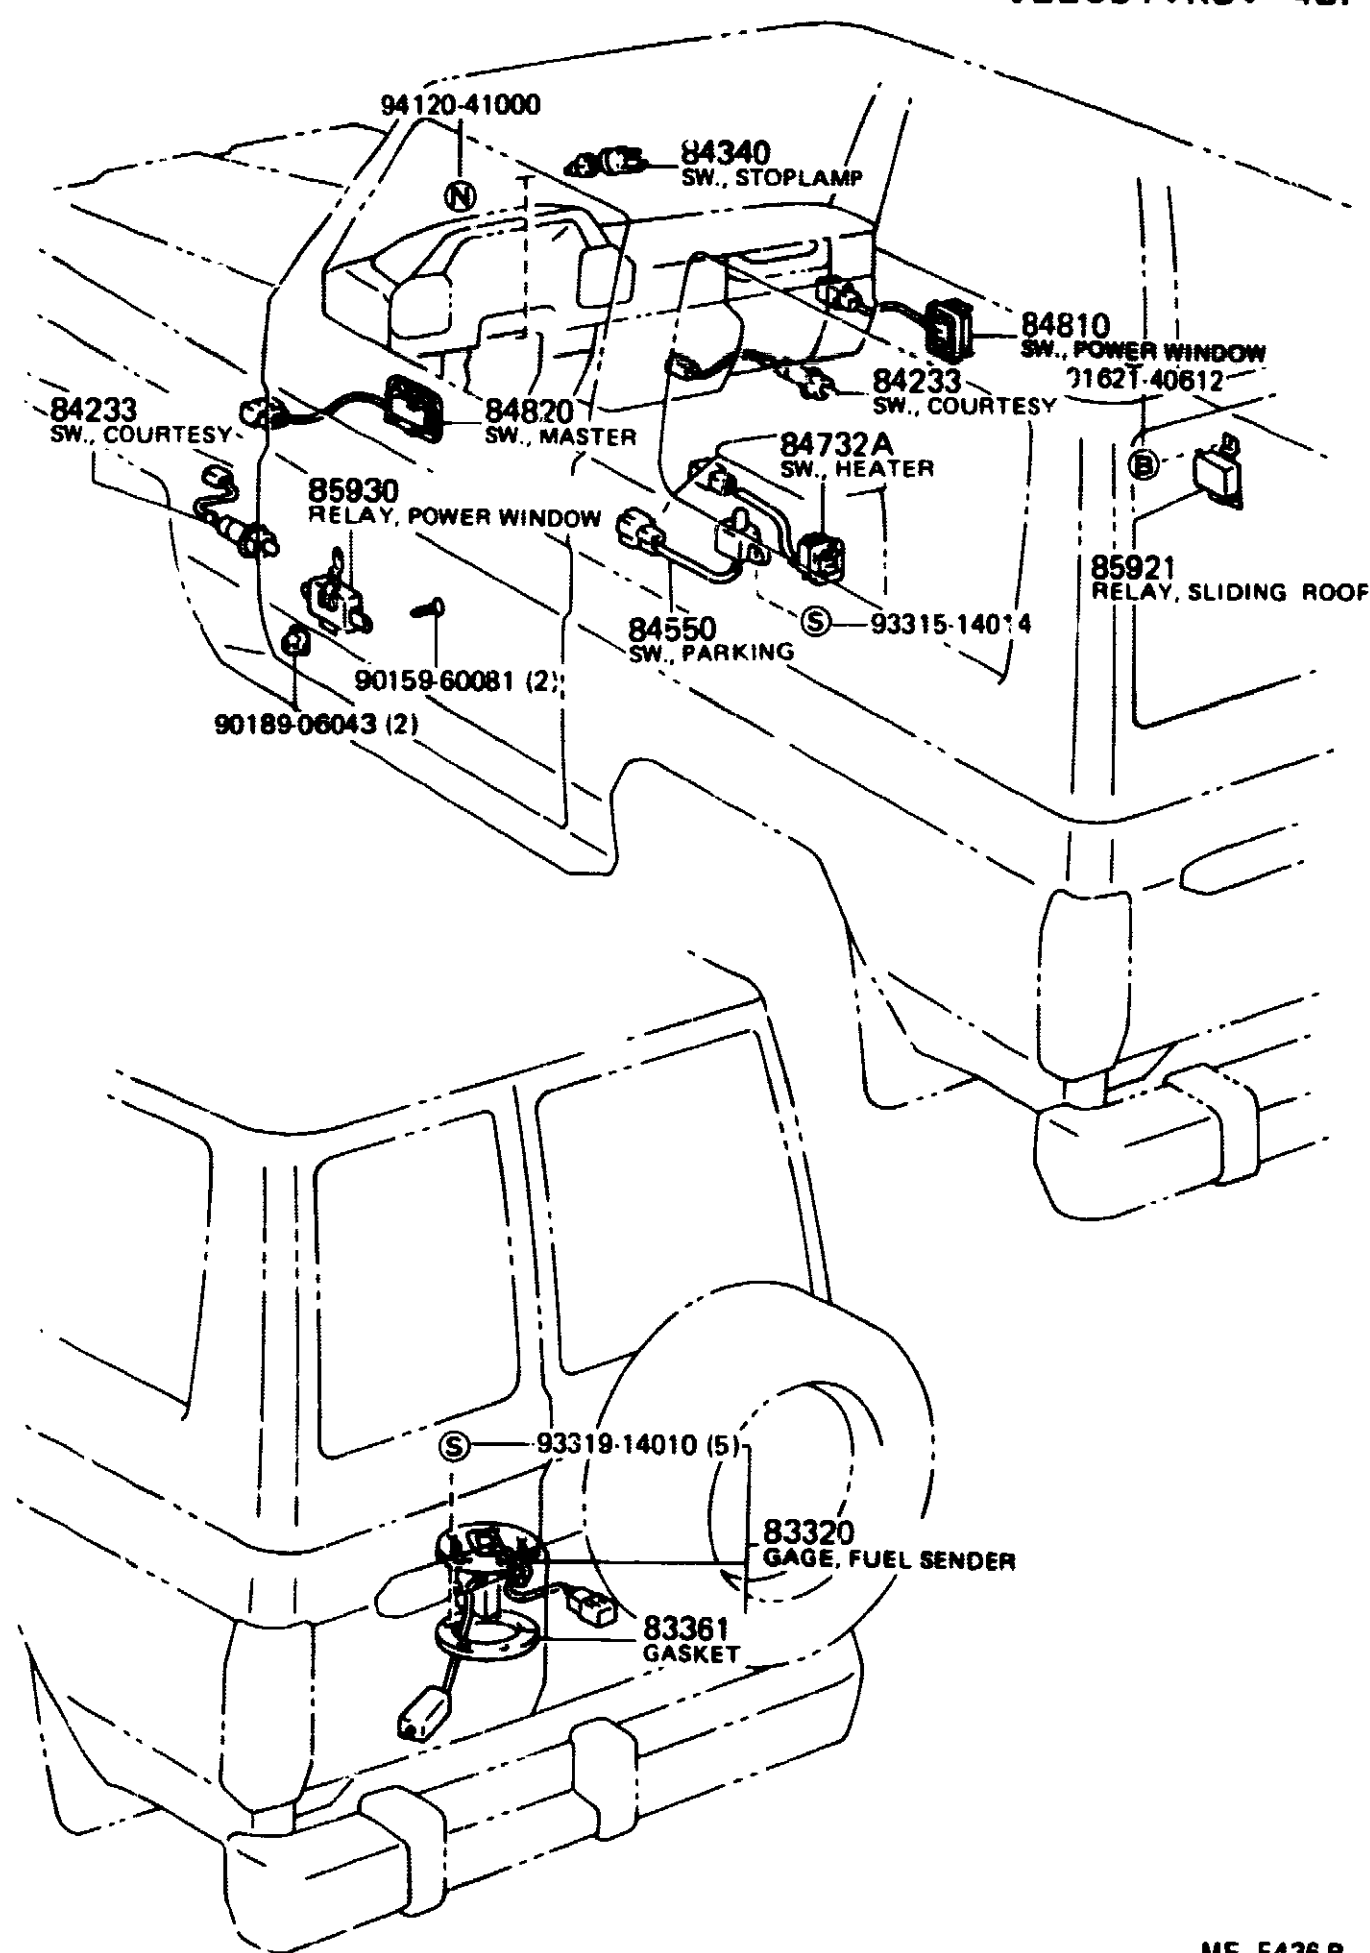

ME F436-B

MEF436B

(8411-)

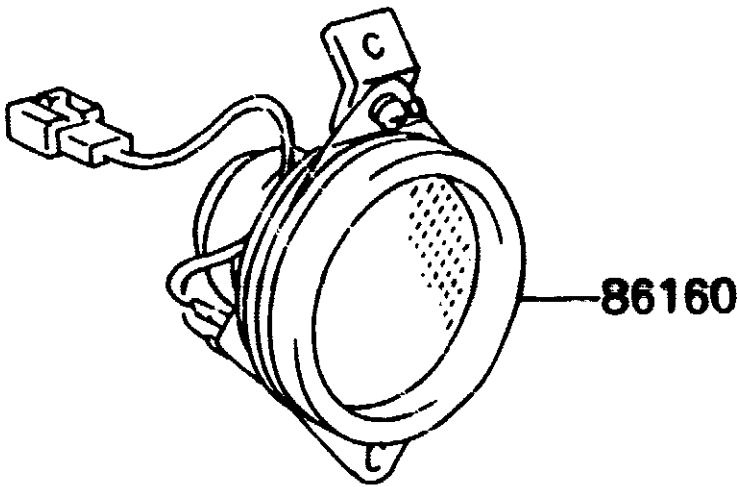

90179-06070 (2)

ME F416

PROD.DATE	M O D E L S	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	86-02 SPEAKER						
	86160	SPEAKER ASSY, FRONT NO.1					
8411-8510	BJ70	FRONT 1 SP EAKER		86160-90K00-	1	81	100
8411-	BJ70	FRONT 2 SP EAKERS		86160-90K01-	2	81	

BEARING -- BOLT

B12

M74-26-0039

BOLT -- BOOT

PART	NAME	LOCATION
BEARING SUB-ASSY, UNIVERSAL JOINT SPIDER	-----	1-L7
BEARING, (FOR REAR AXLE SHAFT)	-----	1-D8
BEARING, BALL (FOR CLUTCH RELEASE HUB)	-----	1-D5
BEARING, CONNECTING ROD	-----	1-A2
BEARING, CRANKSHAFT	-----	1-A2
BEARING, INJECTION PUMP GEAR THRUST	-----	1-K1
BEARING, NEEDLE ROLLER (FOR POWER STEERING GEAR HOUSING)	-----	1-J9
BEARING, NEEDLE ROLLER (FOR TRANSFER OUTPUT SHAFT FRONT)	-----	1-D7
BEARING, NEEDLE ROLLER (FOR 2ND GEAR)	-----	1-D6
BEARING, RADIAL BALL (FOR STEERING MAIN SHAFT)	-----	1-M8
BEARING, RADIAL BALL (FOR TRANSFER INPUT SHAFT REAR)	-----	1-C7
BEARING, STARTER ARMATURE	-----	1-L3
BEARING, TAPER ROLLER (FOR TRANSFER OUTPUT SHAFT)	-----	1-C7
BEARING, TAPERED ROLLER (FOR FRONT AXLE INNER BEARING)	-----	1-J8
BEARING, TAPERED ROLLER (FOR FRONT AXLE OUTER BEARING)	-----	1-J8
BEARING, TAPERED ROLLER (FOR FRONT DIFFERENTIAL CASE)	-----	1-G8
BEARING, TAPERED ROLLER (FOR FRONT DRIVE PINION FRONT)	-----	1-G8
BEARING, TAPERED ROLLER (FOR FRONT DRIVE PINION REAR)	-----	1-G8
BEARING, TAPERED ROLLER (FOR REAR DIFFERENTIAL CASE)	-----	1-A8
BEARING, TAPERED ROLLER (FOR REAR DRIVE PINION FRONT)	-----	1-A8
BEARING, TAPERED ROLLER (FOR REAR DRIVE PINION REAR)	-----	1-A8
BEARING, THRUST NEEDLE ROLLER (FOR STEERING WORM)	-----	1-J9
BEARING, WATER PUMP	-----	1-I2
BELLOWS ASSY, PNEUMATIC	-----	1-H4
BELT ASSY, FRONT SEAT INNER, LH	-----	2-C6
BELT ASSY, FRONT SEAT INNER, RH	-----	2-C6
BELT ASSY, FRONT SEAT OUTER, LH	-----	2-C6
BELT ASSY, FRONT SEAT OUTER, RH	-----	2-C6
BELT ASSY, REAR SEAT LAP TYPE, CENTER	-----	2-D6
BELT ASSY, REAR SEAT 3 POINT TYPE, INNER, LH	-----	2-D6
BELT ASSY, REAR SEAT 3 POINT TYPE, INNER, RH	-----	2-D6
BELT ASSY, REAR SEAT 3 POINT TYPE, OUTER, LH	-----	2-D6
BELT ASSY, REAR SEAT 3 POINT TYPE, OUTER, RH	-----	2-D6
BELT, V (FOR FAN AND ALTERNATOR)	-----	1-A3
BELT, V (FOR VANE PUMP)	-----	1-A3
BEZEL, CIGAR LIGHTER HOLE	-----	2-D2
BIT, SCREW DRIVER	-----	1-A1
BLADE ASSY, REAR WIPER	-----	2-I9
BLADE ASSY, WINDSHIELD WIPER	-----	2-H9
BLADE, REAR WIPER	-----	2-I9
BLADE, VACUUM PUMP, A	-----	1-M3
BLADE, WINDSHIELD WIPER	-----	2-H9
BLEEDER SUB-ASSY, AIR	-----	1-D4
BLOCK ASSY, JUNCTION	-----	2-I8
BLOCK ASSY, SHORT	-----	1-D1
BLOCK SUB-ASSY, CYLINDER	-----	1-H1
BLOCK, BEARING	-----	1-M8
BLOCK, FEED PUMP TAPPET SLIDING	-----	1-K4
BLOWER ASSY, HEATER, FRONT	-----	2-H10
BOARD SUB-ASSY, COWL SIDE TRIM, LH	-----	2-B4
BOARD SUB-ASSY, COWL SIDE TRIM, RH	-----	2-B4
BOARD SUB-ASSY, FRONT DOOR TRIM, LH	-----	2-G4
BOARD SUB-ASSY, FRONT DOOR TRIM, RH	-----	2-G4
BOARD, BACK DOOR TRIM	-----	2-D5
BOARD, FRONT SEAT BACK	-----	2-L5
BOARD, QUARTER INSIDE TRIM, LH	-----	2-C4
BOARD, QUARTER INSIDE TRIM, RH	-----	2-C4
BODY SUB-ASSY, FUEL FILTER	-----	1-A5
BOLT (FOR BACKING PLATE TO REAR AXLE HOUSING SETTING)	-----	1-J10
BOLT (FOR BODY MOUNT NO.1 CUSHION)	-----	2-E1
BOLT (FOR BODY MOUNT NO.2 CUSHION)	-----	2-E1
BOLT (FOR BODY MOUNT NO.3 CUSHION)	-----	2-E1
BOLT (FOR BODY MOUNT NO.3 CUSHION)	-----	2-E1
BOLT (FOR BRAKE MASTER CYLINDER)	-----	1-D10

PART	NAME	LOCATION
BOLT (FOR BREATHER OIL DEFLECTOR)	-----	1-M6
BOLT (FOR CLUTCH MASTER CYLINDER SETTING)	-----	1-H5
BOLT (FOR CLUTCH PEDAL STOPPER)	-----	1-F5
BOLT (FOR CLUTCH RELEASE CYLINDER SETTING)	-----	1-K5
BOLT (FOR CRANKSHAFT BEARING CAP SET)	-----	1-H1
BOLT (FOR CRANKSHAFT PULLEY SET)	-----	1-B2
BOLT (FOR CYLINDER HEAD SET)	-----	1-F1
BOLT (FOR DUST COVER TO STEERING KNUCKLE ARM SETTING)	-----	1-I10
BOLT (FOR FRONT STABILIZER)	-----	1-J11
BOLT (FOR OUTPUT SHAFT BEARING RETAINER REAR NO.1)	-----	1-M6
BOLT (FOR REAR DIFFERENTIAL CARRIER SET)	-----	1-A8
BOLT (FOR REAR RING GEAR SET)	-----	1-A8
BOLT (FOR ROCKER SUPPORT SET)	-----	1-D2
BOLT (FOR TRANSFER CASE)	-----	1-L6
BOLT (FOR TRANSFER CASE) & ADAPTER SETTING	-----	1-L6
BOLT (FOR TRANSFER CASE) COVER NO.2	-----	1-M6
BOLT (FOR TRANSFER OIL RECEIVER NO.1)	-----	1-M6
BOLT (FOR TRANSFER OUTPUT SHAFT COMPANION FLANGE)	-----	1-M6
BOLT (FOR TRANSFER POWER TAKE-OFF COVER)	-----	1-M6
BOLT (FOR 5TH SHIFT ARM)	-----	1-H6
BOLT OR NUT, RHEOSTAT CONTROL SET	-----	2-D9
BOLT SUB-ASSY, BATTERY CLAMP	-----	2-G6
BOLT, ACCELERATOR PEDAL STOPPER	-----	2-G7
BOLT, BRAKE MASTER CYLINDER RESERVOIR SET	-----	1-D10
BOLT, CLUTCH MASTER CYLINDER RESERVOIR SET	-----	1-H5
BOLT, CONNECTING ROD	-----	1-B2
BOLT, DIAPHRAGM CONNECTING	-----	1-H4
BOLT, DIAPHRAGM CONNECTING, NO.2	-----	1-H4
BOLT, FLYWHEEL SET	-----	1-B2
BOLT, FRONT DIFFERENTIAL BEARING CAP	-----	1-G8
BOLT, FRONT SPRING, CENTER	-----	1-I11
BOLT, HEXAGON (FOR FRONT CALIPER)	-----	1-H10
BOLT, HEXAGON (FOR FRONT RING GEAR SET)	-----	1-G8
BOLT, HEXAGON (FOR IDLE GEAR BOLT LOCK)	-----	1-B2
BOLT, HEXAGON (FOR PROPELLER SHAFT SETTING)	-----	1-L7
BOLT, HUB (FOR FRONT AXLE)	-----	1-J8
BOLT, HUB (FOR REAR AXLE)	-----	1-D8
BOLT, REAR DIFFERENTIAL BEARING CAP	-----	1-A8
BOLT, REAR SPRING, CENTER	-----	1-L11
BOLT, ROUND HEXAGON	-----	1-E11
BOLT, SET (FOR REAR BRAKE DRUM SETTING)	-----	1-D8
BOLT, SET (FOR SHIFT & SELECT LEVER)	-----	1-I6
BOLT, STEERING LOCK SET	-----	1-A9
BOLT, STUD (FOR FRONT DIFFERENTIAL CARRIER)	-----	1-G8
BOLT, STUD (FOR MANIFOLD TO CYLINDER HEAD)	-----	1-B3
BOLT, STUD (FOR MANIFOLD TO EXHAUST PIPE)	-----	1-B3
BOLT, STUD (FOR OUTER SHAFT FLANGE)	-----	1-J8
BOLT, STUD (FOR ROCKER SUPPORT)	-----	1-D2
BOLT, STUD (FOR STEERING SET)	-----	1-E11
BOLT, STUD (FOR WATER PUMP COUPLING)	-----	1-I2
BOLT, TILT STEERING SUPPORT STOPPER	-----	1-A9
BOLT, U (FOR FRONT SPRING)	-----	1-I11
BOLT, U (FOR REAR SPRING)	-----	1-L11
BOLT, STUD (FOR TIMING GEAR CASE)	-----	1-K1
BOOSTER ASSY, BRAKE	-----	1-G10
BOOSTER ASSY, CLUTCH W/AIR CLEANER	-----	1-J5
BOOSTER KIT, BRAKE	-----	1-G10
BOOSTER KIT, CLUTCH	-----	1-J5
BOOT (FOR RESERVOIR TUBE)	-----	1-E10
BOOT, CLUTCH BOOSTER PISTON COVER	-----	1-J5
BOOT, CLUTCH MASTER CYLINDER	-----	1-H5
BOOT, CLUTCH RELEASE CYLINDER	-----	1-K5
BOOT, CLUTCH RELEASE FORK	-----	1-D5
BOOT, DUST (FOR 5TH SHIFT ARM SHAFT)	-----	1-I6

ROD - SEAL

B13

M74-26-0052

SEAL - SHAFT

PART	NAME	LOCATION
ROD SUB-ASSY, JACK HANDLE	-----	1-A1
ROD, CLUTCH MASTER CYLINDER PUSH	-----	1-H5
ROD, CLUTCH RELEASE CYLINDER PUSH, NO.1	-----	1-K5
ROD, FUEL CONTROL MOTOR	-----	2-G9
ROD, HOOD SUPPORT	-----	2-L1
ROD, STEERING RELAY	-----	1-L9
ROD, STEERING TIE	-----	1-L9
ROD, SUB-ASSY, BACK DOOR LOCK REMOTE CONTROL	-----	2-G5
ROD, VALVE PUSH	-----	1-D2
ROLLER OR BEARING, INPUT SHAFT NEEDLE	-----	1-D6
ROLLER, FEED PUMP TAPPET	-----	1-K4
ROLLER, NO.1 (FOR SHIFT INTER LOCK)	-----	1-I6
ROLLER, NO.2 (FOR INTER LOCK)	-----	1-I6
ROLLER, STARTER IDLE GEAR CLUTCH	-----	1-L3
ROTOR ASSY, ALTERNATOR	-----	1-J3
ROTOR, VANE PUMP	-----	1-C9
ROTOR, WATER PUMP	-----	1-I2
RUN, FRONT DOOR GLASS	-----	2-H4
RUN, FRONT DOOR GLASS, LOWER	-----	2-H4
RUN, SIDE WINDOW, NO.1 (FOR SLIDE TYPE)	-----	2-J3
SAFETY PAD SUB-ASSY, INSTRUMENT PANEL, UPPER	-----	2-C2
SASH ASSY, SIDE WINDOW OUTER, NO.1 (FOR SLIDE TYPE)	-----	2-J3
SCREW OR BOLT (FOR VALVE ROCKER SHAFT LOCK)	-----	1-D2
SCREW, CLOCK	-----	2-L6
SCREW, CROSSHAFT ADJUSTING	-----	1-K9
SCREW, DIAPHRAGM HOUSING SET	-----	1-H4
SCREW, FUEL PIPE FOLLOW	-----	1-K4
SCREW, FUEL PIPE HOLLOW	-----	1-A5
SCREW, HEADLAMP ADJUSTING	-----	2-I7
SCREW, PLUNGER CONTROL PINION CLAMP	-----	1-E4
SCREW, RACK GUIDE	-----	1-D4
SCREW, SECTOR SHAFT ADJUSTING	-----	1-L9
SCREW, STOP PLATE ADJUSTING	-----	1-B5
SCREW, VALVE ADJUSTING	-----	1-D2
SCREW, WORM BEARING ADJUSTING	-----	1-K9
SEAL OR RING, O (FOR VALVE STEM OIL)	-----	1-C2
SEAL SET, WATER PUMP	-----	1-I2
SEAL SUB-ASSY, STEERING KNUCKLE OIL	-----	1-E11
SEAL, BOOSTER BODY	-----	1-G10
SEAL, BOOSTER BODY NO.1 (FOR CLUTCH BOOSTER)	-----	1-J5
SEAL, DOOR CHECK	-----	2-I4
SEAL, DUST (FOR FRONT AXLE HUB)	-----	1-F11
SEAL, ENGINE REAR OIL	-----	1-K1
SEAL, FRONT DOOR DIVISION BAR, LH NO.1	-----	2-J4
SEAL, FRONT DOOR DIVISION BAR, RH NO.1	-----	2-J4
SEAL, FRONT DOOR FRONT LOWER FRAME, LH	-----	2-G4
SEAL, FRONT DOOR FRONT LOWER FRAME, RH	-----	2-G4
SEAL, FRONT FENDER APRON, LH	-----	2-A2
SEAL, FRONT FENDER APRON, RH	-----	2-M1
SEAL, HOOD TO COWL TOP	-----	2-F2
SEAL, HOOD TO RADIATOR SUPPORT	-----	2-J1
SEAL, INSTRUMENT CLUSTER FINISH PANEL, NO.1	-----	2-D2
SEAL, LEAD	-----	1-B5
SEAL, OIL (FOR ADJUSTER PLUG)	-----	1-K9
SEAL, OIL (FOR FRONT AXLE HUB)	-----	1-J8
SEAL, OIL (FOR FRONT DIFFERENTIAL CARRIER)	-----	1-G8
SEAL, OIL (FOR HIGH & LOW SHIFT INNER LEVER)	-----	1-F7
SEAL, OIL (FOR NO.3 LEVER)	-----	1-I4
SEAL, OIL (FOR OUTPUT SHAFT BEARING FRONT RETAINER)	-----	1-M6
SEAL, OIL (FOR OUTPUT SHAFT RETAINER)	-----	1-M6
SEAL, OIL (FOR POWER STEERING GEAR HOUSING)	-----	1-J9
SEAL, OIL (FOR REAR AXLE SHAFT OUTER)	-----	1-D8
SEAL, OIL (FOR REAR DIFFERENTIAL CARRIER)	-----	1-A8
SEAL, OIL (FOR SECTOR SHAFT)	-----	1-L9

PART	NAME	LOCATION
SEAL, OIL (FOR STEERING WORM)	-----	1-K9
SEAL, OIL (FOR TIMING GEAR COVER)	-----	1-K1
SEAL, OIL (FOR TRANSFER ADAPTER)	-----	1-A6
SEAL, OIL (FOR TRANSFER CASE)	-----	1-M6
SEAL, OIL (FOR TRANSFER FRONT DRIVE SHIFT SHAFT)	-----	1-F7
SEAL, OIL (FOR TRANSMISSION FRONT BEARING RETAINER)	-----	1-A6
SEAL, OIL (FOR 5TH SHIFT ARM SHAFT)	-----	1-I6
SEAL, RADIATOR SUPPORT TO FRAME, RH	-----	2-M1
SEAL, STEERING KNUCKLE OIL, INNER	-----	1-E11
SEAL, STEERING KNUCKLE OIL, OUTER	-----	1-F11
SEAL, STEERING LINK DUST, LH	-----	1-L9
SEAL, STEERING LINK DUST, RH	-----	1-L9
SEAL, TRANSFER LEVER BOOT	-----	2-I2
SEAL, TYPE S OIL (FOR SPEEDOMETER SHAFT SLEEVE)	-----	1-B6
SEAL, TYPE T OIL (FOR FRONT DRIVE SHAFT)	-----	1-H8
SEAL, TYPE T OIL (FOR PUMP HOUSING)	-----	1-B9
SEAL, TYPE T, OIL (FOR DIAPHRAGM PUSH ROD)	-----	1-H7
SEAL, MAIN SHAFT UPPER DUST	-----	1-M8
SEALED BEAM UNIT, NO.1	-----	2-I7
SEAT SUB-ASSY, SPRING U BOLT, LH	-----	1-L11
SEAT SUB-ASSY, SPRING U BOLT, RH	-----	1-L11
SEAT, BALL STUD	-----	1-L9
SEAT, FLOW CONTROL SPRING	-----	1-C9
SEAT, FRONT SPRING, LH	-----	1-I11
SEAT, FRONT SPRING, RH	-----	1-I11
SEAT, HORN BUTTON CONTACT, NO.1	-----	1-G9
SEAT, INJECTION NOZZLE	-----	1-A4
SEAT, SHIFT DETENT BALL SPRING, NO.2	-----	1-I6
SEAT, SPRING UPPER	-----	1-D4
SEAT, SPRING, LOWER	-----	1-E4
SEAT, STEERING LINK JOINT SPRING	-----	1-L9
SEAT, TRANSMISSION SHIFT LEVER BALL	-----	1-J6
SEAT, WATER PUMP PULLEY	-----	1-I2
SEDIMENTER ASSY, FUEL	-----	1-A5
SENSOR, GLOW PLUG CURRENT	-----	2-C9
SENSOR, TEMPERATURE	-----	2-F9
SEPARATOR, AIR CLEANER (FOR CLUTCH BOOSTER)	-----	1-J5
SET PLATE, REAR FLOOR MAT, REAR	-----	2-B3
SHACKLE KIT, FRONT SPRING	-----	1-H11
SHACKLE KIT, REAR SPRING	-----	1-L11
SHACKLE, LOAD SENSING SPRING, NO.1	-----	1-C11
SHACKLE, LOAD SENSING SPRING, NO.2	-----	1-D11
SHADE, FRONT TURN SIGNAL LAMP, LH	-----	2-K7
SHADE, FRONT TURN SIGNAL LAMP, RH	-----	2-J7
SHAFT ASSY, PROPELLER	-----	1-L7
SHAFT ASSY, PROPELLER, FRONT	-----	1-L7
SHAFT ASSY, STEERING INTERMEDIATE	-----	1-M8
SHAFT ASSY, STEERING INTERMEDIATE, NO.2	-----	1-M8
SHAFT ASSY, STEERING MAIN	-----	1-M8
SHAFT SUB-ASSY, IDLE GEAR	-----	1-B2
SHAFT SUB-ASSY, VALVE ROCKER, NO.1	-----	1-D2
SHAFT, CLUTCH PEDAL	-----	1-F5
SHAFT, CROSS	-----	1-J9
SHAFT, DRIVE	-----	1-I8
SHAFT, FRONT AXLE, INNER LH	-----	1-I8
SHAFT, FRONT AXLE, INNER RH	-----	1-I8
SHAFT, FRONT DIFFERENTIAL PINION	-----	1-H8
SHAFT, FRONT DRIVE SHIFT LINK SUPPORT	-----	1-G7
SHAFT, INPUT	-----	1-D6
SHAFT, OUTPUT	-----	1-D6
SHAFT, PEDAL	-----	1-C10
SHAFT, REAR AXLE	-----	1-D8
SHAFT, REAR DIFFERENTIAL PINION	-----	1-B8
SHAFT, REVERSE IDLER GEAR	-----	1-F6

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
17172-56022-	1-B3	22189-46010-	1-E4	22694-77130-	1-I4	26124-58020-	1-B5	28521-57060-	2-C9	31473-60100-	1-K5
17173-58010-	1-B3	-48031-	1-E4	22697-56041-	1-I4	26131-58023-	1-C5	-57061-	2-C9	-60110-	1-K5
17401-58060-	1-D3	-48032-	1-E4	22698-77131-	1-I4	-58024-	1-C5	28571-56120-	2-G9	31476-60050-	1-K5
17403-58060-	1-D3	-48033-	1-E4	22699-56130-	1-I4	26132-56010-	1-B5	-56130-	2-G9	31478-30010-	1-H10
17430-58180-	1-D3	-48034-	1-E4	22703-56040-	1-I4	-56011-	1-C5	28579-56030-	2-G9	1-K10	
17567-61030-	1-D3	-48035-	1-E4	-77140-	1-I4	26171-56020-	1-C5	28590-56090-	2-G9	1-K5	
17571-58071-	1-D3	-48036-	1-E4	22811-56011-	1-C4	27020-56190-	1-I3	-56100-	2-G9	31481-60420-	1-F5
17700-58160-	1-F3	22195-48030-	1-F4	23300-56040-	1-A5	-56240-	1-I3	28610-54090-	2-C9	-60440-	1-F5
17705-61040-	1-F3	22197-77140-	1-I4	23303-56031-	1-A5	-56390-	1-I3	-54180-	2-C9	31484-60050-	1-F5
17791-56170-	1-G3	22303-47010-	1-H4	23311-56040-	1-A5	-56400-	1-I3	-58020-	2-C9	31488-60070-	1-J5
17801-68020-	1-F3	22308-56041-	1-H4	23312-56021-	1-A5	27036-56390-	1-I3	-64020-	2-C9	33030-60500-	1-L5
17841-68010-	1-F3	-56130-	1-H4	23319-48010-	1-A5	27310-56110-	1-I3	28611-64010-	2-C9	-60620-	1-L5
17845-61011-	1-F3	22318-48030-	1-H4	23323-56010-	1-A5	-56180-	1-I3	28621-57011-	2-C9	33046-60010-	1-E6
17881-58090-	1-F3	22319-77010-	1-H4	23338-54010-	1-A5	27312-57060-	1-I3	-57021-	2-C9	33102-60080-	1-G6
17882-58060-	1-F3	22320-58022-	1-H4	23351-54010-	1-A5	27313-57060-	1-I3	28624-57010-	2-C9	33111-60070-	1-M5
17885-58070-	1-F3	-58031-	1-H4	23353-54010-	1-A5	27315-57060-	1-J3	28631-57010-	2-C9	-60080-	1-M5
19000-58340-	1-C1	22323-58010-	1-H4	23600-68010-	1-A4	27330-56390-	1-J3	-57020-	2-C9	33118-36020-	1-A6
-58380-	1-C1	22326-58010-	1-H4	23618-56010-	1-A4	-64030-	1-J3	28800-45030-	2-E8	33119-36020-	1-A6
19850-68050-	1-H3	22327-77021-	1-H4	23619-46010-	1-A4	27333-57060-	1-I3	-45050-	2-E8	33122-60010-	1-G6
-68060-	1-H3	-77130-	1-H4	23620-68010-	1-A4	27350-56110-	1-J3	-61010-	2-E8	33124-36010-	1-M6
19871-56020-	1-H3	22333-56040-	1-H4	23624-54020-	1-A4	27351-56013-	1-J3	-61030-	2-E8	33131-60030-	1-A6
22100-58022-	1-C4	22336-68010-	1-H4	23628-46010-	1-A4	27353-56390-	1-J3	28897-38010-	2-E8	-60050-	1-A6
-58032-	1-C4	22354-77050-	1-B5	23629-46010-	1-A4	-57070-	1-J3	-45040-	2-E8	33132-36010-	1-A6
22102-77021-	1-D4	22355-36010-	1-B5	23631-46010-	1-A4	27356-54170-	1-J3	-54020-	2-E8	-60020-	1-A6
22103-48030-	1-D4	22361-76010-	1-H4	23632-46010-	1-A4	27371-56070-	1-J3	29300-56070-	1-M3	33142-60020-	1-M5
22104-77020-	1-D4	22362-76010-	1-H4	23633-46010-	1-A4	27372-56070-	1-J3	29311-76010-	1-M3	-60030-	1-A7
22105-58010-	1-D4	22363-76010-	1-H4	23634-46010-	1-B4	27373-57070-	1-J3	29331-56070-	1-M3	33151-60010-	1-A6
22106-46010-	1-D4	22364-76010-	1-H4	23635-46010-	1-B4	-57120-	1-J3	29369-56070-	1-M3	33201-36030-	1-H6
22114-48030-	1-D4	22378-76010-	1-H4	23636-46010-	1-B4	27388-57070-	1-J3	31111-60130-	1-M5	33202-60030-	1-H6
22115-77020-	1-D4	22408-68010-	1-H4	23637-46010-	1-B4	27410-56390-	1-J3	-60140-	1-M5	-60031-	1-H6
22116-46010-	1-D4	22442-77130-	1-H4	23638-46010-	1-B4	-57070-	1-J3	-60180-	1-M5	33203-60010-	1-H6
22131-77020-	1-D4	-77131-	1-H4	23639-46010-	1-B4	27411-57060-	1-J3	-60190-	1-M5	33211-36011-	1-G6
22142-77020-	1-D4	22449-48030-	1-I4	23641-46010-	1-B4	27412-57060-	1-J3	31126-60030-	1-D5	33212-36020-	1-G6
22143-77020-	1-D4	22457-58010-	1-H4	23642-46010-	1-B4	27441-56090-	1-J3	31204-60080-	1-D5	33213-60050-	1-G6
22144-46010-	1-E4	22501-77021-	1-J4	23643-46010-	1-B4	27700-57050-	1-J3	31210-36100-	1-D5	-60051-	1-G6
22145-46010-	1-E4	22510-56040-	1-J4	23644-46010-	1-B4	-57060-	1-J3	31231-60080-	1-D5	33214-60021-	1-G6
22146-56010-	1-E4	22512-77020-	1-J4	23645-46010-	1-B4	27790-13010-	2-C9	31232-60020-	1-D5	33222-36030-	1-H6
22147-77020-	1-E4	22513-77020-	1-J4	23646-46010-	1-B4	-57010-	2-C9	31236-60030-	1-D5	33223-36020-	1-H6
22148-46010-	1-E4	22515-77021-	1-J4	23647-46010-	1-B4	28011-54010-	1-K3	31250-36280-	1-D5	33225-36030-	1-H6
22149-76010-	1-E4	22518-56010-	1-J4	23648-46010-	1-B4	28100-56180-	1-K3	-36281-	1-D5	33226-60010-	1-H6
22150-67010-	1-D4	-56011-	1-J4	23649-46010-	1-B4	-56181-	1-K3	-60090-	1-D5	33241-60050-	1-H6
22155-76010-	1-E4	-56012-	1-J4	23651-46010-	1-B4	-56190-	1-K3	31301-60100-	1-F5	33242-60030-	1-H6
22156-76010-	1-E4	-56013-	1-J4	23652-46010-	1-B4	28115-56180-	1-K3	-60101-	1-F5	33243-60070-	1-H6
22157-58023-	1-E4	-77020-	1-J4	23654-46010-	1-B4	28118-77090-	1-K3	31321-14020-	1-C10	-60071-	1-H6
-48024-	1-E4	22519-48010-	1-J4	23701-56030-	1-C4	28119-77090-	1-K3	31401-60020-	1-H5	33244-60010-	1-H6
22161-76010-	1-E4	22521-77021-	1-J4	23702-56030-	1-C4	28120-47040-	1-K3	31402-20010-	1-H5	-60011-	1-H6
22162-76010-	1-E4	22522-77020-	1-K4	23703-56020-	1-C4	-77090-	1-K3	-30030-	1-H5	33245-60031-	1-H6
22163-76010-	1-E4	22524-77021-	1-K4	23704-56020-	1-C4	28130-54010-	1-K3	31404-36020-	1-H5	-60032-	1-H6
22164-76010-	1-E4	22525-77020-	1-K4	23741-56010-	1-C4	28139-47070-	1-K3	31410-60290-	1-H5	33251-60021-	1-I6
22165-76010-	1-E4	22526-77020-	1-K4	23760-56022-	1-B4	-77110-	1-L3	31426-30011-	1-H5	-60022-	1-I6
22166-76010-	1-E4	22527-56010-	1-K4	23770-56050-	1-B4	28140-77090-	1-L3	31430-60030-	1-J5	-60030-	1-I6
22173-46010-	1-E4	22528-77020-	1-K4	-56051-	1-B4	28150-56180-	1-L3	31436-60040-	1-J5	-60031-	1-I6
22174-47010-	1-E4	22529-67010-	1-K4	-56052-	1-B4	-56181-	1-L3	31437-60060-	1-J5	33261-60020-	1-I6
22177-56042-	1-E4	22535-46010-	1-K4	23801-56060-	1-C4	-56190-	1-L3	31440-60040-	1-J5	-60021-	1-I6
22178-56011-	1-H4	22610-58010-	1-L4	23802-56040-	1-C4	28160-47040-	1-L3	31449-60010-	1-J5	33280-60010-	1-I6
22181-56040-	1-E4	22611-46010-	1-F4	23930-58050-	1-A5	-77090-	1-L3	3151-60070-	1-H5	33306-36020-	1-D6
22182-46010-	1-E4	22614-56020-	1-L4	26100-58022-	1-B5	28165-77090-	1-L3	31453-22010-	1-H5	-60010-	1-D6
22183-46010-	1-E4	22615-56040-	1-L4	26111-58022-	1-B5	28222-77090-	1-L3	-35010-	1-H5	33309-60040-	1-L6
22184-46010-	1-E4	22616-56030-	1-L4	26113-58021-	1-B5	28228-56080-	1-L3	31454-30030-	1-H5	-60070-	1-L6
22185-46010-	1-E4	22626-56050-	1-L4	-68012-	1-B5	28229-56080-	1-L3	31458-60111-	1-J5	33311-60080-	1-D6
22186-46010-	1-E4	22680-48062-	1-H4	26114-76010-	1-B5	28254-77090-	1-L3	31459-60070-	1-H5	-60110-	1-D6
-48010-	1-E4	22686-48061-	1-I4	26115-76010-	1-B5	28300-54070-	2-C9	31470-60120-	1-K5	-60111-	1-D6
22187-46010-	1-E4	22692-56041-	1-I4	26116-76010-	1-B5	-56020-	2-C9	31473-60100-	1-K5	33318-36012-	1-D6
22188-46010-	1-F4	22693-77130-	1-I4	26118-48014-	1-B5	28521-57051-	2-C9	-60130-	1-K5	-60010-	1-D6

B15**LAND CRUISER Hardtop U.S.A.****PRODUCTION FRAME NUMBER REFERENCE LIST**

Applica- ble Model	Production Date	8401	8402	8403	8404	8405	8406	8407	8408	8409	8410	8411	8412
	Assembly Line												
BJ70	TMC Honsya Plant											0000001	0000476

Applica- ble Model	Production Date	8501	8502	8503	8504	8505	8506	8507	8508	8509	8510	8511	8512
	Assembly Line												
BJ70	TMC Honsya Plant	0000904	0001213	0001629	0001992	0002310	0002708	0003042	0003477	0003752	0004000	0004197	0004378

Applica- ble Model	Production Date	8601	8602	8603	8604	8605	8606	8607	8608	8609	8610	8611	8612
	Assembly Line												
BJ70	TMC Honsya Plant	0004591	0004751	0004944	0005125	0005312	0005472	0005611	0005770	0005908	0006049	0006268	0006607

Applica- ble Model	Production Date	8701	8702	8703	8704	8705	8706	8707	8708	8709	8710	8711	8712
	Assembly Line												
BJ70	TMC Honsya Plant	0006742											

MARK & ABBREVIATION LIST

B16

(1) Abbreviations

Mark	Definition	Mark	Definition	Mark	Definition	Mark	Definition
..	Among	ACV	Air Control Valve	GS	Japan Storage & Ferry Company Limited	LH	Left-hand
,	And	AI	Air Injection	GT	GT type	LHD	Left-hand Drive
+	And (Plus)	ARAKAWA	Arakawa Auto Body Company Limited	GTS	GT-S type	LPB	Less Passive Belt
-	Excluded (Minus)	ASCO	Aisin Seiki Company Limited	HA	High Altitude Specification	LT	LT type
#	All series	ASSY	Assembly	HAC	High Altitude Compensator	LSD	Limited Slip Differential
X	All series (All)	ASV	Air Switching Valve	HDX	Hi-deluxe type	LWR	Lower
1SR	First	ATM	Automatic Transmission	HLF	0.5 ton	M	Meters
2D	2-door	B-	Brownish ...	HT	Hardtop	-M	 Metallic
2DS	2-door Sedan	BN	Bench seat	HVY	Heavy	MARUKO	Maruko Keihoki Company Limited
2WD	2-door Station Wagon	BRIDGESTONE	Bridgestone Company Limited	ID	Inside Diameter (mm)	MATSUSHITA	Matsushita Electric Industrial Company Limited 
2FC	2-speed Automatic Transmission, Floor Shift	BRK	Brake	IKI	Ichikoh Industries Limited	M/C	Master Cylinder
2HC	2-speed Automatic Transmission, Column Shift	BSTR	Booster	IM-FB	Imitation Fabric	MM	Millimeters
2NE	Second	EVSU	Bimetal Vacuum Switching	IN	Inches	MTM	Manual Transmission
3D	3-door	CBR	Carburetor system	ISO	International Organization for Standardization	MURAKAMI	Murakami Kaimeido Company Limited 
3DS	3-door Sedan (Hatch-back)	CBU	Completely Built Unit	IV	Incomplete Vehicles	N	Number of teeth
3FC	3-speed Automatic Transmission, Floor Shift	CITIZEN	Rhythm Watch Company Limited	IV1	Chassis & Windshield	NACHI	Fujikoshi Limited
3H	3-speed Manual Transmission, Column Shift	CM	Centimeters	IV3	Chassis & Cab	NIHON	Nihon Thermostat Company Limited
3HC	3-speed Automatic Transmission, Column Shift	CM2	Centimeters square	JECO	Jeco Company Limited 	NOK	Nippon Oilseal Industry Company Limited
3RD	Third	CND	For Canada	JKC	Jidosha Kiki Company Limited	NSK	Nippon Seiko Company Limited
3QT	0.75 ton	CP	Coupe	KAYABA	Kayaba Industry Company Limited	OD	Outside Diameter (mm)
4D	4-door	CR-PLATED	Chrome Plated	KCAL	Kilo Calorie	O/S	Oversize
4DS	4-door Sedan	CTR	Center	K-FB	Knit Fabric	P	Pitch
4DW	4-door Station Wagon	CVT	Convertible	K-TY	Knit Tape Yarn	P-	Purplish ...
4F	4-speed Manual Transmission, Floor Shift	CW	Coil Winding	KG	Kilograms	P & B	Proportioning & By-pass Valve
4FC	4-speed Automatic Transmission, Floor Shift	D-	Dark ...	KG/CM2	Kilograms per centimeter square	PCV	Positive Crankcase Ventilation System
4H	4-speed Manual Transmission, Column Shift	DENSO	Nippondenso Company Limited 	KM	Kilometers	PF	Perforated foam coated vinyl leatherette
4TH	Fourth	DIFF	Differential	KOBE	Shinkobe Electric Machinery Company Limited	PIC	Pickup
5D	5-door	DLX	Deluxe type	KOITO	Koito Manufacturing Company Limited	PS	Power Steering
5DS	5-door Sedan (Hatch-back)	DSL	Diesel	KOKI	Toyoda Machine Works Company Limited (Toyoda Koki)	PTO	Power Take-off
5F	5-speed Manual Transmission, Floor Shift	DUNLOP	Dunlop Rubber Company (Japan) Limited	KOYO	Koyo Seiko Company Limited	PV	Proportioning Valve
5TH	Fifth	DX	DX type (Deluxe type)	KUZEH	Kuzeh Company Limited	R	Ratio
6F	6-speed Manual Transmission, Floor Shift	EDIC	Electronic Diesel Injection Control	KW	Kilowatts	RB	With Roll bar
&	And	EFI	Electronic Fuel Injection System	L	Length (mm)	RCB	Regular Cab
A	Amperes	EGR	Exhaust Gas Recirculation System	L-	Light	REP	Repair
ABV	Air By-pass Valve	EGR-VM	EGR Vacuum Modulator	LB	Liftback	RH	Right-hand
		ESC	Electronic Skid Control	LE	Pounds	RHD	Right hand Drive
		EXCL/	Exclude	LG	LG type	RR	Rear
		FB	Fabric			S	Screw Length (mm)
		FR	Front				
		FUJI-THOMSON	Fuji-Thomson Company Limited				
		G	Grams				
		G-	Greenish ...				
		GL	GL type				

(U.S.A. 1/2)


FIG.51-52 SUSPENSION CROSSMEMBER & UNDER
COVER

2-C1

GENUINE TOYOTA PARTS

M74-13-0054

(8411-)

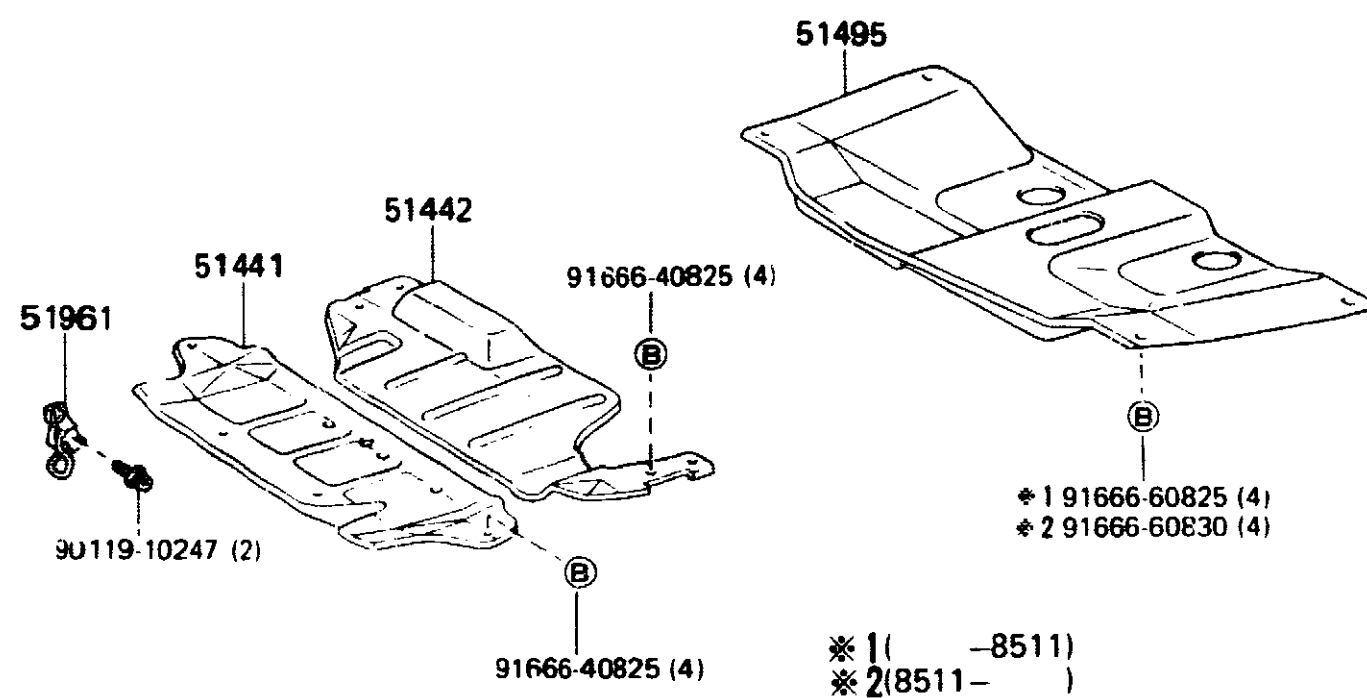

MB H620-C

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	51-52	SUSPENSION CROSSMEMBER & UNDER COVER					
8411-	BJ70	COVER, ENGINE UNDER, NO.1		51441			
				51405-60050-	1	81	
8411-8510	BJ70	COVER, ENGINE UNDER, NO.2		51442			
				51442-60030- (51442-60031-	1	81	100
8510-	BJ70			51442-60031-	1	101	
8411-	BJ70	COVER, TRANSMISSION UNDER		51495			
				51495-60130-	1	81	
8411-	BJ70	HOOK, NO.1		51961			
				51961-60050-	1	81	

FIG. 55-51

GENUINE TOYOTA PARTS

2-C2

M74-15-0659


GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE FROM UP TO
FIG.	55-51	INSTRUMENT PANEL & GLOVE COMPARTMENT				
	55042A	REINFORCEMENT SUB-ASSY, CLUSTER FINISH PANEL				
8411-	BJ70	GRAY		55042-90K01-03	1	81
8411-	BJ70	BEIGE		55042-90K01-05	1	81
	55301	PANEL SUB-ASSY, INSTRUMENT				
8411-8608	BJ70	W/O ACCESSORY METER, GRAY		55301-90K03-03	1	81 140
8411-8608	BJ70	W/O ACCESSORY METER, BEIGE		55301-90K03-05	1	81 140
8411-8608	BJ70	W/ACCESSORY METER, GRAY		55301-90K08-03	1	81 140
8411-8608	BJ70	W/ACCESSORY METER, BEIGE		55301-90K08-05	1	81 140
8608-	BJ70	W/O ACCESSORY METER, GRAY		55301-90K22-03	1	141
8608-	BJ70	W/O ACCESSORY METER, BEIGE		55301-90K22-05	1	141
8608-	BJ70	W/ACCESSORY METER, GRAY		55301-90K24-03	1	141
8608-	BJ70	W/ACCESSORY METER, BEIGE		55301-90K24-05	1	141
	55308B	BRACE SUB-ASSY, INSTRUMENT PANEL TO COWL, NO. 3				
8411-8504	BJ70	GRAY		55308-90K01-03 (55308-90K01-01)	1	81
8411-8504	BJ70	BEIGE		55308-90K01-05 (55308-90K01-01)	1	81
8504-	BJ70	BLACK		55308-90K01-01	1	
	55331	REINFORCEMENT, INSTRUMENT PANEL				
8411-	BJ70			55305-90K00-	1	81
	55354	BRACE, INSTRUMENT PANEL TO FLOOR				
8411-8502	BJ70	GRAY		55309-90K00-03 (55309-90K00-01)	1	81

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE FROM UP TO
	55354	BRACE, INSTRUMENT PANEL TO FLOOR				
8411-8502	BJ70	BROWN		55309-90K00-06 (55309-90K00-01)	1	81
8502-	BJ70	BLACK		55309-90K00-01	1	
	55355B	PLATE, INSTRUMENT PANEL, RH				
8411-	BJ70	GRAY		55355-90K00-03	1	81
8411-	BJ70	BEIGE		55355-90K00-05	1	81
	55356B	PLATE, INSTRUMENT PANEL, LH				
8411-	BJ70	GRAY		55356-90K00-03	1	81
8411-	BJ70	BEIGE		55356-90K00-05	1	81
	55357A	PROTECTOR, EDGE, NO. 1				
8411-	BJ70			55357-90A00-	1	81
	55401	PANEL SUB-ASSY, INSTRUMENT CLUSTER FINISH				
8411-	BJ70	GRAY		55404-90K00-03	1	81
8411-	BJ70	BROWN		55404-90K00-06	1	81
	55403	HOOD SUB-ASSY, METER				
8411-	BJ70	GRAY		55403-90K00-03	1	81
8411-	BJ70	BROWN		55403-90K00-06	1	81
	55404	SAFETY PAD SUB-ASSY, INSTRUMENT PANEL, UPPER				
8411-	BJ70	W/O ACCESSORY METER, GRAY		55401-90K01-03	1	81
8411-	BJ70	W/O ACCESSORY METER, BROWN		55401-90K01-06	1	81
8411-	BJ70	W/ACCESSORY METER, GRAY		55401-90K03-03	1	81
8411-	BJ70	W/ACCESSORY METER, BROWN		55401-90K03-06	1	81
	55412C	PANEL, INSTRUMENT CLUSTER FINISH, CENTER NO. 1				
8411-8510	BJ70	GRAY		55412-90K03-03 (55412-90K04-03)	1	81 100

(8411-)

GENUINE TOYOTA PARTS

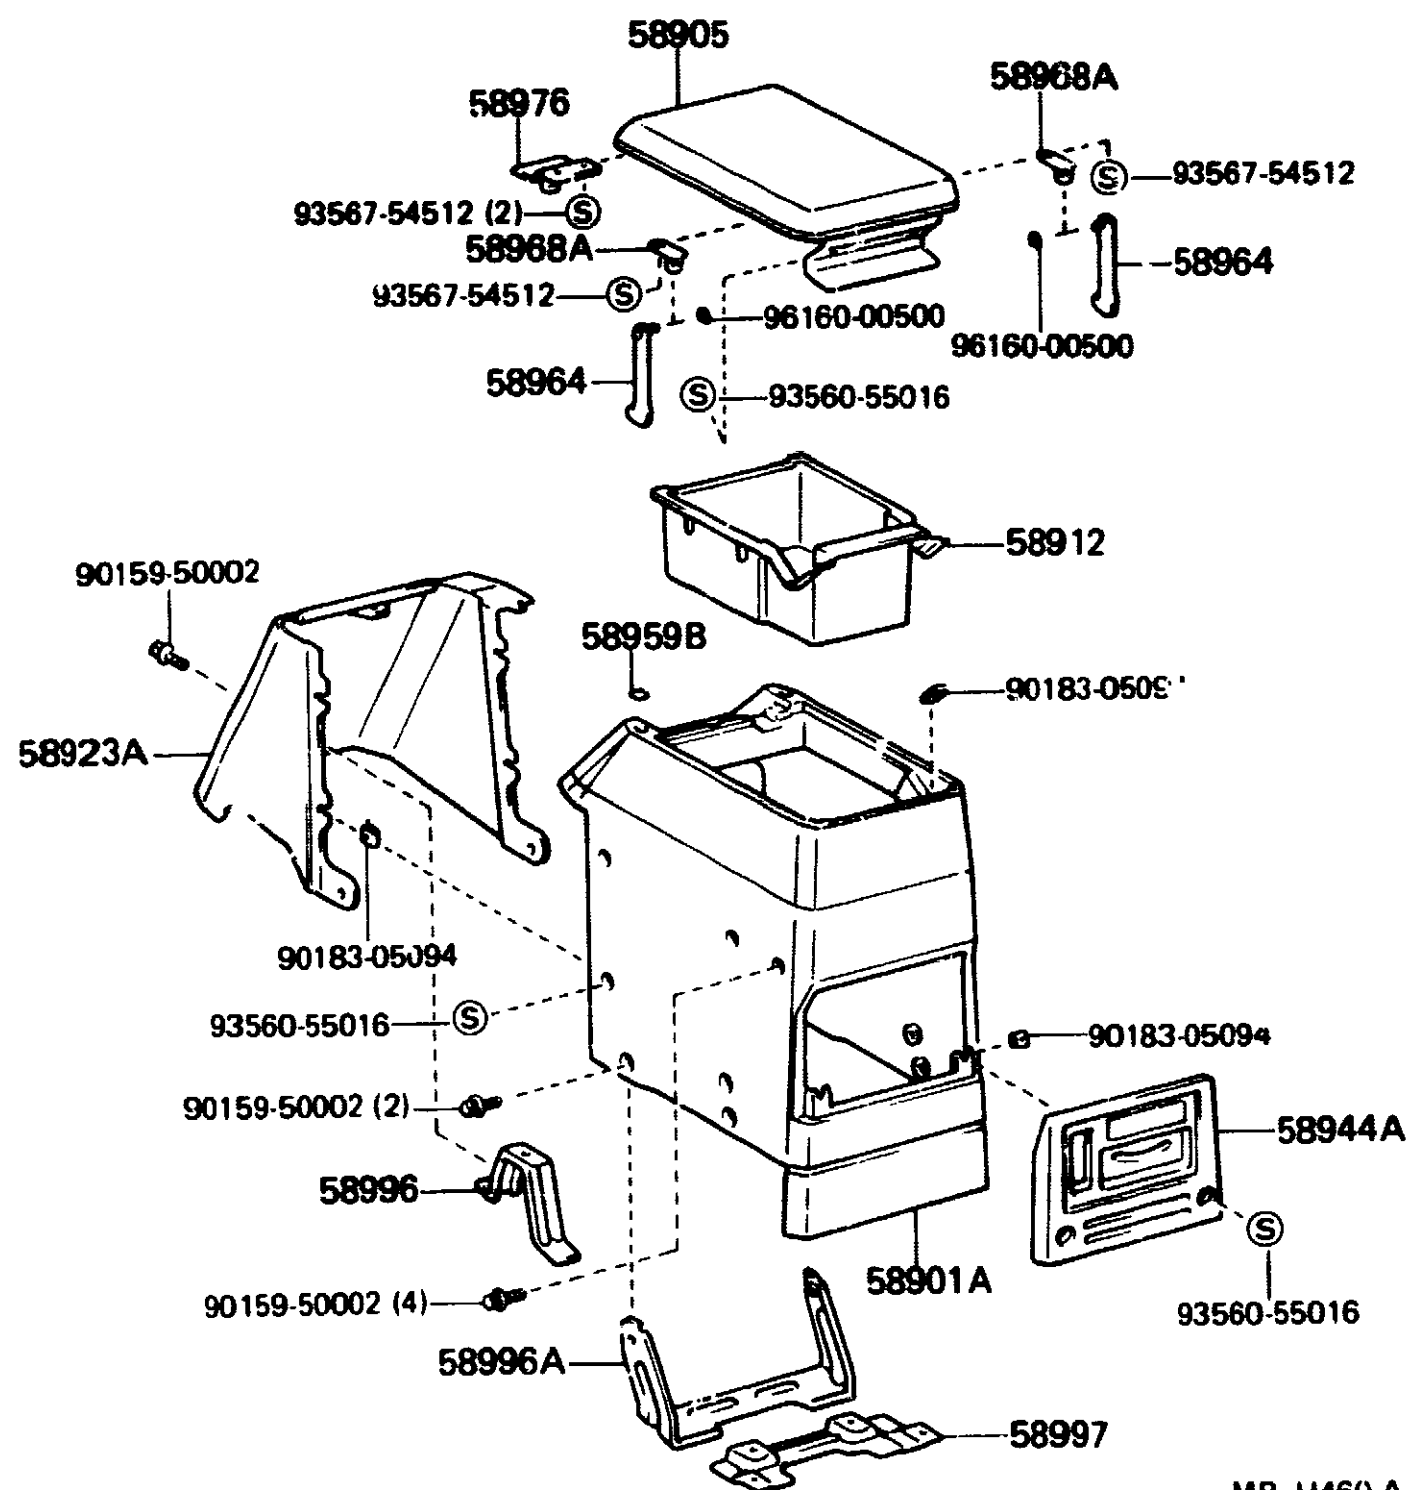

MB H460-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	58-55 CONSOLE BOX & BRACKET						
	58901A	BOX SUB-ASSY, CONSOLE, REAR					
8411-	BJ70	GRAY		58911-90K01-03	1	81	
3411-	BJ70	BROWN		58911-90K01-06	1	81	
	58905	DOOR SUB-ASSY, CONSOLE COMPARTMENT					
8411-	BJ70	GRAY		58951-90K00-03	1	81	
8411-	BJ70	BROWN		58951-90K00-06	1	81	
	58912	BOX, REAR CONSOLE, NO.2					
8411-	BJ70	GRAY		58912-90K00-03	1	81	
8411-	BJ70	BROWN		58912-90K00-06	1	81	
	58923A	PANEL, CONSOLE REAR END					
8411-	BJ70	GRAY		58923-90K01-03	1	81	
8411-	BJ70	BROWN		58923-90K01-06	1	81	
	58944A	COVER, CONSOLE, REAR					
8411-	BJ70	GRAY		58944-90K01-03	1	81	
8411-	BJ70	BROWN		58944-90K01-06	1	81	
	58959B	CUSHION, CONSOLE COMPARTMENT DOOR					
8411-	BJ70			58959-16010-	2	81	
	58964	STOPPER, CONSOLE COMPARTMENT DOOR, NO.1					
8411-	BJ70	RH		58964-30030-	1	81	
8411-	BJ70	LH		58964-90K00-	1	81	
	58968A	BRACKET, CONSOLE DOOR STOPPER					
8411-	BJ7			58968-89101-	2	81	
	58976	STRIKER, CONSOLE COMPARTMENT DOOR LOCK					
8411-	BJ70			58976-20010-	1	81	
	58996	BRACKET, CONSOLE BOX MOUNTING, NO.1					
8411-	BJ70			58995-90K00-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	62314D CONTINUED BJ70	TRIM, FRONT DOOR OPENING, LH BROWN		62313-90K01-06	1	81	
8411-	62411B BJ70	GARNISH, CENTER PILLAR, UPPER RH IVORY		62411-90K00-08	1	81	
8411-	BJ70	W/SUN ROOF IVORY		62411-90K01-08	1	81	
8411-	62412B BJ70	GARNISH, CENTER PILLAR, UPPER LH IVORY		62412-90K00-08	1	81	
8411-	BJ70	W/SUN ROOF IVORY		62412-90K01-08	1	81	
8411-	62471D BJ70	GARNISH, REAR PILLAR, UPPER RH IVORY		62471-90K01-08	1	81	
8411-	BJ70	W/SUN ROOF IVORY		62471-90K02-08	1	81	
8411-	62472D BJ70	GARNISH, REAR PILLAR, UPPER LH IVORY		62472-90K00-08	1	81	
8411-	BJ70	W/SUN ROOF IVORY		62472-90K01-08	1	81	
8411-	62511 BJ70	BOARD, QUARTER INSIDE TRIM, RH GRAY		62510-90K01-03	1	81	
8411-	BJ70	BEIGE		62510-90K01-05	1	81	
8411-	BJ70	W/RR WIPER GRAY		62510-90K06-03	1	81	
8411-	BJ70	W/RR WIPER BEIGE		62510-90K06-05	1	81	
8411-	62511E BJ70	POCKET, QUARTER TRIM GRAY		62607-90K00-03	2	81	
8411-	BJ70	BROWN		62607-90K00-06	2	81	
8411-	62511F BJ70	RETAINER (FOR QUARTER INSIDE TRIM BOARD) TYPE A		67771-30060-	28	81	
8411-	BJ70	TYPE B		67771-90K00-	1	81	



PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	62512 BJ70	BOARD, QUARTER INSIDE TRIM, LH GRAY		62520-90K01-03	1	81	
8411-	BJ70	BEIGE		62520-90K01-05	1	81	
8411-	62820 BJ70	GRILLE, ROOM VENTILATOR GRAY		62821-90K01-03	2	81	
8411-	BJ70	BROWN		62821-90K01-06	2	81	
8411-	64707A BJ70	COVER SUB-ASSY, QUARTER TRIM TOOL GRAY		64707-90K00-03	1	81	
8411-	BJ70	BEIGE		64707-90K00-05	1	81	
8411-	64739 BJ70	COVER, DECK TRIM SIDE WASHER GRAY		64739-90K00-03	1	81	
8411-	BJ70	BROWN		64739-90K00-06	1	81	
8411-	64777B BJ70	PROTECTOR, QUARTER INNER L=318		64777-90K00-	1	81	
8411-	BJ70	L=150		64778-90K00-	1	81	

(8411-)

(8411-)

ILLUST. NO. 10F2


ILLUST. NO. 20F2

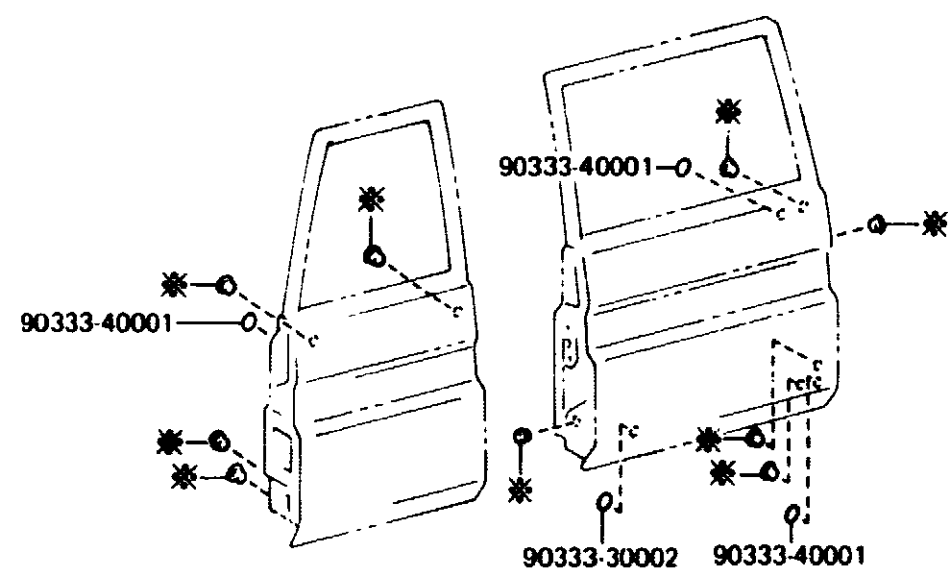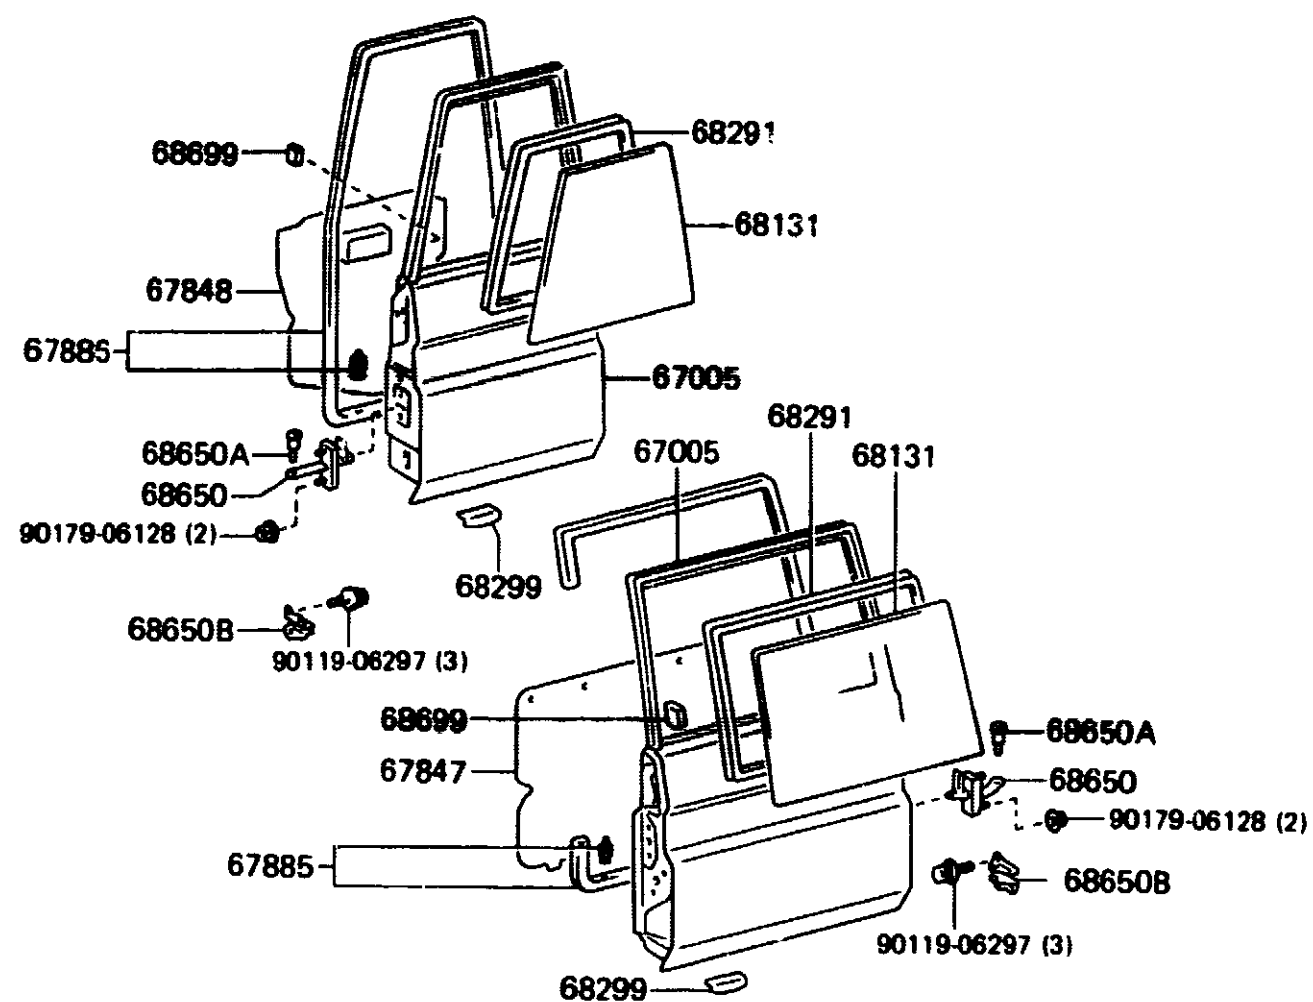

90950-01435	90950-0143E	90950-01011	90950-01398

MB H636-C

MBH636C

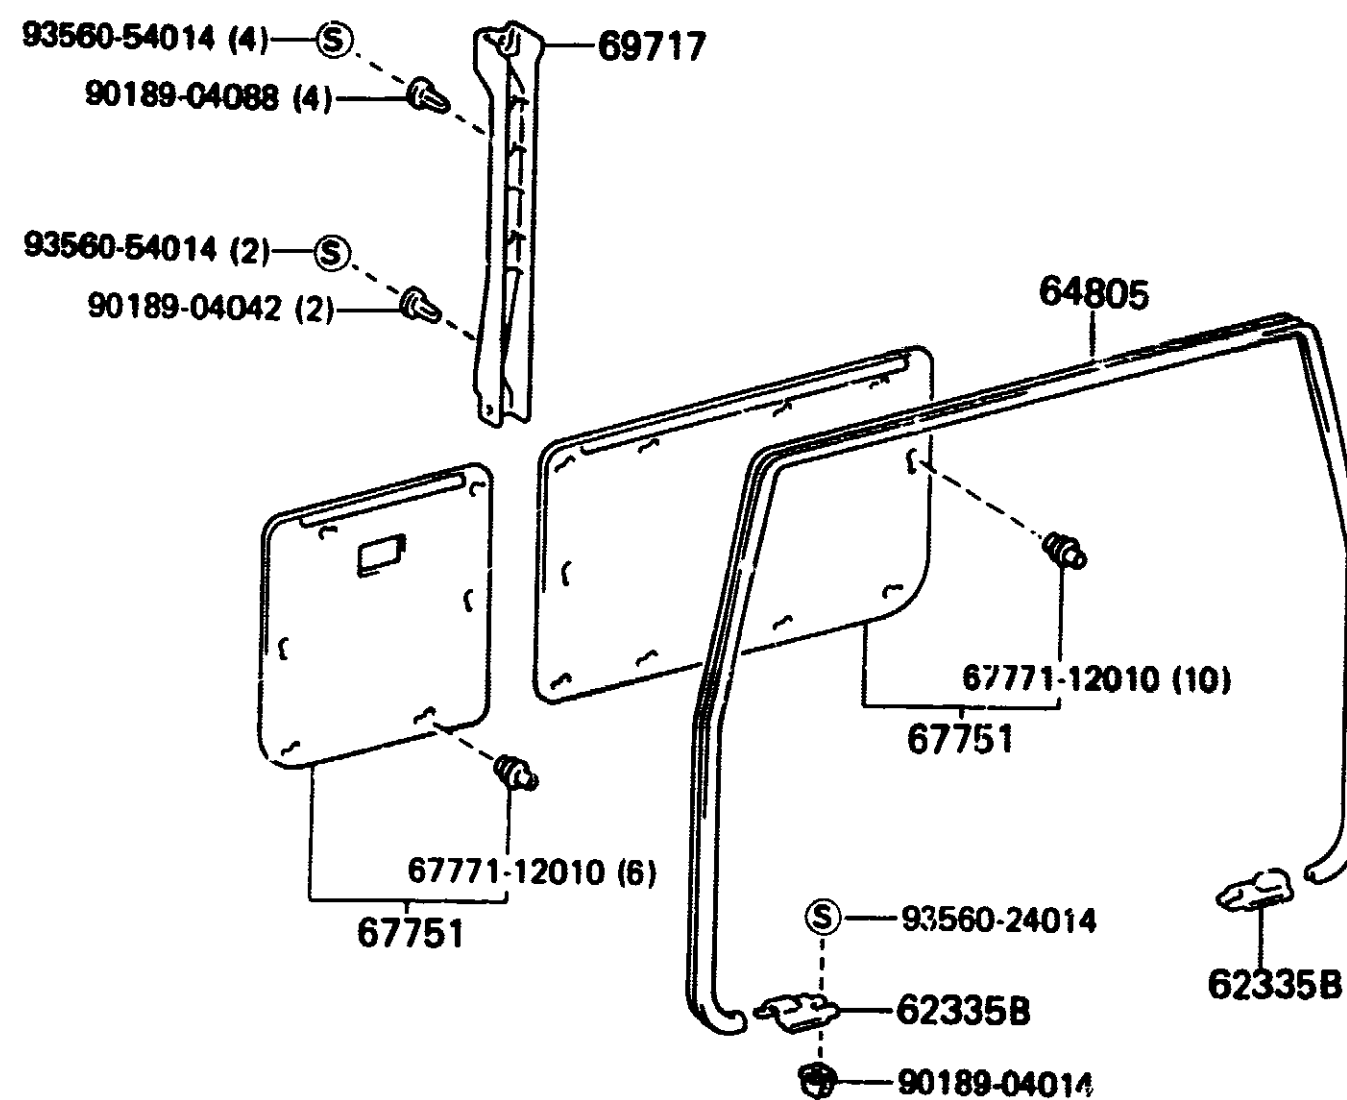


MB H637-A

MBH637A

GENUINE TOYOTA PARTS

(8411-)

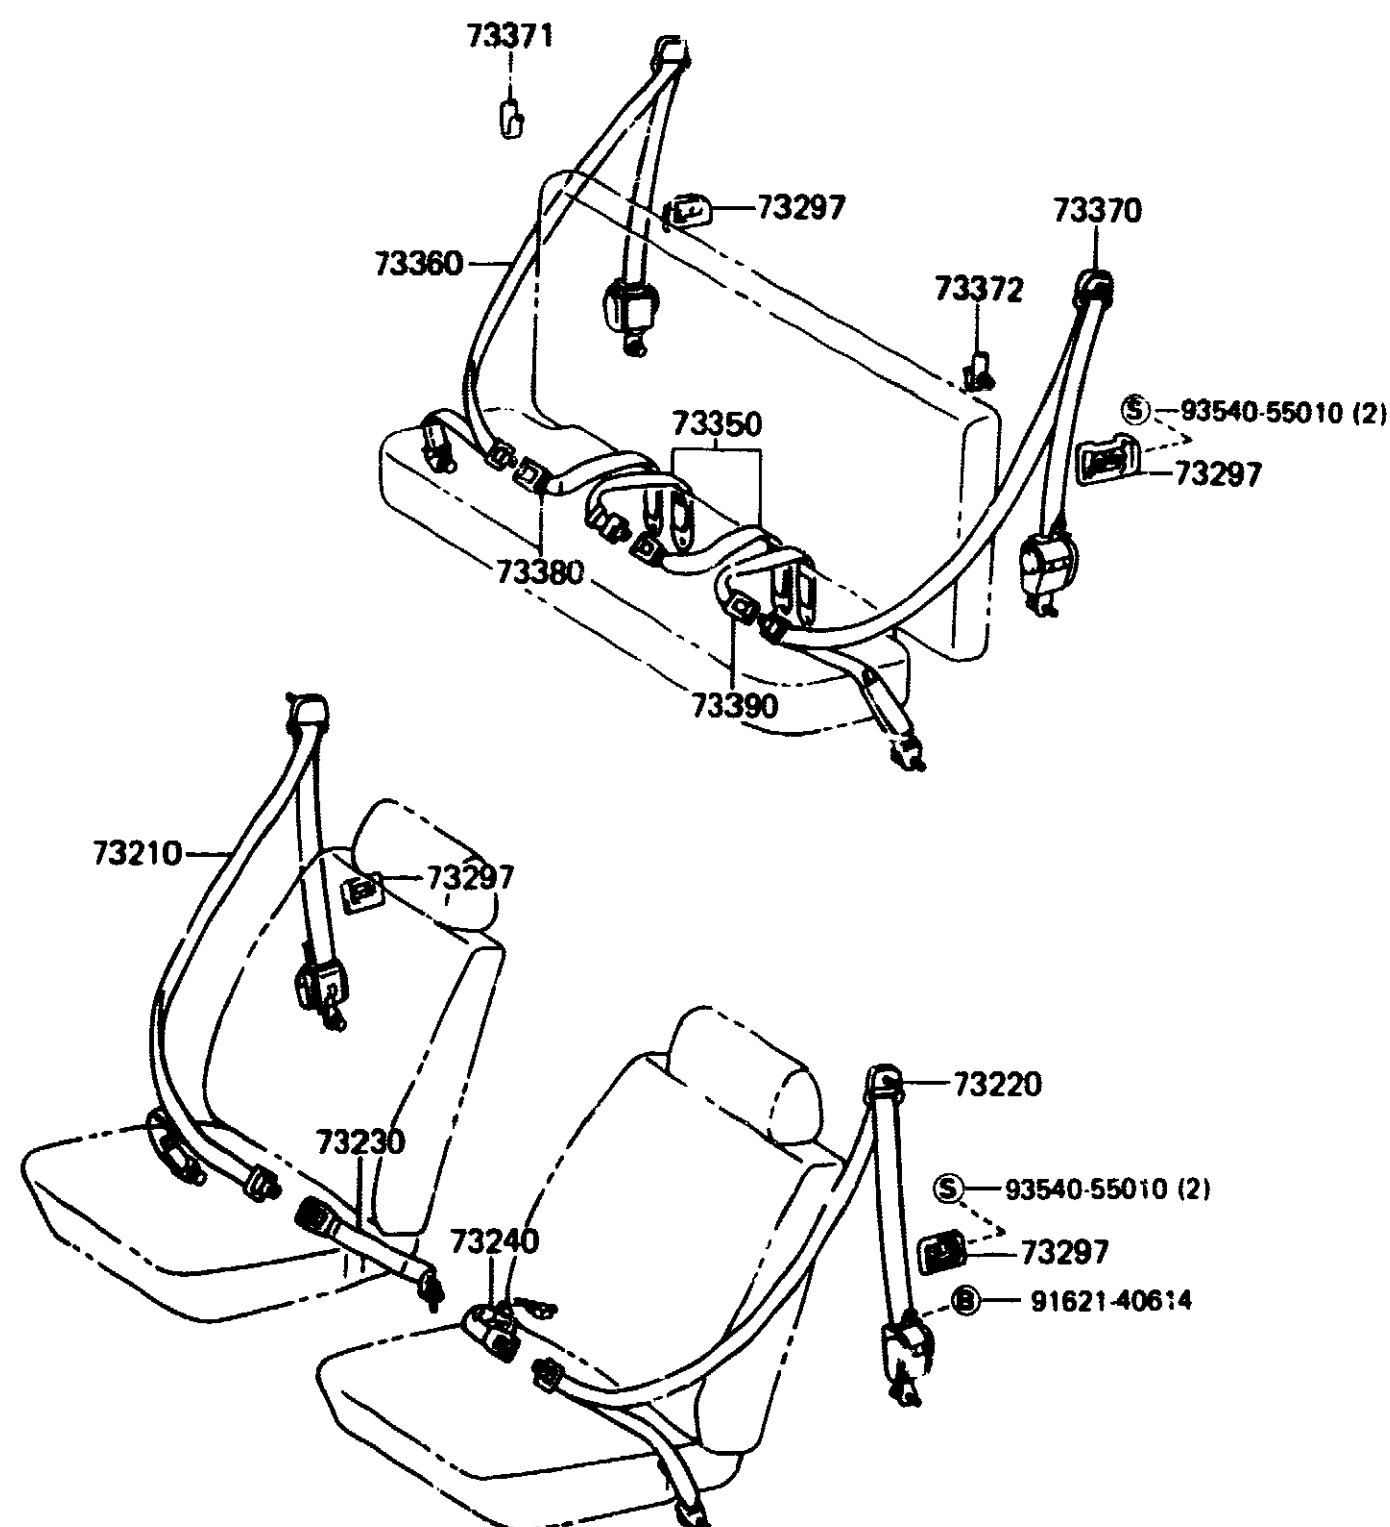


MB H641

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	71-52 SEAT BELT						
	73210	BELT ASSY, FRONT SEAT OUTER, RH					
8411-8510	BJ70	GRAY		73210-90K05-03	1	81	100
8411-8510	BJ70	BROWN		73210-90K05-06	1	81	100
8510-	BJ70	GRAY		73210-90K17-03	1	101	
8510-	BJ70	BROWN		73210-90K17-06	1	101	
	73220	BELT ASSY, FRONT SEAT OUTER, LH					
8411-8510	BJ70	GRAY		73220-90K04-03	1	81	100
8411-8510	BJ70	BROWN		73220-90K04-06	1	81	100
8510-	BJ70	GRAY		73220-90K09-03	1	101	
8510-	BJ70	BROWN		73220-90K09-06	1	101	
	73230	BELT ASSY, FRONT SEAT INNER, RH					
8411-	BJ70	GRAY		73230-90K02-03	1	81	
8411-	BJ70	BROWN		73230-90K02-06	1	81	
	73240	BELT ASSY, FRONT SEAT INNER, LH					
8411-	BJ70	GRAY		73240-90K02-03	1	81	
8411-	BJ70	BROWN		73240-90K02-06	1	81	
	73297	COVER, QUARTER TRIM OR CENTER PILLAR BELT HOLE					
8411-	BJ70	W/FR SEAT BELT, GRAY		73297-90K00-03	2	81	
8411-	BJ70	W/FR SEAT BELT, BROWN		73297-90K00-06	2	81	
8411-	BJ70	W/RR SEAT BELT, RH, GRAY		73298-90K00-03	1	81	
8411-	BJ70	W/RR SEAT BELT, RH, BROWN		73298-90K00-06	1	81	
8411-	BJ70	W/RR SEAT BELT, LH, GRAY		73299-90K00-03	1	81	
8411-	BJ70	W/RR SEAT BELT, LH, BROWN		73299-90K00-06	1	81	

(8411-)

ILLUST. NO. 10F2

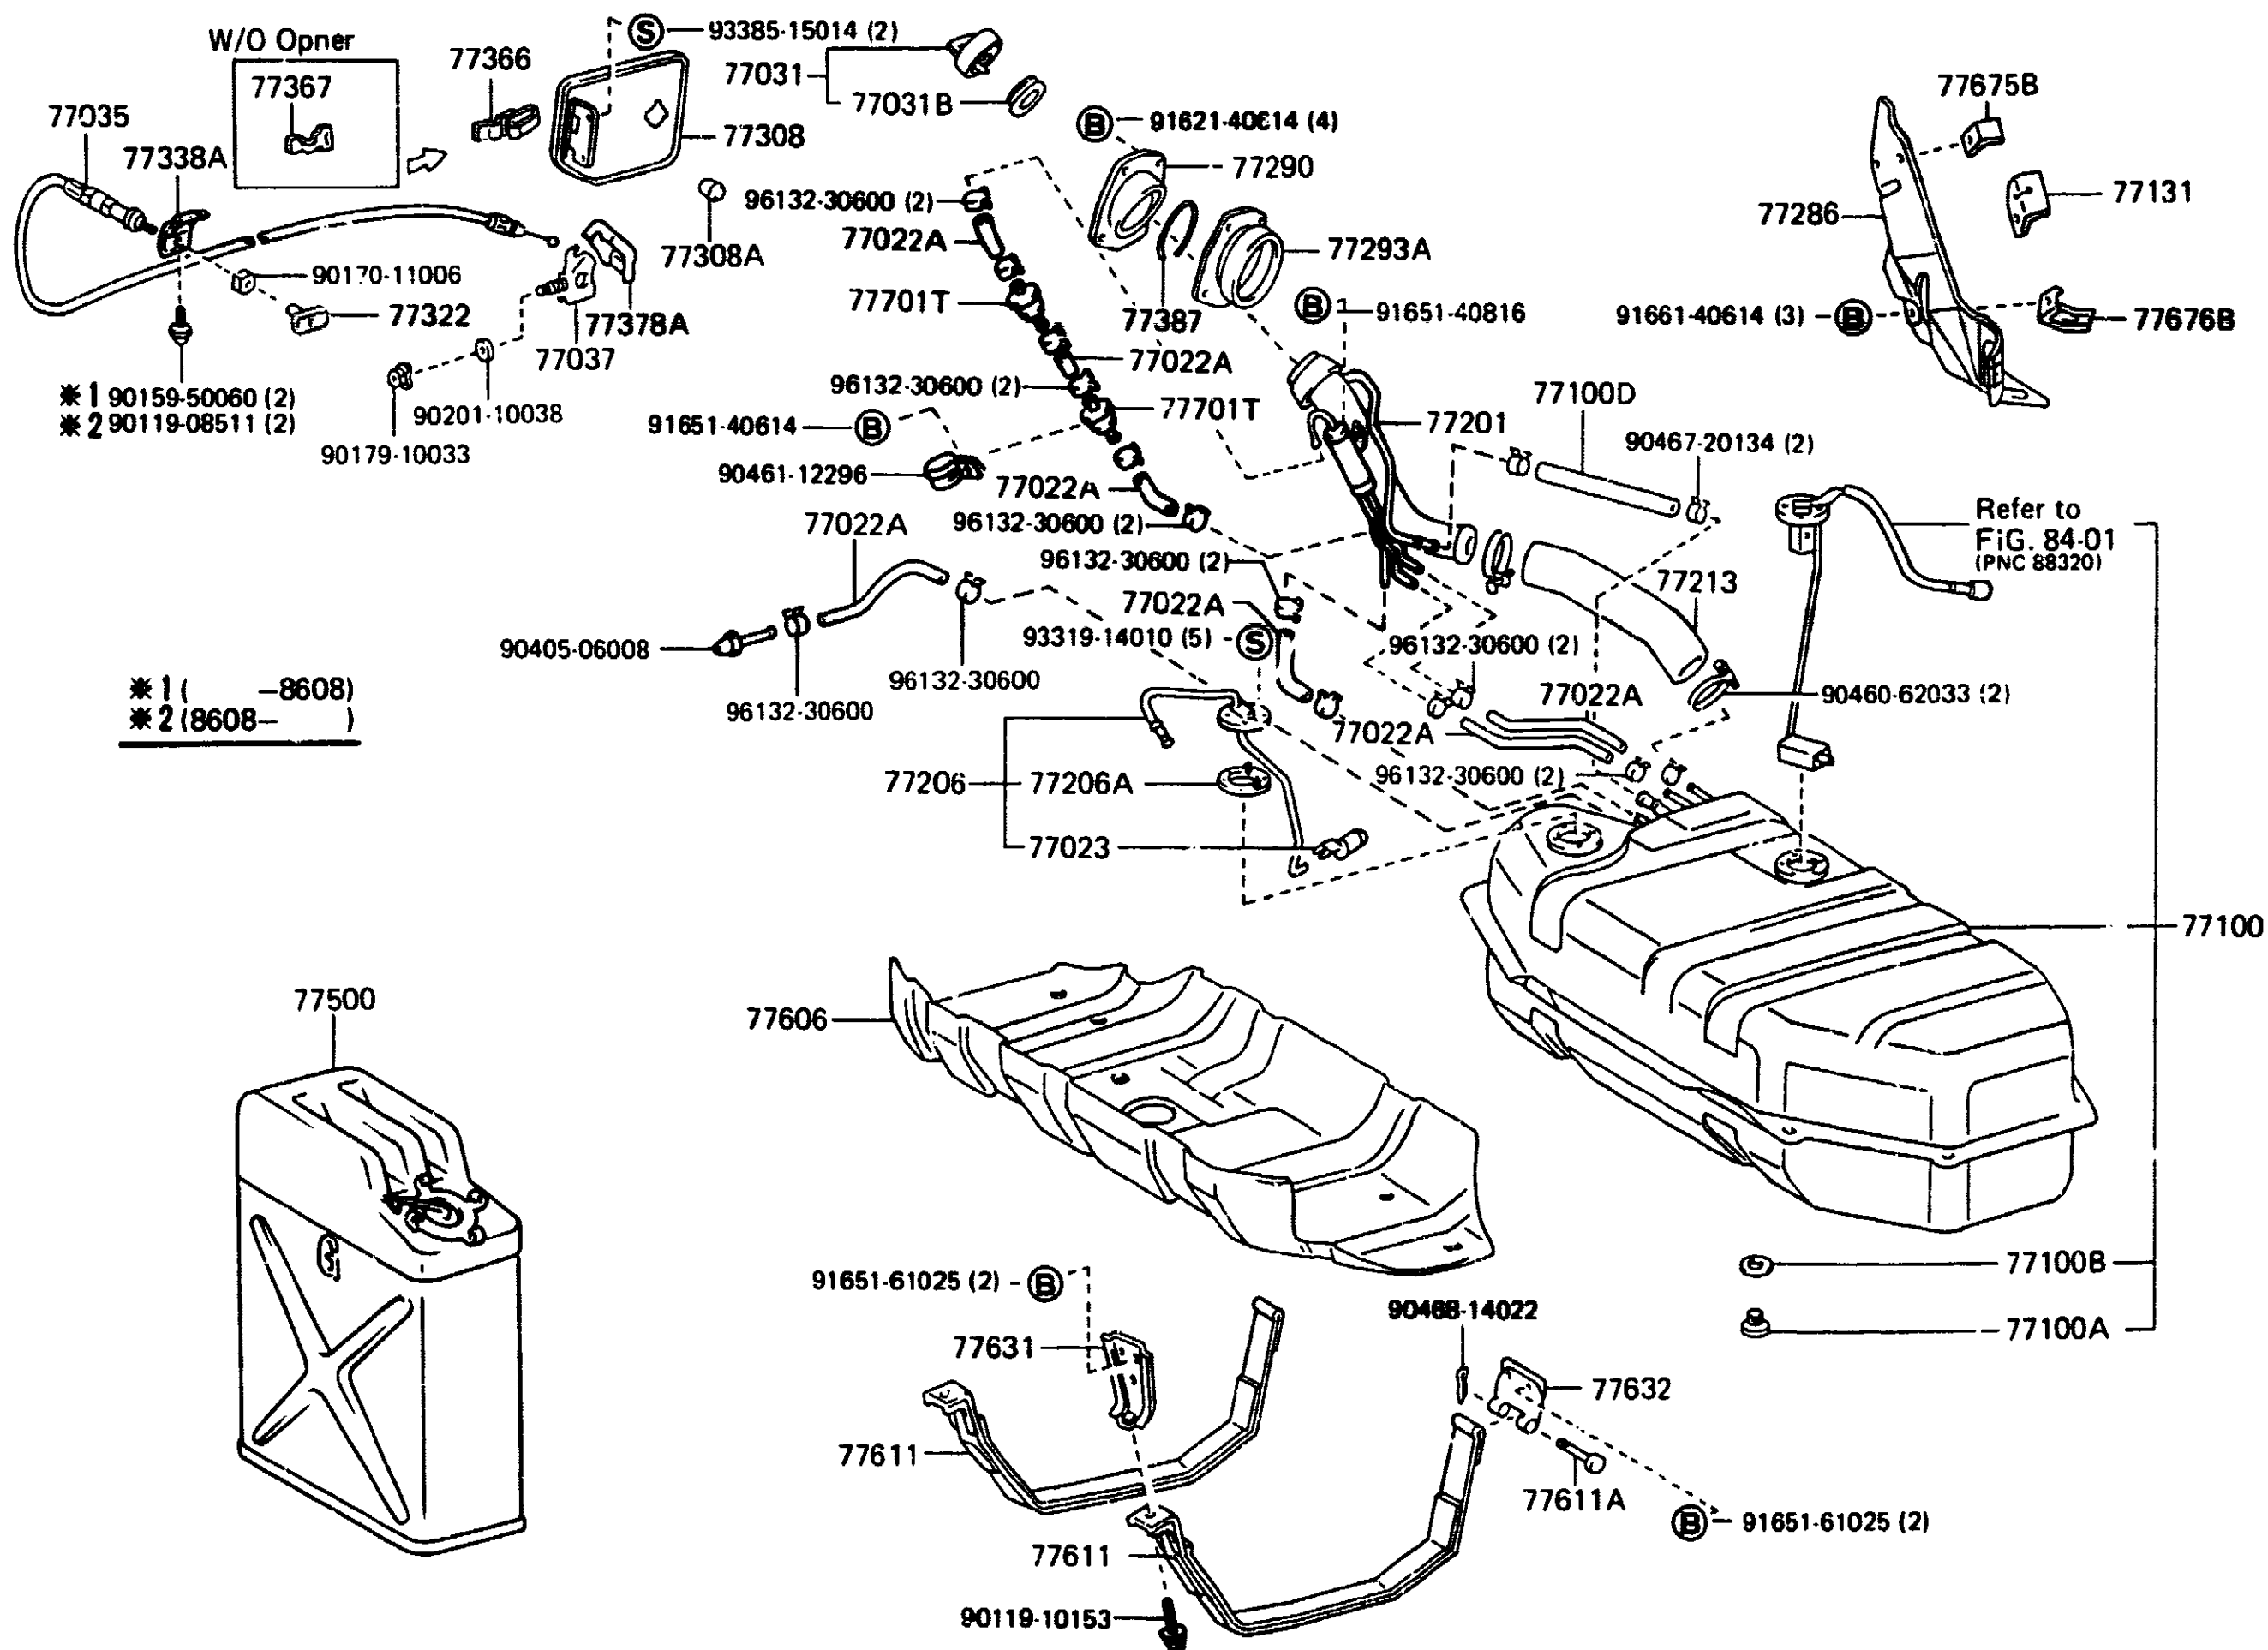

MB K155-B


FIG.81-21 INTERIOR LAMP

2-C8

M74-13-0092

GENUINE TOYOTA PARTS

(8411-)

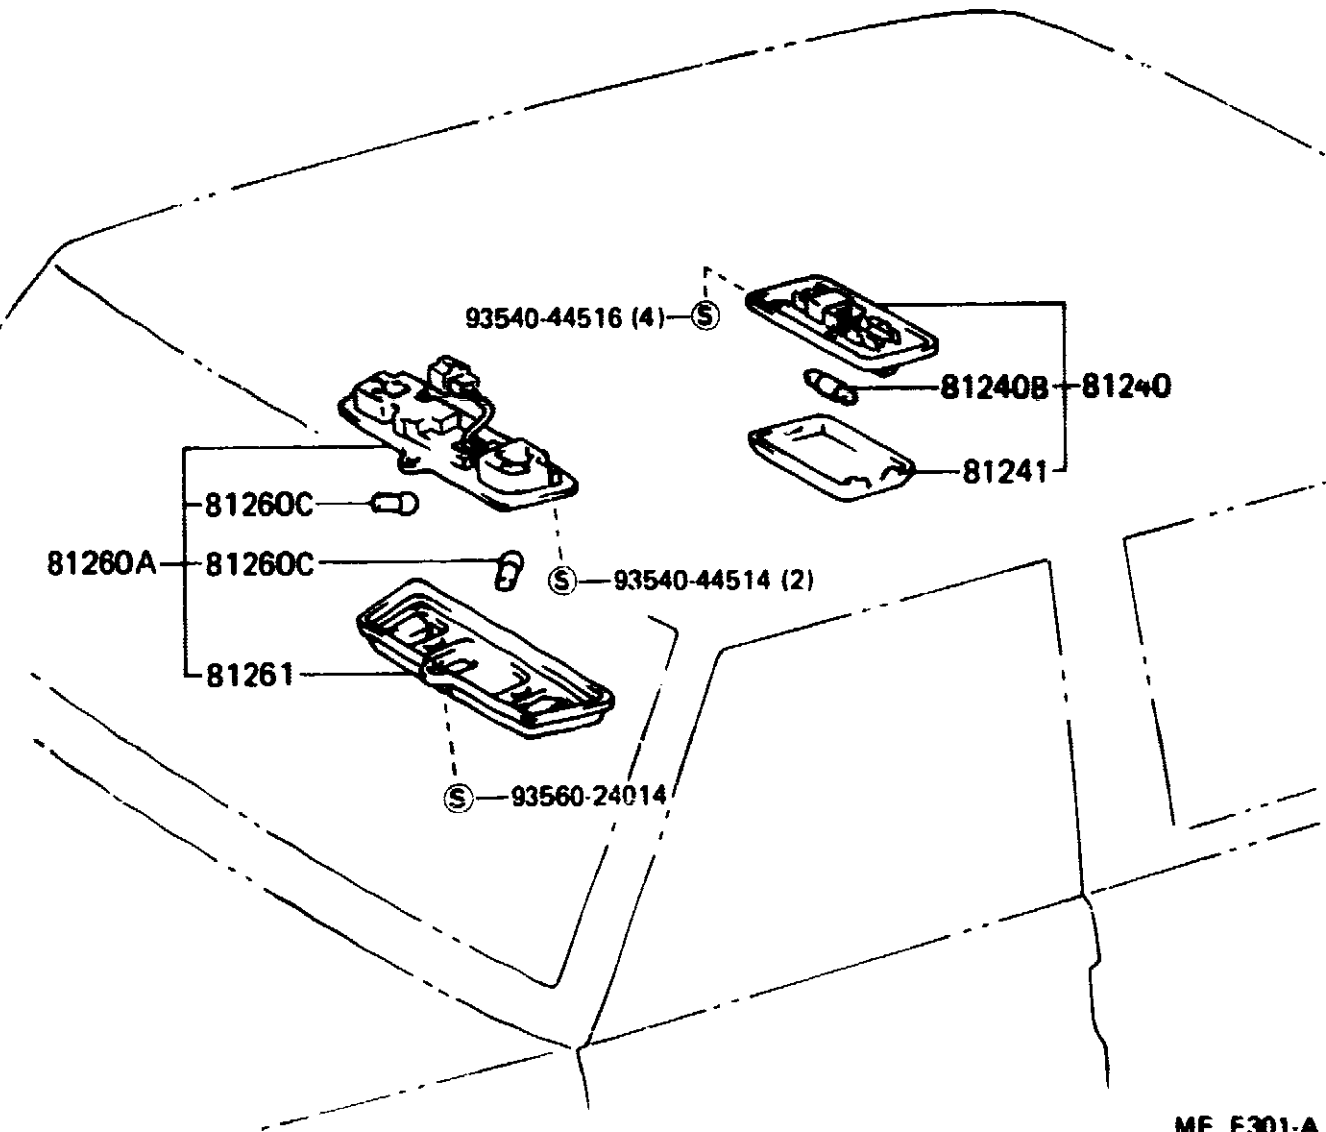

ME F301-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	81-21 INTERIOR LAMP						
	81240	LAMP ASSY, ROOM, NO.1					
8411-8510	BJ70	IVORY		81240-22070-08	1	81	100
8411-8510	BJ70	W/SUN ROOF, IVORY		81240-22080-08 (81240-22081-08)	1	81	100
8510-8607	BJ70	W/SUN ROOF		81240-90K01-	1	101	
8510-	BJ70			81240-90K00-	1	101	
8607-	BJ70	W/SUN ROOF		81240-90K04-	1		
	81240B	BULB, ROOM LAMP, NO.1					
8411-8510	BJ70	12V 10W		99132-12100-	1	81	100
8510-	BJ70	24V 10W		90981-16019-	1	101	
	81241	LENS, ROOM LAMP, NO.1					
8411-	BJ70			81241-20060-	1	81	
	81260A	LAMP ASSY, MAP					
8411-8510	BJ70			81260-90K00-	1	81	100
8510-	BJ70			81260-90K01-	1	101	
	81260C	BULB (FOR MAP LAMP)					
8411-8510	BJ70	12V 8W		90981-12005-	2	81	100
8510-	BJ70	24V 6W		99134-13060-	1	101	
	81261	LENS AND COVER, MAP LAMP					
8411-	BJ70			81261-90K00-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	84-01 SWITCH & RELAY						
	27790	RELAY ASSY, CHARGE LAMP					
8411-8510	3B..BJ70			27790-13010-	1	81	100
8510-	3B..BJ70			27790-57010-	1	101	
	28300	RELAY ASSY, STARTER					
8411-8608	3B..BJ70			28300-54070-	1	81	140
8608-	3B..BJ70			28300-56020-	1	141	
	28521	TIMER, PREHEATING					
8411-8510	3B..BJ70			28521-57060-	1	81	100
8510-8608	3B..BJ70			28521-57061-	1	101	140
8608-	3B..BJ70			28521-57051-	1	141	
	28610	RELAY ASSY, GLOW PLUG					
8411-8510	3B..BJ70	SUB		28610-54090-	1	81	100
8411-8510	3B..BJ70	MAIN		28610-64020-	1	81	100
8510-	3B..BJ70	SUB		28610-54180-	1	101	
8510-	3B..BJ70	MAIN		28610-58020-	1	101	
	28611	COVER, GLOW PLUG RELAY					
8411-	3B..BJ70			28611-64010-	1	81	
	28621	RESISTOR, GLOW PLUG					
8411-8510	3B..BJ70			28621-57021-	1	81	100
8510-	3B..BJ70			28621-57011-	1	101	
	28624	PLATE, CURRENT SENSOR					
8411-	3B..BJ70			28624-57010-	1	81	
	28631	SENSOR, GLOW PLUG CURRENT					
8411-8510	3B..BJ70			28631-57020-	1	81	100
8510-	3B..BJ70			28631-57010-	1	101	
	81980	FLASHER ASSY, TURN SIGNAL					
8411-8510	BJ70			81980-22070- (81980-16010-)	1	81	100

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
	81980	FLASHER ASSY, TURN SIGNAL					
8510-	CONTINUED BJ70			81980-36060-	1	101	
	82600F	FUSE, FUSE BLOCK					
8411-	BJ70	10A		90982-09002-	6	81	
8411-	BJ70	15A		90982-09003-	4	81	
8411-	BJ70	20A		90982-09004-	3	81	
8411-	BJ70	7.5A		90982-09005-	2	81	
	82600G	PLATE, CAUTION (FOR FUSE)					
8411-8510	BJ70			82683-90K00-	1	81	100
8510-8608	BJ70			82683-90K06-	1	101	140
8608-	BJ70			82683-90K12-	1	141	
	82616	PULLER, FUSE					
8411-	BJ70			82616-12010-	1	81	
	82650	BREAKER ASSY, WIRING CIRCUIT, NO. 1					
8411-	BJ70	30A		82650-20011-	1	81	
8411-	BJ70	20A		82650-35010-	1	81	
	83320	GAGE ASSY, FUEL SENDER					
8411-	BJ70			83320-69025-	1	81	
	83361	GASKET, FUEL SENDER GAGE					
8411-8502	BJ70			83361-20030-	1	81	
	83390	SWITCH ASSY, VACUUM WARNING					
8411-	BJ70			83390-30020-	1	81	
	83420	GAGE ASSY, WATER TEMPERATURE SENDER					
8411-	BJ70			83420-20020-	1	81	
	83520	GAGE ASSY, OIL PRESSURE SENDER					
8411-8510	BJ70			83520-60010-	1	81	100
8510-	BJ70			83520-60020-	1	101	

2-C₁₀

GENUINE TOYOTA PARTS

This diagram illustrates the assembly of a fuel system component, likely a fuel line or hose. The main assembly is labeled 86300. It consists of a central tube (86309B) with a flared end (86396) and a bracketed section (86391). A fuel line (82711-22270) is connected to the assembly. A small component (90179-06184) is shown separately. The diagram is labeled ME F322-B.

PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	86-04 ANTENNA						
8411-	+ + 86300 + + ANTENNA ASSY, W/HOLDER			86300-90K01-	1	81	
8411-	+ + 86309B + + POLE SUB-ASSY, PULL TOP ANTENNA			86309-90K01-	1	81	
8411-	+ + 86391 + + HOLDER, ANTENNA			86392-90K00-	1	81	
8411-	+ + 86396 + + NUT, ANTENNA			86396-16020-	1	81	

BOOT - BRACKET

C12

M74-26-0040

BRACKET - BUSH

PART	NAME	LOCATION
BOOT, MASTER CYLINDER		1-E10
BOOT, PARKING BRAKE BELLCRANK		1-K10
BOOT, SHIFT AND SELECT LEVER, NO.1		2-12
BOOT, SHIFT LEVER		1-J6
BOOT, TRANSFER FRONT DRIVE SHIFT		1-F7
BOOT, TRANSFER SHIFT LEVER		2-J2
BOX SUB-ASSY, CONSOLE, REAR		2-C3
BOX, FUEL INLET		2-G3
BOX, REAR CONSOLE, NO.2		2-C3
BRACE SUB-ASSY, INSTRUMENT PANEL TO COWL, NO.3		2-C2
BRACE, HOOD LOCK SUPPORT		2-M1
BRACE, INSTRUMENT PANEL TO FLOOR		2-C2
BRACKET (FOR RADIATOR RESERVE TANK)		1-L2
BRACKET ASSY, STEERING COLUMN, UPPER		1-M8
BRACKET SUB-ASSY, ADJUSTING		1-14
BRACKET SUB-ASSY, BACK DOOR STOPPER		2-F5
BRACKET SUB-ASSY, CAB MOUNTING, NO.1, LH		2-B1
BRACKET SUB-ASSY, CAB MOUNTING, NO.1, RH		2-B1
BRACKET SUB-ASSY, CAB MOUNTING, NO.2, LH		2-B1
BRACKET SUB-ASSY, CAB MOUNTING, NO.2, RH		2-B1
BRACKET SUB-ASSY, ENGINE FRONT MOUNTING, LH		2-B1
BRACKET SUB-ASSY, ENGINE FRONT MOUNTING, RH		2-B1
BRACKET SUB-ASSY, FRONT BUMPER, LH		2-G1
BRACKET SUB-ASSY, FRONT BUMPER, RH		2-G1
BRACKET SUB-ASSY, OIL FILTER		1-G2
BRACKET SUB-ASSY, REAR SPRING FRONT, LH		1-M11
BRACKET SUB-ASSY, REAR SPRING FRONT, RH		1-M11
BRACKET SUB-ASSY, REAR SPRING REAR, LH		1-M11
BRACKET SUB-ASSY, REAR SPRING REAR, RH		1-M11
BRACKET SUB-ASSY, SIDE STEP, NO.2		2-12
BRACKET SUB-ASSY, SIDE STEP, NO.3		2-12
BRACKET SUB-ASSY, SPARE WHEEL CARRIER		2-D1
BRACKET SUB-ASSY, STEERING COLUMN UPPER SUPPORT		1-A9
BRACKET, ACCELERATOR CONTROL CABLE		2-G7
BRACKET, ALTERNATOR, NO.1		1-L1
BRACKET, BELLCRANK		1-K10
BRACKET, BODY MOUNTING		2-B1
BRACKET, CLUTCH BOOSTER MOUNTING		2-F2
BRACKET, CLUTCH MASTER CYLINDER		1-H5
BRACKET, CONSOLE BOX MOUNTING, NO.1		2-C3
BRACKET, CONSOLE BOX MOUNTING, NO.2		2-D3
BRACKET, CONSOLE BOX MOUNTING, NO.3		2-D3
BRACKET, CONSOLE DOOR STOPPER		2-C3
BRACKET, COWL SIDE TRIM, LH		2-B4
BRACKET, DIAPHRAGM CONNECTING		1-H4
BRACKET, ENGINE MOUNTING, FRONT NO.1 LH		1-L1
BRACKET, ENGINE MOUNTING, FRONT NO.1 RH		1-L1
BRACKET, EXHAUST PIPE FRONT (FOR FRONT)		1-D3
BRACKET, FLEXIBLE HOSE, NO.1		1-C11
BRACKET, FLEXIBLE HOSE, NO.1 (FOR CLUTCH)		1-F5
BRACKET, FLEXIBLE HOSE, NO.2		1-C11
BRACKET, FLEXIBLE HOSE, NO.5		1-C11
BRACKET, FRONT SEAT INSIDE		2-12
BRACKET, FRONT SEAT MOUNTING, INSIDE		2-12
BRACKET, FRONT SEAT, FRONT		2-12
BRACKET, FRONT SEAT, OUTSIDE		2-12
BRACKET, FRONT SHOCK ABSORBER, UPPER LH		1-J11
BRACKET, FRONT SHOCK ABSORBER, UPPER RH		1-I11
BRACKET, FRONT SPRING (FOR FRONT LH)		1-I11
BRACKET, FRONT SPRING (FOR FRONT RH)		1-I11
BRACKET, FRONT SPRING (FOR REAR LH)		1-I11
BRACKET, FRONT SPRING (FOR REAR RH)		1-I11
BRACKET, FUEL CONTROL MOTOR		2-G9
BRACKET, FUEL TANK CAP LOCK CONTROL ROD		2-F7

PART	NAME	LOCATION
BRACKET, FUEL TANK FILLER PIPE PROTECTOR, NO.1		2-F7
BRACKET, FUEL TANK FILLER PIPE PROTECTOR, NO.2		2-F7
BRACKET, FUEL TANK FILLER PIPE SUPPORT		2-E7
BRACKET, FUEL TANK, NO.1		2-F7
BRACKET, FUEL TANK, NO.2		2-F7
BRACKET, FUEL TUBE CLAMP		2-L2
BRACKET, INSTRUMENT PANEL TO COWL SIDE, LH		2-F3
BRACKET, INSTRUMENT PANEL TO COWL SIDE, RH		2-F3
BRACKET, LOAD SENSING SHACKLE, NO.1		1-C11
BRACKET, LOAD SENSING VALVE		1-C11
BRACKET, LOWER BACK RAIL, INNER SIDE LH		2-H3
BRACKET, LOWER BACK RAIL, INNER SIDE RH		2-H3
BRACKET, PARKING BRAKE CABLE SUPPORT		1-A10
BRACKET, POWER STEERING IDLE PULLEY		1-E9
BRACKET, PUMP		1-E9
BRACKET, RADIATOR, NO.1		1-M2
BRACKET, RADIO, NO.1		2-A10
BRACKET, RADIO, NO.2		2-A10
BRACKET, REAR BUMPER		2-H1
BRACKET, REAR FLOOR HEAT INSULATOR, NO.2		2-L2
BRACKET, REAR SEAT CUSHION SET, LH		2-L5
BRACKET, REAR SEAT CUSHION SET, RH		2-L5
BRACKET, REAR WASHER TANK, LOWER		2-H3
BRACKET, RELAY		2-E9
BRACKET, RELAY, NO.2		2-E9
BRACKET, SIDE STEP, NO.1		2-12
BRACKET, SLIDING ROOF HOUSING MOUNTING, NO.1		2-F3
BRACKET, SLIDING ROOF HOUSING MOUNTING, NO.2		2-G3
BRACKET, STABILIZER, FRONT		1-J11
BRACKET, STEERING DAMPER		1-M9
BREAKER ASSY, WIRING CIRCUIT, NO.1		2-C9
BRUSH, ALTERNATOR		1-J3
BULB (FOR FRONT TURN SIGNAL LAMP)		2-J7
BULB (FOR LICENSE PLATE LAMP)		2-A8
BULB (FOR MAP LAMP)		2-C8
BULB (FOR REAR COMBINATION LAMP)		2-M7
BULB (FOR REAR WINDOW DEFOGGER SWITCH)		2-E9
BULB (FOR SIDE TURN SIGNAL LAMP)		2-7
BULB, CLINOMETER		2-L8
BULB, COMBINATION METER, NO.1		2-K8
BULB, INDICATOR LAMP		2-M8
BULB, REAR SIDE MARKER LAMP		2-B8
BULB, ROOM LAMP, NO.1		2-C8
BULB, TRANSMISSION CONTROL SWITCH		2-D9
BUMPER ASSY, FRONT		2-G1
BUMPER ASSY, REAR		2-H1
BUMPER SUB-ASSY, FRONT SPRING, NO.1		1-I11
BUMPER SUB-ASSY, FRONT SPRING, NO.2		1-I11
BUMPER SUB-ASSY, REAR SIDE, LH		2-H1
BUMPER SUB-ASSY, REAR SIDE, RH		2-H1
BUMPER SUB-ASSY, REAR SPRING		1-M11
BUMPER, HOOD, FRONT		2-J1
BUMPER, HOOD, REAR		2-J1
BUSH (FOR ACCELERATOR PEDAL ROD)		2-G7
BUSH (FOR ALTERNATOR RECTIFIER END FRAME)		1-J3
BUSH (FOR BRAKE PEDAL)		1-C10
BUSH (FOR CLUTCH MASTER CYLINDER PUSH ROD CLEVIS)		1-F5
BUSH (FOR CLUTCH PEDAL)		1-F5
BUSH (FOR CONNECTING ROD SMALL END)		1-B2
BUSH (FOR FRONT DRIVE SHIFT LINK LEVER)		1-F7
BUSH (FOR FRONT SHOCK ABSORBER)		1-I11
BUSH (FOR FRONT SPRING PIN)		1-H11
BUSH (FOR FRONT SPRING SHACKLE)		1-H11

SHAFT - SPACER

C13

M74-26-0053

SPACER - SPRING

PART	NAME	LOCATION
SHAFT, REVERSE SHIFT FORK	-----	1-H6
SHAFT, SHIFT & SELECT LEVER	-----	1-I6
SHAFT, SPRAIN	-----	1-E4
SHAFT, TRANSFER FRONT DRIVE SHIFT	-----	1-F7
SHAFT, TRANSFER HIGH AND LOW SHIFT FORK	-----	1-F7
SHAFT, TRANSFER IDLER GEAR	-----	1-C7
SHAFT, TRANSFER OUTPUT, FRONT	-----	1-D7
SHAFT, TRANSFER OUTPUT, REAR	-----	1-C7
SHAFT, TRANSFER SHIFT LEVER	-----	1-G7
SHAFT, VANE PUMP	-----	1-B9
SHAFT, 1ST & 2ND SHIFT FORK	-----	1-H6
SHAFT, 3RD & 4TH SHIFT FORK	-----	1-H6
SHAFT, 5TH SHIFT ARM	-----	1-H6
SHAFT, 5TH SHIFT FORK	-----	1-H6
SHEET, HEATER CONTROL NAME	-----	2-M8
SHIELD ASSY, FUEL TANK FILLER PIPE	-----	2-F7
SHIELD, FRONT SEAT SIDE, LH	-----	2-M5
SHIELD, FRONT SEAT SIDE, RH	-----	2-M5
SHIELD, FUEL TANK FILLER PIPE, NO.3	-----	2-F7
SHIELD, STEERING COLUMN HOLE	-----	1-M8
SHIM (FOR TRANSFER OUTPUT SHAFT)	-----	1-C7
SHIM, CYLINDER LINER	-----	1-I1
SHIM, MAIN SPRING	-----	1-H4
SHIM, SLIDING ROOF RAIL	-----	2-M3
SHIM, STEERING KNUCKLE ADJUST, NO.1	-----	1-E11
SHIM, TILT STEERING SUPPORT	-----	1-A9
SHOE KIT, REAR BRAKE	-----	1-J10
SHOE, FR DRIVE SHIFT LINK LEVER (FOR VACUUM MAGNET TYPE)	-----	1-H7
SHOE, FRONT DRIVE SHIFT LINK LEVER (FOR DIRECT TYPE)	-----	1-G7
SHOE, SHIFT ARM	-----	1-H6
SHOE, SLIDING ROOF, FRONT	-----	2-L3
SHROUD SUB-ASSY, FAN	-----	1-M2
SILENCER, BACK DOOR LOCK LINK	-----	2-G5
SILENCER, FRONT DOOR LOCK LINK	-----	2-M4
SILENCER, FRONT SPRING, NO.1	-----	1-I11
SILENCER, FRONT SPRING, NO.2	-----	1-I11
SILENCER, REAR SPRING, NO.1	-----	1-L11
SILENCER, REAR SPRING, NO.2	-----	1-L11
SLEEVE SUB-ASSY, SPEEDOMETER SHAFT (MTM)	-----	1-B6
SLEEVE, FRONT DRIVE CLUTCH	-----	1-D7
SLEEVE, PLUNGER CONTROL	-----	1-D4
SLEEVE, TRANSFER HIGH AND LOW CLUTCH	-----	1-D7
SLEEVE, TRANSMISSION HUB, NO.2	-----	1-E6
SLEEVE, TRANSMISSION HUB, NO.3	-----	1-E6
SLIDER (FOR SPEED CONTROL)	-----	1-I4
SLINGER, FRONT DIFFERENTIAL DRIVE PINION OIL	-----	1-G8
SLINGER, REAR DIFFERENTIAL DRIVE PINION OIL	-----	1-A8
SNAP, BACK DOOR UPPER LOCK ROD	-----	2-G5
SOCKET AND WIRE SUB-ASSY, REAR COMBINATION LAMP, LH	-----	2-M7
SOCKET AND WIRE SUB-ASSY, REAR COMBINATION LAMP, RH	-----	2-M7
SOCKET AND WIRE SUB-ASSY, REAR SIDE MARKER LAMP	-----	2-B8
SOCKET SUB-ASSY, COMBINATION METER BULB	-----	2-K8
SOLENOID ASSY, FRONT DRIVE	-----	2-E9
SPACER (FOR BODY MOUNT NO.1 CUSHION)	-----	2-E1
SPACER (FOR BODY MOUNT NO.2 CUSHION)	-----	2-E1
SPACER (FOR BODY MOUNT NO.3 CUSHION)	-----	2-E1
SPACER (FOR BODY MOUNT NO.5 CUSHION)	-----	2-F1
SPACER (FOR HIGH & LOW SHIFT ROD)	-----	1-G7
SPACER (FOR HORN BUTTON CONTACT PLATE)	-----	1-G9
SPACER (FOR OUTPUT SHAFT)	-----	1-D6
SPACER (FOR TRANSFER OUTPUT SHAFT)	-----	1-C7
SPACER, BACK DOOR WEATHERSTRIP	-----	2-D5
SPACER, BACK DOOR WINDOW FRAME	-----	2-E5
SPACER, DIFFERENTIAL PINION SHAFT	-----	1-B8

PART	NAME	LOCATION
SPACER, FRONT DIFFERENTIAL DRIVE PINION BEARING	-----	1-G8
SPACER, FRONT FENDER	-----	1-K1
SPACER, HORN CONTACT	-----	1-G9
SPACER, INNER REAR VIEW MIRROR	-----	2-E10
SPACER, REAR DIFFERENTIAL DRIVE PINION BEARING	-----	1-A8
SPACER, TRANSFER IDLER GEAR	-----	1-D7
SPACER, TRANSFER INPUT SHAFT	-----	1-D7
SPANNER	-----	1-A1
SPANNER SET	-----	1-A1
SPEAKER ASSY, FRONT NO.1	-----	2-B10
SPEEDOMETER ASSY	-----	2-K8
SPIDER KIT, UNIVERSAL JOINT (FOR PROPELLER SHAFT)	-----	1-K7
SPINDLE SUB-ASSY, STEERING KNUCKLE	-----	1-F11
SPLINE, OIL PUMP DRIVE	-----	1-B2
SPRING (FOR ACCELERATOR PEDAL ROD)	-----	2-G7
SPRING (FOR BRAKE PEDAL RETURN)	-----	1-C10
SPRING (FOR CLUTCH PEDAL)	-----	1-F5
SPRING (FOR REAR BRAKE SHOE HOLD DOWN)	-----	1-J10
SPRING (FOR REAR SEAT CUSHION SUPPORT)	-----	2-A6
SPRING (FOR RECLINING REMOTE CONTROL LEVER)	-----	2-M5
SPRING ASSY, FRONT SEAT BACK, LH (FOR SEPARATE TYPE)	-----	2-L5
SPRING ASSY, FRONT SEAT BACK, RH (FOR SEPARATE TYPE)	-----	2-L5
SPRING ASSY, FRONT SEAT CUSHION, LH (FOR SEPARATE TYPE)	-----	2-L5
SPRING ASSY, FRONT SEAT CUSHION, RH (FOR SEPARATE TYPE)	-----	2-L5
SPRING ASSY, FRONT, LH	-----	1-H11
SPRING ASSY, FRONT, RH	-----	1-H11
SPRING ASSY, LOAD SENSING	-----	1-C11
SPRING ASSY, REAR LH	-----	1-L11
SPRING ASSY, REAR RH	-----	1-L11
SPRING, ALTERNATOR BRUSH	-----	1-J3
SPRING, ANTIRATTLE, NO.1	-----	1-H10
SPRING, COMPRESSION (FOR FLOW CONTROL VALVE)	-----	1-C9
SPRING, COMPRESSION (FOR HORN BUTTON CONTACT PLATE)	-----	1-G9
SPRING, COMPRESSION (FOR INNER)	-----	1-C2
SPRING, COMPRESSION (FOR OUTER)	-----	1-C2
SPRING, COMPRESSION (FOR PARKING BRAKE PAWL ROD)	-----	1-A10
SPRING, COMPRESSION (FOR REAR SIDE PLATE)	-----	1-C9
SPRING, COMPRESSION (FOR REAR WHEEL BRAKE CYLINDER)	-----	1-K10
SPRING, COMPRESSION (FOR ROCKER ARM)	-----	1-D2
SPRING, COMPRESSION (FOR SHIFT DETENT BALL)	-----	1-F7
SPRING, COMPRESSION (FOR STEERING LINK JOINT)	-----	1-L9
SPRING, COMPRESSION (FOR STEERING MAIN SHAFT)	-----	1-M8
SPRING, COMPRESSION (FOR TRANSFER FR DRIVE SHIFT SHAFT)	-----	1-F7
SPRING, COMPRESSION (FOR VENT WINDOW GLASS FRAME)	-----	2-J4
SPRING, COMPRESSION (FOR 1ST & 2ND SHIFT RETURN PLUNGER)	-----	1-H6
SPRING, COMPRESSION (FOR REVERSE&5TH SHIFT RETURN PLUNGER)	-----	1-H6
SPRING, COMPRESSION, NO.2 (FOR SHIFT DETENT BALL)	-----	1-I6
SPRING, CONICAL (FOR SHIFT LEVER)	-----	1-J6
SPRING, DELIVERY VALVE	-----	1-E4
SPRING, DIAPHRAGM STOP LEVER RETURN	-----	1-H4
SPRING, FEED PUMP CHECK VALVE	-----	1-J4
SPRING, FEED PUMP PISTON	-----	1-J4
SPRING, FUEL FILLER OPENING LID HINGE	-----	2-F7
SPRING, GOVERNOR MAIN	-----	1-H4
SPRING, HEADLAMP TENSION	-----	2-I7
SPRING, INNER REAR VIEW MIRROR	-----	2-E10
SPRING, NOZZLE HOLDER PRESSURE	-----	1-A4
SPRING, OIL PUMP RELIEF VALVE	-----	1-E2
SPRING, PUMP PLUNGER	-----	1-E4
SPRING, RETURN	-----	1-C5
SPRING, SPEED CONTROL	-----	1-I4
SPRING, STARTER MAGNET SWITCH RETURN	-----	1-L3
SPRING, SYNCHROMESH SHIFTING KEY (FOR NO.3 CLUTCH HUB)	-----	1-E6

33321 - 42109

C14

M74-28-0041

42110 - 45450

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
33321-60070-	1-D6	36134-60020-	1-M6	36422-36010-	1-H7	42110-60251-	1-B8	44120-60100-	1-K9	44730-60040-	1-J5
33325-60010-	1-L6	36142-60030-	1-A7	36481-60070-	1-J7	-60251-	1-B8	44142-22010-	1-K9	44740-60090-	1-G10
-60020-	1-L6	36143-60020-	1-A7	36482-60070-	1-J7	42137-55010-	1-B8	-22020-	1-K9	44777-60020-	1-G10
33332-60020-	1-D6	36144-60020-	1-A7	36486-60010-	1-H7	42181-36010-	1-B8	44302-14010-	1-B9	-60030-	1-G10
33333-60030-	1-D6	36152-60030-	1-A7	36489-60030-	1-J7	42183-35010-	1-H8	44304-60020-	1-B9	44778-60020-	1-G10
33335-60020-	1-D6	36164-60040-	1-H7	36726-60020-	1-D7	42311-60060-	1-B8	-60021-	1-B9	-60030-	1-G10
33336-60010-	1-D6	36203-60021-	1-C7	37110-60340-	1-L7	42312-60070-	1-D8	44305-30020-	1-B9	44785-14010-	1-J5
33343-36020-	1-D6	-60050-	1-C7	37140-60170-	1-L7	42323-60010-	1-D8	44308-35030-	1-C9	-35020-	1-G10
33346-36010-	1-E6	36204-60131-	1-C7	37302-36010-	1-L7	-60020-	1-E11	44311-60050-	1-B9	45025-60060-	1-M8
33348-36012-	1-D6	-60080-	1-C7	-36020-	1-L7	42325-55010-	1-D8	44312-12010-	1-B9	45044-69085-	1-K9
33362-36021-	1-E6	36212-60041-	1-C7	-60050-	1-L7	42431-60020-	1-D8	44313-12010-	1-C9	45045-69045-	1-K9
33364-36051-	1-E6	-60080-	1-C7	37305-36010-	1-L7	42441-30010-	1-D8	-12020-	1-C9	45046-69115-	1-K9
-60010-	1-E6	36215-60030-	1-C7	-36020-	1-L7	42443-55020-	1-D8	-12030-	1-C9	45047-69065-	1-K9
33366-36020-	1-E6	36221-60041-	1-C7	-60010-	1-L7	42601-60130-	1-E8	-12040-	1-C9	45081-22020-	1-M8
33368-20012-	1-E6	-60080-	1-C7	37315-36020-	1-L7	-60150-	1-E8	-12050-	1-C9	45082-60020-	1-A9
33371-20010-	1-E6	36222-60010-	1-C7	37402-36080-	1-L7			44320-60100-	1-B9	45100-60120-03	1-G9
33391-35010-	1-E6	-60020-	1-C7	41101-60040-	1-A8	42603-35080-	1-E8	44325-12010-	1-C9	-60120-06	1-G9
33394-36011-	1-E6	36223-60030-	1-C7	41110-60100-	1-G8	-60012-	1-E8	-12020-	1-C9	-60130-03	1-G9
33395-36010-	1-E6	-60050-	1-C7	41110-60100-	1-A8	-60052-	1-E8	-12030-	1-C9	-60130-06	1-G9
-60010-	1-E6	36231-60021-	1-C7	41201-69155-	1-G8	43110-60160-	1-H8	-12040-	1-C9	45105-60030-	1-G9
33398-36012-	1-E6	36234-60031-	1-D7	-69156-	1-A8	-60161-	1-H8	-12050-	1-C9	-60040-	1-G9
33402-36050-	1-E6	36235-60020-	1-D7		1-G8	-60240-	1-H8	44330-30100-	1-C9	45130-60070-03	1-G9
-60020-	1-E6	36237-60020-	1-D7	41204-60030-	1-A8	43204-60020-	1-E11	-30110-	1-C9	-60070-06	1-G9
33403-69075-	1-B6	36251-60030-	1-D7	41204-60030-	1-G8	43211-60050-	1-E11	-30120-	1-C9	-60080-03	1-G9
33404-30040-	1-B6	-60050-	1-D7	41214-26010-	1-A8	43212-60050-	1-E11	-30130-	1-C9	-60080-06	1-G9
33421-36040-	1-E6	36302-60050-	1-F7	41214-26010-	1-G8	43232-35010-	1-E11	-30140-	1-C9	45142-12050-	1-G9
-60060-	1-E6	36303-60070-	1-F7	41226-35010-	1-A8	43233-60011-	1-E11	-30150-	1-C9	45155-12030-	1-G9
33451-36022-	1-F6	-60130-	1-F7	41226-35010-	1-G8	43234-60011-	1-E11	44337-60010-	1-C9	45176-20030-	1-G9
33481-60060-	1-C7	36307-60030-	1-F7	41231-60020-	1-A8	43235-60010-	1-E11	44341-12010-	1-C9	45180-60010-01	1-G9
33485-30020-	1-B6	-60040-	1-F7	41231-60020-	1-G8	43236-60010-	1-E11	44343-12010-	1-C9	-60011-	1-G9
33504-22111-01	1-J6	36308-60050-	1-F7		1-G8	43237-60030-	1-E11	-12040-	1-C9	45210-60060-	1-M8
-60060-	1-J6	-60080-	1-F7	41252-35010-	1-A8	43238-60010-	1-E11	44345-12010-	1-C9	45215-22011-	1-M8
33505-60010-	1-J6	36311-60041-	1-F7	41311-36010-	1-G8	43239-60020-	1-F11	-12020-	1-C9	45220-60100-	1-M8
-60011-	1-J6	36312-60030-	1-F7	41311-36010-	1-A8	43401-60012-	1-F11	-12030-	1-C9	45222-60030-	1-M8
33521-60020-	1-L6	-60040-	1-F7	41315-30010-	1-G8	43405-60015-	1-F11	-12040-	1-D9	-60031-	1-M8
-60021-	1-L6	36313-60050-	1-F7	41315-30010-	1-B8	-60016-	1-F11	-12050-	1-D9	45225-60010-	1-M8
33530-60100-	1-J6	-60070-	1-F7	41316-30010-	1-G8	43411-60020-	1-F11	44348-60030-	1-E9	45240-60040-	1-K9
33531-36040-	1-L6	36314-60040-	1-F7	41316-30010-	1-B8	43412-60020-	1-F11	44350-60010-	1-E9	45242-60020-	1-K9
33548-60010-	1-F7	36318-60020-	1-F7	41331-35020-	1-G8	43421-60013-	1-J8	44360-60020-	1-D9	45243-60020-	1-K9
-60020-	1-J6	36321-60100-	1-F7	41331-35020-	1-B8	43422-60020-	1-J8	44381-60020-	1-E9	45254-60050-	1-M8
33554-60021-	1-J6	36322-60080-	1-F7	41341-55012-	1-H8	43423-60011-	1-J8	44391-14010-	1-D9	45255-60010-	1-M8
33555-55011-	1-J6	-60081-	1-F7	41342-55010-	1-B8	43435-60011-	1-J8	-30020-	1-D9	45260-60050-	1-M8
33621-60200-	2-H6	36323-60080-	1-G7	41342-55010-	1-H8	43436-60011-	1-F11	44410-60090-	1-E9	45280-60150-	1-M8
-60230-	2-H6	36324-60050-	1-F7	41343-55010-	1-B8	43502-60020-	1-K8	-60091-	1-E9	-60181-	1-M8
33740-26010-	1-G7	36327-60030-	1-G7	41343-55010-	1-H8	43509-60015-	1-J8	44412-60030-	1-E9	45282-22010-	1-A9
36100-6A290-	1-K6	-60031-	1-G7		1-B8	43512-60040-	1-K8	-60090-	1-E9	-60010-	1-M8
-6A450-	1-K6	-60040-	1-G7	41344-35010-	1-B8	-69016-	1-K8	44416-60100-	1-E9	45286-60928-03	1-M8
-60580-	1-K6			41344-35010-	1-H8	43521-60011-	1-K8	44443-60060-	1-E9	-60928-06	1-M8
36103-60070-	1-L6	36337-60060-	1-F7	41345-35010-	1-B8	43530-69045-	1-K8	44444-60010-	1-E9	45289-22020-	1-M8
-60080-	1-L6	-60080-	1-H7	41346-35010-	1-B8	43531-60010-	1-K8	44606-12520-	1-G10	45301-60070-	1-K9
-60140-	1-L6	36338-60020-	1-G7	41347-35010-	1-B8	43532-60010-	1-K8		1-J5	45304-26010-	1-L9
-60150-	1-L6	-60030-	1-G7	41348-35010-	1-B8	44104-22011-	1-J9	44610-60320-	1-G10	-26020-	1-L9
36110-6A090-	1-K6	36340-60080-	1-G7	41351-35011-	1-B8	44105-30060-	1-J9	-60460-	1-G10	-26030-	1-L9
-60450-	1-K6	36341-60032-	1-G7		1-H8	44107-60060-	1-J9	44621-28120-	1-G10	-26040-	1-L9
-60760-	1-K6	36343-60010-	1-H7	41361-60010-	1-B8	44108-60010-	1-J9		1-J5	45310-60080-	1-L9
36117-60020-	1-M5	-60020-	1-G7		1-H8	44110-60080-	1-J9	44628-28120-	1-G10	45332-26010-	1-L9
-60021-	1-M5	-60040-	1-H7	-60020-	1-B8	-60081-	1-J9		1-J5	45352-37010-	1-L9
36119-60010-	1-M6	36360-60170-	1-G7	-60030-	1-B8	44111-60020-	1-J9	44635-12480-	1-J5	45353-37010-	1-L9
-60020-	1-C7	36362-60020-	1-G7	-60040-	1-B8	-60040-	1-J9	-28120-	1-G10	45354-37010-	1-L9
-60030-	1-M6	-60040-	1-G7		1-H8	44115-22010-	1-K9	44642-60280-	1-G10	45357-22010-	1-K9
36122-60040-	1-M6	36409-60030-	1-J7		1-H8	-60020-	1-K9	-60450-	1-G10	-36010-	1-L9
36124-60020-	1-M6	36410-60030-	1-H7		1-B8	44116-22010-	1-K9	-87500-	1-J5	45411-60120-	1-K9
36128-60021-	1-M6	36416-36010-	1-H7	42109-60050-	1-B8	-60020-	1-K9	44672-22120-	1-J5		1-L9
36132-60020-	1-M6	36421-36010-	1-H7			44120-60060-	1-K9	44730-60040-	1-G10	45450-69085-	1-L9


I. MODELS COVERED & CHARACTERISTICS

C15





TOYOTA LAND CRUISER Hardtop (Production from Nov. '84)

Hardtop

(8411-)

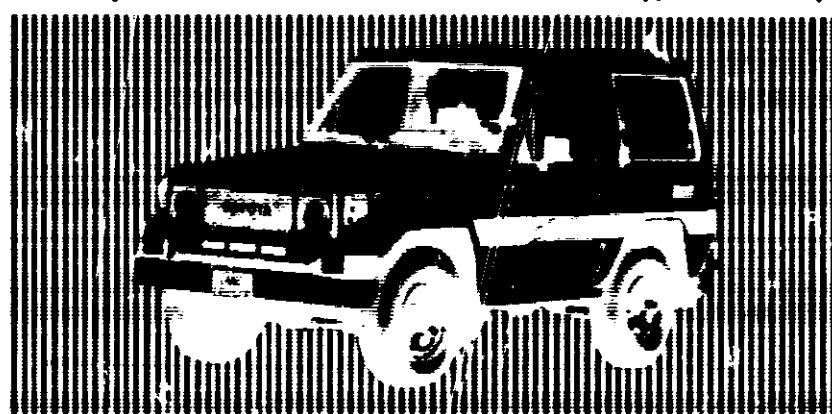

MP 1781

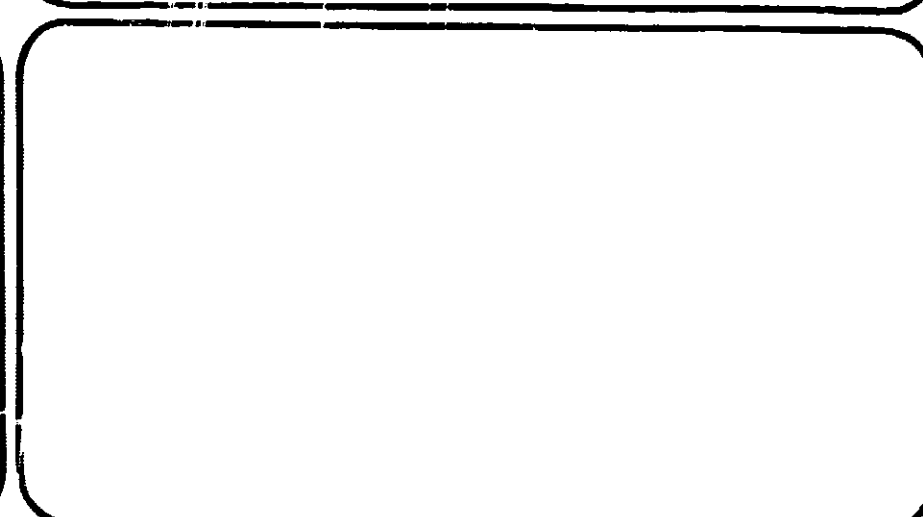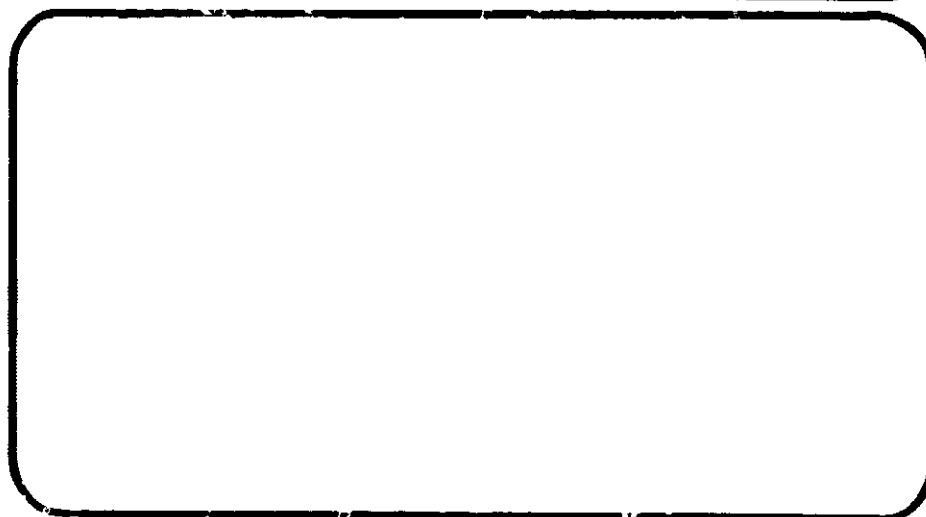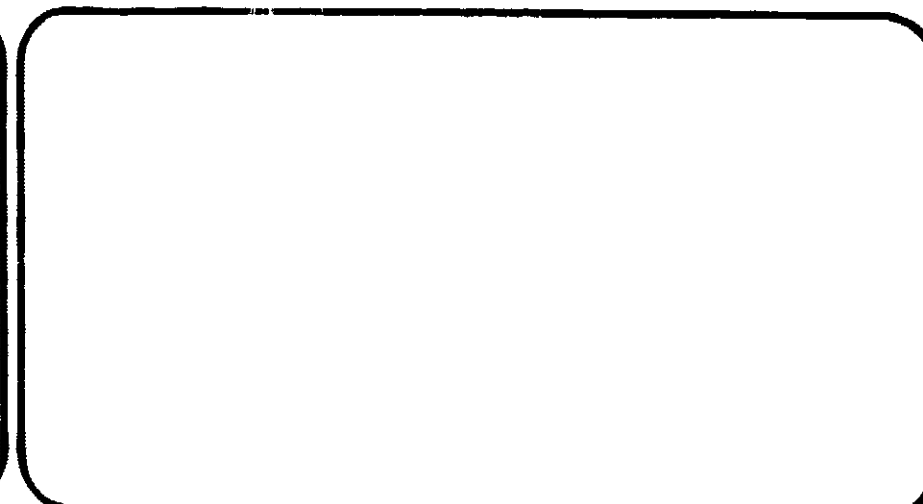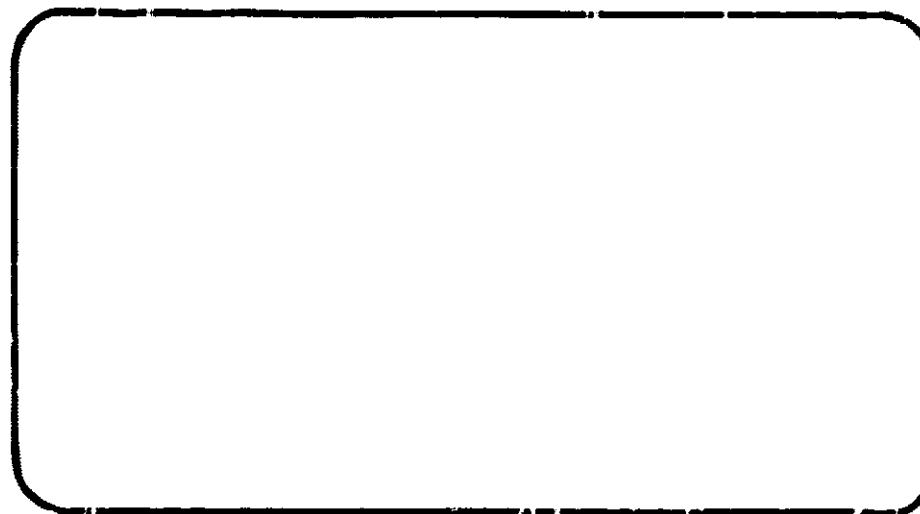

Model	Engine	Production period	Characteristic Expressions in Catalog Model Column						Model Name
BJ70LV-MRK	3B	8411-8608							Diesel Hardtop
" -MNK	"	8608-							"

MARK & ABBREVIATION LIST

C16

Mark	Definition	Mark	Definition
SD	Swing Door	TP	Vinyl Softtop (Tarpaulin)
SDT	Standard-Turbo type	TPS	Vinyl Softtop (Tarpaulin), Standard type
SDX	Super Deluxe type	TR	Truck (Pickup)
SE	Sedan	TVSV	Thermostatic Vacuum Switching Valve
SL	SL type	TWC	Twin Cam
SM-SP	Semi Separate Seat	TWT	Twin Cam, Turbo Cherger System
SMG	Speedometer Gear	TVTV	Thermostatic Vacuum Transmitting Valve
SP	Separate Seat	UPR	Upper
SP-BN	Split Bench Seat	U/S	Undersize
SPEC	Specification	USA	For the United States of America
SPL	Special type	V=	Volts
SPR	Supra (CELICA Supra)	V	Van or Hardtop
SR	SR type	VCV	Vacuum Control Valve
SR5	SR 5 type	VKC	Van (Hardtop), with swing type back door
SRT	Turbo - SR5	VL	Vinyl Leatherette
S/S	Semisize	VLC	Van (Hardtop), with lift up and swing out back door
SSV	Super Soft Vinyl Leather	VLS	Van (Hardtop), with lift up and swing out back door
ST	ST type	VSG	Van, Side Glass
STD	Standard type	VSP	Van, Side Panel
STRG	Steering	VSV	Vacuum Switching Valve
SUMITOMO	Sumitomo Electric Industry Company Limited	VTV	Vacuum Transmitting Valve
SW	Switch	W	Watts
T	Thickness (mm)	W/...	With ...
T1	Truck (Pickup, low loader 1-side open)	W.C	Wheel Cylinder
TAKATA	Takata Corporation	WD	Wire Diameter (mm)
TANAKA	Tanaka Instrument Company Limited (T.N.K.)	WG	Station Wagon
TBO	Turbo Cherger system	WGV	Station Wagon (V)
TBR	1-Bar Roof	WGG	Station Wagon (G)
TD	Turbo Charger, Diesel system	W.O	Without
TEMS	Toyota Electronic Modulated Suspension	WPB	With Passive Belt
TEN	Fujitsu Ten Company Limited	WSW	White Side Wall Tire
T/L	Tubeloss	W/T	With Tube
TMC	TOYOTA MOTOR CORPORATION	XTR	Xtra Cab
TOKAIRIKA	Tokai Rika Company Limited	YAZAKI	Yazaki Corporation
TOKIKO	Tokiko Company Limited	YOKOHAMA	The Yokohama Rubber Company Limited
TOSHIBA	Tokyo Shibaura Electric Company Limited	YUASA	Yuasa Battery Company Limited
TOYO	Toyo Rubber Industrial Company Limited		
TOYOTA	Toyota Motor Corporation		

(2) Abbreviations Under Heading R/P and QTY in Text

Heading	Mark	Definition
R/P	# *	Old parts number (Old) Modified old parts number which has been substituted by a multiple of parts and/or if substituted parts are specified by applicable models or other determining specifications, refer to SUBSTITUTE SUPPLY PARTS LIST (S.S.P.L.) for detailed information. (Old)
	7 .	New main part number of set substitution (New) Part number to be attached to main part (New)
QTY	33	Required quantity

(3) CHANGES TO TEXT & APPENDICES


Certain codes are used to indicate changes to the text and/or appendix.
These codes appear in the marginal area of the affected page as follows

CODE	LOCATION	EXPLANATION
C	Text	Changes of Parts Number, Model and Production Date
N	Appendix Text & Appendix	Newly available Toyota Part Number
S	Appendix Text & Appendix	Part application expanded to include other vehicle model(s).

(U.S.A. 2/2)

(8411-)

PROD.DATE	M O D E L S	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	BJ70	FIG. 51-53 SPARE WHEEL CARRIER					
		51900C NUT, SPARE WHEEL, HUB		90942-01007-	3	81	
8411-	BJ70	51908 BRACKET SUB-ASSY, SPARE WHEEL CARRIER		51908-90K03-	1	81	
8411-	BJ70	51998 PAD, SPARE WHEEL BRACKET		51998-90K00-	4	81	

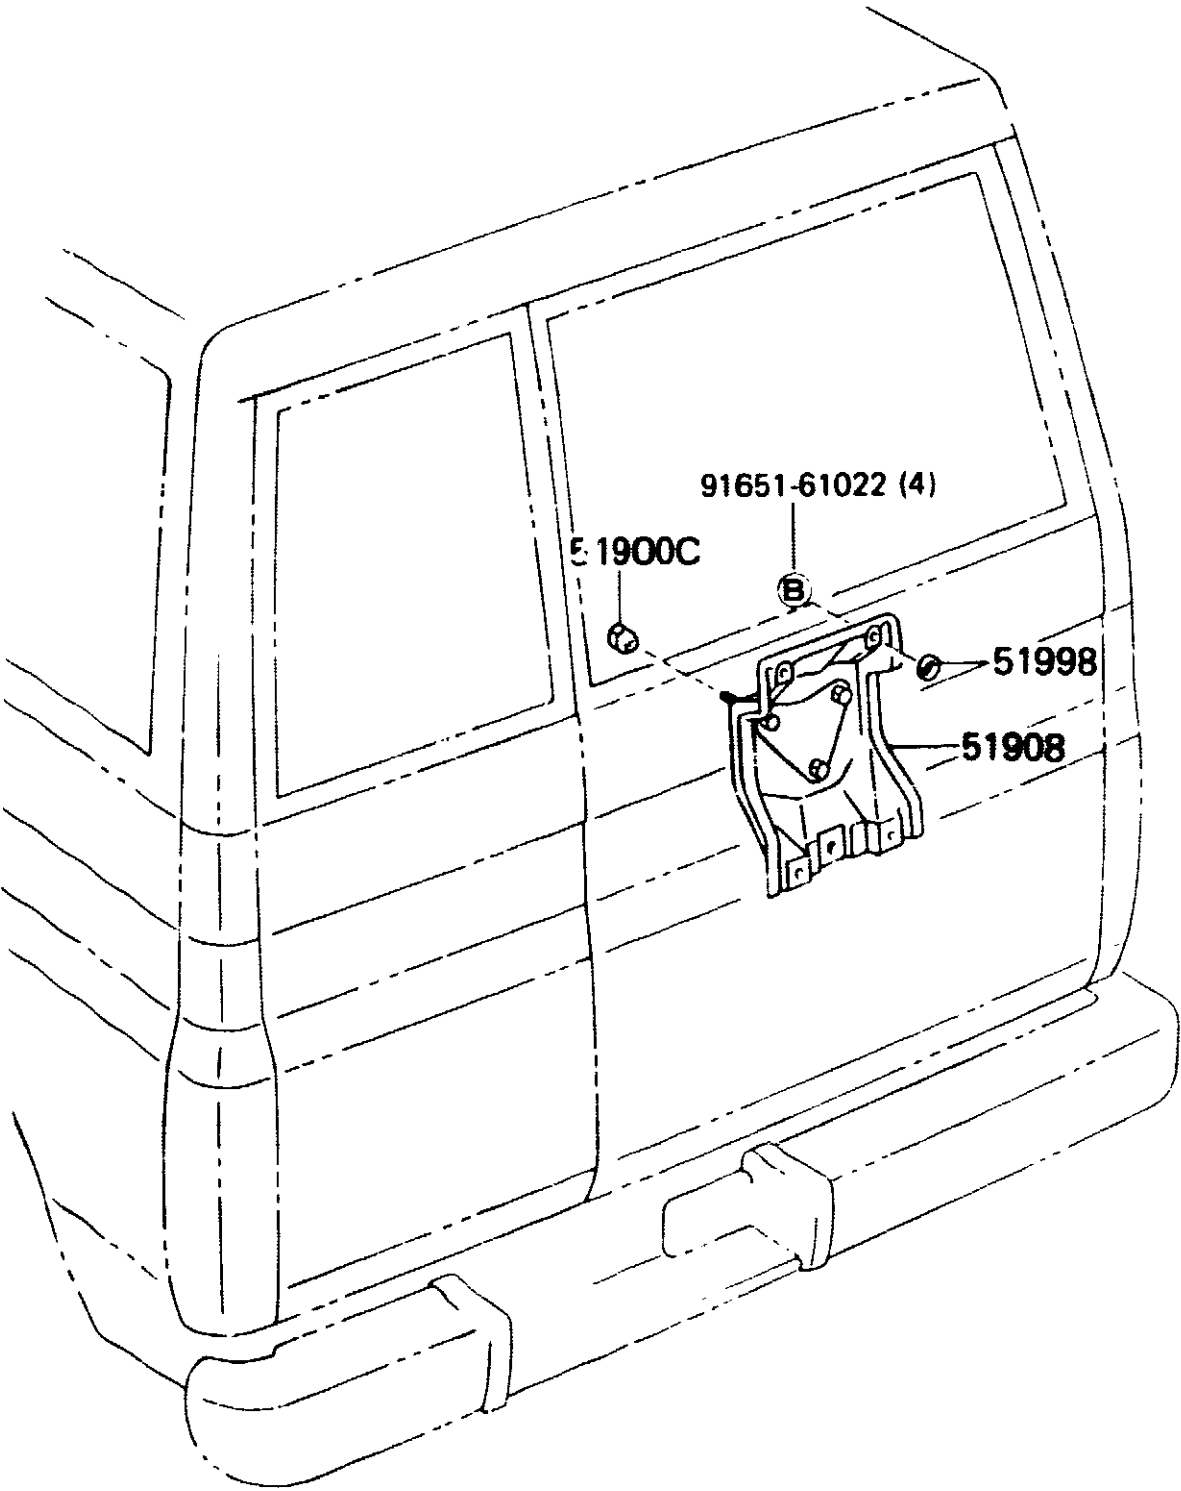


MB H672

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-8510	+-----+ I 55412C CONTINUED BJ70	PANEL, INSTRUMENT CLUSTER FINISH, CENTER NO. 1 BEIGE		55412-90K03-05 (55412-90K04-05)	1	81	100
	8510- BJ70	GRAY		55412-90K04-03	1	101	
8510-	BJ70	BEIGE		55412-90K04-05	1	101	
8411-	+-----+ I 55413C BJ70	PANEL, INSTRUMENT CLUSTER FINISH, CENTER NO. 2		55413-90K00-	1	81	
	8411- BJ70			55477-90K01-01	1	81	
8411-	+-----+ I 55414 BJ70	BEZEL, CIGAR LIGHTER HOLE BLACK		55477-90K01-01	1	81	
	8411- BJ70						
8411-	+-----+ I 55468C BJ70	SEAL, INSTRUMENT CLUSTER FINISH PANEL, NO. 1		55468-90K00-	1	81	
	8411- BJ70						
8411-	+-----+ I 55497A BJ70	REFLECTOR, WARNING LAMP, RH		55497-90K00-	1	81	
	8411- BJ70						
8411-	+-----+ I 55498A BJ70	REFLECTOR, WARNING LAMP, LH		55498-90K00-	1	81	
	8411- BJ70						
8411-	+-----+ I 55503 BJ70	COMPARTMENT SUB-ASSY, GLOVE		55581-90K00-	1	81	
	8411- BJ70						
8411-	+-----+ I 55503B BJ70	CUSHION (FOR GLOVE COMPARTMENT)		90541-03015-	2	81	
	8411- BJ70						
8411-8510	+-----+ I 55505 BJ70	LOCK SUB-ASSY, GLOVE COMPARTMENT DOOR BLACK		55560-90K00-01	1	81	100
	8411- BJ70						
8411-	+-----+ I 55507 BJ70	HINGE SUB-ASSY, GLOVE COMPARTMENT DOOR		55505-90K00-	1	81	
	8411- BJ70						
8411-8510	+-----+ I 55510 BJ70	DOOR ASSY, GLOVE COMPARTMENT W/O KEY, GRAY		55501-90K00-03	1	81	100
	8411-8510 BJ70	W/O KEY, BEIGE		55501-90K00-05	1	81	100
8411-	BJ70	W/KEY, GRAY		55501-90K01-03	1	81	



PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	55510 CONTINUED BJ70	DOOR ASSY, GLOVE COMPARTMENT W/KEY, BEIGE		55501-90K01-05	1	81	
8411	55521C BJ70	COVER, STEREO OPENING		55521-16010-	1	81	
8411-8510	55522B BJ70	COVER, RADIO TUNER OPENING		55522-32010-	1	81	100
8411-	55531B BJ70	COVER, CHOKE KNOB HOLE		90950-01155-	1	81	
8411-8510	55533 BJ70	COVER, AUTO CLOCK HOLE		55533-90A00-	1	81	100
8411-	55539 BJ70	COVER, SPARE SWITCH HOLE BLACK		55539-32010-01	4	81	
8411-	55547 BJ70	COVER, REMOTE CONTROL MIRROR HOLE		55547-90K00-	1	81	
8411-	55556 BJ70	ARM, GLOVE COMPARTMENT DOOR CHECK		55556-90K01-	1	81	
8411-	55557A BJ70	CUSHION, GLOVE COMPARTMENT DOOR CHECK		90541-03005-	1	81	
8411-	55561A BJ70	STRIKER, GLOVE COMPARTMENT DOOR LOCK		55561-90K00-	1	81	
8411-	55650 PJ70	REGISTER ASSY, INSTRUMENT PANEL, NO.1 BLACK		55650-90K00-01	1	81	
8411-	55660 BJ70	REGISTER ASSY, INSTRUMENT PANEL, NO.2 BLACK		55660-90K00-01	1	81	
8411-	55670 BJ70	REGISTER ASSY, INSTRUMENT PANEL, NO.3 BLACK		55670-90K00-01	2	81	

GENUINE TOYOTA PARTS

(8411-)

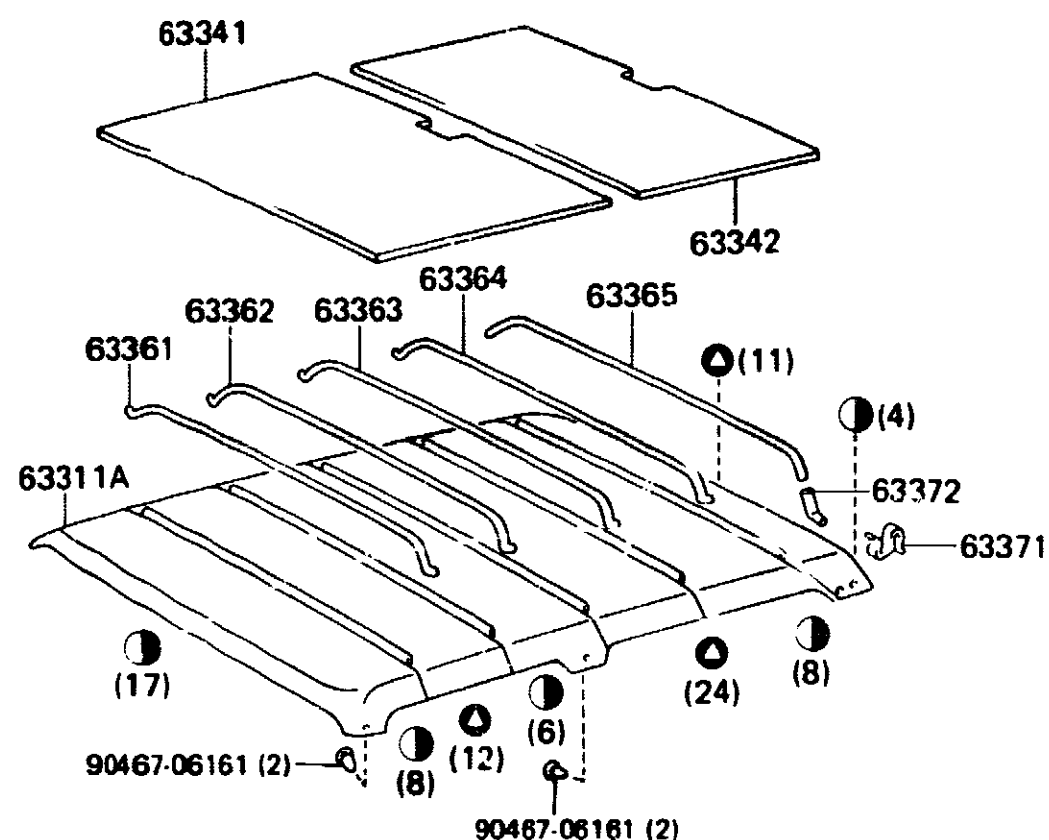

W/ SUN ROOF

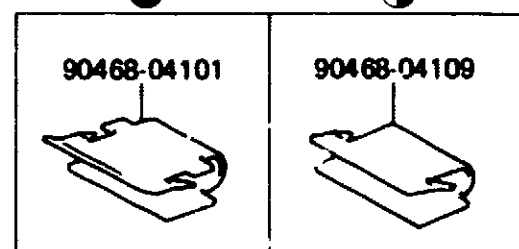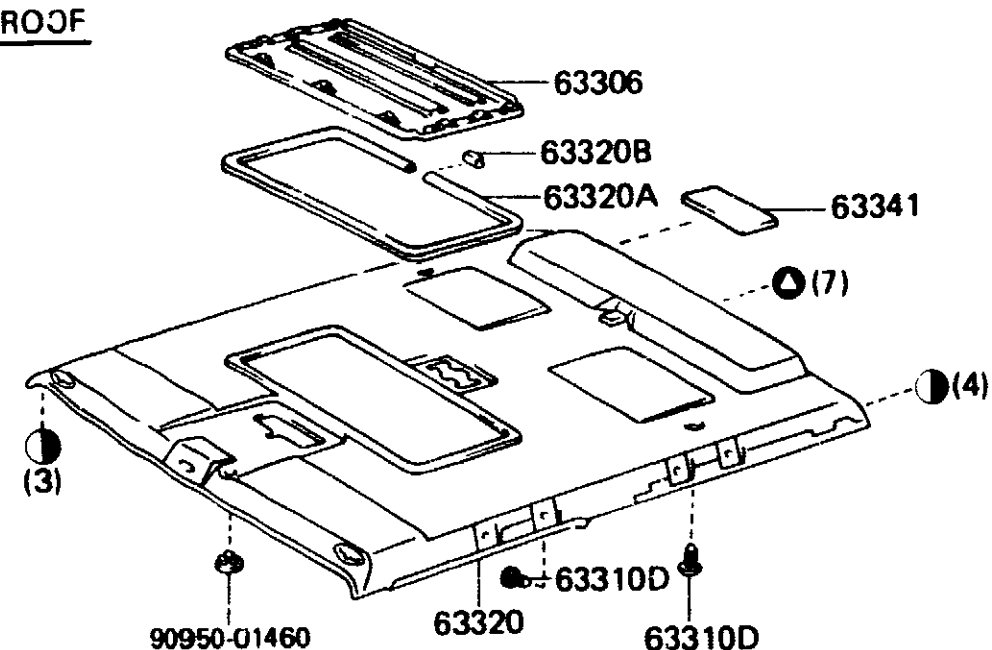

MB H634-D

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	64-52 ROOF HEADLINING & SILENCER PAD						
8411-	BJ70	TRIM SUB-ASSY, SUNSHADE		63306-90K01-08	1	81	
8411-	BJ70	CLIP, ROOF HEADLINING		90467-06048-08	7	81	
8411-	BJ70	HEADLINING, ROOF NO. 1		63310-90K00-08	1	81	
8411-8510	BJ70	HEADLINING ASSY, SUN ROOF OR REMOVABLE ROOF		63320-90K00-08	1	81	100
8510-8608	BJ70	W/SUN ROOF, IVORY		63320-90K01-08	1	101	140
8608-	BJ70	W/SUN ROOF, IVORY		63320-90K02-08	1	141	
8411-	BJ70	MOULDING, SUN ROOF OR REMOVABLE ROOF		63318-90K01-	1	81	
8411-	BJ70	JOINT, SUN ROOF OPENING TRIM		63319-14011-	1	81	
8411-	BJ70	PAD, ROOF SILENCER, NO. 1		63341-90K00-	1	81	
8411-	BJ70	W/O SUN ROOF		63341-90K02-	2	81	
8411-	BJ70	PAD, ROOF SILENCER, NO. 2		63341-90K00-	1	81	
8411-	BJ70	SUPPORT, ROOF HEADLINING, NO. 1		63363-90K00-	1	81	
8411-	BJ70	L=1275		63363-90K01-	1	81	
8411-	BJ70	L=1272		63363-90K02-	1	81	
8411-	BJ70	L=1269		63361-90K00-	1	81	
8411-	BJ70	SUPPORT, ROOF HEADLINING, NO. 2		63361-90K00-	1	81	
8411-	BJ70	L=1262					

FIG. 67-61

GENUINE TOYOTA PARTS

2-D5

N74-15-0681

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	67-61	BACK DOOR PANEL & GLASS					
	62335B	COVER, BACK DOOR OPENING TRIM					
8411-	BJ70	RH		62335-90K00-	1	81	
8411-	BJ70	LH		62336-90K00-	1	81	
	64805	TRIM SUB-ASSY, BACK DOOR OPENING					
8411-	BJ70	GRAY		62333-90K01-03	1	81	
8411-	BJ70	BROWN		62333-90K01-06	1	81	
	67005	PANEL SUB-ASSY, BACK DOOR					
8411-8608	BJ70	LH		67006-90K15-	1	81	140
8411-8611	BJ70	RH		67005-90K17-	1	81	
8411-8611	BJ70	RH, W/RR WI PER		67005-90K18- (67005-90K36- (90950-01438-)	1	81	
8608-8611	BJ70	LH		67006-90K49- (67006-90K66- (90950-01438-)	1	141	
8611-	BJ70	RH		67005-90K35-	1		
8611-	BJ70	RH, W/RR WI PER		67005-90K36-	1		
8611-	BJ70	LH		67006-90K66-	1		
	67751	BOARD, BACK DOOR TRIM					
8411-8608	BJ70	LH, GRAY		64790-90K00-03	1	81	140
8411-8608	BJ70	LH, BEIGE		64790-90K00-05	1	81	140
8411-	BJ70	RH, GRAY		64780-90K00-03	1	81	
8411-	BJ70	RH, BEIGE		64780-90K00-05	1	81	
8608-	BJ70	LH, GRAY		64790-90K07-03	1	141	
8608-	BJ70	LH, BEIGE		64790-90K07-05	1	141	
	67847	COVER, BACK DOOR SERVICE HOLE, RH					
8411-	BJ70			67847-90K01-	1	81	
	67848	COVER, BACK DOOR SERVICE HOLE, LH					
8411-	BJ70			67848-90K01-	1	81	


*TEM=Tempered
*TT=Tinted Tempered

*EHTT=Electrical Heated, Tinted, Tempered

PROD. DATE	MODELS	DESCRIPTION	P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
	67885	WEATHERSTRIP, BACK DOOR, RH					
8411-	BJ70			67885-90K05-	1	81	
	67886	WEATHERSTRIP, BACK DOOR, LH					
8411-	BJ70			67882-90K05-	1	81	
	68131	GLASS, BACK DOOR					
8411-8608	BJ70	RH, XTEM, T=3.5		68131-90K00-	1	81	140
8411-8608	BJ70	LH, XTEM, T=3.5		68132-90K00-	1	81	140
8411-	BJ70	RH, XTT, T=3.5		68131-90K06-	1	81	
8411-	BJ70	RH, XEHTT, T=3.5		68131-90K07-	1	81	
8411-	BJ70	LH, XTT, T=3.5		68132-90K04-	1	81	
8411-	BJ70	LH, XEHTT, T=3.5		68132-90K05-	1	81	
	68291	WEATHERSTRIP, BACK DOOR GLASS					
8411-	BJ70	RH		68291-90K00-	1	81	
8411-	BJ70	RH, W/MOULD ING		68291-90K01-	1	21	
8411-	BJ70	LH		68292-90K00-	1	81	
8411-	BJ70	LH, W/MOULD ING		68292-90K01-	1	81	
	68299	SPACER, BACK DOOR WEATHERSTRIP					
8411-	BJ70			68299-90K00-	2	81	
	68650	CHECK ASSY, BACK DOOR					
8411-8510	BJ70	LH		68660-90K01-	1	81	100
8411-	BJ70	RH		68650-90K01-	1	81	
8510-	BJ70	RH, W/RR WI PER		68650-90K02-	1	101	
8510-	BJ70	LH		68660-90K03-	1	101	

(8411-)

ILLUST. NO. 20F2

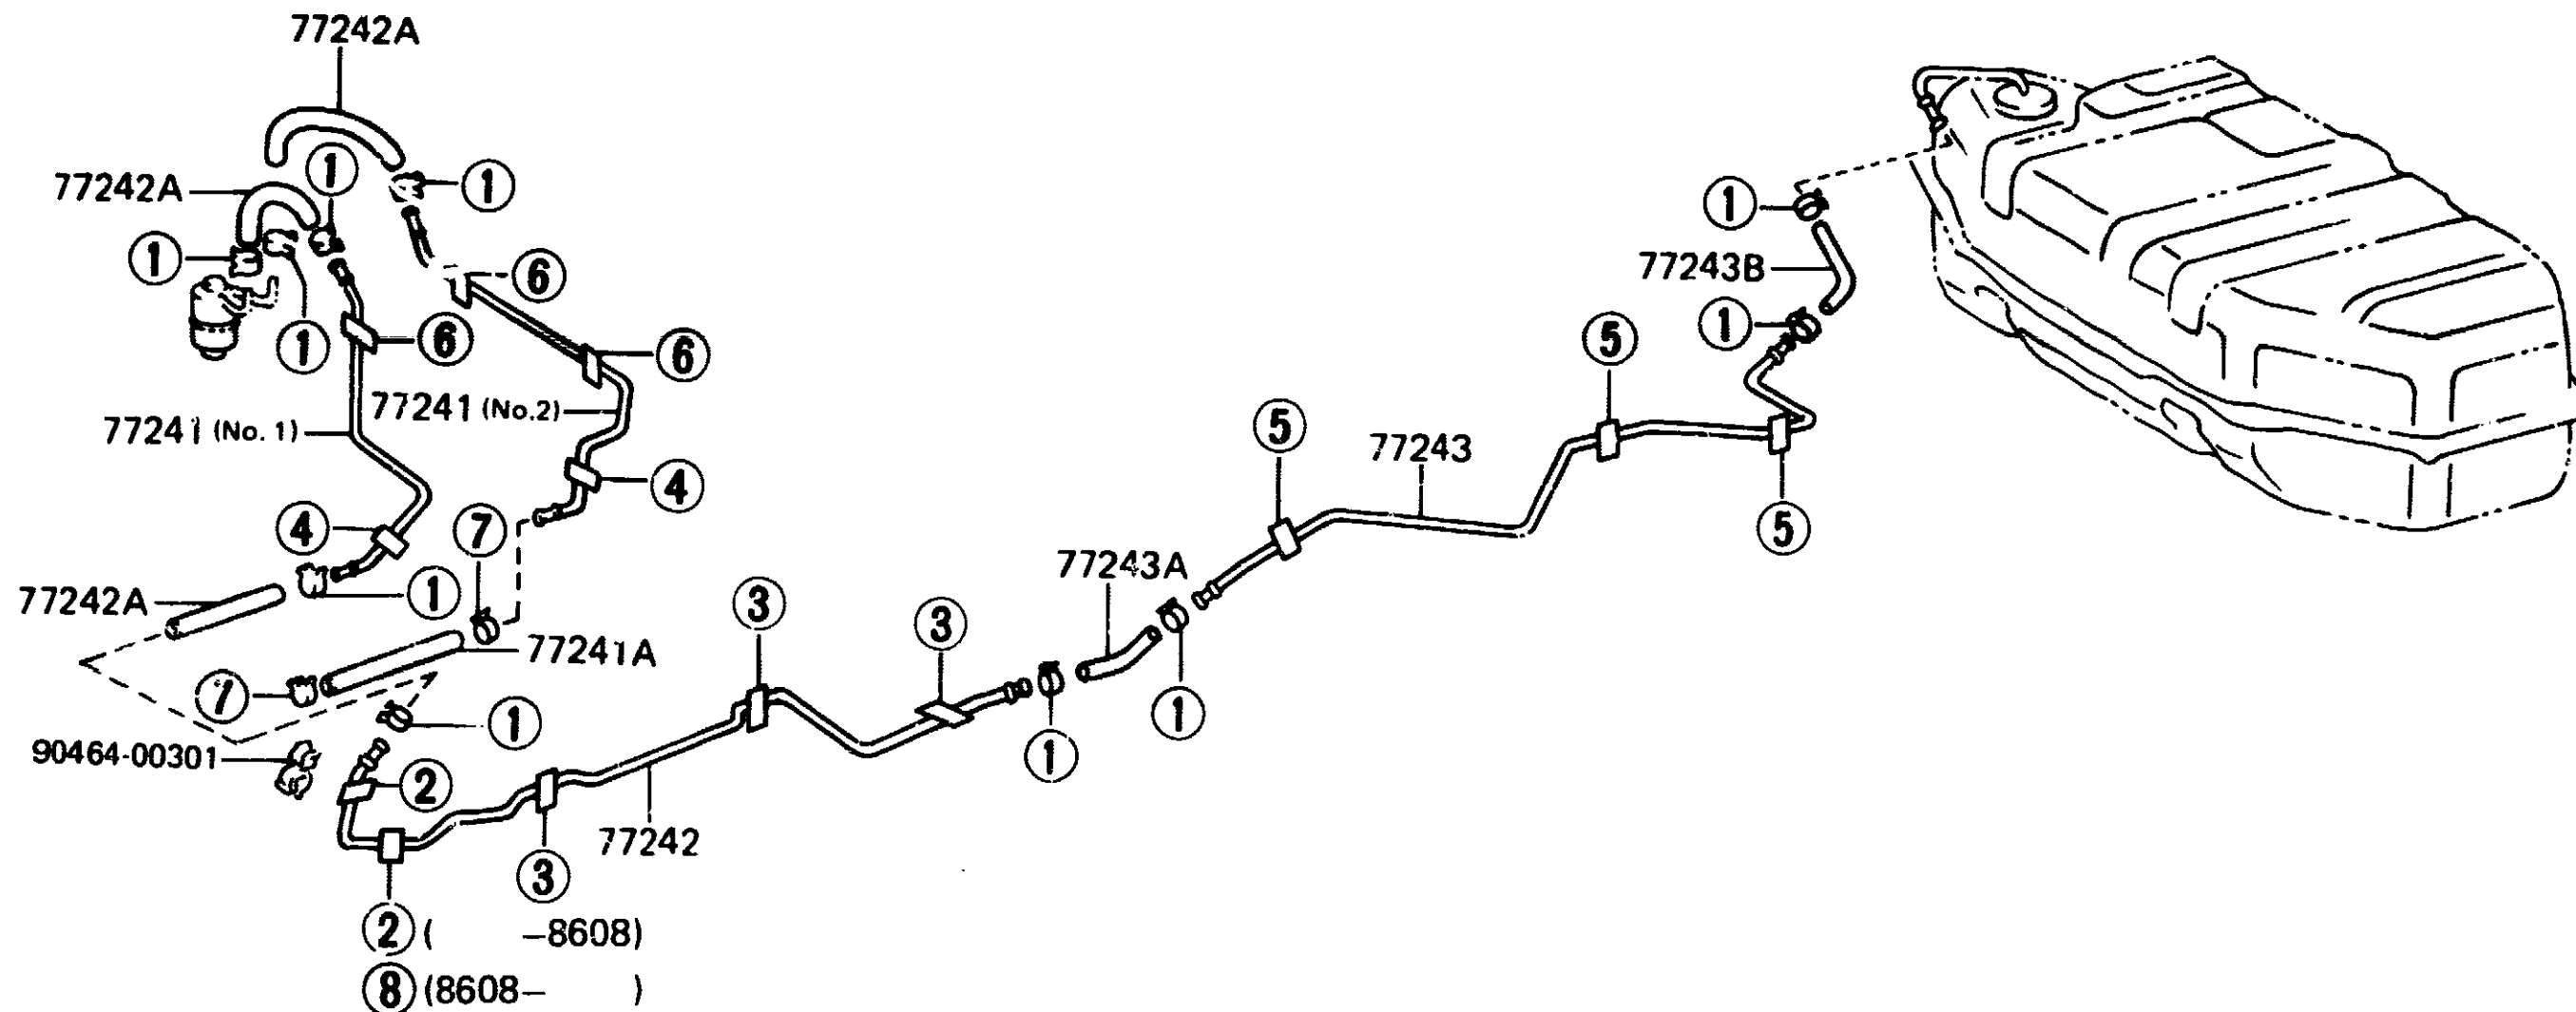


①	②	③	④	⑤	⑥	⑦	⑧
96132-30800	91616-40820	91616-40820	91616-40816	91616-40816	91616-40816	90467-13007	91616-40820
	90461-10650	90461-10651	90461-10650	90461-10651	90949-01192		90461-10716


MB H649-B

(8411-8510)

(8510-)

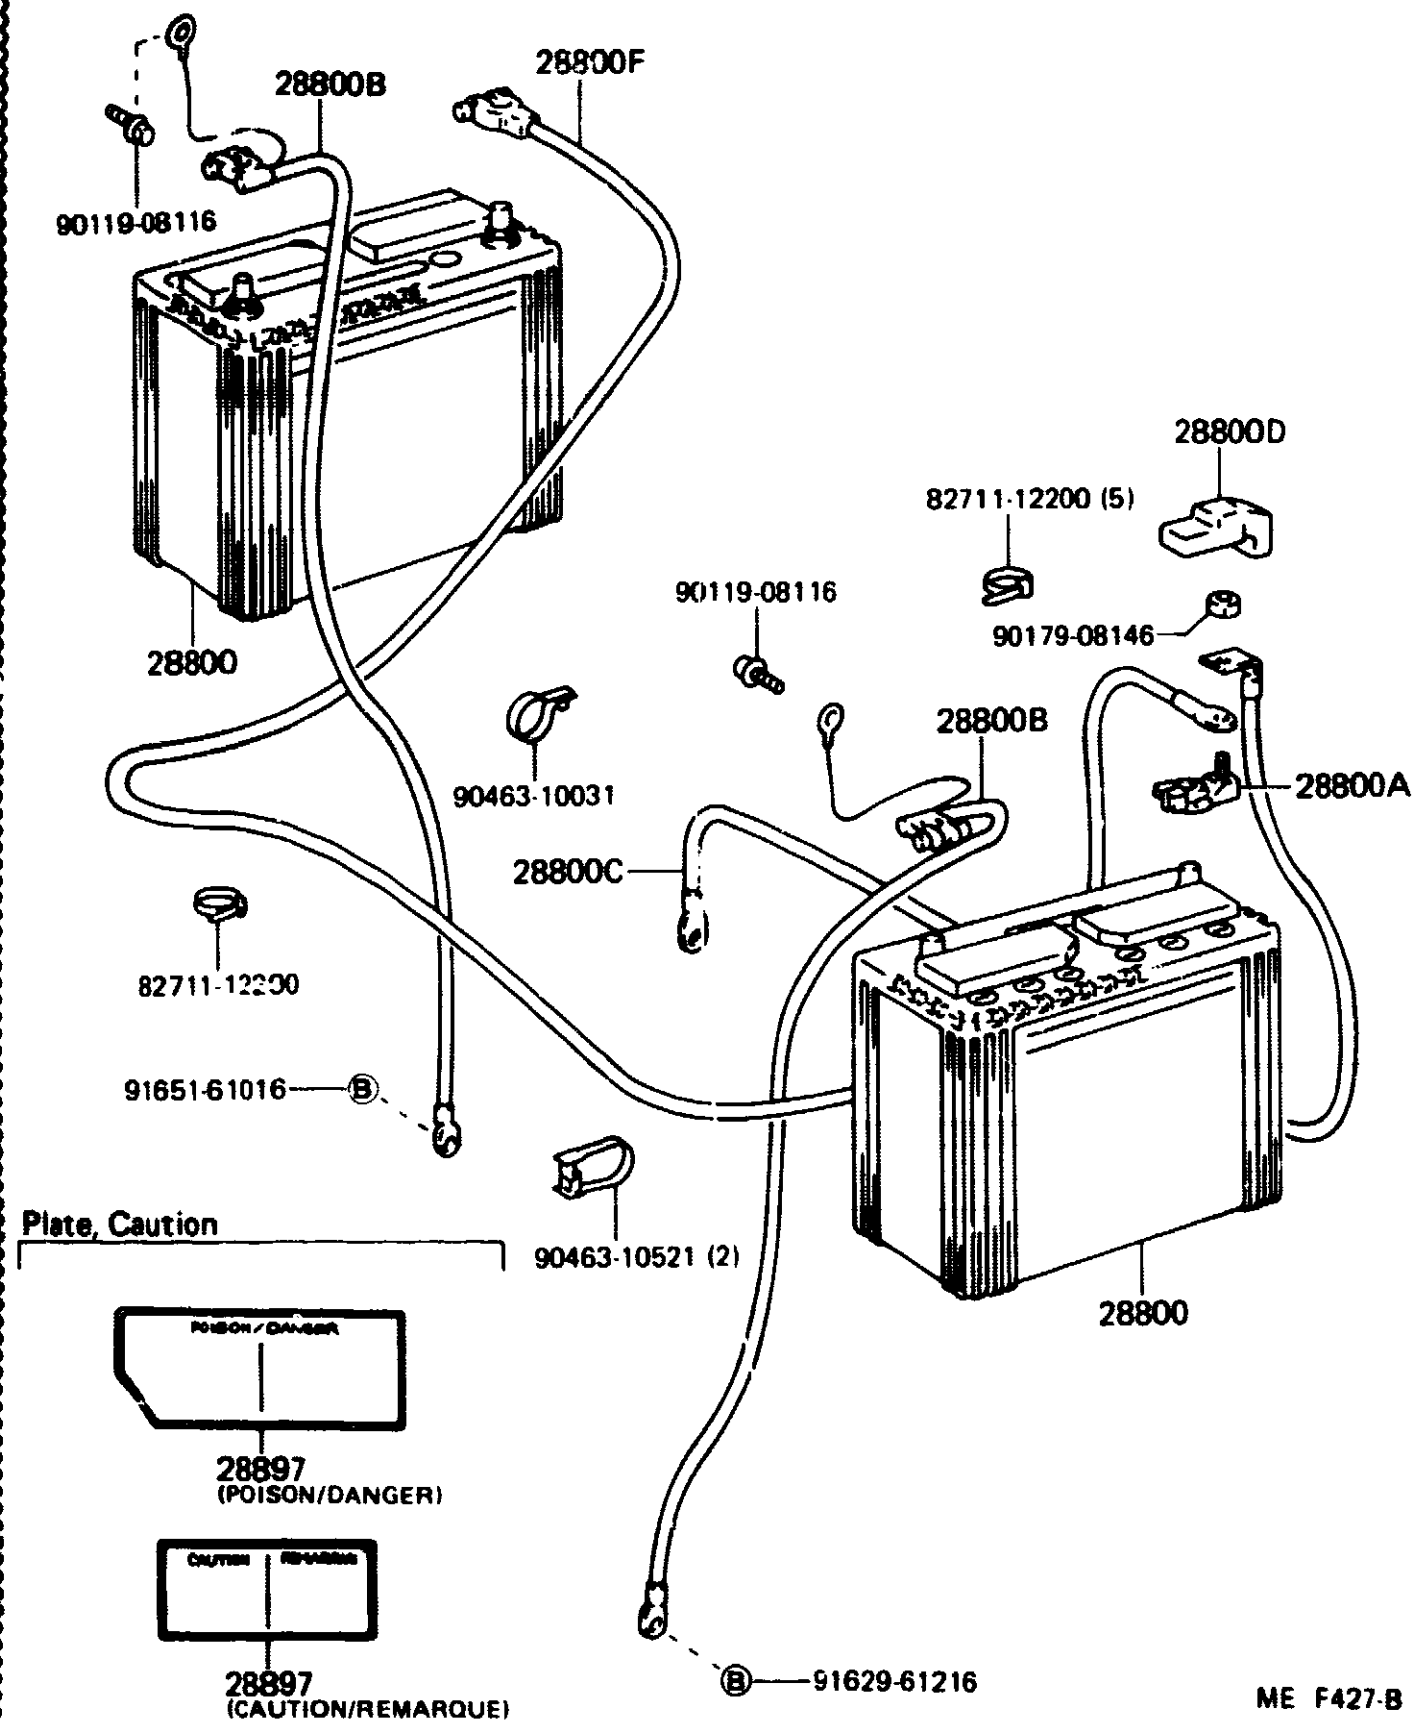

ME F427B

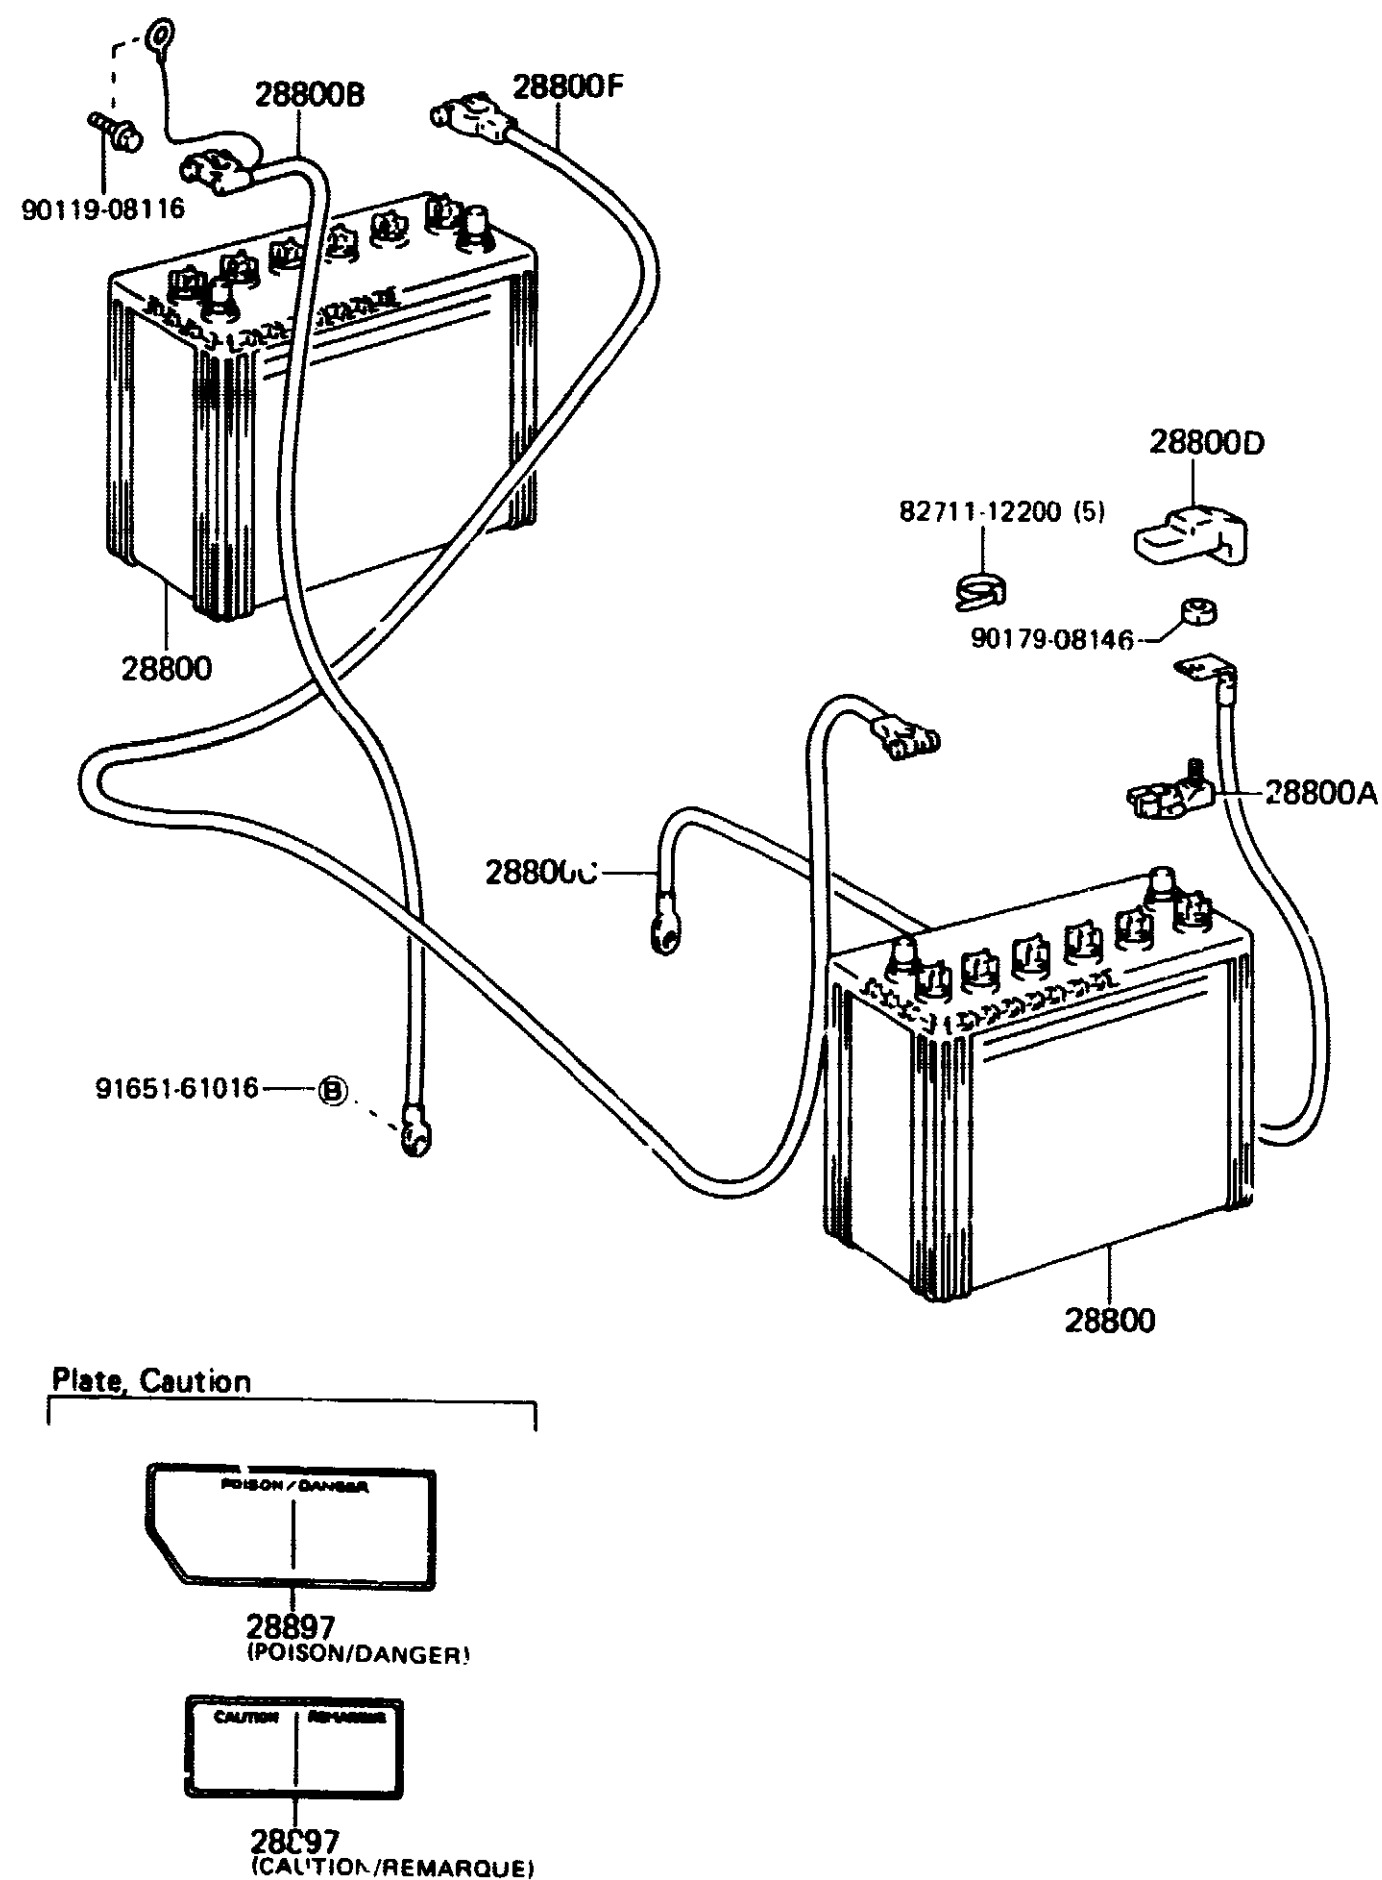

ME G698


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-8503	BJ70	SWITCH ASSY, OIL PRESSURE (FOR ENGINE)		83530-36011-	1	81	
				(83530-30060-)			
8503-8510	BJ70			83530-30060-	1		100
8411-	BJ70	SWITCH ASSY, LIGHT CONTROL, NO.1		84112-69355-	1	81	
8411-	BJ70	KNOB, LIGHT CONTROL RHEOSTAT		84118-90A00-	1	81	
8411-8510	BJ70	RHEOSTAT, LIGHT CONTROL		84119-90K00-	1	81	100
				84119-90K02-	1	101	
8411-	BJ70	BOLT OR NUT, RHEOSTAT CONTROL SET		90170-09167-	1	81	
8411-	BJ70	SWITCH ASSY, HEADLAMP DIMMER		84140-69105-	1	81	
8411-	BJ70	SWITCH ASSY, BACK UP LAMP		84210-60021-	1	81	
8411-	BJ70	SWITCH, TRANSFER INDICATOR, NO.1		84222-60021-	1	81	
8411-	BJ70	SWITCH, TRANSFER INDICATOR, NO.3		84222-60040-	1	81	
8411-	BJ70	SWITCH ASSY, COURTESY LAMP (FOR FRONT DOOR)		84230-22051-	2	81	
8411-	BJ70	SWITCH ASSY, TURN SIGNAL		84310-60570-	1	81	
8411-	BJ70	PLATE, HORN CONTACT		84312-32010-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	BJ70	SWITCH ASSY, HAZARD WARNING SIGNAL		84332-69115-	1	81	
8411-8608	BJ70	SWITCH ASSY, STOP LAMP		84340-32010-	1	81	140
8608-	BJ70	MATSUSHITA		84340-30030-	1	141	
8608-	BJ70	TOKAIRIKA		84340-32010-	1	141	
8411-	BJ70	SWITCH ASSY, IGNITION		84450-60130-	1	81	
8411-	BJ70	SWITCH, LEVEL WARNING		84461-60020-	1	81	
8411-	BJ70	SWITCH ASSY, PARKING BRAKE		84550-24010-	1	81	
8411-	BJ70	SWITCH ASSY, WINDSHIELD WIPER		84652-69445-	1	81	
8411-	BJ70	SWITCH, REAR WIPER		84653-22010-	1	81	
8411-8608	BJ70	SWITCH, TRANSMISSION CONTROL		84722-60050-	1	81	140
				84722-60060-	1	141	
8411-	BJ70	BULB, TRANSMISSION CONTROL SWITCH		84999-10170-	1	81	
8411-	BJ70	SWITCH ASSY, HEATER BLOWER		84732-90K01-	1	81	
8411-	BJ70	KNOB, HEATER BLOWER SWITCH		84731-12010-	1	81	
8411-	BJ70	SWITCH, REAR HEATER BLOWER		84732-90K04-	1	81	

GENUINE TOYOTA PARTS


(8411-)

91656-40818

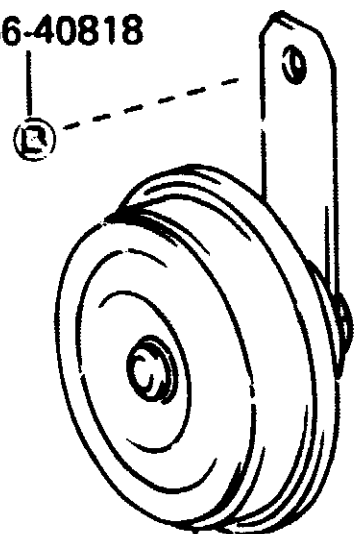

86510

91656-40818

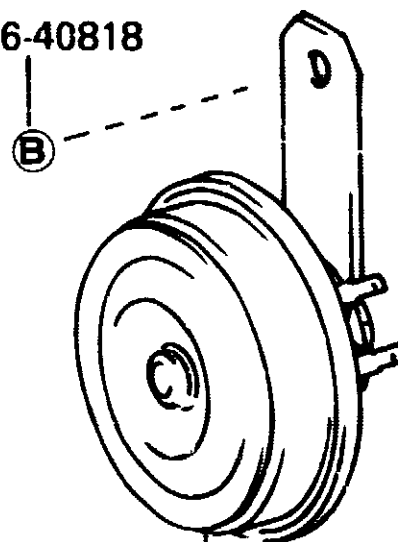

86520

ME F323

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	86-11 HORN						
	86510	HORN ASSY, HIGH PITCHED					
8411-8510	BJ70			86510-22130-	1	81	100
8510-	BJ70			86510-90K05-	1	101	
	86520	HORN ASSY, LOW PITCHED					
8411-8510	BJ70			86520-22120-	1	81	100
8510-	BJ70			86520-90K05-	1	101	

BUSH - CARPET

D12

M74-26-0041

CARRIER - CLIP

PART	NAME	LOCATION
BUSH (FOR FRONT STABILIZER BAR)	-----	1-J11
BUSH (FOR LOAD SENSING SPRING SHACKLE)	-----	1-D11
BUSH (FOR PARKING BRAKE EQUALIZER)	-----	1-A10
BUSH (FOR REAR SHOCK ABSORBER)	-----	1-M11
BUSH (FOR REAR SPRING PIN)	-----	1-L11
BUSH (FOR REAR SPRING SHACKLE)	-----	1-L11
BUSH (FOR TRANSFER SHIFT LEVER)	-----	1-F7
BUSH & BOOT KIT, LOAD SENSING SPRING	-----	1-B11
BUSH, REAR WASHER JAR	-----	2-L9
BUSH, SHIFT LEVER (FOR FLOOR SHIFT)	-----	1-J6
BUSH, SOLID (FOR DRIVE SHAFT)	-----	1-F11
BUSH, STABILIZER, FRONT	-----	1-J11
BUSH, TRANSFER SHIFT LEVER	-----	1-G7
BUSH, VALVE GUIDE EXHAUST	-----	1-F1
BUSH, VALVE GUIDE INTAKE	-----	1-F1
BUSH, WINDSHIELD WASHER JAR	-----	2-J9
BUSH, 3RD GEAR	-----	1-D6
BUTTON ASSY, HORN	-----	1-G9
CABLE ASSY, FOLD SEAT LOCK CONTROL, NO.1	-----	2-A6
CABLE ASSY, FOLD SEAT LOCK CONTROL, NO.2	-----	2-A6
CABLE ASSY, HOOD LOCK CONTROL	-----	2-L1
CABLE ASSY, PARKING BRAKE, NO.1	-----	1-A10
CABLE ASSY, SEAT BACK CONTROL	-----	2-A6
CABLE ASSY, SEAT TRACK CONTROL	-----	2-A6
CABLE ASSY, SPEEDOMETER DRIVE, NO.1	-----	2-L8
CABLE ASSY, THROTTLE CONTROL	-----	2-G7
CABLE SUB-ASSY, AIR INLET DAMPER CONTROL	-----	2-J10
CABLE SUB-ASSY, AIRMIX DAMPER CONTROL	-----	2-J10
CABLE SUB-ASSY, DEFROSTER DAMPER CONTROL	-----	2-J10
CABLE SUB-ASSY, FUEL LID LOCK CONTROL	-----	2-E7
CABLE SUB-ASSY, WATER VALVE CONTROL	-----	2-J10
CABLE, BATTERY TO BATTERY	-----	2-E8
CABLE, BATTERY TO GROUND	-----	2-E8
CABLE, BATTERY TO STARTER (FOR BATTERY TO MAIN SWITCH)	-----	2-E8
CABLE, BOND, NO.1	-----	2-H8
CABLE, SLIDING ROOF DRIVE, LH	-----	2-L3
CABLE, SLIDING ROOF DRIVE, RH	-----	2-L3
CAMSHAFT	-----	1-C2
CAMSHAFT, INJECTION PUMP	-----	1-E4
CAP ASSY, BRAKE MASTER CYLINDER RESERVOIR FILLER	-----	1-D10
CAP ASSY, CL MASTER CYLINDER RESERVOIR FILLER	-----	1-H5
CAP ASSY, FUEL TANK	-----	2-E7
CAP ASSY, REAR WASHER	-----	2-L9
CAP ASSY, WINDSHIELD WASHER	-----	2-J9
CAP SUB-ASSY (FOR WATER OUTLET)	-----	1-L2
CAP SUB-ASSY, AIR CLEANER	-----	1-F3
CAP SUB-ASSY, OIL FILLER	-----	1-G1
CAP SUB-ASSY, RESERVE TANK	-----	1-L2
CAP SUB-ASSY, RESERVOIR	-----	1-B9
CAP, BLEEDER PLUG (FOR DISC BRAKE, FRONT)	-----	1-H10
CAP, BLEEDER PLUG (FOR DRUM BRAKE, REAR)	-----	1-K10
CAP, BLEEDER PLUG (FOR RELEASE CYLINDER)	-----	1-K5
CAP, CABLE ADJUSTING	-----	1-A10
CAP, FRONT AXLE OUTER SHAFT FLANGE	-----	1-J8
CAP, SHIFT LEVER	-----	1-J6
CAP, STEERING KNUCKLE BEARING	-----	1-E11
CAP, TERMINAL, NO.1	-----	2-L8
CAP, WINDSHIELD WIPER PIVOT, NO.2	-----	2-H9
CAPSULE, FULL STOP	-----	1-H4
CAPSULE, IDLING	-----	1-H4
CARPET ASSY, FRONT FLOOR	-----	2-A3
CARPET ASSY, REAR FLOOR	-----	2-B3
CARPET, REAR WHEEL HOUSE, LH	-----	2-B3
CARPET, REAR WHEEL HOUSE, RH	-----	2-B3

PART	NAME	LOCATION
CARRIER ASSY, DIFFERENTIAL, FRONT	-----	1-G8
CARRIER ASSY, DIFFERENTIAL, REAR	-----	1-A8
CARRIER SUB-ASSY, DIFFERENTIAL, FRONT	-----	1-G8
CARRIER SUB-ASSY, DIFFERENTIAL, REAR	-----	1-A8
CARRIER SUB-ASSY, JACK	-----	2-B7
CASE SUB-ASSY, TIMING GEAR	-----	1-K1
CASE SUB-ASSY, TRANSFER	-----	1-L6
CASE, COMBINATION METER	-----	2-K8
CASE, FRONT DIFFERENTIAL	-----	1-G8
CASE, MANUAL TRANSMISSION	-----	1-M5
CASE, OIL COOLER	-----	1-H2
CASE, REAR DIFFERENTIAL	-----	1-A8
CASING, SLIDING ROOF CABLE GUIDE	-----	2-L3
CHAMBER SUB-ASSY, COMBUSTION	-----	1-A4
CHANNEL SUB-ASSY, FRONT DOOR GLASS, LH	-----	2-B5
CHANNEL SUB-ASSY, FRONT DOOR GLASS, RH	-----	2-A5
CHANNEL, ROOF DRIP SIDE, FRONT LH	-----	2-F3
CHANNEL, ROOF DRIP SIDE, FRONT RH	-----	2-F3
CHANNEL, ROOF DRIP, REAR LH	-----	2-F3
CHANNEL, ROOF DRIP, REAR RH	-----	2-F3
CHECK ASSY, BACK DOOR	-----	2-D5
CHECK ASSY, FRONT DOOR	-----	2-L4
CLAMP (FOR AIR CLEANER HOSE, NO.1)	-----	1-F3
CLAMP (FOR AIR CLEANER HOSE, NO.2)	-----	1-F3
CLAMP (FOR FRONT AXLE BREATHER HOSE)	-----	1-H8
CLAMP (FOR HOOD LOCK CONTROL CABLE)	-----	2-L1
CLAMP (FOR OIL RESERVOIR TO PUMP HOSE)	-----	1-E9
CLAMP (FOR REAR AXLE BRATHER HOSE)	-----	1-C8
CLAMP (FOR RETURN HOSE)	-----	1-E9
CLAMP OR CLIP (FOR RADIATOR RESERVE TANK HOSE)	-----	1-L2
CLAMP OR CLIP, HOSE (FOR RADIATOR INLET)	-----	1-L2
CLAMP OR CLIP, HOSE (FOR RADIATOR OUTLET, NO.1)	-----	1-M2
CLAMP OR CLIP, HOSE (FOR WATER BY-PASS HOSE)	-----	1-L2
CLAMP SUB-ASSY, TOOL BAG	-----	2-B7
CLAMP, ACCELERATOR CONTROL CABLE	-----	2-G7
CLAMP, BALL GUIDE	-----	1-K9
CLAMP, BATTERY HOLD DOWN	-----	2-G6
CLAMP, BRAKE TUBE, NO.2	-----	1-C11
CLAMP, FRONT DRIVE VACUUM TUBE, NO.1	-----	1-J7
CLAMP, FRONT DRIVE VACUUM TUBE, NO.2	-----	1-J7
CLAMP, HEATER CONTROL	-----	2-H10
CLAMP, HOOD SUPPORT ROD	-----	2-L1
CLAMP, HOSE (FOR AIR CLEANER DUCT)	-----	1-F3
CLAMP, INJECTION PIPE, NO.1	-----	1-C4
CLAMP, STEERING RELAY ROD END	-----	1-L9
CLAMP, TIE ROD END	-----	1-L9
CLAMP, VENTILATION TUBE	-----	1-M1
CLEANER ASSY, AIR	-----	1-F3
CLEVIS, CLUTCH MASTER CYLINDER PUSH ROD	-----	1-H5
CLEVIS, MASTER CYLINDER PUSH ROD	-----	1-E10
CLEVIS, TRANSFER SHIFT ROD	-----	1-G7
CLINOMETER ASSY	-----	2-L8
CLIP (FOR DISC BRAKE ANTIRATTLE)	-----	1-H10
CLIP (FOR FRONT BODY PILLAR GARNISH)	-----	2-B4
CLIP (FOR FRONT DOOR GLASS INNER WEATHERSTRIP SET)	-----	2-L4
CLIP (FOR FRONT DOOR GLASS OUTER WEATHERSTRIP)	-----	2-H4
CLIP (FOR FRONT FENDER APRON SEAL)	-----	2-A2
CLIP (FOR FRONT FLOOR CARPET)	-----	2-A3
CLIP (FOR HOOD INSULATOR)	-----	2-J1
CLIP (FOR HOOD TO RADIATOR SUPPORT SEAL)	-----	2-J1
CLIP (FOR LOAD SENSING VALVE BOOT)	-----	1-C11
CLIP (FOR RESERVOIR TUBE)	-----	1-E10
CLIP (FOR SEAT TRACK COVER)	-----	2-M5
CLIP (FOR STEERING LINK DUST SEAL)	-----	1-L9

SPRING - SUPPORT

D13

M74-26-0054

SUPPORT - TUBE


PART	NAME	LOCATION
SPRING, SYNCHROMESH SHIFTING KEY, NO.2		1-F4
SPRING, TENSION (FOR PARKING BRAKE BELL CRANK RETURN)		1-K10
SPRING, TENSION (FOR REAR BRAKE SHOE RETURN)		1-J10
SPRING, TENSION (FOR STEERING TILT LEVER)		1-A9
SPRING, TENSION (FOR TILT STEERING)		1-M8
SPRING, TENSION, NO.1 (FOR RECLINING SEAT ADJUSTER)		2-A6
SPRING, TENSION, NO.1 (FOR SEAT TRACK)		2-M5
SPRING, TIMER		1-L4
SPRING, TORSION (FOR REAR BRAKE AUTOMATIC ADJUST LEVER)		1-J10
STARTER ASSY		1-K3
STATOR ASSY, ALTERNATOR		1-J3
STAY, INJECTION PUMP		1-C4
STAY, INJECTION PUMP BODY		1-E4
STAY, PUMP, REAR		1-E9
STEP SUB-ASSY, LH		2-12
STEP SUB-ASSY, RH		2-12
STOPPER SUB-ASSY, BACK DOOR, LOWER		2-F5
STOPPER SUB-ASSY, BACK DOOR, NO.2		2-F5
STOPPER, ACCELERATOR PEDAL		2-G7
STOPPER, BUMPER, FRONT		1-I11
STOPPER, CONSOLE COMPARTMENT DOOR, NO.1		2-C3
STOPPER, DOOR VENTILATING WINDOW OPENING		2-J4
STOPPER, FUEL FILLER OPENING LID		2-F7
STRAINER SUB-ASSY, OIL		1-E2
STRAINER, BRAKE MASTER CYLINDER RESERVOIR		1-E10
STRAP ASSY, REAR SEAT LOCK RELEASE		2-A6
STRIKER ASSY, BACK DOOR LOCK		2-G5
STRIKER ASSY, BACK DOOR LOWER LOCK		2-G5
STRIKER ASSY, BACK DOOR UPPER LOCK		2-G5
STRIKER, CONSOLE COMPARTMENT DOOR LOCK		2-C3
STRIKER, GLOVE COMPARTMENT DOOR LOCK		2-D2
STRIKER, REAR NO.1 SEAT LOCK		2-A6
STRIPE, SIDE, LH NO.1		2-A7
STRIPE, SIDE, LH NO.2		2-A7
STRIPE, SIDE, LH NO.3		2-A7
STRIPE, SIDE, RH NO.1		2-A7
STRIPE, SIDE, RH NO.2		2-A7
STRIPE, SIDE, RH NO.3		2-A7
STRIPE, SIDE, RH NO.5		2-A7
SUPPORT ASSY, REAR SEAT CUSHION		2-A6
SUPPORT SUB-ASSY, BRAKE PEDAL		1-C10
SUPPORT SUB-ASSY, CLUTCH PEDAL		1-F5
SUPPORT SUB-ASSY, RADIATOR, LH		2-M1
SUPPORT SUB-ASSY, RADIATOR, LOWER		2-M1
SUPPORT SUB-ASSY, RADIATOR, RH		2-M1
SUPPORT SUB-ASSY, RADIATOR, UPPER		2-M1
SUPPORT SUB-ASSY, STEERING GEAR BOX		2-A1
SUPPORT SUB-ASSY, TILT STEERING		1-M8
SUPPORT SUB-ASSY, VACUUM TUBE UNION		1-J7
SUPPORT, BATTERY TRAY, NO.2		2-G6
SUPPORT, BATTERY TRAY, NO.3		2-G6
SUPPORT, BATTERY TRAY, NO.4		2-G6
SUPPORT, FRONT SEAT HEADREST		2-M5
SUPPORT, HEADREST		2-M5
SUPPORT, INTERMEDIATE LINK JOINT PROTECTOR		1-A9
SUPPORT, OIL LEVEL GAGE GUIDE		1-I1
SUPPORT, REAR SEAT HEADREST		2-M5
SUPPORT, REAR WASHER MOTOR		2-L9
SUPPORT, RELEASE FORK		1-D5
SUPPORT, ROOF HEADLINING, NO.1		2-D4
SUPPORT, ROOF HEADLINING, NO.2		2-D4
SUPPORT, ROOF HEADLINING, NO.3		2-E4
SUPPORT, ROOF HEADLINING, NO.4		2-E4
SUPPORT, ROOF HEADLINING, NO.5		2-E4

PART	NAME	LOCATION
SUPPORT, STEERING COLUMN COVER		1-M8
SUPPORT, VALVE ROCKER, NO.1		1-D2
SUPPORT, VALVE ROCKER, NO.2		1-D2
SUPPORT, VALVE ROCKER, NO.3		1-D2
SUSPENSION ASSY, SEAT		2-A6
SWITCH ASSY, BACK UP LAMP		2-D9
SWITCH ASSY, COURTESY LAMP (FOR FRONT DOOR)		2-D9
SWITCH ASSY, HAZARD WARNING SIGNAL		2-D9
SWITCH ASSY, HEADLAMP DIMMER		2-D9
SWITCH ASSY, HEATER BLOWER		2-D9
SWITCH ASSY, IGNITION		2-D9
SWITCH ASSY, LIGHT CONTROL, NO.1		2-D9
SWITCH ASSY, MAGNET STARTER		1-L3
SWITCH ASSY, OIL PRESSURE		2-G9
SWITCH ASSY, OIL PRESSURE (FOR ENGINE)		2-D9
SWITCH ASSY, PARKING BRAKE		2-D9
SWITCH ASSY, POWER WINDOW REGULATOR		2-E9
SWITCH ASSY, REAR WINDOW DEFOGGER		2-E9
SWITCH ASSY, STOP LAMP		2-D9
SWITCH ASSY, TURN SIGNAL		2-D9
SWITCH ASSY, VACUUM WARNING		2-C9
SWITCH ASSY, WINDSHIELD WIPER		2-D9
SWITCH, LEVEL WARNING		2-D9
SWITCH, REAR HEATER BLOWER		2-D9
SWITCH, REAR WIPER		2-D9
SWITCH, TRANSFER INDICATOR, NO.1		2-D9
SWITCH, TRANSFER INDICATOR, NO.3		2-D9
SWITCH, TRANSMISSION CONTROL		2-D9
TACHOMETER ASSY, ENGINE		2-L8
TANK ASSY, AUXILIARY FUEL		2-F7
TANK ASSY, FUEL		2-E7
TANK ASSY, RADIATOR RESERVE		1-L2
TAPE PLAYER ASSY		2-A10
TAPPET SUB-ASSY, INJECTION PUMP		1-D4
TAPPET, FEED PUMP		1-K4
TERMINAL SUB-ASSY, LEAD WIRE, ALTERNATOR		1-I3
TERMINAL, BATTERY POSITIVE		2-E8
THERMOSTAT		1-L2
TIMER ASSY, AUTOMATIC		1-L4
TIMER, PREHEATING		2-C9
TRACK ASSY, LH SEAT, INNER		2-A6
TRACK ASSY, LH SEAT, OUTER (FOR SEPARATE SEAT)		2-M5
TRACK ASSY, RH SEAT, INNER		2-M5
TRACK ASSY, RH SEAT, OUTER (FOR SEPARATE SEAT)		2-M5
TRANSFER ASSY		1-K6
TRANSMISSION ASSY, MANUAL		1-L5
TRAY, BATTERY		2-G6
TRIM SUB-ASSY, BACK DOOR OPENING		2-D5
TRIM SUB-ASSY, SUNSHADE		2-D4
TRIM, FRONT DOOR OPENING, LH		2-B4
TRIM, FRONT DOOR OPENING, RH		2-B4
TUBE ASSY, PRESSURE FEED		1-E9
TUBE SUB-ASSY, FUEL TANK SUCTION		2-E7
TUBE SUB-ASSY, STEERING COLUMN		1-M8
TUBE, CLUTCH MASTER CYLINDER TO FLEXIBLE HOSE		1-F5
TUBE, FRONT BRAKE, NO.1		1-B11
TUBE, FRONT BRAKE, NO.2		1-B11
TUBE, FRONT BRAKE, NO.3		1-B11
TUBE, FRONT BRAKE, NO.4		1-B11
TUBE, FRONT BRAKE, NO.5		1-B11
TUBE, FRONT DRIVE VACUUM, NO.1		1-J7
TUBE, FRONT DRIVE VACUUM, NO.2		1-J7
TUBE, FUEL MAIN, NO.1		2-E7
TUBE, FUEL MAIN, NO.2		2-E7

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
45451-60100-	1-L9	47234-14010-	1-E10	47920-60050-	1-C11	48823-27010-	1-J11	53101-90K00-	2-I1	55107-90K01-	1-F3
45457-60010-	1-L9	47264-22010-	1-E10	47931-35050-	1-C11	-60030-	1-J11	-90K01-	2-I1	55210-90K01-	2-A2
45458-60010-	1-L9	47265-20050-	1-E10	47933-60050-	1-C11	48825-60020-	1-J11	53202-90K01-	2-M1	-90K03-	2-A2
45460-69135-	1-L9		1-H5	47935-35010-	1-C11	51002-60060-	2-A1	53203-90K01-	2-M1	55301-90K03-03	2-C2
45461-60100-	1-L9	-20060-	1-E10	47936-35010-	1-D11	-60061-	2-A1	53207-90K04-	1-F3	-90K03-05	2-C2
45466-36010-	1-L9	47275-14010-	1-H5	47937-60010-	1-D11	-60062-	2-A1	53216-90K02-	2-M1	-90K08-03	2-C2
-55020-	1-L9	-22010-	1-E10	48046-60060-	1-L11	51065-60040-	2-A1	53217-90K02-	2-M1	-90K08-05	2-C2
45473-35010-	1-L9	47280-30030-	1-E10	48047-60010-	1-L11	51077-90K00-	2-I2	53241-90K00-	2-M1	-90K22-03	2-C2
45475-35010-	1-L9	47299-14010-	1-E10	48048-60010-	1-I11	51078-90K00-	2-I2	53291-90K00-	2-M1	-90K22-05	2-C2
45611-60060-	1-L9	47312-60490-	1-B11	48049-60020-	1-I11	51201-60100-	2-A1	53295-90K00-	1-F3	-90K24-03	2-C2
45612-60060-	1-L9	47313-60140-	1-B11	48102-60230-	1-H11	-60101-	2-A1	53297-90K00-	1-F3	-90K24-05	2-C2
45635-60020-	1-A9	-60141-	1-B11	48110-60230-	1-H11	51202-60110-	2-A1	53299-90K05-	1-F3	55305-90K00-	2-C2
45636-60061-	1-A9	47314-60160-	1-B11	-60231-	1-H11	51203-60130-	2-A1	53301-90K05-	2-J1	55308-90K01-01	2-C2
45700-69025-	1-M9	-60161-	1-B11	48111-60230-	1-H11	-60131-	2-A1	-90K13-	2-J1	-90K01-03	2-C2
45721-60070-	1-M9	47315-60320-	1-B11	48112-60230-	1-H11	51204-60081-	2-A1	-90K27-	2-J1	-90K01-05	2-C2
-60071-	1-M9	-60321-	1-B11	48114-60230-	1-H11	5205-60020-	2-A1	53303-90K05-	2-J1	55309-90K00-01	2-C2
45804-22010-	1-A9	47316-60190-	1-B11	48115-60230-	1-H11	51209-60070-	2-A1	53304-90K05-	2-J1	-90K00-03	2-C2
45813-22010-	1-A9	47322-60380-	1-C11	48141-60062-	1-I11	51321-60030-	2-A1	-90K06-	2-J1	-90K00-06	2-C2
-22020-	1-A9	47323-60200-	1-C11	-60200-	1-L11	51322-60030-	2-A1	-90K14-	2-J1	55355-90K00-03	2-C2
-22030-	1-A9	47324-60090-	1-C11	48153-60230-	1-I11	51405-60050-	2-C1	53341-90K01-	2-J1	-90K00-05	2-C2
-22040-	1-A9	-60091-	1-C11		1-L11	51421-60080-	2-B1	-90K05-	2-J1	55356-90K00-03	2-C2
-22050-	1-A9	47325-60080-	1-C11	48154-60230-	1-I11	51422-60080-	2-B1	53381-90K01-	2-J1	-90K00-05	2-C2
45814-22010-	1-A9	-60081-	1-C11		1-L11	51442-60030-	2-C1	53382-30060-	2-J1	55357-90A00-	2-C2
-22020-	1-A9	47326-60080-	1-C11	48202-60460-	1-L11	-60031-	2-C1	-90K00-	2-J1	55401-90K01-03	2-C2
45815-22060-	1-A9	47341-60031-	1-C11	48210-60460-	1-L11	51495-60130-	2-C1	-95189-	2-J1	-90K01-06	2-C2
-22070-	1-A9	47343-60021-	1-C11	-60461-	1-L11	51701-60070-	2-F1	53383-90K00-	2-F2	-90K03-03	2-C2
-22080-	1-A9	47351-60130-	1-C11	-60550-	1-L11	51703-60030-	2-B1	53410-90K00-	2-L1	-90K03-06	2-C2
-22090-	1-A9	47354-60040-	1-C11	-60551-	1-L11	51704-60020-	2-B1	53420-90K00-	2-L1	55403-90K00-03	2-C2
-22100-	1-A9	-60090-	1-C11	48211-60460-	1-L11	51707-90K00-	2-I2	53445-90K00-	2-L1	-90K00-06	2-C2
45819-22011-	1-A9	47355-60030-	1-C11	48212-60460-	1-L11	-90K02-	2-I2	53446-90K00-	2-L1	55404-90K00-03	2-C2
45821-22010-	1-A9	47371-60040-	1-J7	-60461-	1-L11	51708-90K00-	2-I2	53451-90K01-	2-L1	-90K00-06	2-C2
45870-60050-	1-M8	47372-35010-	1-C11	48213-60460-	1-L11	-90K02-	2-I2	53455-14020-	2-L1	55412-90K03-03	2-C2
45890-22050-	1-A9	-35010-	1-J7	-60461-	1-L11	51709-60030-	2-B1	53497-90K00-	2-L1	-90K03-05	2-D2
45897-14010-	1-A9	47447-60010-	1-J10	48215-60460-	1-L11	51773-90K00-	2-I2	53510-90K01-	2-L1	-90K04-03	2-D2
45898-22010-	1-A9	47449-30020-	1-K10	48216-60460-	1-L11	51773-90K00-	2-I2	53630-90K01-	2-L1	-90K04-05	2-D2
45899-22020-	1-A9	47491-20011-	1-K10	48284-60062-	1-I11	51908-90K03-	2-D1	-90K02-	2-L1	55413-90K00-	2-D2
46210-60060-03	1-A10	47509-60010-	1-K10		1-L11	51961-60050-	2-C1	53701-90K08-	2-M1	55468-90K00-	2-D2
-60060-06	1-A10	47547-12010-	1-K5	48289-60010-	1-I11	51998-90K00-	2-D1	-90K50-	2-M1	55477-90K01-01	2-D2
46217-10020-33	1-A10	-12030-	1-A5		1-L11	52101-60010-	2-G1	53702-90K12-	2-M1	55497-90K00-	2-D2
-10020-56	1-A10	-20030-	1-H10	48304-60050-	1-I11	-60020-	2-I1	-90K96-	2-M1	55498-90K00-	2-D2
46243-60060-01	1-A10	-60020-	1-K10	48305-60020-	1-I11	52106-60030-	2-	53737-90K01-	2-A2	55501-90K00-03	2-D2
-60060-06	1-A10	47550-60120-	1-K10	48306-60050-	1-M11	-60040-	2-		2-M1	-90K00-05	2-D2
46341-35030-	1-A10	-69105-	1-K10	48346-60010-	1-I11	52107-60030-	2-H1	-90K03-	2-A2	-90K01-03	2-D2
46410-60230-	1-A10	47611-60010-	1-K10	48404-60010-	1-M11	-60080-	2-H1		2-M1	-90K01-05	2-D2
46443-12020-	1-A10	47612-60010-	1-K10	48407-60010-	1-M11	-90K00-	2-H1	53801-90K04-	2-K1	55505-90K00-	2-D2
46451-60060-	1-A10	47616-60010-	1-K10	48411-60050-	1-I11	-90K01-	2-H1	53802-90K04-	2-K1	55519-90K01-	2-M8
-60070-	1-A10	47624-60010-	1-K10	48412-60010-	1-I11	52108-60010-	2-H1	53833-90K01-	2-K1	55521-16010-	2-D2
	1-B10	47625-60010-	1-K10	48416-60060-	1-M11	52109-60010-	2-H1	53834-90K01-	2-K1	55522-32010-	2-D2
46458-30020-	1-B10	47626-60010-	1-K10	48417-60010-	1-M11	52116-60020-	2-G1	53878-90K00-	2-K1	55533-90A00-	2-D2
46469-60020-	1-B10	47628-35020-	1-K10	48433-60020-	1-I11	52117-60010-	2-G1	53879-90K00-	2-K1	55539-32010-01	2-D2
47043-60050-	1-J10	47633-35020-	1-K10	48434-60020-	1-I11	52151-60090-	2-H1	53911-90K02-	2-K1	55547-90K00-	2-D2
47044-60010-	1-J10	47643-60010-	1-L10	48475-60020-	1-I11	52173-60010-	2-H1	55042-90K01-03	2-C2	55556-90K01-	2-D2
47061-60011-	1-K10	47644-60010-	1-L10		1-M11	52174-60010-	2-H1	-90K01-05	2-C2	55560-90K00-01	2-D2
47062-60011-	1-K10	47655-60010-	1-K10	48511-60120-	1-I11	-90K00-	2-H1	55084-90K01-	2-J10	55561-90K00-	2-D2
47101-60110-	1-C10	47703-60020-	1-I10		1-J11	52201-25020-	2-E1	-90K05-	2-J10	55581-90K00-	2-D2
47201-60220-	1-D10	47704-60020-	1-I10	48512-60040-	1-I11		2-F1	55085-90K01-	2-J10	55650-90K00-01	2-D2
47202-60040-	1-D10	47730-60021-	1-H10		1-J11	52202-25020-	2-F1	55086-90K01-	2-J10	55660-90K00-01	2-D2
47218-12040-	1-D10	47731-30020-	1-H10	48531-60140-	1-M11		2-F1	55087-90K01-	2-J10	55670-90K00-01	2-D2
47230-20040-	1-H5	47732-30010-	1-H10	48811-60220-	1-J11	52203-60020-	2-E1	55088-90K01-	2-J10	55700-90K32-	2-F2
47231-20010-	1-H5	47748-60010-	1-H10	-60050-	1-J11	-60030-	2-E1	55101-90K82-	2-A2	-90K59-	2-F2
-30010-	1-D10	47750-60021-	1-I10	48815-26040-	1-J11	52204-60020-	2-E1	-90K83-	2-A2	55780-90K01-	2-F2
	1-H5	47786-60020-	1-I10	-30050-	1-J11	-60030-	2-E1	-90L59-	2-A2	55781-90K02-	2-F2
47232-30010-	1-D10	47787-60020-	1-I10	48817-30010-	1-J11	52209-60020-	2-F1	-90L60-	2-A2	55788-90K00-	2-F2
	1-H5	47910-26040-	1-C11	48823-26050-	1-J11	53028-90K03-	2-M1	55106-90K00-	1-C10	55791-90K01-	2-F2



ILLUSTRATED INDEX

D16

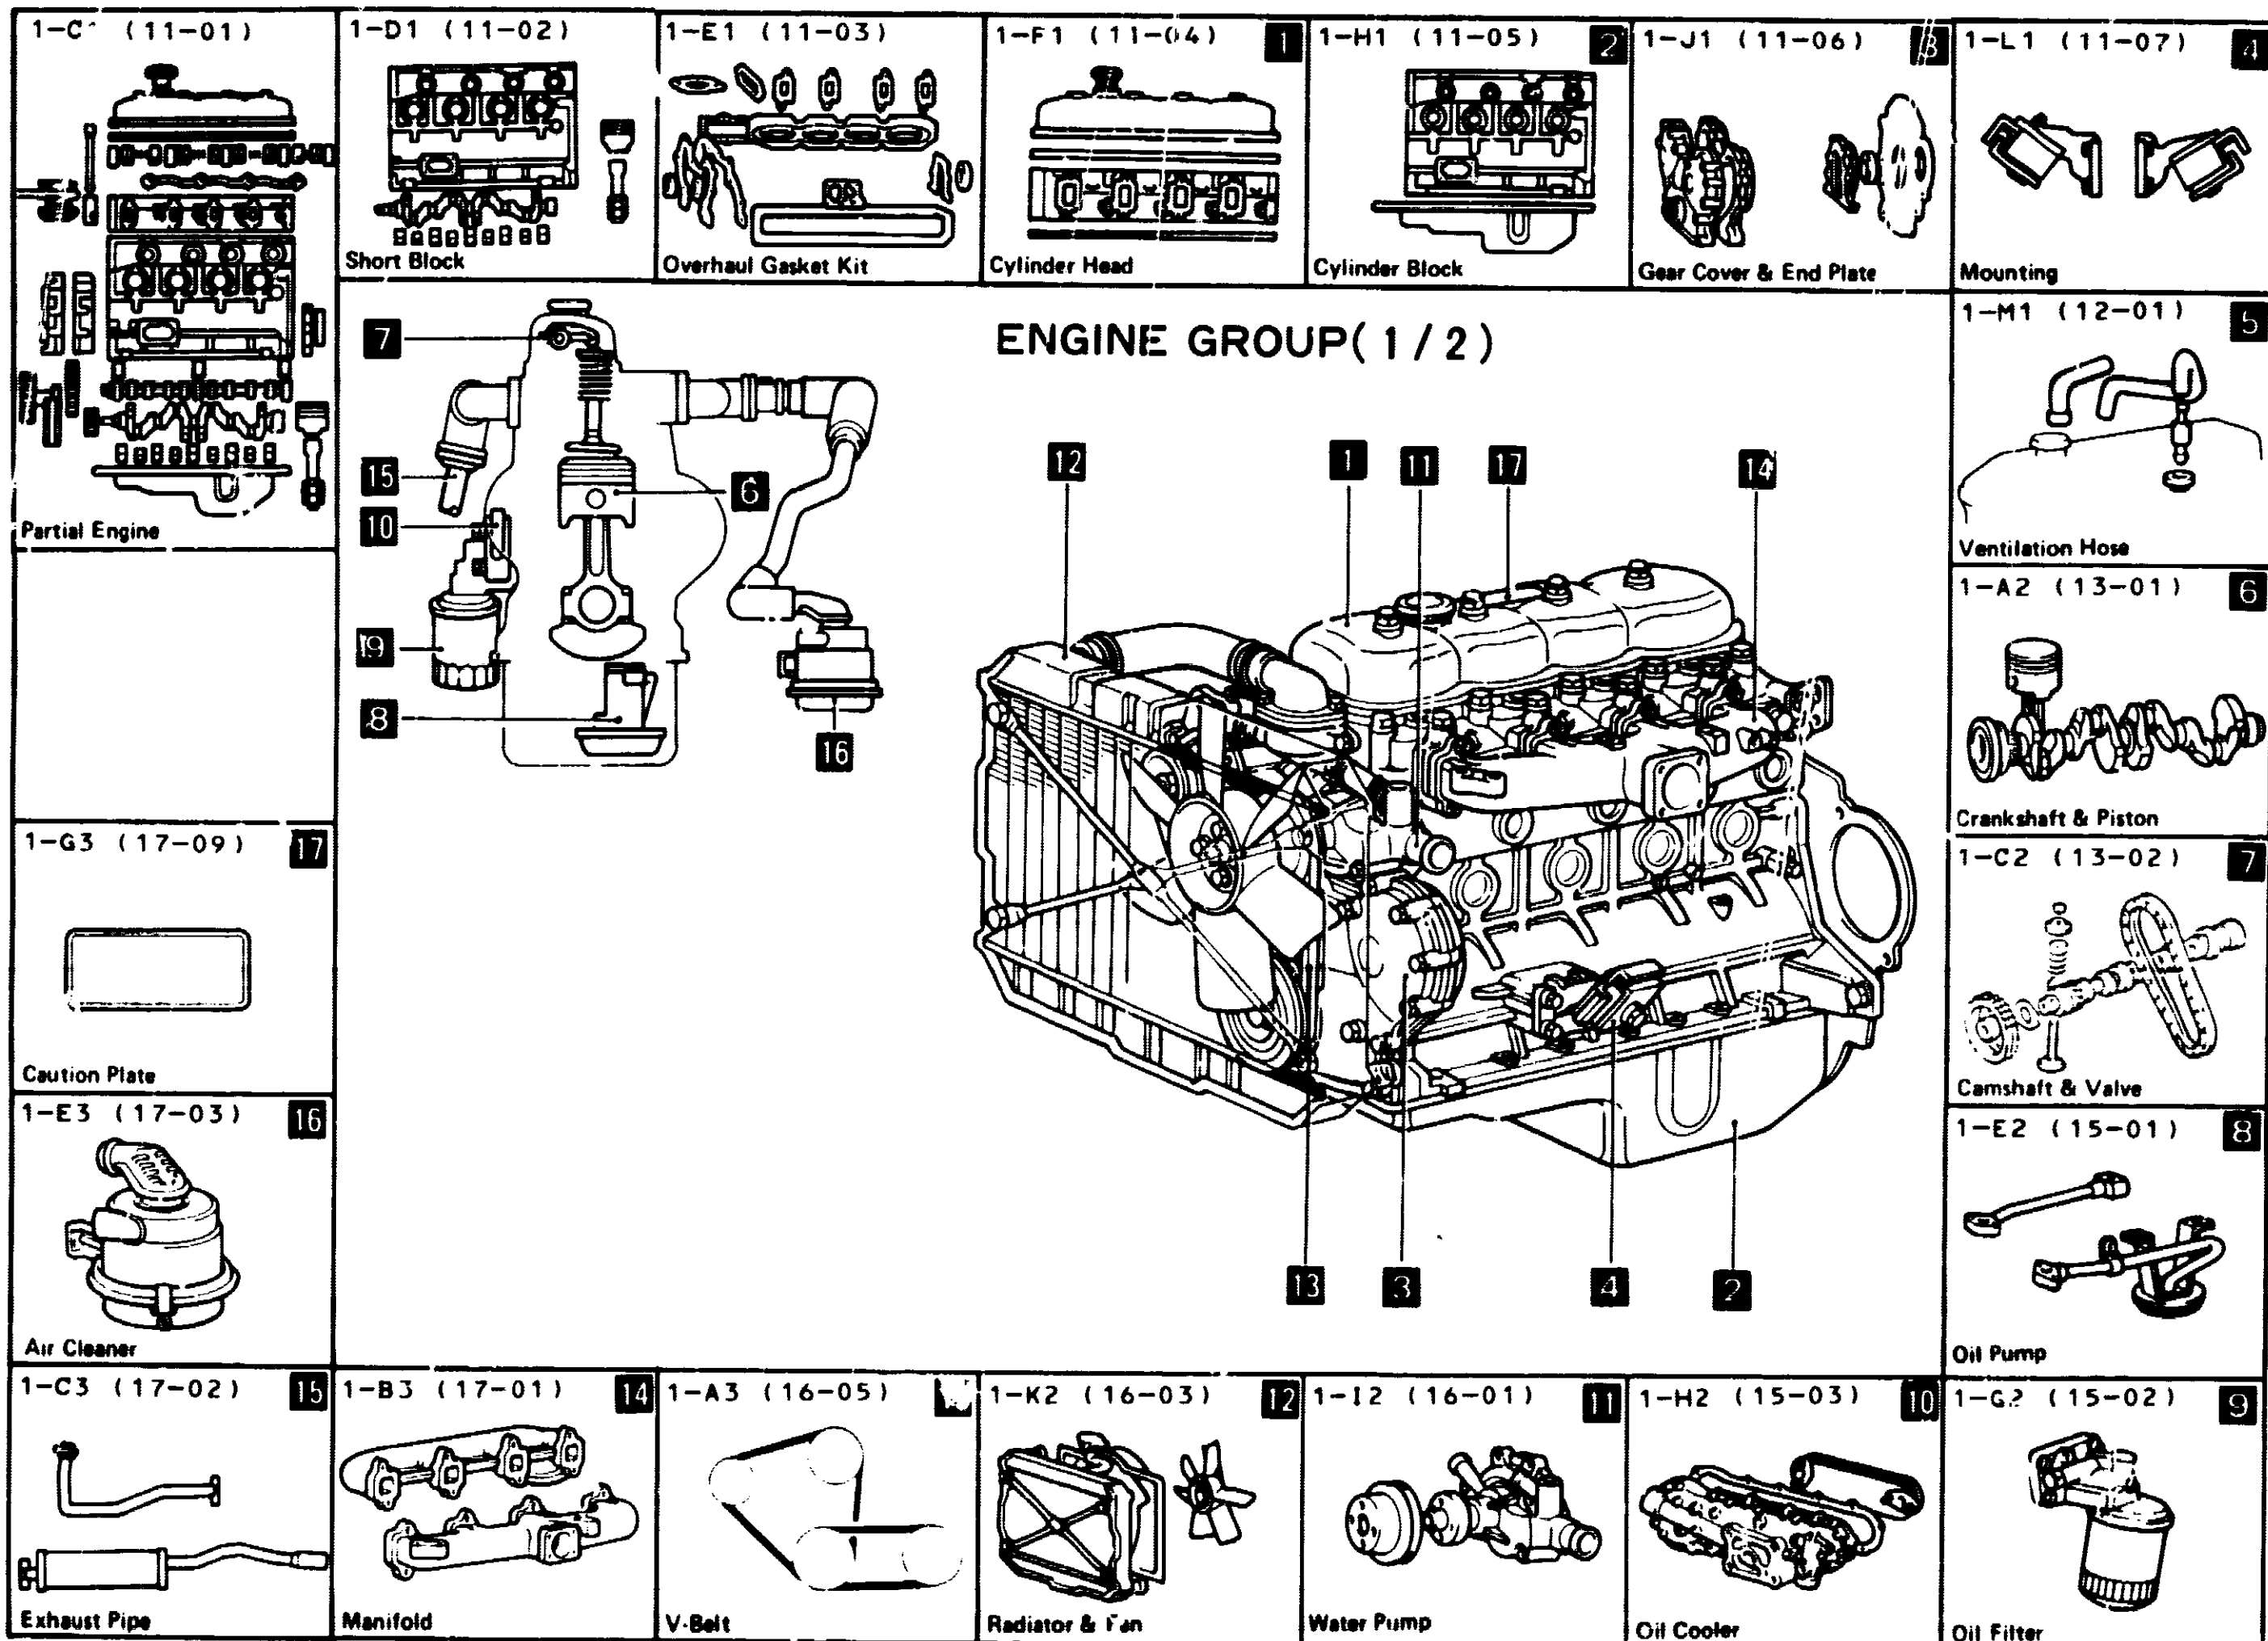

(8411-)

GENUINE TOYOTA PARTS

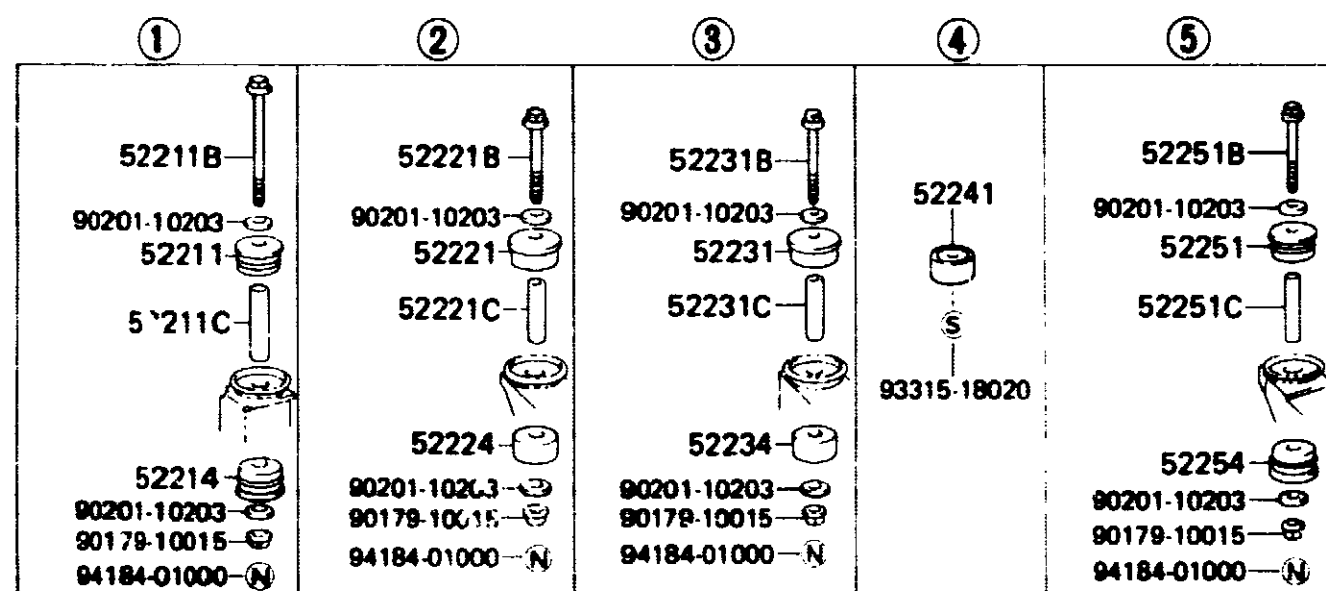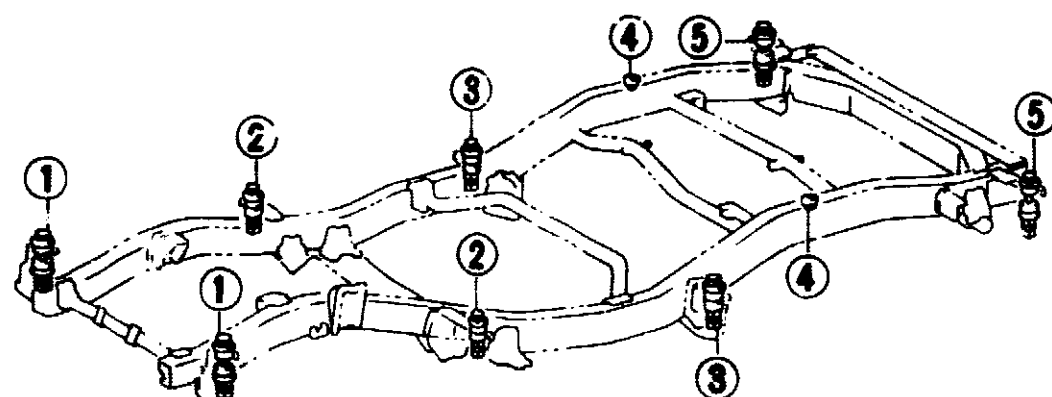

M74 H621

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	52-51 CAB MOUNTING & BODY MOUNTING						
8411-	BJ70	52211 CUSHION, BODY MOUNT, NO.1 UPPER		52201-25020-	2	81	
8411-	BJ70	52211B BOLT (FOR BODY MOUNT NO.1 CUSHION)		90105-10103-	2	81	
8411-	BJ70	52211C SPACER (FOR BODY MOUNT NO.1 CUSHION)		90440-17021-	2	81	
8411-	BJ70	52214 CUSHION, BODY MOUNT, NO.1 LOWER		52202-25020-	2	81	
8411-	BJ70	52221 CUSHION, BODY MOUNT, NO.2 UPPER		52203-60020-	2	81	
8411-	BJ70	52221B BOLT (FOR BODY MOUNT NO.2 CUSHION)		90105-10039-	2	81	
8411-	BJ70	52221C SPACER (FOR BODY MOUNT NO.2 CUSHION)		90560-12233-	2	81	
8411-	BJ70	52224 CUSHION, BODY MOUNT, NO.2 LOWER		52204-60020-	2	81	
8411-	BJ70	52231 CUSHION, BODY MOUNT NO.3 UPPER		52203-60030-	2	81	
8411-	BJ70	52231B BOLT (FOR BODY MOUNT NO.3 CUSHION)		90105-10039-	2	81	
8411-	BJ70	52231C SPACER (FOR BODY MOUNT NO.3 CUSHION)		90560-12233-	2	81	
8411-	BJ70	52234 CUSHION, BODY MOUNT NO.3, LOWER		52204-60030-	2	81	



FIG. 77-51

GENUINE TOYOTA PARTS

2-E7

M74-15-0693

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	77-51 FUEL TANK & TUBE						
	77022A	HOSE, FUEL (FOR FUEL EVAPORATIVE SEPARATOR)					
C 8411-8701	BJ70	XH, L=220		95332-06030-	2	81	
8411-	BJ70	XH, L=60		95332-06010-	2	81	
8411-	BJ70	XH, L=80			1	81	
8411-	BJ70	XH, L=170		95332-06020-	1	81	
8411-	BJ70	L=300		95332-06030-	1	81	
C 8701-	BJ70	L=220		95333-06022-	2		
	77023	FILTER SUB-ASSY, FUEL SUCTION TUBE					
8411-	BJ70			77023-22040-	1	81	
	77031	CAP ASSY, FUEL TANK					
8411-	BJ70			77310-35061-	1	81	
	77031B	GASKET (FOR FUEL TANK CAP)					
8411-	BJ70			77316-12050-	1	81	
	77035	CABLE SUB-ASSY, FUEL LID LOCK CONTROL					
8411-	BJ70			77035-90K01-	1	81	
	77037	LOCK SUB-ASSY, FUEL FILLER OPENING LID					
8411-	BJ70			77037-90K00-	1	81	
	77100	TANK ASSY, FUEL					
8411-	BJ70			77100-60290-	1	81	
	77100A	PLUG (FOR FUEL TANK)					
8411-8507	BJ70			90341-20003- (90341-20004-)	1	81	
8507-	BJ70			90341-20004-	1		
	77100B	GASKET (FOR FUEL TANK)					
8411-8507	BJ70	T=2.0		90430-20006-	1	81	
8507-	BJ70	T=2.5		90430-20007-	1		

*H.L=Cut hose to length as specified in remarks



PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
	77100D	HOSE, FUEL, NO.1 (FOR FUEL TANK)					
8411-	BJ70			90445-22011-	1	81	
	77131	BRACKET, FUEL TANK FILLER PIPE SUPPORT					
8411-	BJ70			77131-90K00-	1	81	
	77201	PIPE SUB-ASSY, FUEL TANK INLET					
8411-	BJ70			77201-60200-	1	81	
	77206	TUBE SUB-ASSY, FUEL TANK SUCTION					
8411-	BJ70			77240-60110-	1	81	
	77206A	GASKET (FOR FUEL TANK SUCTION TUBE)					
8411-	BJ70			77169-14020-	1	81	
	77213	HOSE, FUEL TANK SUB INLET					
8411-	BJ70			77213-60040-	1	81	
	77241	TUBE, FUEL MAIN, NO.1					
8411-	BJ70	NO.1		77253-60070-	1	81	
8411-	BJ70	NO.2		77253-60080-	1	81	
	77241A	HOSE, FUEL, NO.1 (FOR MAIN TUBE, NO.1)					
8411-	BJ70	XH, L=360		95332-08040-	1	81	
	77242	TUBE, FUEL MAIN, NO.2					
8411-8608	BJ70			77252-60100-	1	81	140
8608-	BJ70			77252-60101-	1	141	
	77242A	HOSE, FUEL, NO.1 (FOR MAIN TUBE, NO.2)					
C 8411-8701	BJ70	L=200		95332-08020-	1	81	
8411-	BJ70	L=280		90447-14030-	1	81	
8411-	BJ70	L=300		90447-14031-	1	81	
C 8701-	BJ70	L=200		95333-08020-	1		
	77243	TUBE, FUEL MAIN, NO.3					
8411-	BJ70			77251-60280-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-8510	BJ70	SWITCH ASSY, REAR WINDOW DEFOGGER		84790-90K01-	1	81	100
				84790-90K02-	1	101	
8411-8510	BJ70	BULB (FOR REAR WINDOW DEFOGGER SWITCH)		84999-10110-	1	(1)	100
8411-8608	BJ70	SWITCH ASSY, POWER WINDOW REGULATOR		84810-90K00-03	1	81	140
				84810-90K00-06	1	81	140
8411-8510	BJ70	MASTER SWITCH ASSY, POWER WINDOW REGULATOR		84820-90K01-03	1	81	100
				84820-90K01-06	1	81	100
8510-8608	BJ70			84820-90K04-03	1	101	140
				84820-90K04-06	1	101	140
8411-8608	BJ70	SOLENOID ASSY, FRONT DRIVE		85440-60060-	1	81	140
				85440-60070-	1	141	
8411-8510	BJ70	LIGHTER ASSY, CIGARETTE		85500-12190-	1	81	100
				85500-90K06-	1	101	
8510-	BJ70	PLATE, VOLTAGE CAUTION		74534-90K00-	1	101	
8411-8510	BJ70	KNUB AND ELEMENT ASSY, CIGARETTE LIGHTER		85520-14030-	1	81	100
				85520-95400-	1	101	
8411-8510	BJ70	RELAY ASSY (FOR HEATER BLOWER MOTOR)		85913-30020-	1	81	100
				90987-02004-	1	81	100
8510-	BJ70	FR HEATER		85913-90K00-	1	101	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8510-	BJ70	RELAY ASSY (FOR HEATER BLOWER MOTOR)		90987-02005-	1	101	
8411-8510	BJ70	TAIL		90987-01003-	1	81	100
				90987-02006-	1	81	100
8510-	BJ70	TAIL		90987-01004-	1	101	
				90987-02005-	2	101	
8411-8608	BJ70	RELAY, FRONT DRIVE		90987-03001-	1	81	140
				90987-03002-	1	141	
8411-8510	BJ70	RELAY, SLIDING ROOF CONTROL		85921-90A00-	1	81	100
				85921-90A01-	1	101	
8510-	BJ70	RELAY, HEADLAMP DIMMER		85926-60010-	1	101	
8510-8608	BJ70	RELAY ASSY, POWER WINDOW		85930-90K03-	1	101	140
8411-8510	BJ70	RELAY ASSY, WINDSHIELD WIPER		85940-90K01-	1	81	100
				85940-90K03-	1	101	
8411-8510	BJ70	RELAY, SEAT BELT WARNING		85991-12050-	1	81	100
				85991-90K01-	1	101	
8411-	BJ70	BRACKET, RELAY, NO. 2		85999-12050-	1	81	
8411-	BJ70	BRACKET, RELAY		85999-89101-	1	81	

GENUINE TOYOTA PARTS

(8411-)

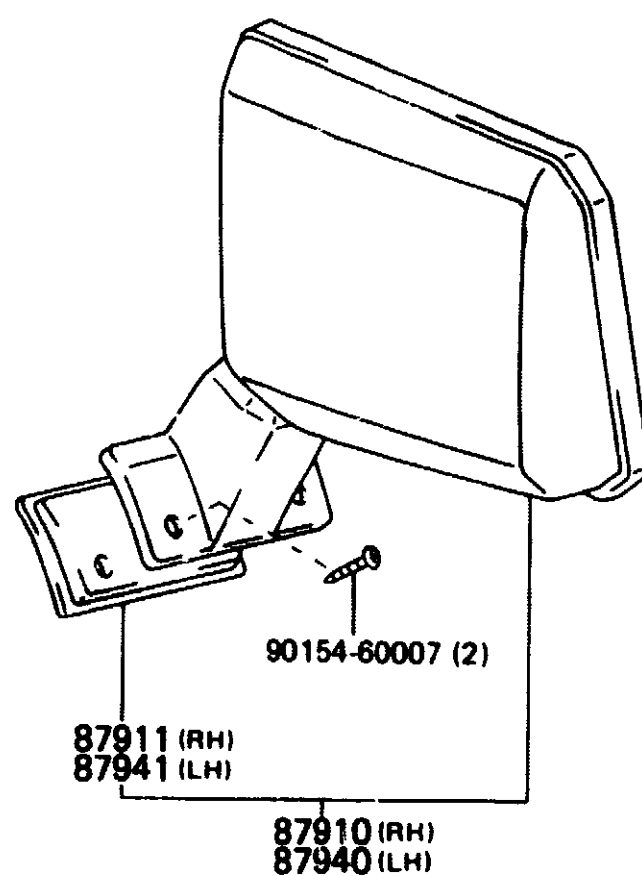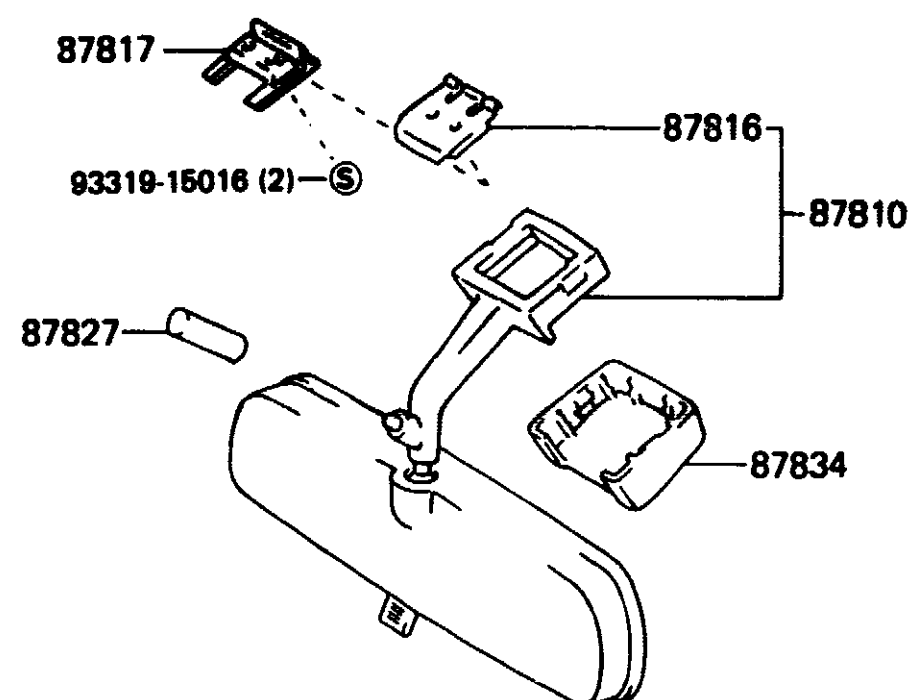

ME F440-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	87-01 MIRROR						
		87810 MIRROR ASSY, INNER REAR VIEW					
8411-8510	BJ70			87810-90K00-	1	81	100
8510-8608	BJ70			87810-90K02-	1	101	140
8608-	BJ70			87810-90K04-	1	141	
		87816 SPRING, INNER REAR VIEW MIRROR					
8411-8510	BJ70			74372-90A00-	1	81	100
8510-	BJ70			74372-30030-	1	101	
		87817 SPACER, INNER REAR VIEW MIRROR					
8411-8510	BJ70			87817-90K00-	1	81	100
		87827 ABSORBER, INNER REAR VIEW MIRROR					
8411-	BJ70	L=44		87828-30010-	1	81	
8411-	BJ70	L=49		87828-87005-	1	81	
		87834 COVER, INNER REAR VIEW MIRROR STAY HOLDER					
8411-	BJ70			87834-20080-18	1	81	
		87910 MIRROR ASSY, OUTER REAR VIEW, RH					
8411-	BJ70			87910-90K00-	1	81	
		87911 GASKET, OUTER REAR VIEW MIRROR, RH					
8411-	BJ70			87911-90K00-	1	81	
		87940 MIRROR ASSY, OUTER REAR VIEW, LH					
8411-	BJ70			87940-90K00-	1	81	
		87941 GASKET, OUTER REAR VIEW MIRROR, LH					
8411-	BJ70			87911-90K00-	1	81	

CLIP - COVER

E12

M74-26-0042

COVER - CRANK

PART	NAME	LOCATION
CLIP (FOR VACUUM HOSE)	-----	1-G10
CLIP, COWL SIDE TRIM BOARD SET	-----	2-B4
CLIP, DOOR GLASS RUN	-----	2-H4
CLIP, FRONT SPRING, NO.1	-----	1-I11
CLIP, HOSE (FOR FRONT AXLE BREATHER HOSE)	-----	1-H8
CLIP, HOSE (FOR REAR AXLE BREATHER HOSE)	-----	1-B8
CLIP, RADIATOR SUPPORT TO FRAME	-----	2-M1
CLIP, REAR SPRING, NO.1	-----	1-L11
CLIP, RELEASE BEARING HUB	-----	1-D5
CLIP, ROOF HEADLINING	-----	2-D4
CLOCK ASSY	-----	2-L8
CLUTCH SUB-ASSY, STARTER	-----	1-K3
COCK SUB-ASSY, WATER DRAIN (FOR CYLINDER BLOCK)	-----	1-H1
COLLAR (FOR LOAD SENSING SPRING SHACKLE)	-----	1-C11
COLLAR (FOR LOAD SENSING SPRING)	-----	1-C11
COLLAR (FOR PEDAL SHAFT)	-----	1-C10
COLLAR (FOR TILT LEVER RETAINER)	-----	1-A9
COLLAR OR NUT (FOR ALTERNATOR DRIVE END FRAME)	-----	1-I3
COLLAR, CLUTCH PEDAL SHAFT	-----	1-F5
COLLAR, MAIN SHAFT BEARING THRUST	-----	1-M8
COLLAR, REAR AXLE HOUSING SIDE	-----	1-B8
COLLAR, THROTTLE VALVE SHAFT	-----	1-B5
COLLAR, TILT STEERING SUPPORT, NO.1	-----	1-A9
COLLAR, TILT STEERING SUPPORT, NO.2	-----	1-A9
COMPARTMENT SUB-ASSY, GLOVE	-----	2-D2
CONDENSER, ALTERNATOR	-----	1-J3
CONNECTOR, GLOW PLUG NO.1	-----	1-H3
CONNECTOR, HEATER WATER HOSE, NO.2	-----	2-L10
CONNECTOR, INTAKE AIR	-----	1-F3
CONNECTOR, INTAKE AIR, NO.2	-----	1-F3
CONNECTOR, VACUUM HOSE	-----	1-G10
CONNECTOR, VENTURI PIPE	-----	1-B5
CONTROL ASSY, BACK DOOR REMOTE	-----	2-G5
CONTROL ASSY, HEATER OR BOOST VENTILATOR	-----	2-J10
CONVERTER SUB-ASSY, BOLTAGE	-----	2-A10
COOLER ASSY, OIL	-----	1-H2
CORD (FOR TILT STEERING)	-----	1-M8
COUPLING ASSY, FLUID	-----	1-I2
COVER ASSY, CLUTCH	-----	1-D5
COVER SUB-ASSY, CYLINDER HEAD	-----	1-G1
COVER SUB-ASSY, FREE WHEEL HUB	-----	1-J8
COVER SUB-ASSY, FUEL INLET BOX	-----	2-F7
COVER SUB-ASSY, INJECTION PUMP	-----	1-D4
COVER SUB-ASSY, QUARTER TRIM TOOL	-----	2-C4
COVER SUB-ASSY, REAR AXLE HOUSING	-----	1-B8
COVER SUB-ASSY, SIDE	-----	1-J9
COVER SUB-ASSY, SLIDING SHAFT DUST	-----	1-L7
COVER SUB-ASSY, STEERING COLUMN HOLE, NO.1	-----	1-M8
COVER SUB-ASSY, STEERING WHEEL	-----	1-G9
COVER SUB-ASSY, TIMING CHAIN OR BELT	-----	1-K1
COVER, ALTERNATOR FELT, INNER NO.1	-----	1-J3
COVER, ALTERNATOR FELT, INNER NO.2	-----	1-I3
COVER, AUTO CLOCK HOLE	-----	2-D2
COVER, BACK DOOR HINGE	-----	2-F5
COVER, BACK DOOR LOCK CONTROL LINK	-----	2-E5
COVER, BACK DOOR OPENING TRIM	-----	2-D5
COVER, BACK DOOR SERVICE HOLE, LH	-----	2-D5
COVER, BACK DOOR SERVICE HOLE, RH	-----	2-D5
COVER, CHOKE KNOB HOLE	-----	2-D2
COVER, CLUTCH BOOSTER PISTON	-----	1-J5
COVER, COMBINATION GAGE	-----	2-K8
COVER, CONNECTOR (FOR BATTERY TERMINAL)	-----	2-E8
COVER, CONSOLE, REAR	-----	2-C3
COVER, CONTROL RACK	-----	1-D4

PART	NAME	LOCATION
COVER, COWL SIDE TRIM SERVICE HOLE	-----	2-B4
COVER, DECK TRIM SIDE WASHER	-----	2-C4
COVER, DISC BRAKE DUST, FRONT LH	-----	1-I10
COVER, DISC BRAKE DUST, FRONT RH	-----	1-I10
COVER, DUST	-----	1-M8
COVER, END FRAME	-----	1-K3
COVER, ENGINE UNDER, NO.1	-----	2-C1
COVER, ENGINE UNDER, NO.2	-----	2-C1
COVER, FRAME BRUSH	-----	1-J3
COVER, FRONT DOOR SERVICE HOLE, LH	-----	2-H4
COVER, FRONT DOOR SERVICE HOLE, RH	-----	2-H4
COVER, FRONT PILLAR, RH	-----	2-F3
COVER, FRONT SEAT BACK, LH (FOR SEPARATE TYPE)	-----	2-K5
COVER, FRONT SEAT BACK, RH (FOR SEPARATE TYPE)	-----	2-K5
COVER, FRONT SEAT CUSHION, LH (FOR SEPARATE TYPE)	-----	2-K5
COVER, FRONT SEAT CUSHION, RH (FOR SEPARATE TYPE)	-----	2-K5
COVER, FRONT STABILIZER BRACKET	-----	1-J11
COVER, FUEL FILLER OPENING LID LOCK	-----	2-F7
COVER, GLOW PLUG RELAY	-----	2-C9
COVER, GOVERNOR	-----	1-I4
COVER, HEATER AIR DUCT HOLE, NO.2	-----	2-F2
COVER, HEATER DUCT HOLE	-----	2-F2
COVER, HOOD HINGE, LH	-----	2-L1
COVER, HOOD HINGE, RH	-----	2-L1
COVER, INNER REAR VIEW MIRROR STAY HOLDER	-----	2-E10
COVER, LICENSE PLATE LAMP	-----	2-A8
COVER, LOWER BACK SERVICE HOLE, LH	-----	2-L2
COVER, LOWER BACK SERVICE HOLE, RH	-----	2-L2
COVER, MANUAL TRANSMISSION CASE	-----	1-G6
COVER, OIL PUMP	-----	1-E2
COVER, PARKING BRAKE LEVER	-----	1-A10
COVER, PNEUMATIC BELLOWS	-----	1-I4
COVER, QUARTER TRIM OR CENTER PILLAR SALT HOLE	-----	2-C6
COVER, RADIO TUNER OPENING	-----	2-D2
COVER, REAR FLOOR SERVICE HOLE	-----	2-L2
COVER, REAR FLOOR SIDE MEMBER, LH	-----	2-L2
COVER, REAR FLOOR SIDE MEMBER, RH	-----	2-L2
COVER, REAR SEAT BACK (FOR BENCH TYPE)	-----	2-L5
COVER, REAR SEAT BACK LOCK, LH	-----	2-A6
COVER, REAR SEAT BACK LOCK, RH	-----	2-A6
COVER, REAR SEAT CUSHION (FOR BENCH TYPE)	-----	2-L5
COVER, REAR SEAT CUSHION LOCK	-----	2-A6
COVER, REAR WIPER ARM	-----	2-I9
COVER, REMOTE CONTROL MIRROR HOLE	-----	2-D2
COVER, ROOF DRIP SIDE FINISH MOULDING JOINT, LH	-----	2-L6
COVER, ROOF DRIP SIDE FINISH MOULDING JOINT, RH	-----	2-L6
COVER, SEAT TRACK BRACKET, INNER	-----	2-A6
COVER, SEAT TRACK OUTER, LH	-----	2-M5
COVER, SEAT TRACK OUTER, RH	-----	2-M5
COVER, SECTOR SHAFT END	-----	1-L9
COVER, SLIDING ROOF GUIDE RAIL, LH	-----	2-L3
COVER, SLIDING ROOF GUIDE RAIL, RH	-----	2-L3
COVER, SPARE SWITCH HOLE	-----	2-D2
COVER, STEP PLATE, OUTER LH	-----	2-I2
COVER, STEP PLATE, OUTER RH	-----	2-I2
COVER, STEREO OPENING	-----	2-D2
COVER, TILT STEERING SUPPORT STOPPER	-----	1-A9
COVER, TRANSFER CASE, NO.2	-----	1-M6
COVER, TRANSFER POWER TAKE-OFF	-----	1-M6
COVER, TRANSMISSION	-----	2-I2
COVER, TRANSMISSION UNDER	-----	2-C1
COVER, VALVE PUSH ROD	-----	1-H1
CRANK, PARKING BRAKE BELL, NO.1	-----	1-K10
CRANK, PARKING BRAKE BELL, NO.2	-----	1-K10

TUBE - WASHER

E13

M74-26-0055

WASHER - WIRE














PART	NAME	LOCATION
TUBE, FUEL MAIN, NO.3		2-E7
TUBE, REAR BRAKE, NO.1		1-C11
TUBE, REAR BRAKE, NO.2		1-C11
TUBE, REAR BRAKE, NO.3		1-C11
TUBE, REAR BRAKE, NO.4		1-C11
TUBE, REAR BRAKE, NO.5		1-C11
TUBE, RESERVOIR BRAKE		1-E10
TUBE, RETURN (FOR STEERING GEAR OUTLET)		1-E9
TUBE, SUCTION		1-H7
TUBE, VACUUM HOSE TO VACUUM HOSE		1-J5
TUBE, WHEEL CYLINDER, FRONT LH NO.1		1-C11
TUBE, WHEEL CYLINDER, FRONT RH NO.1		1-C11
UNION (FOR CLUTCH HOSE)		1-F5
UNION (FOR FRONT AXLE BREATHER HOSE)		1-H8
UNION (FOR INJECTION PUMP OUTLET PIPE)		1-F2
UNION (FOR OIL PIPE, NO.1)		1-B2
UNION (FOR OIL PUMP OUTLET PIPE)		1-E2
UNION (FOR REAR AXLE BREATHER HOUSE)		1-B8
UNION (FOR VACUUM PUMP)		1-G10
UNION, NIPPLE (FOR FUEL FILTER INLET)		1-A5
UNION, PRESSURE PORT		1-C9
UNION, SUCTION PORT		1-C9
UNIT SUB-ASSY, RADIATOR HEATER		2-H10
UNIT SUB-ASSY, REAR HEATER		2-H10
VALVE (FOR TUBELESS TIRE)		1-E8
VALVE ASSY, BRAKE MASTER CYLINDER OUTLET CHECK		1-E10
VALVE ASSY, FLOW CONTROL		1-C9
VALVE ASSY, HEATER WATER		2-L10
VALVE ASSY, LOAD SENSING PROPORTIONING		1-C11
VALVE ASSY, POWER STEERING CONTROL		1-K9
VALVE ASSY, VACUUM CHECK (FOR BRAKE)		1-G10
VALVE ASSY, VACUUM CHECK (FOR CLUTCH VACUUM)		1-J5
VALVE ASSY, WATER UNIT		2-H10
VALVE SUB-ASSY, CHECK		1-M3
VALVE SUB-ASSY, INJECTION PUMP DELIVERY		1-D4
VALVE SUB-ASSY, OIL CHECK		1-I1
VALVE, CHECK		2-F7
VALVE, EXHAUST		1-C2
VALVE, FEED PUMP CHECK		1-J4
VALVE, INTAKE		1-C2
VALVE, OIL PUMP RELIEF		1-E2
VENTURI ASSY		1-B5
VISOR ASSY, LH		2-E6
VISOR ASSY, RH		2-E6
WASHER (FOR LOAD SENSING SPRING)		1-C11
WASHER (FOR MANUAL TRANSMISSION OUTPUT SHAFT SET)		1-D6
WASHER (FOR NOZZLE HOLDER PRESSURE SPRING)		1-A4
WASHER (FOR PNEUMATIC BELLOWS)		1-I4
WASHER (FOR RING PACKING)		1-B4
WASHER (FOR SHIFT ARM PIVOT)		1-H6
WASHER (FOR 5TH SHIFT ARM)		1-H6
WASHER SET, CRANKSHAFT THRUST		1-A2
WASHER, BRAKE RESERVOIR SET BOLT		1-D10
WASHER, C (FOR REAR BRAKE)		1-K10
WASHER, CLAW (FOR STEERING KNUCKLE WASHER)		1-K8
WASHER, CLUTCH RESERVOIR SET BOLT		1-H5
WASHER, CONE (FOR FRONT AXLE SHAFT)		1-J8
WASHER, CONE (FOR STEERING KNUCKLE)		1-E11
WASHER, DRAIN SCREW		1-H4
WASHER, FELT, STARTER		1-K3
WASHER, FRONT DIFFERENTIAL PINION THRUST		1-H8
WASHER, FRONT DIFFERENTIAL SIDE GEAR THRUST		1-H8
WASHER, FRONT SHOCK ABSORBER CUSHION, NO.1		1-I11
WASHER, FRONT SHOCK ABSORBER CUSHION, NO.2		1-I11

PART	NAME	LOCATION
WASHER, FRONT WHEEL ADJUSTING LOCK		1-K8
WASHER, LOCK (FOR SHIFT & SELECT LEVER)		1-I6
WASHER, LOCK (FOR VENT WINDOW GLASS FRAME)		2-J4
WASHER, PLATE (FOR DRIVE PINION COMPANION FLANGE FRONT)		1-G8
WASHER, PLATE (FOR DRIVE PINION COMPANION FLANGE REAR)		1-A8
WASHER, PLATE (FOR FRONT DIFFERENTIAL DRIVE PINION)		1-G8
WASHER, PLATE (FOR REAR DIFFERENTIAL DRIVE PINION)		1-A8
WASHER, PLATE (FOR SPEEDOMETER DRIVE GEAR)		1-C7
WASHER, PLATE (FOR STEERING WORM)		1-J9
WASHER, PLATE (FOR TIMING GEAR)		1-C2
WASHER, PLATE (FOR TRANSFER OUTPUT SHAFT)		1-M6
WASHER, REAR DIFFERENTIAL PINION THRUST		1-B8
WASHER, REAR DIFFERENTIAL SIDE GEAR THRUST NO.1		1-B8
WASHER, REAR SHOCK ABSORBER CUSHION, NO.1		1-M11
WASHER, REAR SHOCK ABSORBER CUSHION, NO.2		1-M11
WASHER, REAR WIPER LINK PIVOT, NO.1		2-I9
WASHER, REVOLVING, DOOR VENTILATING WINDOW LOWER PIVOT		2-J4
WASHER, SEAL (FOR CROSSSHAFT ADJUSTING SCREW)		1-K9
WASHER, SEAL (FOR CYLINDER HEAD COVER)		1-G1
WASHER, SEAL (FOR HEAD COVER SET)		1-D2
WASHER, SECTOR SHAFT THRUST		1-L9
WASHER, SPRING		1-E4
WASHER, STARTER IDLE GEAR CLUTCH		1-L3
WASHER, THROTTLE VALVE SHAFT ADJUSTING		1-B5
WASHER, TRANSFER IDLER GEAR SIDE THRUST		1-C7
WASHER, 1ST GEAR THRUST		1-D6
WASHER, 5TH GEAR THRUST		1-E6
WAY (FOR REAR BRAKE TUBE)		1-C11
WAY, NO.1 (FOR FRONT BRAKE TUBE)		1-B11
WAY, NO.2 (FOR FRONT BRAKE TUBE)		1-B11
WAY, 3 (FOR FRONT DRIVE SHIFT)		1-J7
WEATHERSTRIP ASSY, FRONT DOOR GLASS, INNER		2-H4
WEATHERSTRIP, BACK DOOR GLASS		2-D5
WEATHERSTRIP, BACK DOOR, LH		2-D5
WEATHERSTRIP, BACK DOOR, RH		2-D5
WEATHERSTRIP, FRONT DOOR GLASS, OUTER		2-H4
WEATHERSTRIP, FRONT DOOR, LH		2-H4
WEATHERSTRIP, FRONT DOOR, RH		2-H4
WEATHERSTRIP, SIDE WINDOW CENTER, NO.1		2-J3
WEATHERSTRIP, SIDE WINDOW, NO.1 (FOR SLIDE TYPE)		2-J3
WEATHERSTRIP, SLIDING ROOF PANEL OR REMOVABLE ROOF		2-L3
WEATHERSTRIP, VENT WINDOW FRAME, LH		2-K4
WEATHERSTRIP, VENT WINDOW FRAME, RH		2-K4
WEATHERSTRIP, VENT WINDOW, NO.1 LH		2-K4
WEATHERSTRIP, VENT WINDOW, NO.1 RH		2-K4
WEATHERSTRIP, WINDSHIELD		2-F2
WEIGHT, BALANCE (FOR DISC WHEEL)		1-E8
WEIGHT, TIMER		1-L4
WHEEL ASSY, STEERING		1-G9
WHEEL, DISC		1-E8
WIRE ASSY, ACCELERATOR		2-G7
WIRE, BACK DOOR, NO.1		2-H8
WIRE, BACK DOOR, NO.2		2-H8
WIRE, COWL		2-H8
WIRE, COWL, NO.3		2-H8
WIRE, FLOOR		2-H8
WIRE, FLOOR, NO.2		2-H8
WIRE, FRONT DOOR, LH		2-H8
WIRE, FRONT DOOR, RH		2-H8
WIRE, INSTRUMENT PANEL		2-H8
WIRE, INSTRUMENT PANEL, NO.2		2-H8
WIRE, LEAD, NO.1 (FOR STARTER)		1-K3
WIRE, LUGGAGE ROOM, NO.3		2-H8
WIRE, PARKING BRAKE, LH		1-K10

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
55792-90K01-	2-F2	58327-90K00-	2-M2	61166-90K01-	2-F3	62367-10010-	2-H	63221-22010-	2-L3	67005-90K36-	2-D5
55844-90K09-	2-J10	58336-90K00-	2-L2	61195-90K00-	2-B4	62411-90K00-08	2-C4	63223-30010-	2-L3	67006-90K15-	2-D5
55848-90K01-	2-J10	58339-90K00-	2-L2	61197-90K00-	2-F3	-90K01-08	2-C4	63224-30010-	2-L3	-90K49-	2-D5
55905-12070-	2-H10	58346-90K00-	2-L2	61211-90K00-	2-F3	62412-90K00-08	2-C4	63249-90K00-	2-L3	-90K66-	2-D5
-89110-	2-J10	58351-90K00-	2-L2	61212-90K00-	2-F3	-90K01-08	2-C4	-90K01-	2-L3	67045-90K00-	2-J3
-95J01-	2-J10	58352-90K00-	2-L2	61231-90K00-	2-F3	62471-90K01-08	2-C4	-90K02-	2-L3	67046-90K00-	2-J3
55906-90K01-	2-J10	58357-90K00-	2-L2	61232-90K00-	2-F3	-90K02-08	2-C4	-90K03-	2-L3	67111-90K05-	2-G4
55907-90K01-	2-J10	58510-90K34-03	2-A3	61263-90K00-	2-F3	62472-90K00-08	2-C4	63250-90K00-	2-L3	67112-90K04-	2-G4
55908-90K01-	2-J10	-90K34-06	2-A3	61264-90K00-	2-F3	-90K01-08	2-C4	63251-30010-	2-L3	67206-90K00-	2-F5
55909-90K01-	2-J10	-90K35-03	2-A3	61267-90K00-	2-F3	62510-90K01-03	2-C4	63255-22020-	2-L3	67207-90K00-	2-F5
55910-90K00-	2-J10	-90K35-06	2-A3	61268-90K00-	2-F3	-90K01-05	2-C4	63260-90A02-	2-L3	67208-90K00-	2-F5
55950-90K01-01	2-E2	-90K56-03	2-A3	61277-90K00-	2-F3	-90K06-03	2-C4	-90A03-	2-L3	67401-90K00-	2-G4
55970-90K00-	2-E2	-90K56-06	2-A3	61281-90K00-	2-F3	-90K06-05	2-C4	63261-22010-	2-L3	67402-90K00-	2-G4
56111-90K02-	2-F2	-90L04-03	2-A3	61282-90K00-	2-G3	62520-90K01-03	2-C4	63267-30010-	2-L3	67403-90K01-	2-G4
-90K03-	2-F2	-90L04-06	2-A3	61289-90K00-	2-F3	-90K01-05	2-C4	63268-30010-	2-L3	67404-90K01-	2-G4
56121-90K04-	2-F2	-90L06-03	2-A3	61307-90K00-	2-G3	62607-90K00-03	2-C4	63269-30010-	2-M3	67463-20011-	2-J4
-90K05-	2-F2	-90L06-06	2-A3	61308-90K00-	2-G3	-90K00-06	2-C4	63277-14020-	2-M3	67466-89101-	2-J4
56497-90K00-	2-F2	58540-90K15-03	2-B3	61401-90K00-	2-G3	62613-90K00-03	2-A3	-30010-	2-M3	67481-90K00-	2-G4
57401-90K00-	2-G2	-90K15-06	2-B3	61402-90K00-	2-G3	-90K00-06	2-A3	63306-90K01-08	2-D4	-90K02-	2-G4
57402-90K00-	2-G2	58570-90K00-03	2-B3	61503-20030-	2-G3	-90K03-03	2-B3	63310-90K00-08	2-D4	67482-90K00-	2-G4
-90K01-	2-G2	-90K00-06	2-B3	61611-90K03-	2-G3	-90K03-06	2-B3	63318-90K01-	2-D4	-90K02-	2-G4
57427-90K00-	2-L2	-90K05-03	2-B3	61612-90K05-	2-G3	62614-90K00-03	2-A3	63319-14011-	2-D4	67503-90K00-	2-J4
57457-90K00-	2-L2	-90K05-06	2-B3	61631-90K01-	2-G3	-90K00-06	2-A3	63320-90K00-08	2-D4	67504-90K00-	2-J4
57465-90K00-	2-L2	58573-90K00-	2-B3	61632-90K01-	2-G3	-90K03-03	2-B3	-90K01-08	2-D4	67505-90K00-	2-J4
57468-90K00-	2-L2	58581-90K00-03	2-B3	61633-90K00-	2-G3	-90K03-06	2-B3	-90K02-08	2-D4	67506-90K00-	2-J4
57469-90K00-	2-L2	-90K00-06	2-B3	61634-90K00-	2-G3	62705-90K00-	2-J3	63341-90K00-	2-D4	67507-90K00-	2-J4
57511-90K00-	2-L2	58705-90K00-	2-B7	61645-90K00-	2-G3	62706-90K00-	2-J3	-90K02-	2-D4	67508-90K00-	2-K4
-90K01-	2-L2	58707-90K00-	2-B7	61646-90K00-	2-G3	62711-90K02-	2-J3	63361-90K00-	2-D4	67528-89101-	2-K4
57605-90K00-	2-G2	58708-90K00-	2-B7	61665-12010-	2-G3	-90K03-	2-J3	-90K01-	2-E4	67533-90K00-	2-J4
-90K10-	2-G2	58754-90K00-	2-J2	61675-90K00-	2-G3	62712-90K02-	2-J3	-90K02-	2-E4	67534-90K00-	2-J4
57606-90K04-	2-G2	58911-90K01-03	2-C3	61676-90K00-	2-G3	-90K03-	2-J3	63362-90K00-	2-E4	67577-90A00-	2-J4
57627-90K00-	2-L2	-90K01-06	2-C3	61705-90K03-	2-G3	62713-90K00-	2-J3	-90K01-	2-E4	67610-90K10-03	2-G4
57628-90K00-	2-L2	58912-90K00-03	2-C3	-90K19-	2-G3	-90K01-	2-J3	-90K02-	2-E4	-90K10-05	2-G4
57663-90K00-	2-L2	-90K00-06	2-C3	61706-90K03-	2-G3	62714-90K00-	2-J3	-90K01-	2-E4	-90K11-03	2-G4
57664-90K00-	2-L2	58923-90K01-03	2-C3	-90K18-	2-G3	-90K01-	2-J3	63363-90K00-	2-D4	-90K11-05	2-G4
58011-90K00-	2-L2	-90K01-06	2-C3	61709-90K00-	2-G3	62729-90K00-	2-J3	-90K01-	2-D4	-90K12-03	2-G4
58J12-90K00-	2-L2	58944-90K01-03	2-C3	61725-90K02-	2-H3	62735-89101-	2-K4	-90K02-	2-D4	-90K12-05	2-G4
58048-90K00-	2-K5	-90K01-06	2-C3	61743-90K03-	2-H3	62741-90K01-	2-J3	63371-90A02-	2-E4	-90K35-03	2-G4
58114-90K00-	2-L2	58951-90K00-03	2-C3	61744-90K03-	2-H3	62742-90K01-	2-J3	63372-90K00-	2-E4	-90K35-05	2-G4
-90K03-	2-L2	-90K00-06	2-C3	61745-90K00-	2-H3	62755-90K00-	2-J3	64198-90K00-	2-H3	-90K38-03	2-G4
58151-90K00-	2-M2	58959-16010-	2-C3	61746-90K00-	2-H3	62756-90K00-	2-J3	64199-90K00-	2-H3	-90K38-05	2-G4
58153-90K00-	2-M2	58964-30030-	2-C3	61748-90K00-	2-H3	62792-95A00-	2-J3	64707-90K00-03	2-C4	67620-90K10-03	2-G4
-90K01-	2-M2	-90K00-	2-C3	61768-90K00-	2-H3	62793-95J00-	2-J3	-90K00-05	2-C4	-90K10-05	2-G4
58171-90K00-	2-L2	58968-89101-	2-C3	61769-90K00-	2-H3	-95704-	2-J3	64739-90K00-03	2-C4	-90K11-03	2-G4
58183-90K00-	2-L2	58976-20010-	2-C3	61856-90K00-	2-H3	62821-90K01-03	2-C4	-90K00-06	2-C4	-90K11-05	2-G4
58184-90K00-	2-L2	58995-90K00-	2-C3	62101-90K03-03	2-B4	-90K01-06	2-C4	64745-90K00-	2-L2	-90K12-03	2-G4
-90K02-	2-L2	58996-90K00-	2-D3	-90K03-06	2-B4	62884-90K01-	2-J3	64746-90K00-	2-L2	-90K12-05	2-G4
58247-90K00-	2-L2	58997-90K00-	2-D3	62102-90K00-03	2-B4	62903-90K00-	2-A4	64777-90K00-	2-C4	-90K33-03	2-H4
58248-90K02-	2-L2	61023-90K02-	2-F3	-90K03-06	2-B4	62910-95703-	2-J3	64778-90K00-	2-C4	-90K33-05	2-H4
58261-90K01-	2-L2	61024-90K02-	2-F3	-90K07-03	2-B4	62951-90K00-	2-A4	64780-90K00-03	2-D5	-90K35-03	2-H4
58263-90K00-	2-L2	61027-90K00-	2-F3	-90K07-06	2-B4	63102-90K00-	2-L3	-90K00-05	2-D5	-90K35-05	2-H4
58266-90K00-	2-L2	61028-90K00-	2-F3	62117-90K00-03	2-B4	-90K02-	2-L3	64790-90K00-03	2-D5	67771-12010-	2-G4
58268-90K00-	2-L2	61031-90K01-	2-F3	-90K00-06	2-B4	63105-90K00-	2-L3	-90K00-05	2-D5	-22010-	2-G4
58280-90K00-	2-L2	61032-90K00-	2-F3	62211-90K04-08	2-B4	-90K08-	2-L3	-90K07-03	2-D5	-30040-	2-G4
-90K02-	2-L2	61065-90K00-	2-G3	62212-90K00-08	2-B4	63111-90K00-	2-L3	-90K07-05	2-D5	-30060-	2-C4
58290-90K02-	2-J2	61066-90K00-	2-G3	62249-95700-	2-J3	-90K03-	2-L3	66301-90K00-	2-L2	-90K00-	2-G4
-90K06-	2-J2	61101-90K03-	2-F3	62269-90K01-	2-J3	63141-90K00-	2-L3	-90K02-	2-L2	-90K00-	2-C4
-90K08-	2-J2	-90K14-	2-F3	62313-90K01-03	2-B4	63142-30010-	2-L3	67001-90K05-	2-G4	-90K00-	2-G4
58307-90K01-	2-L2	-90K03-	2-F3	-90K01-06	2-B4	63201-30010-	2-L3	-90K21-	2-G4	67777-90K00-03	2-H4
-90K11-	2-L2	-90K23-	2-F3	62333-90K01-03	2-D5	63203-90K00-	2-L3	-90K21-	2-G4	-90K00-05	2-H4
-90K17-	2-L2	61165-90K00-	2-F3	-90K01-06	2-D5	63207-22010-	2-L3	67002-90K05-	2-G4	67831-90K02-	2-H4
58308-90K00-	2-L2	-90K01-	2-F3	62335-90K00-	2-D5	63208-22010-	2-L3	-90K17-	2-D5	-90K04-	2-H4
58311-90K02-	2-L2	61166-90K00-	2-F3	62336-90K00-	2-D5	63209-30010-	2-L3	-90K18-	2-D5	67847-90K01-	2-D5
58325-90K00-	2-L2					-90A01-	2-L3	-90K35-	2-D5	67848-90K01-	2-D5


ILLUSTRATED INDEX

E16

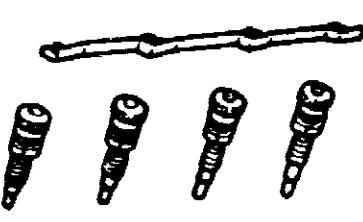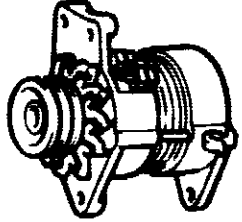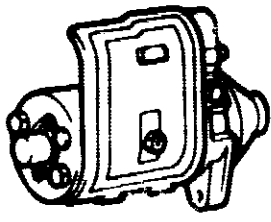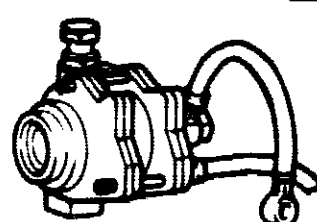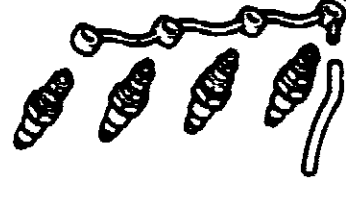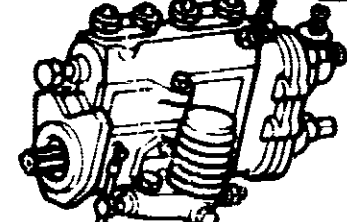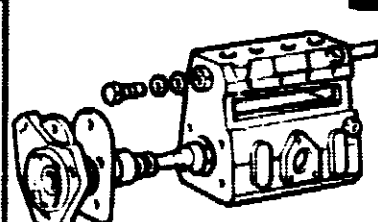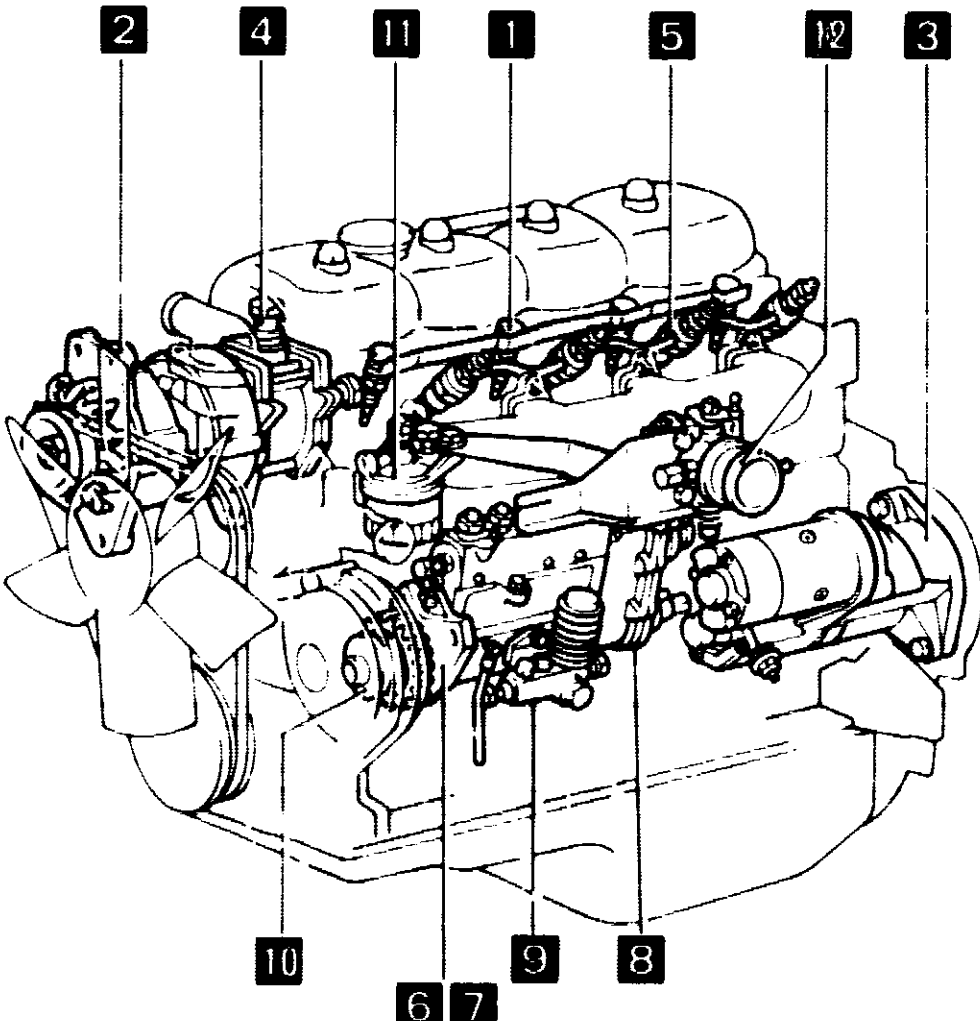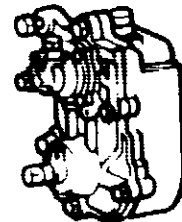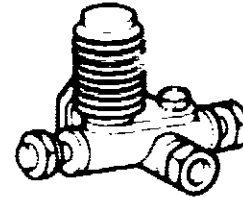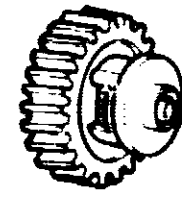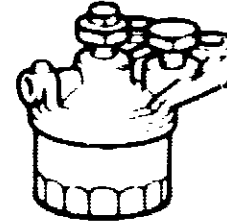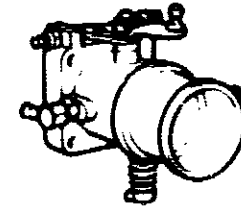1-H3 (19-01) 1 	1-I3 (19-03) 2 	1-K3 (19-04) 3 	1-M3 (19-05) 4 	1-A4 (22-01) 5 	1-C4 (22-02) 6 	1-D4 (22-03) 7 
ENGINE, FUEL GROUP (2/2) 						
						1-G4 (22-04) 8 
						1-J4 (22-06) 9 
						1-L4 (22-07) 10 
						1-M4 (23-02) 11 
						1-B5 (26-06) 12 

GENUINE TOYOTA PARTS

(8411-)

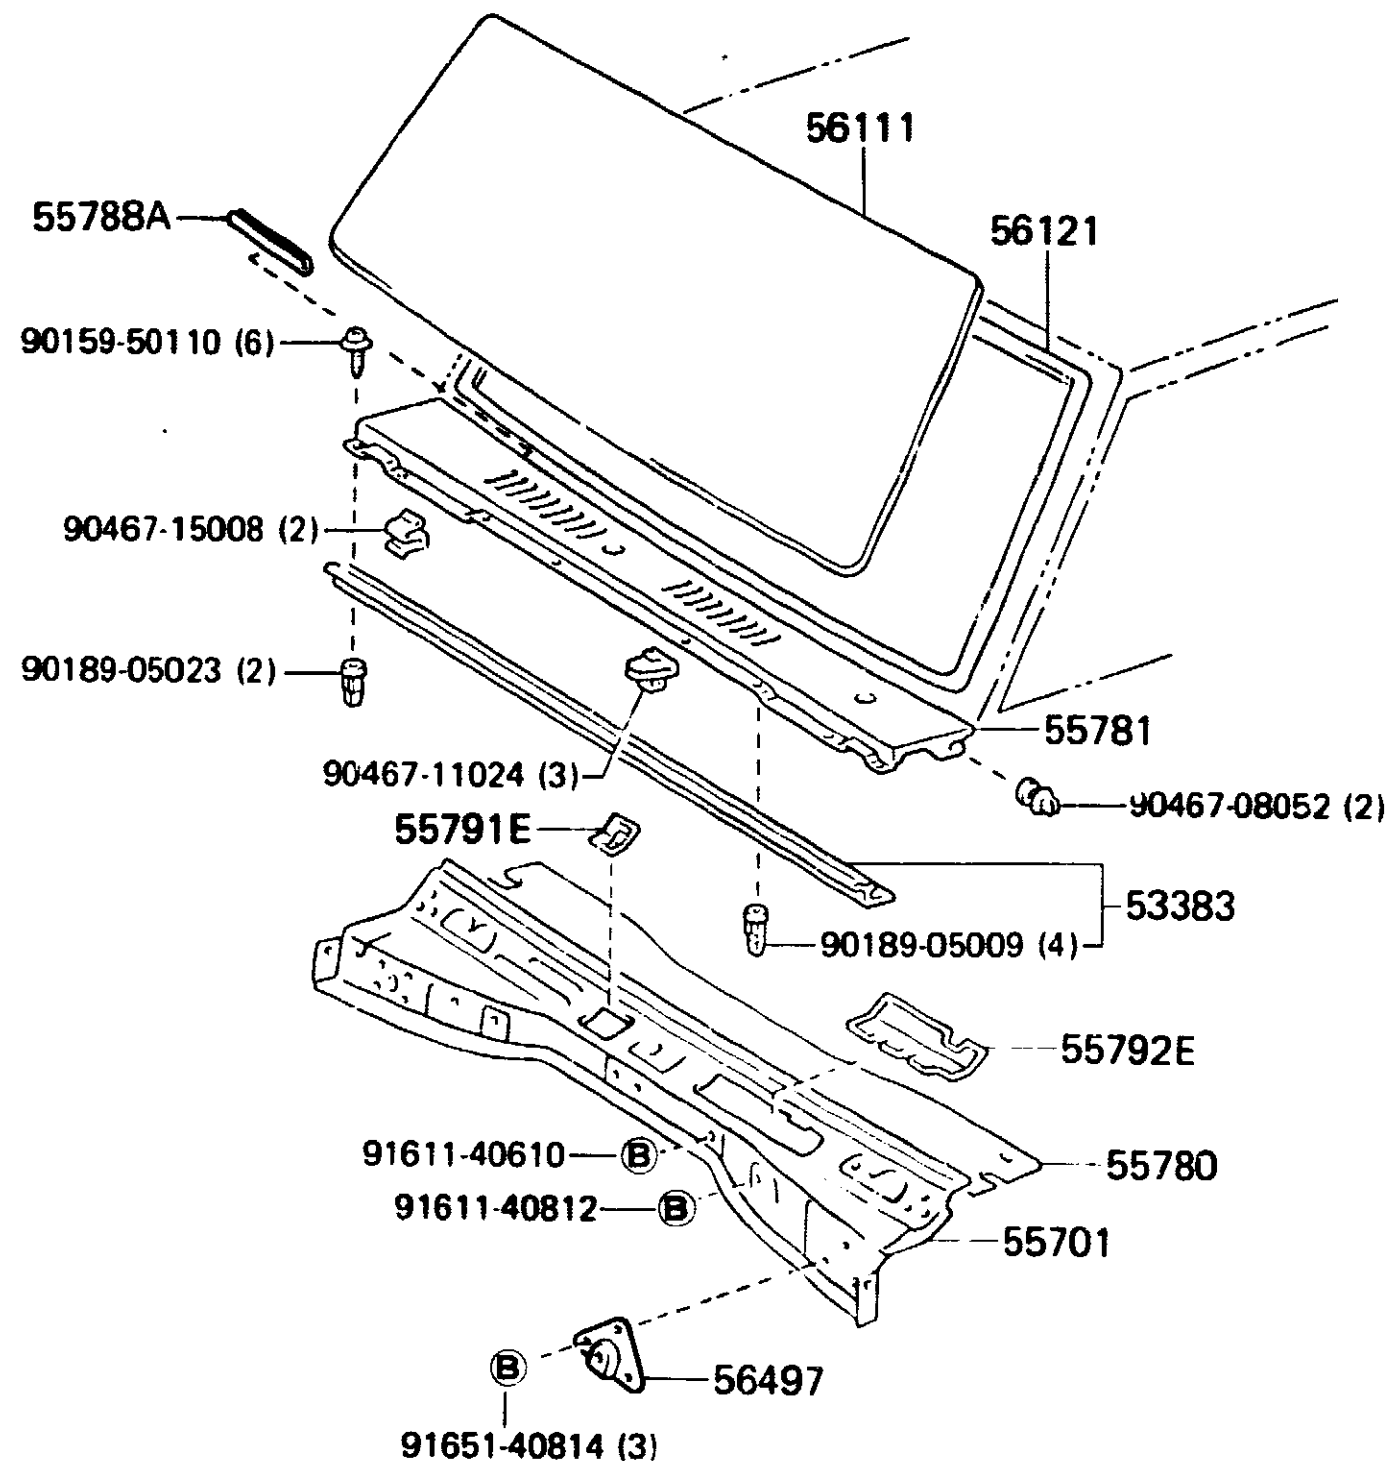

MB H625-A

PROD. DATE	MODELS	DESCRIPTION	PART NUMBER	QTY	REV. REF. CODE	
					FROM	UP TO
FIG.	55-53 COWL PANEL & WINDSHIELD GLASS					
8411-	BJ70	SEAL, HOOD TO COWL TOP	53383-90K00-	1	81	
8411-8601	BJ70	PANEL SUB-ASSY, COWL	55700-90K59-	1	81	
8601-	BJ70		55700-90K32-	1		
8411-	BJ70	INSULATOR ASSY, COWL TOP	55780-90K01-	1	81	
8411-	BJ70	LOUVER, COWL VENTILATOR	55781-90K02-	1	81	
8411-	BJ70	PROTECTOR, COWL TOP VENT LOUVER	55788-90K00-	2	81	
8411-	BJ70	COVER, HEATER DUCT HOLE	55791-90K01-	1	81	
8411-	BJ70	COVER, HEATER AIR DUCT HOLE, NO.2	55792-90K01-	1	81	
8411-8608	BJ70	GLASS, WINDSHIELD	56111-90K02-	1	81	140
8411-	BJ70		56111-90K03-	1	81	
8411-	BJ70	WEATHERSTRIP, WINDSHIELD	56121-90K04-	1	81	
8411-	BJ70	W/MOULDING	56121-90K05-	1	81	
8411-	BJ70	BRACKET, CLUTCH BOOSTER MOUNTING	56497-90K00-	1	81	

*LAM=Laminated
 *TL=Tinted Laminated

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	61-51 SIDE MEMBER						
8411-	BJ70	PILLAR SUB-ASSY, FRONT BODY, INNER RH		61023-90K02-	1	81	
8411-	BJ70	PILLAR SUB-ASSY, FRONT BODY, INNER LH		61024-90K02-	1	81	
8411-	BJ70	PILLAR SUB-ASSY, FRONT BODY, OUTER RH		61027-90K00-	1	81	
8411-	BJ70	PILLAR SUB-ASSY, FRONT BODY, OUTER LH		61028-90K00-	1	81	
8411-	BJ70	EXTENSION SUB-ASSY, QUARTER PANEL, REAR LOWER RH		61031-90K01-	1	81	
8411-	BJ70	EXTENSION SUB-ASSY, QUARTER PANEL, REAR LOWER LH		61032-90K00-	1	81	
8411-8608	BJ70	PANEL SUB-ASSY, COWL SIDE, RH		61101-90K03- (61101-90K14-) (91651-40614-)	1	81	140
8608-	BJ70			61101-90K14-	1	141	
8411-8510	BJ70	PANEL SUB-ASSY, COWL SIDE, LH		61102-90K02- (61102-90K14-) (91651-40614-)	1	81	100
8411-8608	BJ70	W/RADIO		61102-90K03- (61102-90K23-) (91651-40614-)	1	81	140
8608-	BJ70			61102-90K23-	1	141	
8411-8608	BJ70	BRACKET, INSTRUMENT PANEL TO COWL SIDE, RH		61165-90K00-	1	81	140
8608-	BJ70			61165-90K01-	1	141	
8411-8608	BJ70	BRACKET, INSTRUMENT PANEL TO COWL SIDE, LH		61166-90K00-	1	81	140


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8608-	BJ70	BRACKET, INSTRUMENT PANEL TO COWL SIDE, LH		61166-90K01-	1	141	
8411-	BJ70	COVER, FRONT PILLAR, RH		61197-90K00-	3	81	
8411-	BJ70	RAIL, ROOF SIDE, OUTER RH		61211-90K00-	1	81	
8411-	BJ70	RAIL, ROOF SIDE, OUTER LH		61212-90K00-	1	81	
8411-	BJ70	RAIL, ROOF SIDE, INNER RH		61231-90K00-	1	81	
8411-	BJ70	RAIL, ROOF SIDE INNER, LH		61232-90K00-	1	81	
8411-	BJ70	CHANNEL, ROOF DRIP SIDE, FRONT RH		61263-90K00-	1	81	
8411-	BJ70	CHANNEL, ROOF DRIP SIDE, FRONT LH		61264-90K00-	1	81	
8411-	BJ70	CHANNEL, ROOF DRIP, REAR RH		61267-90K00-	1	81	
8411-	BJ70	CHANNEL, ROOF DRIP, REAR LH		61268-90K00-	1	81	
8411-	BJ70	JOINT, ROOF DRIP CHANNEL		61277-90K00-	4	81	
8411-	BJ70	BRACKET, SLIDING ROOF HOUSING MOUNTING, NO. 1 RH		61281-90K00-	1	81	
8411-	BJ70	LH		61289-90K00-	1	81	

(8411-)


(8411-)


ILLUST. NO. 10F2

ILLUS. NO. 20F2

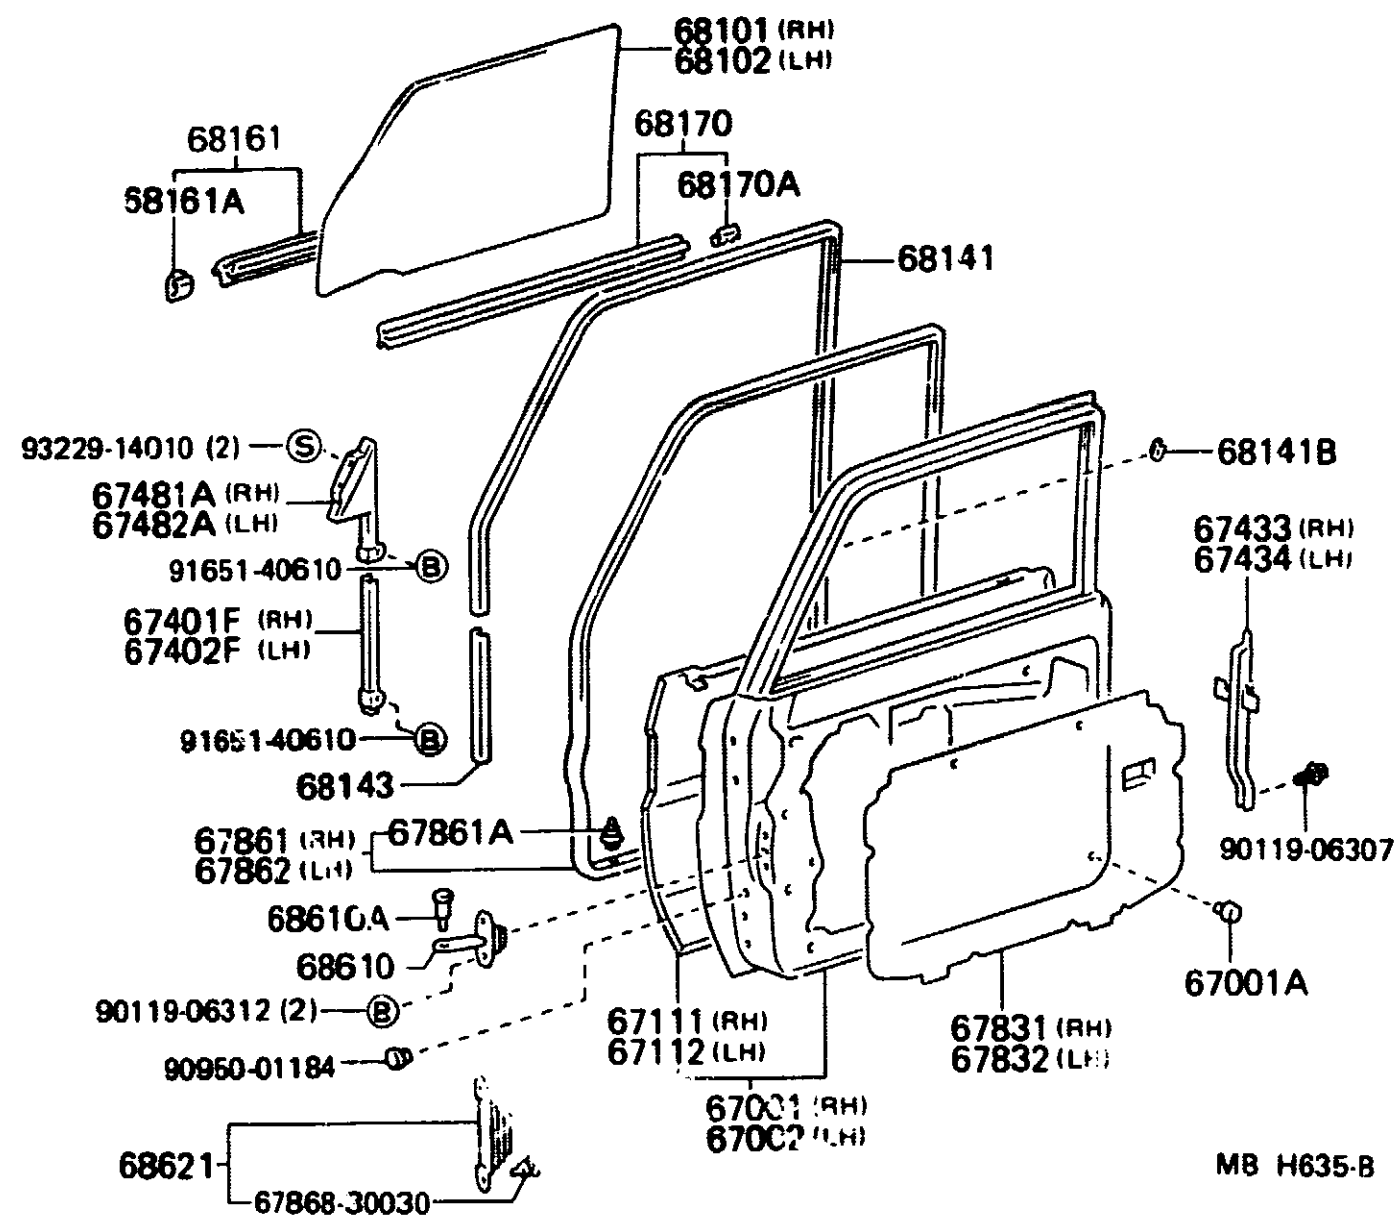

MB H635-B

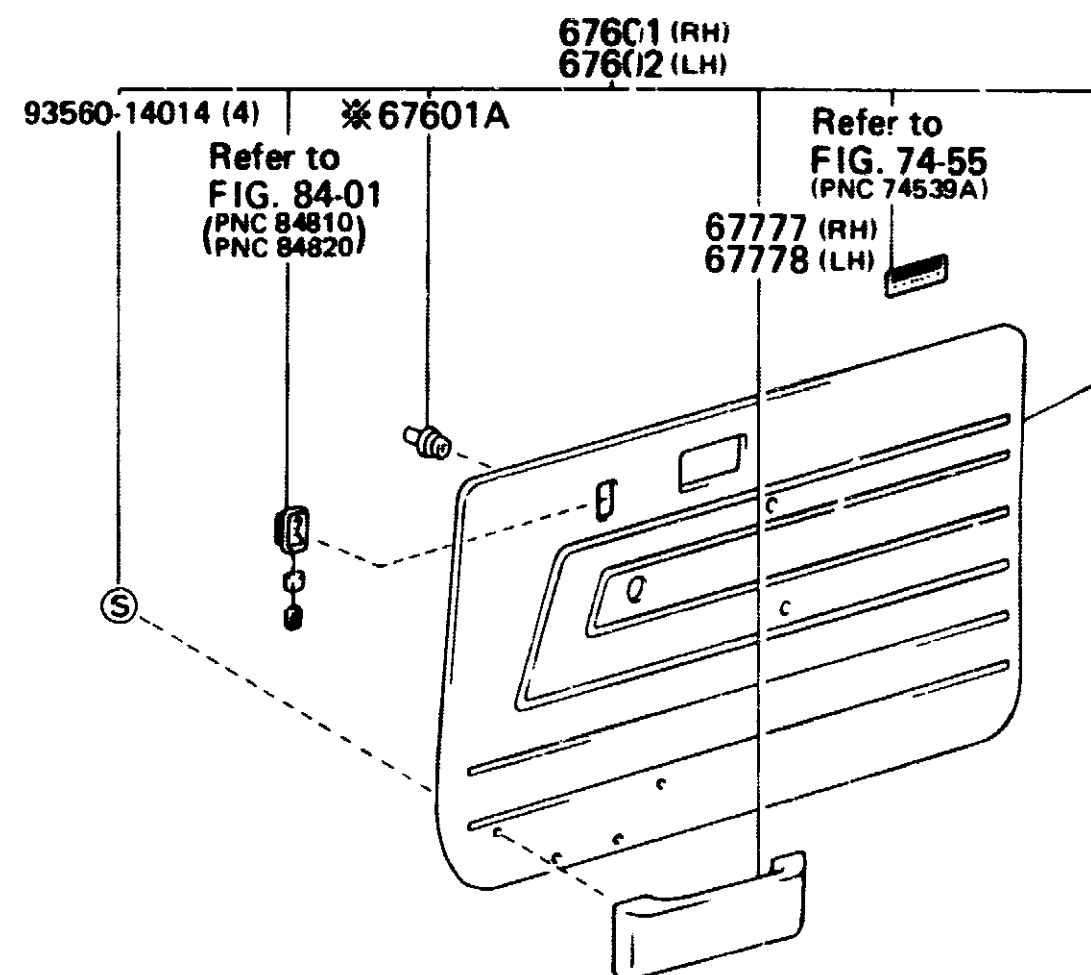


TYPE A		TYPE B		TYPE C
(-8510)	(8510-)	(-8510)	(8510-)	
				
L=43	L=3.7	L ₁ =5 L ₂ =88	L ₁ =5 L ₂ =12	L=3.7

MB H475-D

GENUINE TOYOTA PARTS

(8411-)

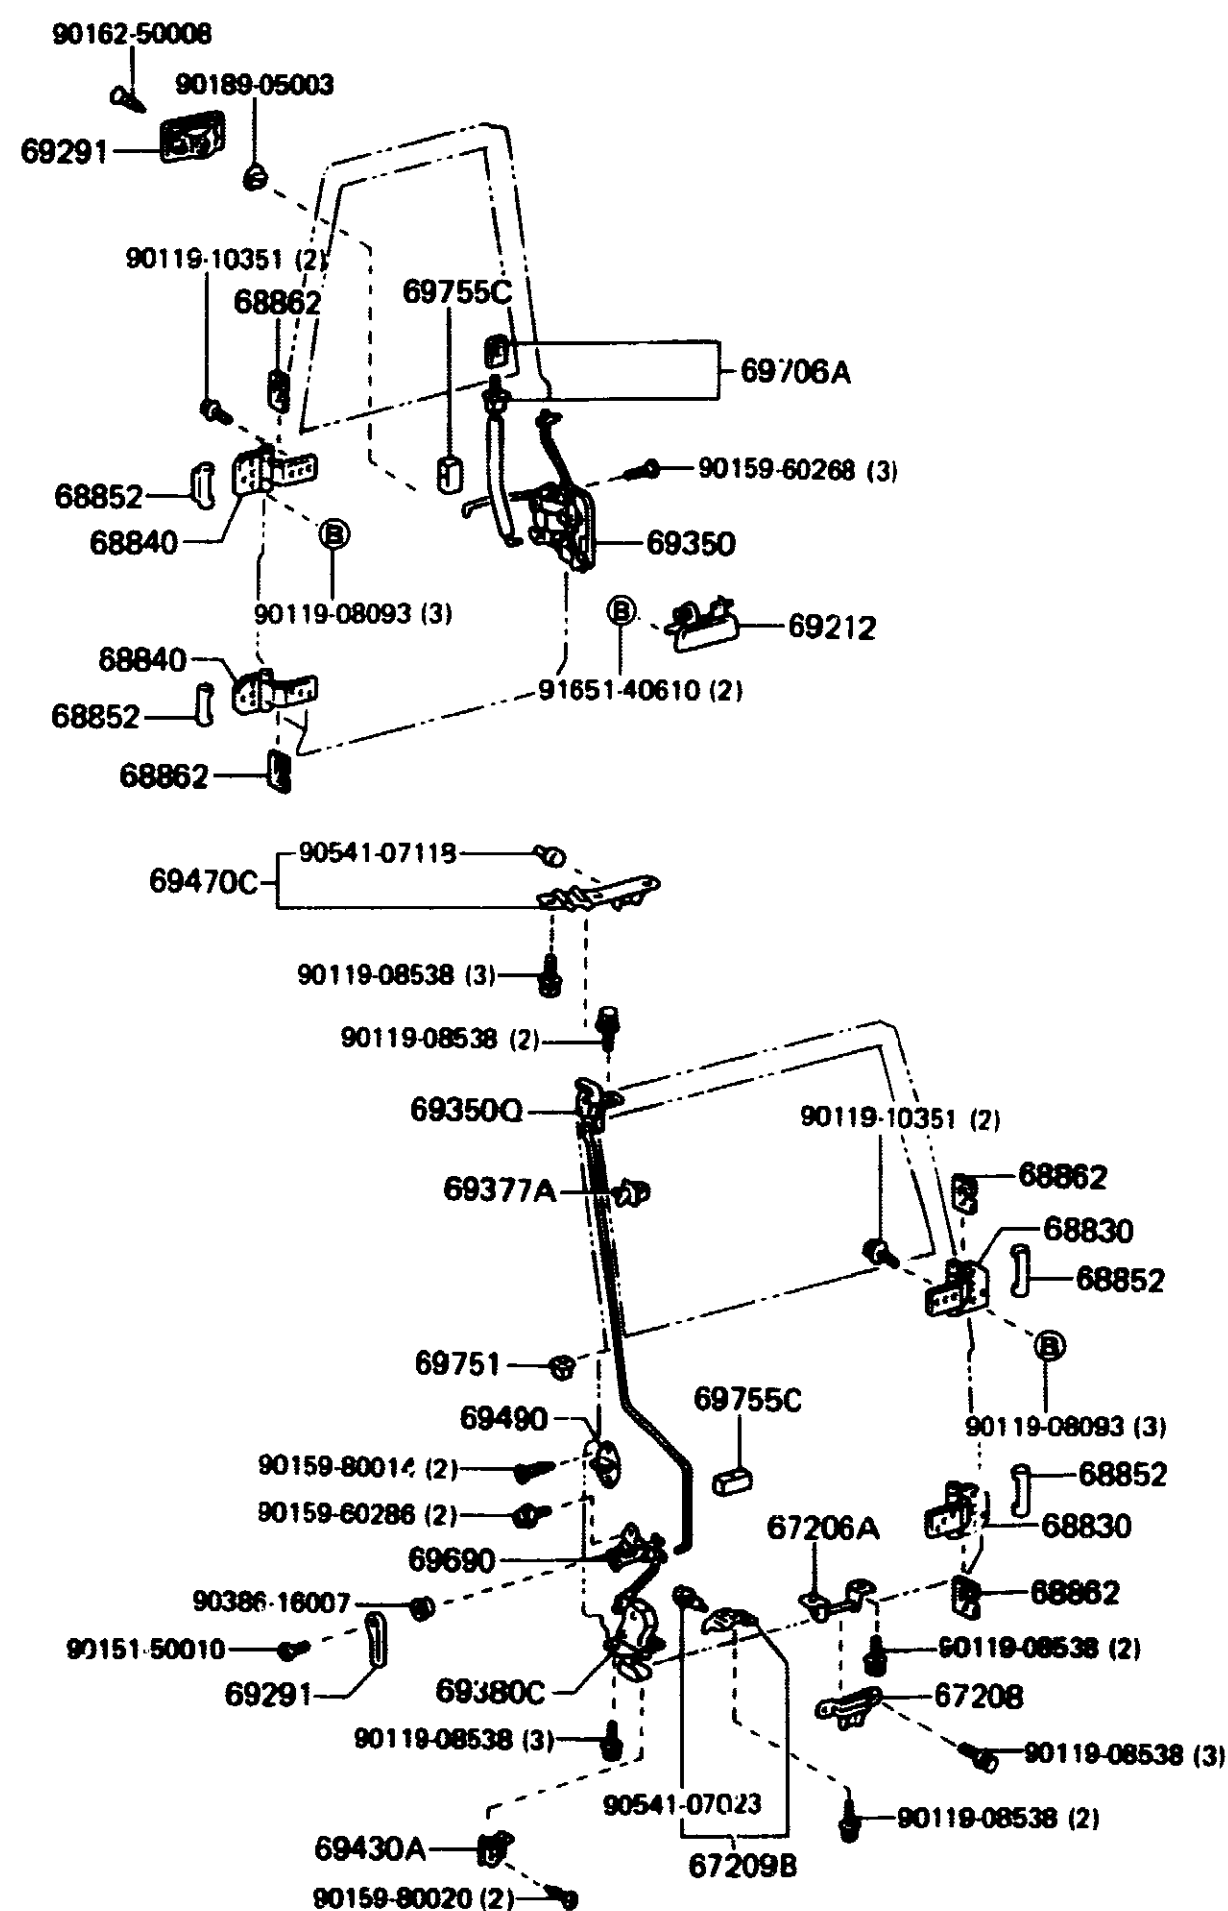

MB H638-D

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	67-62 BACK DOOR LOCK & HINGE						
8411-	+	+					
	67206A	BRACKET SUB-ASSY, BACK DOOR STOPPER					
	BJ70			67206-90K00-	1	81	
8411-	+	+					
	67208	STOPPER SUB-ASSY, BACK DOOR, NO.2					
	BJ70			67208-90K00-	1	81	
8411-	+	+					
	67209A	STOPPER SUB-ASSY, BACK DOOR, LOWER					
	BJ70			67207-90K00-	1	81	
8411-	+	+					
	68830	HINGE ASSY, BACK DOOR, RH					
	BJ70	UPR		68801-90K00-	1	81	
8411-	+	+					
	68840	HINGE ASSY, BACK DOOR, LH					
	BJ70	UPR		68802-90K00-	1	81	
8411-	+	+					
	68852	COVER, BACK DOOR HINGE					
	BJ70	UPR		68851-90K00-	2	81	
8411-	+	+					
	68862	PAD, BACK DOOR HINGE					
	BJ70	LWR		68852-90K00-	2	81	
8411-	+	+					
	69212	HANDLE, BACK DOOR OUTSIDE, LH					
	BJ70			68861-90K00-	4	81	
8411-	+	+					
	69291	HANDLE ASSY, BACK DOOR INSIDE					
	BJ70	LH, GRAY		69220-32010-	1	81	
8411-	+	+					
	69350	LOCK ASSY, BACK DOOR					
	BJ70	LH, BROWN		69206-10050-03	1	81	
8411-	+	+					
	69350	LOCK ASSY, BACK DOOR					
	BJ70	RH		69206-10050-06	1	81	
8411-	+	+					
	69350	LOCK ASSY, BACK DOOR					
	BJ70			69212-90K00-	1	81	
8411-	+	+					
	69350	LOCK ASSY, BACK DOOR					
	BJ70			69350-90K00-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
C 8411-8701	+	77243A	HOSE, FUEL, NO.1 (FOR MAIN TUBE, NO.3)	L=200	95332-08J20-	1	81
	BJ70						
C 8701-	BJ70	L=200		95333-08020-	1		
C 8411-8701	+	77243B	HOSE, FUEL, NO.2 (FOR MAIN TUBE, NO.3)	L=200	95332-08020-	1	81
	BJ70						
C 8701-	BJ70	L=200		95333-08020-	1		
8411-	+	77286	PROTECTOR, FUEL TANK INLET PIPE		77277-90K00-	1	81
	BJ70						
8411-	+	77290	SHIELD ASSY, FUEL TANK FILLER PIPE		77290-90K00-	1	81
	BJ70						
8411-	+	77293A	SHIELD, FUEL TANK FILLER PIPE, NO.3		77293-90K00-	1	81
	BJ70						
8411-	+	77308	COVER SUB-ASSY, FUEL INLET BOX		77305-90K00-	1	81
	BJ70						
8411-	+	77308A	CUSHION (FOR FUEL INLET BOX COVER)		90541-05018-	2	81
	BJ70						
8411-	+	77322	KNOB, FUEL TANK CAP		77319-90K00-	1	81
	BJ70						
8411-8608	+	77338A	BRACKET, FUEL TANK CAP LOCK CONTROL ROD		77338-90K00-	1	81 140
	BJ70						
8608-	BJ70			77338-90K01-	1	141	
8411-	+	77366	SPRING, FUEL FILLER OPENING LID HINGE		77366-12010-	1	81
	BJ70						
8411-8505	+	77367	STOPPER, FUEL FILLER OPENING LID		77358-12020-	1	81
	BJ70						
8411-	+	77378A	COVER, FUEL FILLER OPENING LID LOCK		77378-90K00-	1	81
	BJ70						



PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	+	77387	RING, FUEL INLET BOX		77391-32010-	1	81
	BJ70						
8411-8608	+	77500	TANK ASSY, AUXILIARY FUEL		77110-60010- (77110-60011-)	5	81
	BJ70						
8608-	BJ70				77110-60011-	5	
8411-	+	77606	PROTECTOR SUB-ASSY, FUEL TANK, NO.1		77606-60030-	1	81
	BJ70						
8411-	+	77611	BAND, FUEL TANK		77601-60080-	2	81
	BJ70						
8411-	+	77611A	PIN (FOR FUEL TANK BAND)		90240-10025-	2	81
	BJ70						
8411-	+	77631	BRACKET, FUEL TANK, NO.1		77614-60050-	2	81
	BJ70						
8411-	+	77632	BRACKET, FUEL TANK, NO.2		77625-60020-	2	81
	BJ70						
8411-	+	77675B	BRACKET, FUEL TANK FILLER PIPE PROTECTOR, NO.1		77675-90K00-	1	81
	BJ70						
8411-	+	77676B	BRACKET, FUEL TANK FILLER PIPE PROTECTOR, NO.2		77676-90K00-	1	81
	BJ70						
8411-	+	77701T	VALVE, CHECK		90917-10020-	2	81
	BJ70						

(8411-)

(8411-)

ILLUST.NO. 10F3

ILLUST.NO. 20F3

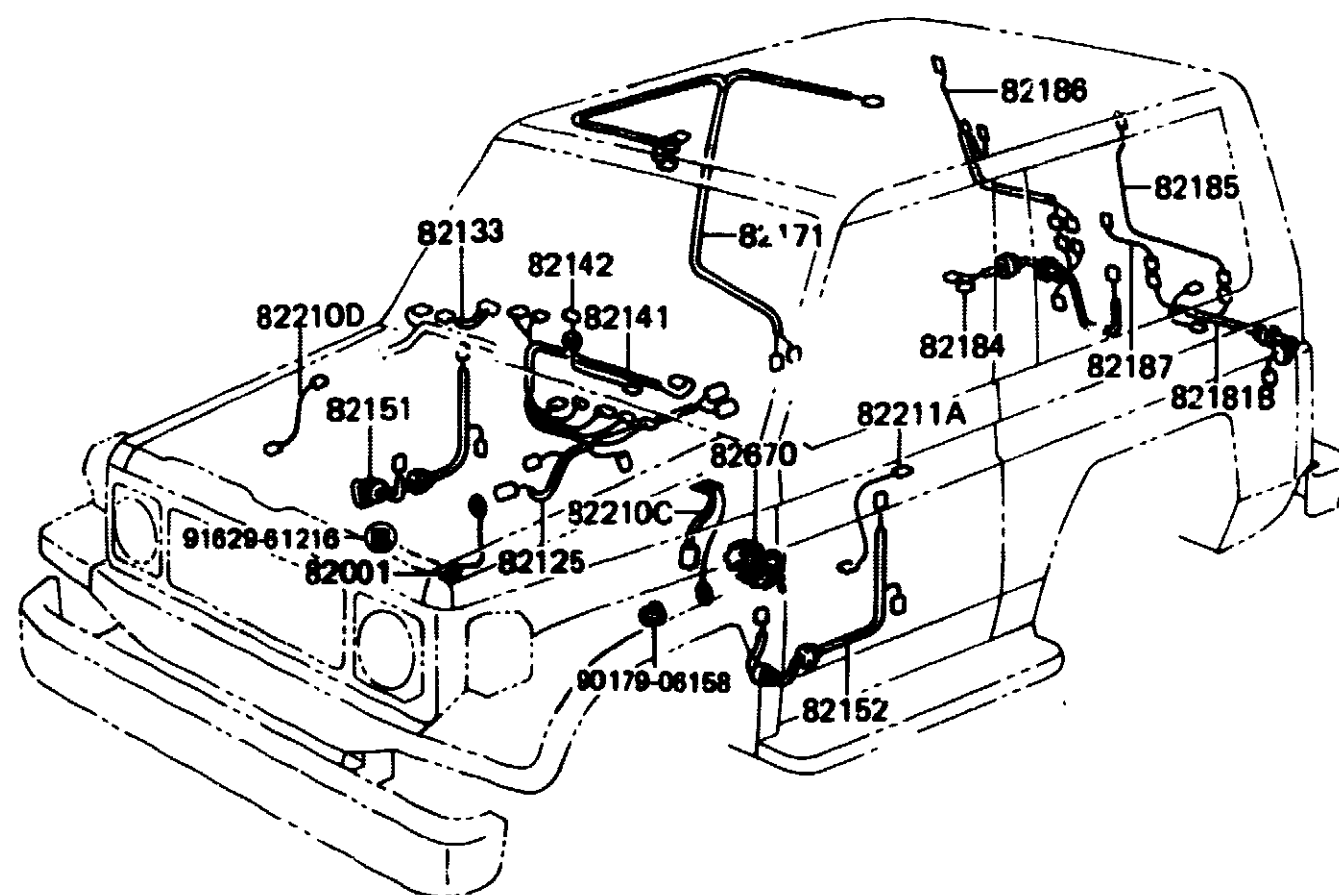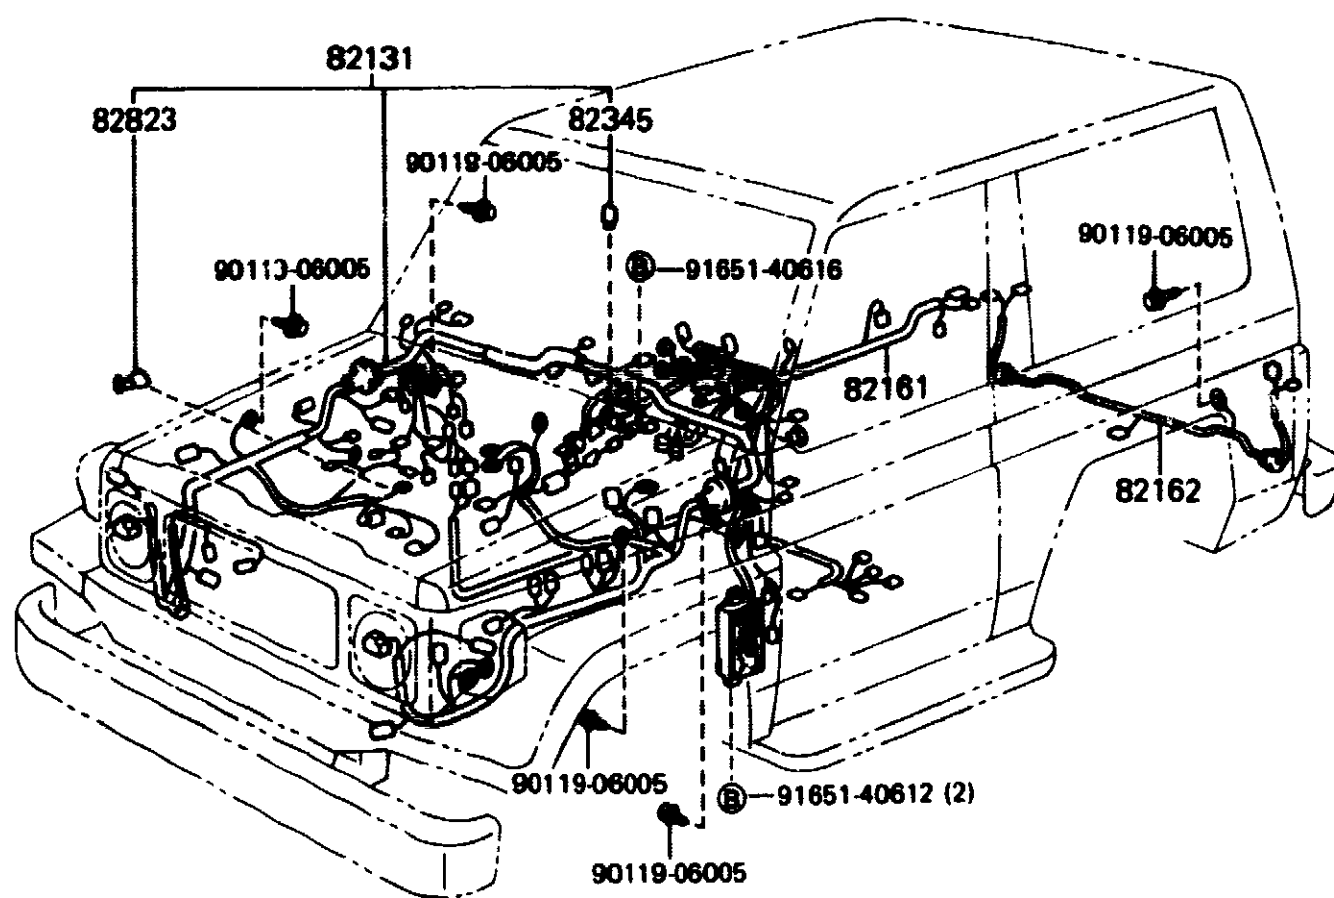

EM F428-D

MEF 428D

82711-30640	90461-08202	90464-00073	82711-30360	90461-08205
90461-06645	90462-08015	90461-08348	82711-12200	82711-90K03
90463-10521	90453-15004	90464-00165	82711-90K04	82711-22870
90463-13003	90463-08207	82711-90K01	82711-12480	82711-14360
90467-09007	90463-10060	82711-90K05	90463-10032	90463-15003


ME F304-A

MEF 304A


GENUINE TOYOTA PARTS

(8411-)

87100

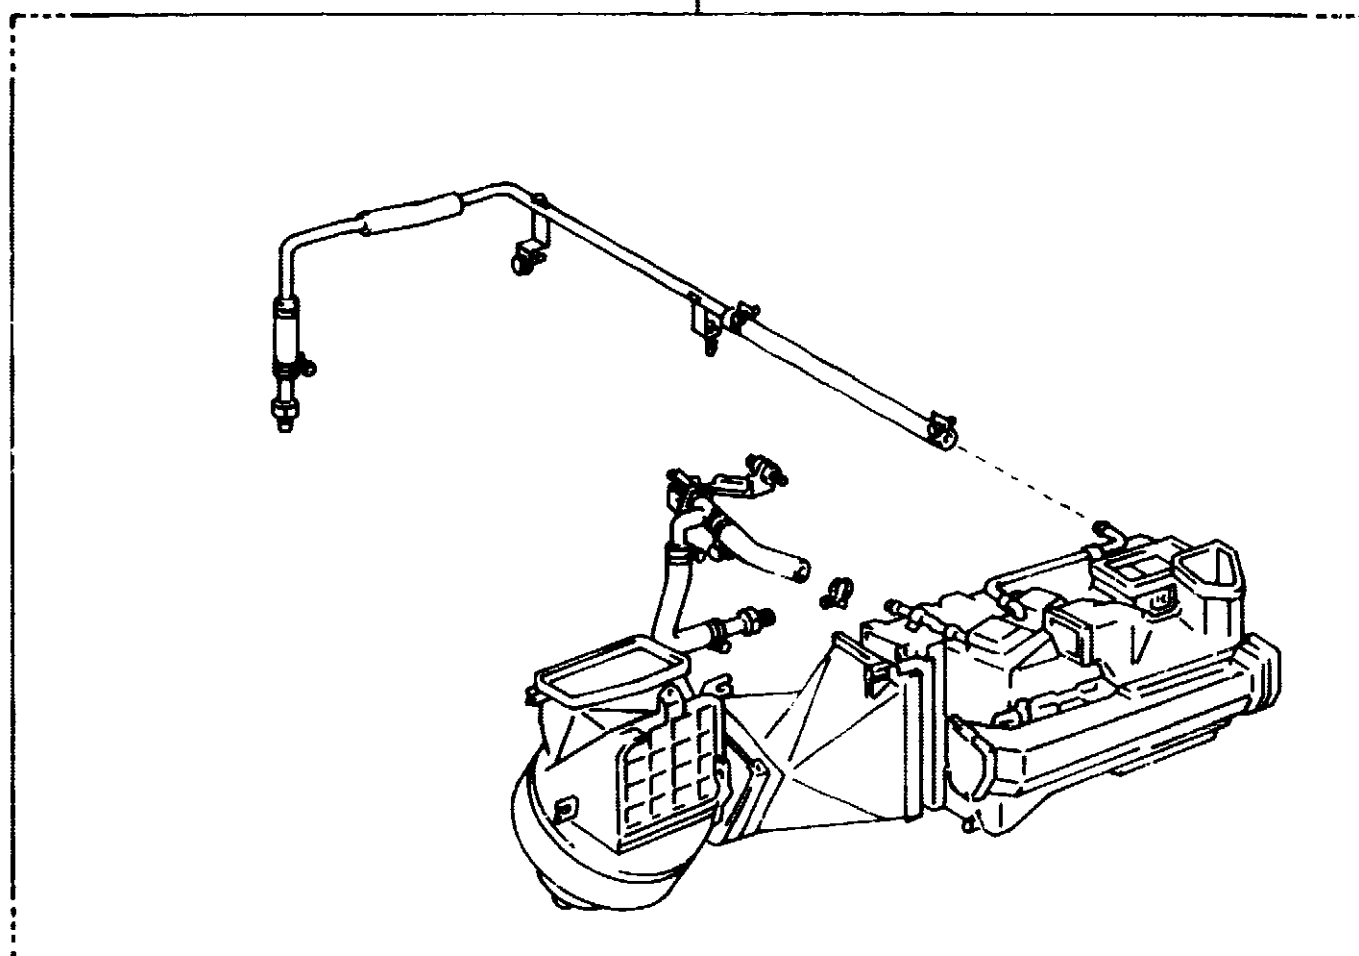

87200

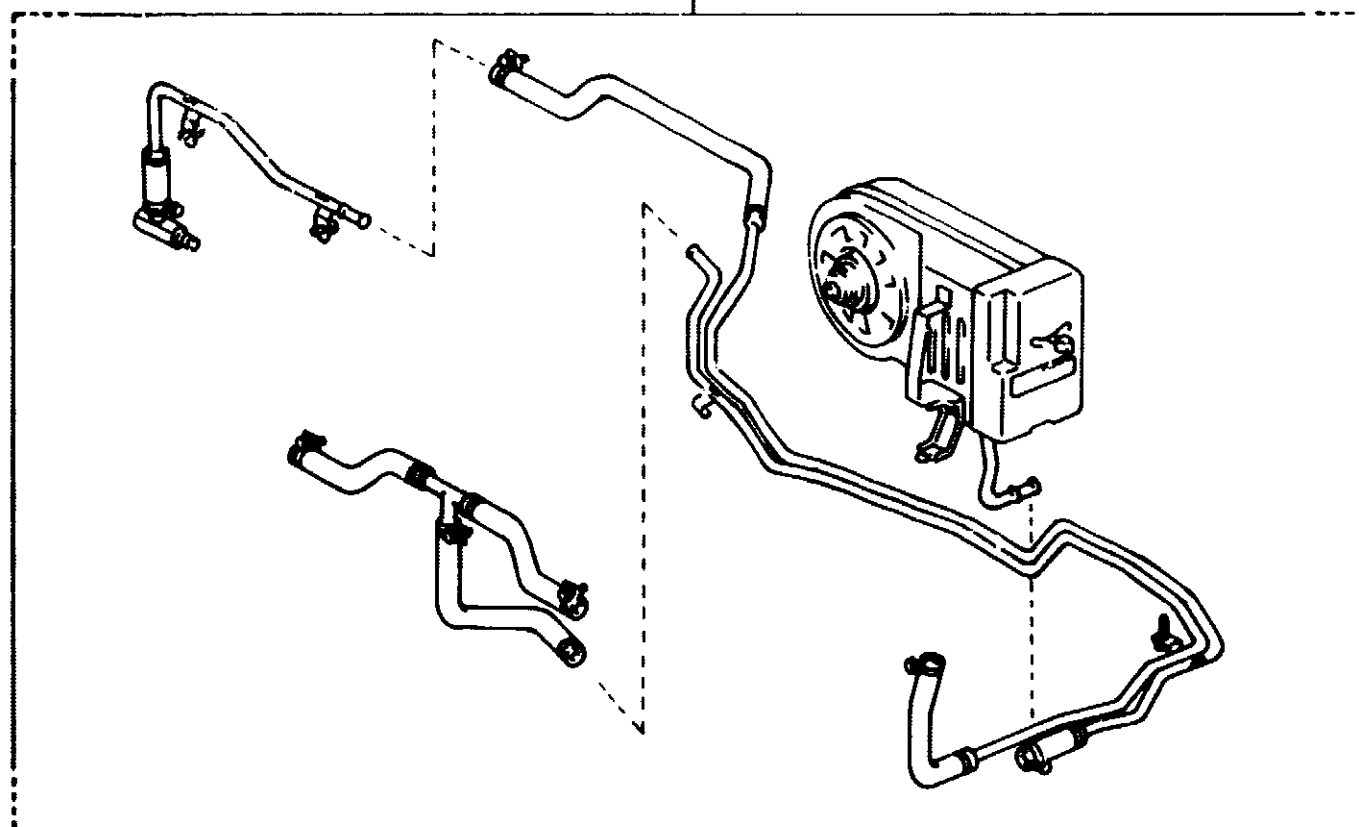

ME F376

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	87-11 HEATING & AIR CONDITIONING - SET						
	87100	HEATER AND ACCESSORY ASSY					
8411-8510	BJ70			87100-90K09-	1	81	100
8510-8608	BJ70			87100-90K24-	1	101	140
	87200	HEATER AND ACCESSORY, REAR					
8411-8510	BJ70			87200-90K02-	1	81	100
8510-8608	BJ70			87200-90K11-	1	101	140

CRANKSHAFT - DISC

F12

M74-26-0043

DISC - FORK












PART	NAME	LOCATION
CRANKSHAFT		1-B2
CROSSMEMBER SUB-ASSY, FRAME, NO.1		2-A1
CROSSMEMBER SUB-ASSY, FRAME, NO.2		2-A1
CROSSMEMBER SUB-ASSY, FRAME, NO.3		2-A1
CROSSMEMBER SUB-ASSY, FRAME, NO.4		2-A1
CROSSMEMBER SUB-ASSY, FRAME, NO.5		2-A1
CROSSMEMBER SUB-ASSY, FRAME, NO.6		2-A1
CUP KIT, REAR WHEEL CYLINDER		1-J10
CUP, SHOE HOLD DOWN SPRING (FOR REAR BRAKE)		1-K10
CUSHION (FOR ACCELERATOR ADJUST STOPPER CHANNEL)		2-G7
CUSHION (FOR CLUTCH PEDAL)		1-F5
CUSHION (FOR FUEL INLET BOX COVER)		2-F7
CUSHION (FOR GLOVE COMPARTMENT)		2-D2
CUSHION (FOR STOP LAMP SWITCH)		1-C10
CUSHION, BODY MOUNT NO.3 UPPER		2-E1
CUSHION, BODY MOUNT NO.3, LOWER		2-E1
CUSHION, BODY MOUNT NO.4, UPPER		2-F1
CUSHION, BODY MOUNT NO.5, LOWER		2-F1
CUSHION, BODY MOUNT NO.5, UPPER		2-F1
CUSHION, BODY MOUNT, NO.1 LOWER		2-E1
CUSHION, BODY MOUNT, NO.1 UPPER		2-E1
CUSHION, BODY MOUNT, NO.2 LOWER		2-E1
CUSHION, BODY MOUNT, NO.2 UPPER		2-E1
CUSHION, CONSOLE COMPARTMENT DOOR		2-C3
CUSHION, EXHAUST PIPE CENTER (FOR FRONT)		1-D3
CUSHION, FRONT DOOR PANEL		2-G4
CUSHION, FRONT SHOCK ABSORBER		1-I11
CUSHION, FRONT STABILIZER		1-J11
CUSHION, GLOVE COMPARTMENT DOOR CHECK		2-D2
CUSHION, REAR SEAT		2-L5
CUSHION, SEAT SUSPENSION STOPPER		2-A6
CUSHION, TAIL PIPE (FOR CENTER)		1-D3
CUSHION, TAIL PIPE (FOR REAR)		1-D3
CYLINDER AND KEY SET, BACK DOOR LOCK		2-H5
CYLINDER AND KEY SET, DOOR LOCK, LH		2-H5
CYLINDER AND KEY SET, DOOR LOCK, RH		2-H5
CYLINDER AND KEY SET, FUEL FILLER LID		2-H5
CYLINDER AND KEY SET, GLOVE COMPARTMENT LOCK		2-H5
CYLINDER AND KEY SET, IGNITION SWITCH LOCK		2-H5
CYLINDER AND KEY SET, SPARE WHEEL LOCK		2-H5
CYLINDER ASSY, CLUTCH MASTER		1-H5
CYLINDER ASSY, CLUTCH RELEASE		1-K5
CYLINDER ASSY, DIAPHRAGM		1-H7
CYLINDER ASSY, DISC BRAKE, LH		1-I10
CYLINDER ASSY, DISC BRAKE, RH		1-H10
CYLINDER ASSY, REAR WHEEL BRAKE (FOR LH, FRONT OR UPPER)		1-K10
CYLINDER ASSY, REAR WHEEL BRAKE (FOR RH, FRONT OR UPPER)		1-K10
CYLINDER KIT, BRAKE MASTER		1-D10
CYLINDER KIT, CLUTCH MASTER		1-H5
CYLINDER KIT, CLUTCH RELEASE		1-K5
CYLINDER KIT, DISC BRAKE, FRONT		1-H10
CYLINDER KIT, REAR WHEEL		1-J10
CYLINDER SET, LOCK		2-H5
CYLINDER SUB-ASSY, BRAKE MASTER		1-D10
DAMPER ASSY, STEERING		1-M9
DEFLECTOR, BRAKE DRUM OIL		1-D8
DEFLECTOR, BREATHER OIL		1-M6
DEFLECTOR, DUST (FOR FRONT DIFFERENTIAL)		1-G8
DEFLECTOR, DUST (FOR REAR DIFFERENTIAL)		1-A8
DEFLECTOR, DUST (FOR TRANSFER OUTPUT SHAFT)		1-L6
DIAPHRAGM (FOR DIAPHRAGM CYLINDER)		1-H7
DIAPHRAGM SUB-ASSY, GOVERNOR		1-H4
DIODE		2-I8
DISC ASSY, CLUTCH		1-D5

PART	NAME	LOCATION
DISC, FRONT		1-K8
DOOR ASSY, GLOVE COMPARTMENT		2-D2
DOOR SUB-ASSY, CONSOLE COMPARTMENT		2-C3
DRIVER, SCREW		1-A1
DROPPER, METER		2-L8
DRUM SUB-ASSY, REAR BRAKE		1-D8
DUCT SUB-ASSY, AIR, NO.1		2-J10
DUCT SUB-ASSY, AIR, NO.2		2-J10
DUCT SUB-ASSY, QUARTER VENTILATOR, LH		2-A4
DUCT SUB-ASSY, QUARTER VENTILATOR, RH		2-A4
DUCT, AIR		2-H10
DUCT, AIR CLEANER		1-F3
DUCT, AIR, REAR NO.1		2-H10
DUCT, AIR, SIDE NO.1 LH		2-J10
DUCT, AIR, SIDE NO.1 RH		2-J10
DUCT, AIR, SIDE NO.2 LH		2-J10
DUCT, AIR, SIDE NO.2 RH		2-J10
DUCT, AIR, SIDE NO.3 LH		2-J10
DUCT, AIR, SIDE NO.3 RH		2-J10
ELBOW (FOR RESERVOIR TUBE)		1-D10
ELEMENT SUB-ASSY, AIR CLEANER FILTER		1-F3
ELEMENT SUB-ASSY, FUEL FILTER		1-A5
ELEMENT SUB-ASSY, INJECTION PUMP		1-D4
EMBLEM, FRONT FENDER		2-J6
EMBLEM, RADIATOR GRILLE (OR FRONT PANEL)		2-J6
END ASSY (FOR HIGH & LOW SHIFT ROD)		1-G7
END SUB-ASSY, STEERING RELAY ROD, RH		1-K9
END SUB-ASSY, STEERING RELAY ROD, LH		1-K9
END SUB-ASSY, TIE ROD, LH		1-K9
END SUB-ASSY, TIE ROD, RH		1-K9
ENGINE ASSY, PARTIAL		1-C1
EQUALIZER, PARKING BRAKE		1-A10
ESCUTCHEON, DOOR REGULATOR HANDLE (FOR FRONT DOOR)		2-A5
EXTENSION SUB-ASSY, JACK HANDLE		1-A1
EXTENSION SUB-ASSY, QUARTER PANEL, REAR LOWER LH		2-F3
EXTENSION SUB-ASSY, QUARTER PANEL, REAR LOWER RH		2-F3
FAN		1-L2
FAN SUB-ASSY, HEATER BLOWER		2-H10
FAN SUB-ASSY, REAR HEATER BLOWER		2-H10
FAN, ALTERNATOR		1-J3
FELT (FOR ALTERNATOR DRIVE END FRAME)		1-I3
FENDER SUB-ASSY, FRONT, LH		2-K1
FENDER SUB-ASSY, FRONT, RH		2-K1
FILLER, FRONT DOOR GLASS CHANNEL		2-B5
FILM, SIDE WINDOW FRAME		2-J3
FILTER ASSY, FUEL (FOR DIESEL)		1-A5
FILTER SUB-ASSY, FUEL SUCTION TUBE		2-E7
FILTER SUB-ASSY, OIL		1-G2
FILTER, FUEL PUMP		1-K4
FILTER, NOISE		2-A10
FILTER, WINDSHIELD WASHER JAR		2-J9
FILTER, WINDSHIELD WASHER JAR, NO.2		2-J9
FINAL GEAR KIT, DIFFERENTIAL, FRONT		1-G8
FINAL GEAR KIT, DIFFERENTIAL, REAR		1-A8
FLANGE SUB-ASSY, DRIVE PINION COMPANION, FRONT		1-G8
FLANGE SUB-ASSY, DRIVE PINION COMPANION, REAR		1-A8
FLANGE, COMPANION (FOR TRANSFER OUTPUT SHAFT)		1-L6
FLANGE, FRONT AXLE OUTER SHAFT		1-J8
FLANGE, INJECTION PUMP		1-E4
FLASHER ASSY, TURN SIGNAL		2-C9
FLOAT, CLUTCH MASTER CYLINDER RESERVOIR		1-H5
FLYWHEEL SUB-ASSY		1-B2
FORK SUB-ASSY, CLUTCH RELEASE		1-D5
FORK, REVERSE SHIFT		1-G6

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
67861-90K06-	2-H4	68851-90K00-	2-F5	69820-90K01-	2-A5	71955-90K00-01	2-M5	73847-90K00-	2-A6	75581-90K00-	2-L6
67862-90K06-	2-H4	68852-90K00-	2-F5	69901-90K00-	2-A5	72053-90K00-03	2-M5	74102-90K00-03	2-L6	75583-90K00-	2-L6
67868-30040-	2-H4	68861-90K00-	2-F5	-90K01-	2-A5	-90K00-06	2-M5	-90K00-05	2-L6	75585-90K00-	2-L6
67881-90K05-	2-D5	69005-90K44-01	2-H5	69902-90K00-	2-B5	72054-90K00-03	2-M5	74104-90K00-	2-L6	75586-90K00-	2-L6
67882-90K05-	2-D5	-90K66-01	2-H5	-90K01-	2-B5	-90K00-06	2-M5	74105-10010-10	2-L6	75589-90K00-	2-L6
67913-90K00-03	2-L6	-90L66-01	2-H5	69971-90K00-	2-B5	72110-90K01-	2-M5	-10010-13	2-L6	75596-90A00-	2-L6
-90K00-06	2-L6	69051-90K02-	2-H5	71013-90K03-	2-L5	-90K05-	2-M5	74135-10030-	2-L6	75979-90K00-02	2-A7
68111-90K00-	2-H4	69052-90K02-	2-H5	71014-90K03-	2-L5	72120-90K00-	2-M5	74137-10030-	2-L6	-90K00-07	2-A7
-90K02-	2-H4	69056-90K02-01	2-H5	71015-90K00-	2-K5	-90K03-	2-M5	74310-90K03-08	2-E6	-90K03-02	2-A7
-90K04-	2-H4	69057-90K02-	2-H5	71017-90K00-	2-K5	72150-90K00-	2-M5	-90K04-08	2-E6	-90K03-04	2-A7
-90K06-	2-H4	-90K16-	2-H5	-90K08-	2-K5	-90K02-	2-M5	-90K11-08	2-E6	75981-90K00-02	2-A7
68112-90K00-	2-H4	69058-16101-	2-H5	71033-90K02-01	2-L5	72137-90K02-03	2-M5	74320-90K02-08	2-E6	-90K00-07	2-A7
-90K02-	2-H4	69059-90K02-	2-H5	71071-90K08-03	2-K5	-90K02-06	2-A6	-90K05-08	2-E6	-90K08-02	2-A7
-90K04-	2-H4	69205-10040-03	2-L4	-90K08-05	2-K5	72140-90K00-	2-A6	74348-32010-08	2-E6	-90K08-04	2-A7
-90K06-	2-H4	-10040-06	2-L4	-90K14-03	2-K5	-90K03-	2-A6	74372-30030-	2-E10	75982-90K00-02	2-A7
68121-90K00-	2-K4	69206-10040-03	2-L4	-90K14-05	2-K5			-90A00-	2-E10	-90K00-07	2-A7
68122-90K00-	2-K4	-10040-06	2-L4	71072-90K05-03	2-K5	72157-90K00-03	2-A6	74404-90K01-	2-G6	-90K08-02	2-A7
68131-90K00-	2-D5	-10050-03	2-F5	-90K05-05	2-K5	-90K00-06	2-A6	74405-90K01-	2-G6	-90K08-04	2-A7
-90K06-	2-D5	-10050-06	2-F5	-90K15-03	2-K5	72210-90K00-	2-A6	74407-90K00-	2-G6	75985-90K00-02	2-A7
-90K07-	2-D5	69210-90K00-	2-L4	-90K15-05	2-K5	72510-90K01-01	2-A6	74431-90K02-	2-G6	-90K00-07	2-A7
68132-90K00-	2-D5	69212-90K00-	2-F5	71073-90K16-03	2-K5	72520-90K00-	2-A6	74432-90K01-	2-G6	-90K08-02	2-A7
-90K04-	2-D5	69220-32010-	2-F5	-90K16-05	2-K5	72538-12010-	1-A9	74434-90K02-	2-G6	-90K08-04	2-A7
-90K05-	2-D5	-90K00-	2-L4	-90K17-03	2-K5	72570-90K00-	2-A6	-90K03-	2-G6	75986-90K00-02	2-A7
68141-90K03-	2-H4	69260-10040-10	2-A5	-90K17-05	2-K5	72580-90K00-	2-A6	74435-90K01-	2-G6	-90K00-07	2-A7
68143-90K00-	2-H4	-10040-33	2-A5	71074-90K12-03	2-K5	72603-90K01-03	2-A6	-90K02-	2-G6	-90K08-02	2-A7
68160-90K00-	2-H4	69266-22010-	2-A5	-90K12-05	2-K5	-90K01-06	2-A6	74436-90K01-	2-G6	-90K08-04	2-A7
-90K01-	2-H4	69285-90801-03	2-F6	-90K13-03	2-K5	72604-90K01-03	2-A6	74534-90K00-	2-E9	75991-90K00-02	2-A7
68170-90K00-	2-H4	-90801-16	2-F6	-90K13-05	2-K5	-90K01-06	2-A6	74539-20010-	2-H6	-90K00-07	2-A7
-90K01-	2-H4	69310-90K00-	2-L4	71075-90K06-03	2-L5	72607-90K00-	2-A6	74559-89101-	2-H6	-90K12-02	2-A7
68175-90K00-	2-K4	69320-90K00-	2-L4	-90K06-05	2-L5	72660-90K00-	2-A6	74564-60010-	2-H6	-90K12-04	2-A7
68176-90K00-	2-K4	69350-90K00-	2-F5	-90K07-03	2-L5	72665-90K00-	2-A6	74604-90K00-03	2-E6	75992-90K00-02	2-A7
68181-90K00-	2-K4	-90K01-	2-G5	-90K07-05	2-L5	72666-90K00-	2-A6	-90K00-06	2-E6	-90K00-07	2-A7
68182-90K00-	2-K4	69377-90K00-	2-G5	71077-90K08-03	2-L5	72690-90K00-03	2-A6	74610-12030-08	2-E6	-90K12-02	2-A7
68210-90K00-	2-H4	69380-90K00-	2-G5	-90K08-05	2-L5	-90K00-06	2-A6	74617-16010-08	2-E6	-90K12-04	2-A7
-90K01-	2-H4	69410-14050-	2-G5	-90K09-03	2-L5	72694-90K00-	2-A6	-90K00-03	2-E6	76603-90K00-	2-K1
68211-10030-	2-L4	-87001-	2-L4	-90K09-05	2-L5	73080-90K00-	2-A6	-90K00-06	2-E6	-90K01-	2-K1
-90K00-	2-H4	69430-90K00-	2-G5	71308-90K00-	2-L5	73210-90K05-03	2-C6	74630-90K00-03	2-E6	76604-90K00-	2-K1
68220-90K00-	2-H4	69470-90K00-	2-G5	71324-90K00-	2-L5	-90K05-06	2-C6	-90K00-06	2-E6	-90K01-	2-K1
-90K01-	2-H4	69511-32010-	2-H5	71381-90K02-	2-L5	-90K17-03	2-C6	74637-90K00-03	2-E6	76607-90K00-	2-H3
68291-90K00-	2-D5			71396-90K00-	2-L5	-90K17-06	2-C6	-90K00-06	2-E6	76608-90K00-	2-H3
-90K01-	2-D5	69512-87001-	2-L5	71501-90K02-	2-L5	73220-90K04-03	2-C6	74638-90K00-03	2-F6	76617-90K00-	2-L2
68292-90K00-	2-D5	69513-32010-	2-L5	71502-90K02-	2-L5	-90K04-06	2-C6	-90K00-06	2-F6	-90K01-	2-L2
-90K01-	2-D5	69603-90K00-03	2-L4	71505-90K02-	2-L5	-90K09-03	2-C6	74640-90K00-03	2-F6	76618-90K00-	2-L2
68299-90K00-	2-D5	-90K00-06	2-L4	71506-90K02-	2-L5	-90K09-06	2-C6	-90K00-06	2-F6	-90K01-	2-L2
68610-12030-	2-L4	69604-90K00-03	2-L4	71507-90K02-	2-L5	73230-90K02-03	2-C6	-90K00-06	2-F6	-90K01-	2-L2
68611-90K00-	2-E5	-90K00-06	2-L4	-90K10-	2-L5	-90K02-06	2-C6	75311-90K00-	2-J6	77023-22040-	2-E7
68617-22010-	2-L4	69690-90K00-	2-G5	71521-90K02-	2-L5	73240-90K02-03	2-C6	75312-90K00-	2-J6	77035-90K01-	2-E7
-30010-	2-E5	69706-90K00-03	2-G5	71610-90K00-	2-L5	-90K02-06	2-C6	75318-90K00-	2-J6	77037-90K00-	2-E7
								75370-90A02-	2-J6	77100-60290-	2-E7
-90A01-	2-L4	-90K00-06	2-G5	-90K01-	2-L5	73297-90K00-03	2-C6	75427-90K00-	2-J6	77110-60010-	2-F7
-90K00-	2-E5	69711-90K00-	2-L4	71611-90K03-	2-L5	-90K00-06	2-C6	75441-90K00-	2-J6	-60011-	2-F7
68621-90K00-	2-L4	69712-90K00-	2-L4	71620-90K00-	2-L5	73298-90K00-03	2-C6	75450-90K00-	2-J6	77131-90K00-	2-E7
68650-90K01-	2-D5	69717-90K00-01	2-E5	-90K01-	2-L5	-90K00-06	2-C6	75505-90K00-	2-K6	77169-14020-	2-E7
-90K02-	2-D5	69749-12010-	2-L1	71671-90K00-	2-L5	73299-90K00-03	2-C6	75506-90K00-	2-K6	77201-60200-	2-E7
68660-90K01-	2-D5	69751-90K00-	2-G5	71771-90K00-	2-L5	-90K00-06	2-C6	75531-90K00-	2-K6	77213-60040-	2-E7
-90K03-	2-D5	69759-30021-	2-M4	71811-90K00-03	2-M5	73350-90K02-03	2-D6	75533-90K00-	2-K6	77240-60110-	2-E7
68699-90K00-	2-E5	-90K00-	2-G5	-90K00-06	2-M5	-90K02-06	2-D6	75535-90K00-	2-K6	77251-60280-	2-E7
68710-14030-	2-A5	-90K01-	2-M4	71812-90K01-03	2-M5	73360-90K03-03	2-D6	75541-90K00-	2-K6	77252-60100-	2-E7
68720-14030-	2-A5	69801-90K00-	2-A5	-90K01-06	2-M5	-90K03-06	2-D6	75543-90K00-	2-K6	-60101-	2-E7
68730-24010-	2-A5	-90K01-	2-A5	71910-90K00-03	2-M5	73371-90K00-03	2-D6	75553-90K00-	2-K6	77253-60070-	2-E7
68740-24010-	2-A5	69802-90K00-	2-A5	-90K00-06	2-M5	-90K00-06	2-D6	75554-90K00-	2-K6	-60080-	2-E7
68801-90K00-	2-F5	-90K01-	2-A5	71930-10060-33	2-M5	73380-90K01-03	2-D6	75571-90K00-	2-L6	77277-90K00-	2-F7
68802-90K00-	2-F5	69810-90K00-	2-A5	-10060-36	2-M5	-90K01-06	2-D6	75572-90K00-	2-L6	77290-90K00-	2-F7
68803-90K00-	2-F5	-90K01-	2-A5	71931-10010-33	2-M5	73800-90K01-	2-A6	75575-90K00-	2-L6	77293-90K00-	2-F7
68804-90K00-	2-F5	69820-90K00-	2-A5	-10010-36	2-M5	73810-90K01-	2-A6	75576-90K00-	2-L6	77305-90K00-	2-F7


ILLUSTRATED INDEX

F 16

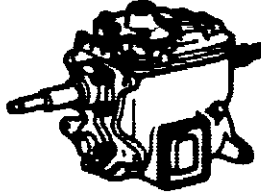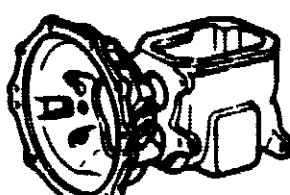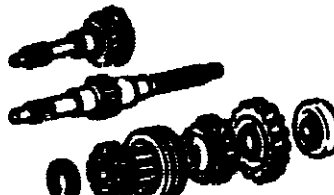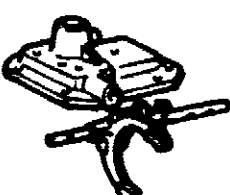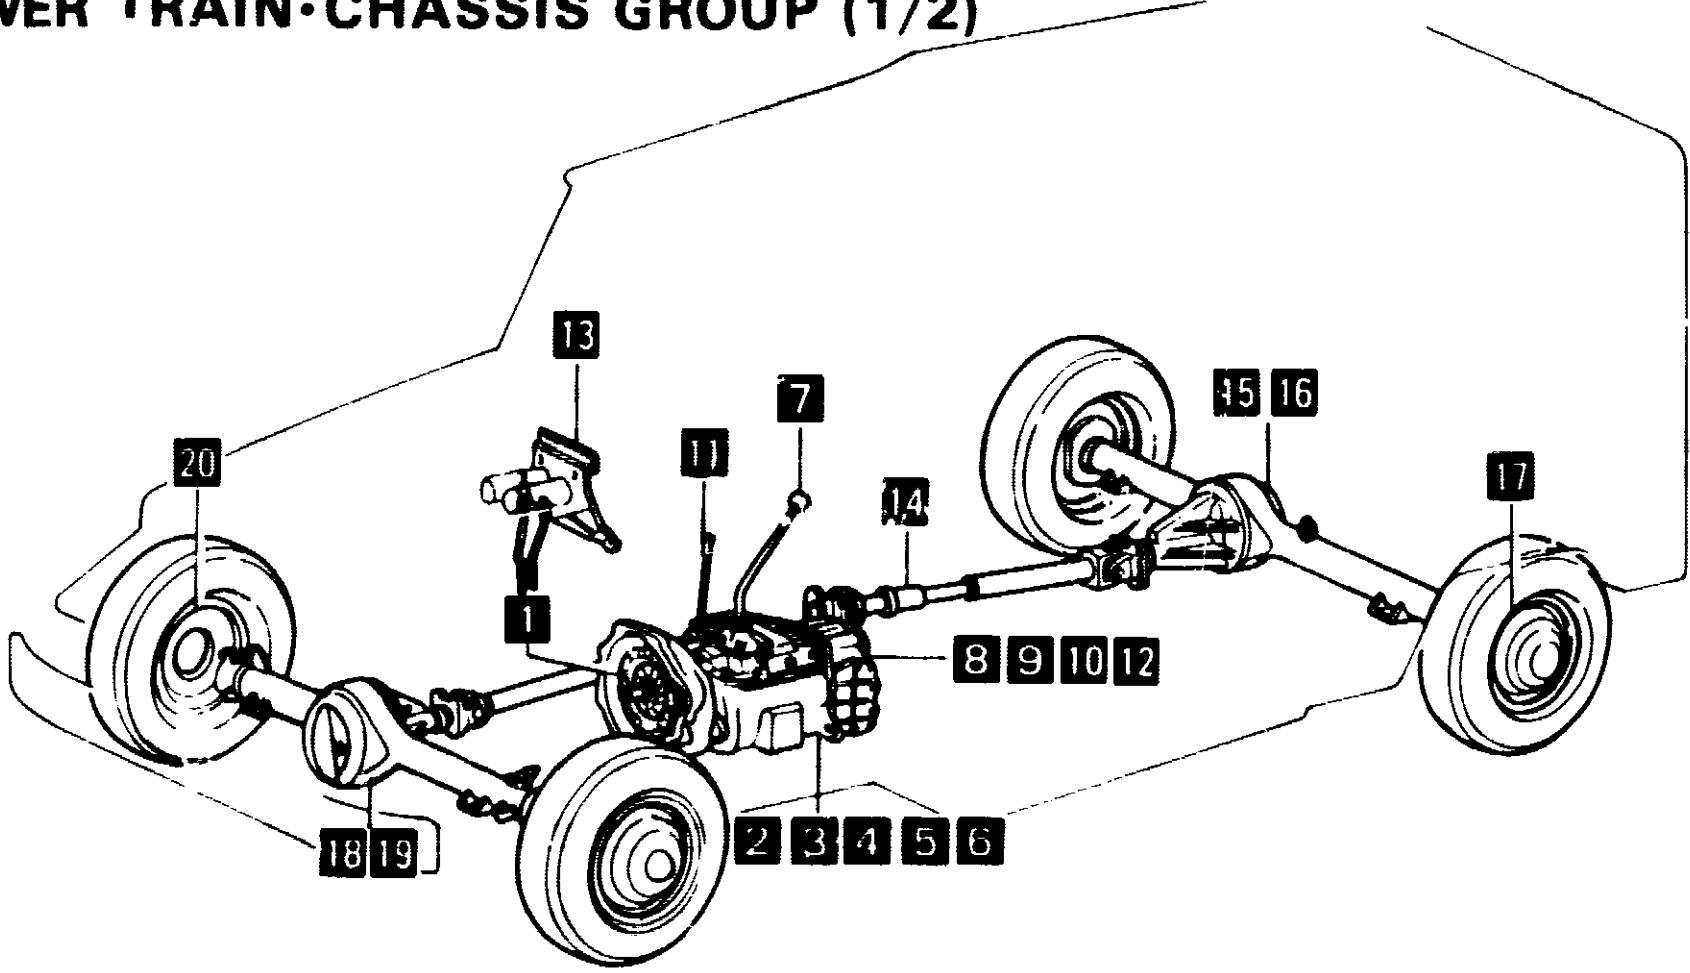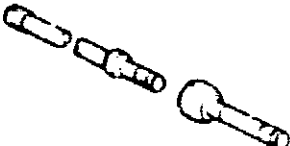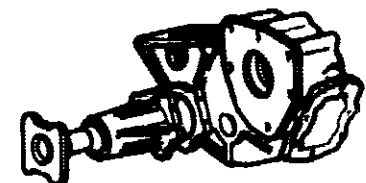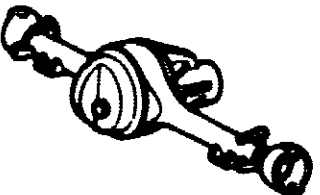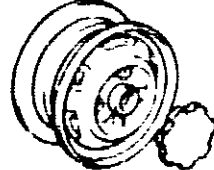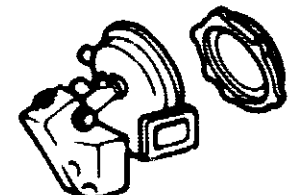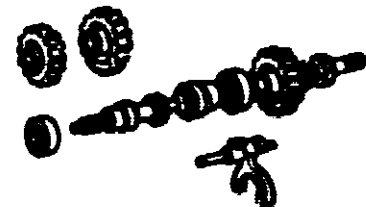1-D5 (31-01) 1  Clutch & Release Fork	1-L5 (33-01) 2  Transmission Assy	1-M5 (33-02) 3  Transmission Case	1-B6 (33-04) 4  Speedometer Driven Gear	1-C6 (33-05) 5  Transmission Gear	1-G6 (33-07) 6  Gear Shift Fork	1-J6 (33-12) 7  Shift Lever & Retainer
POWER TRAIN-CHASSIS GROUP (1/2) 						
1-J8 (43-03) 20  Front Axle Hub						1-K6 (36-08) 8  Transfer Assy
1-I8 (43-02) 19  Drive Shaft						1-L6 (36-09) 9  Transfer Case
1-F8 (43-01) 18  Front Axle Housing	1-E8 (41-03) 17  Disc Wheel & Cap	1-D8 (41-02) 16  Rear Axle Shaft & Hub	1-M7 (41-01) 15  Rear Axle Housing	1-K7 (37-01) 14  Propeller Shaft	1-I7 (36-16) 13  Vacuum Shift Valve	1-H7 (36-12) 12  Diaphragm Cylinder
						1-B7 (36-10) 10  Transfer Gear
						1-E7 (36-11) 11  Transfer Lever

MC 8935


(8411-)

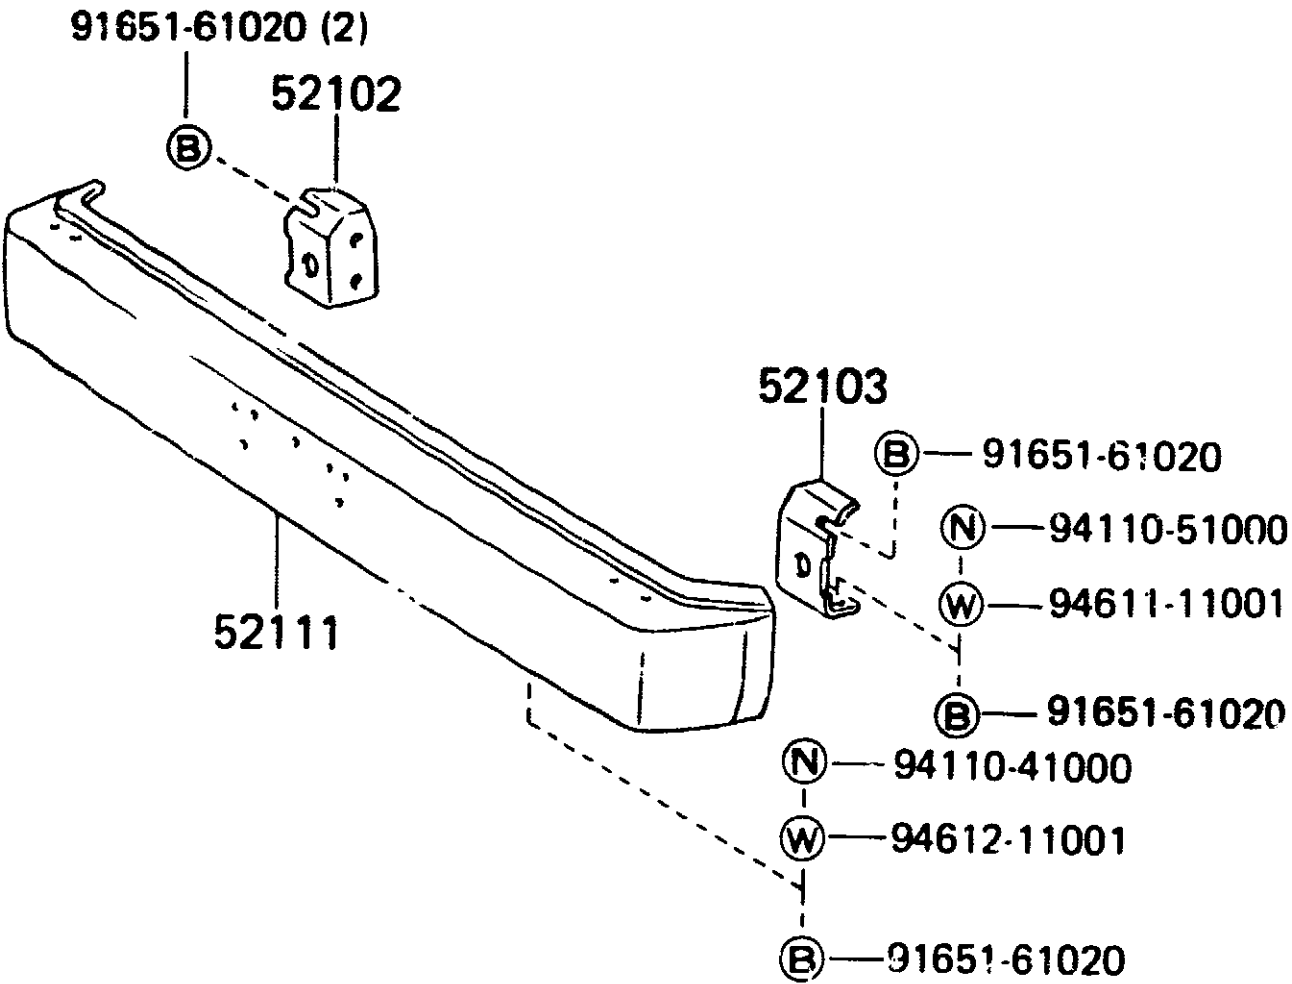

MB H622-A

PROD. DATE	M O D E L S	DESCRIPTION	P / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	52-52 FRONT BUMPER & BUMPER STAY						
	+-----+						
	52102	BRACKET SUB-ASSY, FRONT BUMPER, RH					
	+-----+						
8411-	BJ70			52116-60020-	1	81	
	+-----+						
	52103	BRACKET SUB-ASSY, FRONT BUMPER, LH					
	+-----+						
8411-	BJ70			52117-60010-	1	81	
	+-----+						
	52111	BUMPER ASSY, FRONT					
	+-----+						
8411-	BJ70			52101-60010-	1	81	
8411-	BJ70	CHROME PLATING		52101-60020-	1	81	

(8411-)

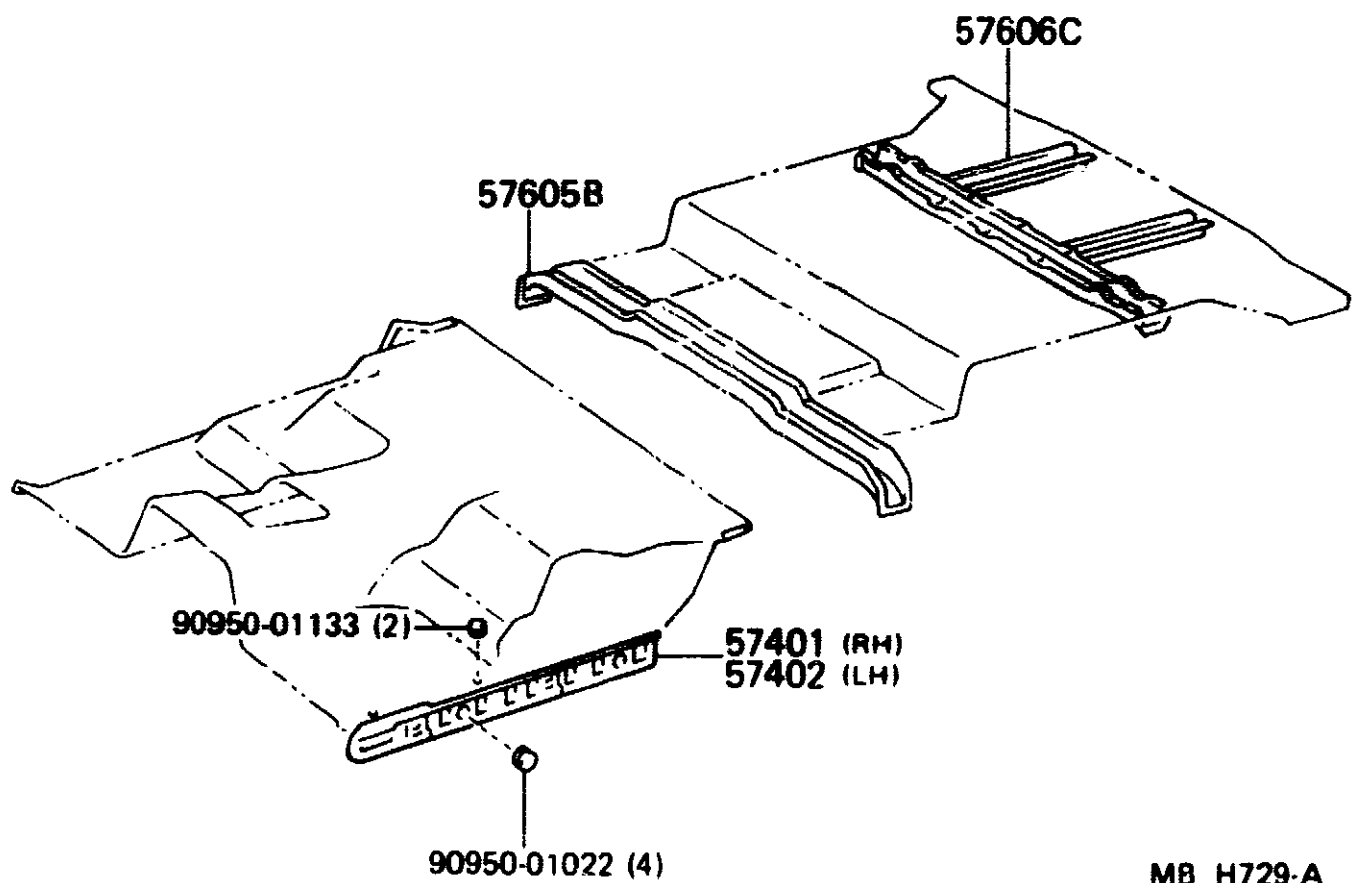

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
FIG.	57-51 FLOOR MEMBER						
8411-	+	+					
	57401	MEMBER SUB-ASSY, MAIN FLOOR SIDE, RH					
BJ70	+	+					
	57402	MEMBER SUB-ASSY, MAIN FLOOR SIDE, LH					
8411-8510	+	+					
	57401	MEMBER SUB-ASSY, MAIN FLOOR SIDE, RH					
BJ70	+	+					
	57402	MEMBER SUB-ASSY, MAIN FLOOR SIDE, LH					
8510-	+	+					
	57401	MEMBER SUB-ASSY, MAIN FLOOR SIDE, RH					
BJ70	+	+					
	57402	MEMBER SUB-ASSY, MAIN FLOOR SIDE, LH					
8411-8608	+	+					
	57605B	MEMBER SUB-ASSY, REAR FLOOR CROSS, NO.1					
BJ70	+	+					
	57606C	MEMBER SUB-ASSY, REAR FLOOR CROSS, NO.2					
8608-	+	+					
	57605B	MEMBER SUB-ASSY, REAR FLOOR CROSS, NO.1					
BJ70	+	+					
	57606C	MEMBER SUB-ASSY, REAR FLOOR CROSS, NO.2					
8411-	+	+					
	57605B	MEMBER SUB-ASSY, REAR FLOOR CROSS, NO.1					
BJ70	+	+					
	57606C	MEMBER SUB-ASSY, REAR FLOOR CROSS, NO.2					

FIG. 61-51

GENUINE TOYOTA PARTS

2-G3

M74-15-0668

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	61282 BJ70	BRACKET, SLIDING ROOF HOUSING MOUNTING, NO. 2		61282-90K00-	4	81	
8411-	61307 BJ70	PILLAR SUB-ASSY, CENTER BODY, INNER RH		61307-90K00-	1	81	
8411-	61308 BJ70	PILLAR SUB-ASSY, CENTER BODY, INNER LH		61308-90K00-	1	81	
8411-	61411 BJ70	PANEL, ROCKER, OUTER RH		61401-90K00-	1	81	
8411-	61412 BJ70	PANEL, ROCKER, OUTER LH		61402-90K00-	1	81	
8411-	61511C BJ70	REINFORCEMENT, QUARTER LOCK PILLAR, RH		61503-20030-	1	81	
8411-	61512C BJ70	REINFORCEMENT, QUARTER LOCK PILLAR, LH		61503-20030-	1	81	
8411-	61611 BJ70	PANEL, QUARTER, RH		61611-90K03-	1	81	
8411-	61612 BJ70	PANEL, QUARTER, LH		61612-90K03-	1	81	
8411-	61631A BJ70	PANEL, QUARTER WHEEL HOUSE, OUTER RH		61631-90K01-	1	81	
8411-	61632A BJ70	PANEL, QUARTER WHEEL HOUSE, OUTER LH		61632-90K01-	1	81	
8411-	61633A BJ70	PANEL, QUARTER WHEEL HOUSE, INNER RH		61633-90K00-	1	81	
8411-	61634A BJ70	PANEL, QUARTER WHEEL HOUSE, INNER LH		61634-90K00-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	61645B BJ70	GUSSET, QUARTER WHEEL HOUSE, REAR RH		61645-90K00-	1	81	
8411-	61646B BJ70	GUSSET, QUARTER WHEEL HOUSE, REAR LH		61646-90K00-	1	81	
8411-	61665B BJ70	REINFORCE, SEAT BELT ANCHORAGE TO QUARTER WHEEL HOUSE, RH		61665-12010-	1	81	
8411-	61666B BJ70	REINFORCE, SEAT BELT ANCHORAGE TO QUARTER WHEEL HOUSE, LH		61665-12010-	1	81	
8411-	61675A BJ70	REINFORCE, SEAT BELT ANCHOR, NO. 2 UPPER RH		61675-90K00-	1	81	
8411-	61676A BJ70	REINFORCE, SEAT BELT ANCHOR, NO. 2 UPPER LH		61676-90K00-	1	81	
8411-	61697D BJ70	HOUSING, QUARTER PANEL END, RH		61065-90K00-	1	81	
8411-	61698D BJ70	HOUSING, QUARTER PANEL END, LH		61066-90K00-	1	81	
8411-8510	61705 BJ70	PANEL SUB-ASSY, ROOF SIDE, INNER RH		61705-90K03- (61705-90K19-)	1	81	100
8411-8510	BJ70	W/SUN ROOF		61705-90K19-	1	81	100
8510-	BJ70				1	101	
8411-8510	61706 BJ70	PANEL SUB-ASSY, ROOF SIDE, INNER LH		61706-90K03- (61706-90K18-)	1	81	100
8411-8510	BJ70	W/SUN ROOF		61706-90K18-	1	81	100
8510-	BJ70				1	101	
8411-8608	61725 BJ70	BOX, FUEL INLET		61709-90K00-	1	81	140

FIG. 67-51

GENUINE TOYOTA PARTS

2-G4

M74-15-0675


GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	67-51 FRONT DOOR PANEL & GLASS						
8411-8510	BJ70	PANEL SUB-ASSY, FRONT DOOR, RH		67001-90K05- (67001-90K21-)	1	81	100
8510-	BJ70			67001-90K21-	1	101	
8411-	BJ70	CUSHION, FRONT DOOR PANEL		90541-09038-	4	81	
8411-8510	BJ70	PANEL SUB-ASSY, FRONT DOOR, LH		67002-90K05- (67002-90K21-)	1	81	100
8510-	BJ70			67002-90K21-	1	101	
8411-	BJ70	PANEL, FRONT DOOR, OUTER RH		67111-90K05-	1	81	
8411-	BJ70	PANEL, FRONT DOOR, OUTER LH		67112-90K04-	1	81	
8411-	BJ70	FRAME SUB-ASSY, FRONT DOOR, FRONT LOWER RH		67401-90K00-	1	81	
8411-	BJ70	FRAME SUB-ASSY, FRONT DOOR, FRONT LOWER LH		67402-90K00-	1	81	
8411-	BJ70	FRAME, FRONT DOOR WINDOW, REAR LOWER RH		67403-90K01-	1	81	
8411-	BJ70	FRAME, FRONT DOOR WINDOW, REAR LOWER LH		67404-90K01-	1	81	
8411-8612	BJ70	SEAL, FRONT DOOR FRONT LOWER FRAME, RH		67481-90K00-	1	81	
8612-	BJ70			67481-90K02-	1		
8411-8612	BJ70	SEAL, FRONT DOOR FRONT LOWER FRAME, LH		67482-90K00-	1	81	


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8612-	BJ70	SEAL, FRONT DOOR FRONT LOWER FRAME, LH		67482-90K02-	1		
8411-8510	BJ70	BOARD SUB-ASSY, FRONT DOOR TRIM, RH		VL, GRAY	1	81	100
8411-8510	BJ70			VL, BEIGE	1	81	100
8411-8510	BJ70	FB, W/POWER WINDOW, GRAY		67610-90K11-03	1	81	100
8411-8510	BJ70	FB, W/POWER WINDOW, BEIGE		67610-90K11-05	1	81	100
8411-8510	BJ70	FB, GRAY		67610-90K12-03	1	81	100
8411-8510	BJ70	FB, BEIGE		67610-90K12-05	1	81	100
8510-8608	BJ70	W/POWER WINDOW, GRAY		67610-90K35-03	1	101	140
8510-8608	BJ70	W/POWER WINDOW, BEIGE		67610-90K35-05	1	101	140
8510-	BJ70	GRAY		67610-90K38-03	1	101	
8510-	BJ70	BEIGE		67610-90K38-05	1	101	
8411-8510	BJ70	RETAINER (FOR FRONT DOOR TRIM BOARD)		67771-12010-	26	81	100
8411-8510	BJ70	TYPE B		67771-30040-	2	81	100
8510-	BJ70	TYPE B		67771-22010-	2	101	
8510-	BJ70	TYPE A		67771-30060-	20	101	
8510-	BJ70	TYPE C		67771-90K00-	4	101	
8411-8510	BJ70	BOARD SUB-ASSY, FRONT DOOR TRIM, LH		VL, GRAY	1	81	100
8411-8510	BJ70			VL, BEIGE	1	81	100
8411-8510	BJ70	FB, W/POWER WINDOW, GRAY		67620-90K11-03	1	81	100
8411-8510	BJ70	FB, W/POWER WINDOW, BEIGE		67620-90K11-05	1	81	100
8411-8510	BJ70	FB, GRAY		67620-90K12-03	1	81	100
8411-8510	BJ70	FB, BEIGE		67620-90K12-05	1	81	100

GENUINE TOYOTA PARTS


(8411-)

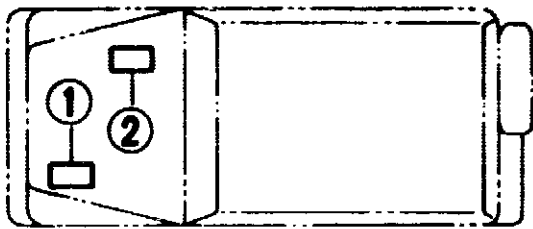

①

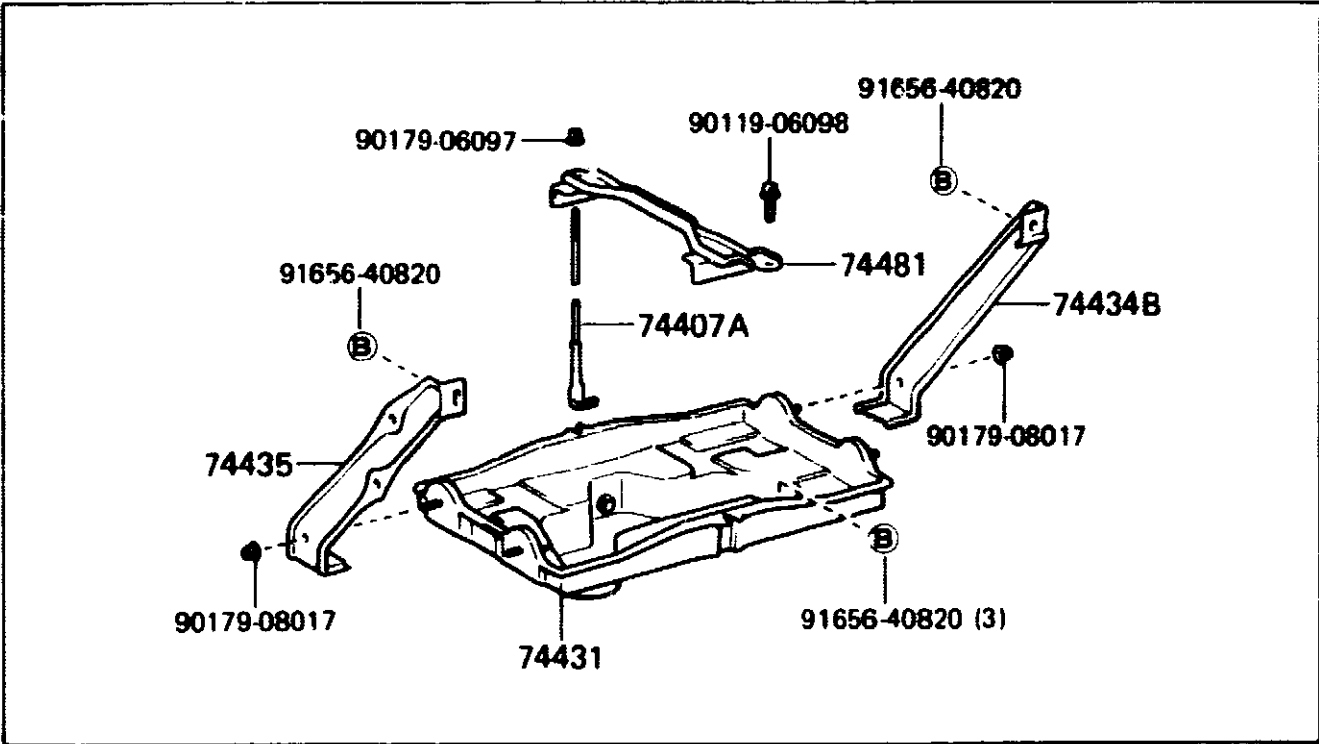

②

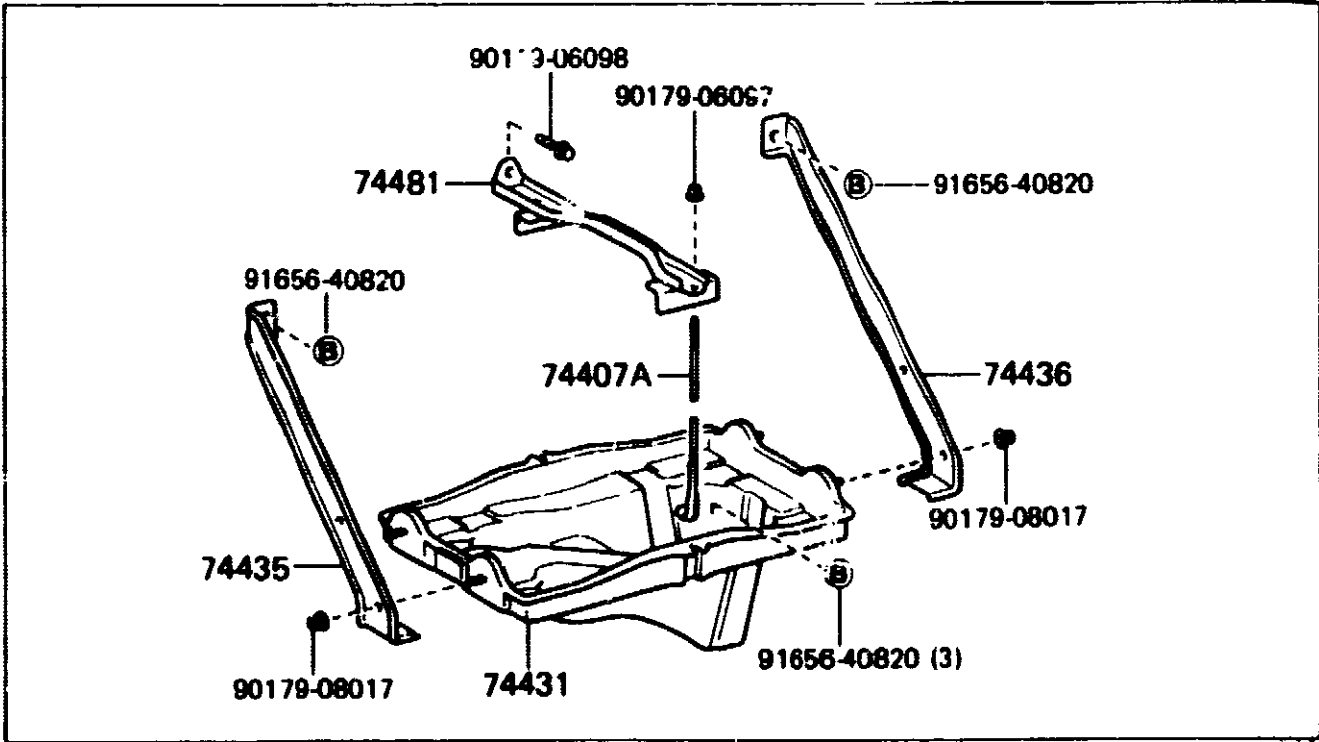

MB H643

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	74-54 BATTERY CARRIER						
		74407A BOLT SUB-ASSY, BATTERY CLAMP					
8411-	BJ70			74407-90K00-	2	81	
		74431 TRAY, BATTERY					
8411-	BJ70	LH		74431-90K02-	1	81	
8411-	BJ70	RH		74432-90K01-	1	81	
		74434B SUPPORT, BATTERY TRAY, NO.2					
8411-8510	BJ70	LH		74434-90K02-	1	81	100
8510-	BJ70	LH		74434-90K03-	1	101	
		74435 SUPPORT, BATTERY TRAY, NO.3					
8411-	BJ70	RH		74435-90K01-	1	81	
8411-	BJ70	LH		74435-90K02-	1	81	
		74436 SUPPORT, BATTERY TRAY, NO.4					
8411-	BJ70	RH		74436-90K01-	1	81	
		74481 CLAMP, BATTERY HOLD DOWN					
8411-	BJ70	LH		74404-90K01-	1	81	
8411-	BJ70	RH		74405-90K01-	1	81	

2-G7

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	FROM	UP TO
FIG.	78-51 ACCELERATOR LINK							
8411-	+-----+ 78110 +-----+	ROD ASSY, ACCELERATOR PEDAL		78120-90K02-	1	81		
8411-	+-----+ 78110A +-----+	SPRING (FOR ACCELERATOR PEDAL ROD)		90508-29017-	1	81		
8411-	+-----+ 78110C +-----+	BUSH (FOR ACCELERATOR PEDAL ROD)		90386-08155-	2	81		
8411-	+-----+ 78118 +-----+	PAD, ACCELERATOR PEDAL		78111-95110-	1	81		
8411-	+-----+ 78118B +-----+	STOPPER, ACCELERATOR PEDAL		78118-90K00-	1	81		
8411-	+-----+ 78180 +-----+	WIRE ASSY, ACCELERATOR		78180-90K10-	1	81		
8411-	+-----+ 78183B +-----+	CLAMP, ACCELERATOR CONTROL CABLE		78183-90A00-	1	81		
8411-	+-----+ 78184A +-----+	CUSHION (FOR ACCELERATOR ADJUST STOPPER CHANNEL)		90541-06008-	1	81		
8411-	+-----+ 78184B +-----+	BRACKET, ACCELERATOR CONTROL CABLE		78184-90K01-	1	81		
8411-	+-----+ 78189 +-----+	BOLT, ACCELFATOR PEDAL STOPPER		91131-50835-	1	81		
8411-	+-----+ 78410 +-----+	CABLE ASSY, THROTTLE CONTROL		78410-90K01-	1	81		
8411-	+-----+ 78410C +-----+	KNOB, THROTTLE CABLE		78411-90K00-	1	81		

(8411-

ILLUST. NO. 30F3

ME J298

ME F305-A


FIG.84-06 ELECTRONIC DIESEL INJECTION
CONTROL SYSTEM

2-G9

GENUINE TOYOTA PARTS

M74-13-0095

(8411-)

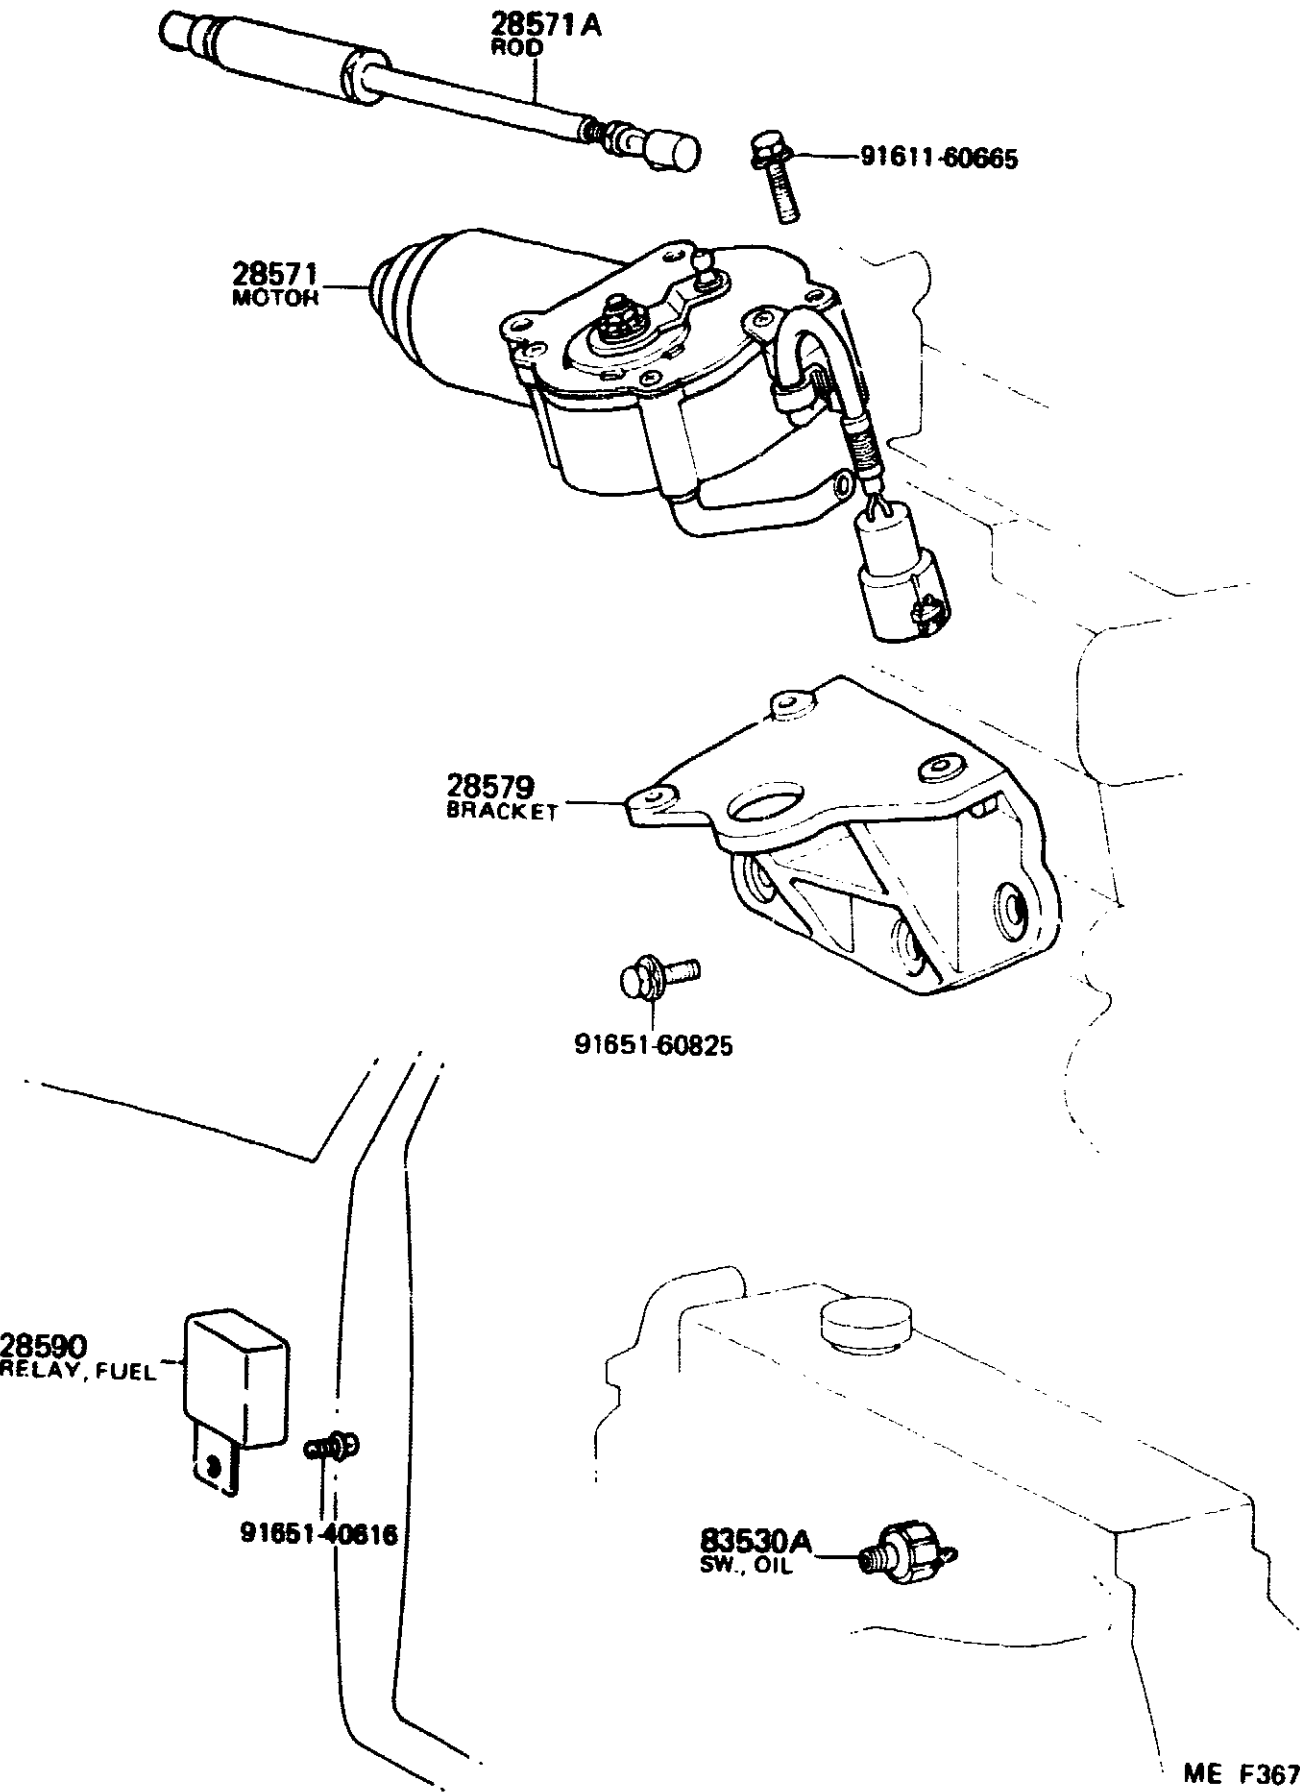



PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	84-06 ELECTRONIC DIESEL INJECTION CONTROL SYSTEM						
	28571	MOTOR, FUEL CONTROL					
8411-8510	3B..BJ70			28571-56120-	1	81	100
8510-	3B..BJ70			28571-56130-	1	101	
	28571A	ROD, FUEL CONTROL MOTOR					
8411-	3B..BJ70			84580-36021-	1	81	
	28579	BRACKET, FUEL CONTROL MOTOR					
8411-	3B..BJ70			28579-56030-	1	81	
	28590	RELAY ASSY, FUEL CONTROL					
8411-8510	3B..BJ70			28590-56090-	1	81	100
8510-	3B..BJ70			28590-56100-	1	101	
	83530A	SWITCH ASSY, OIL PRESSURE					
8411-8601	BJ70			* 83530-14010- (83530-14030-	1	81	
8601-	BJ70			83530-14030-	1		

(8411-)

(8411-)


ILLUST. NO. 10F2

ILLUST. NO. 20F2

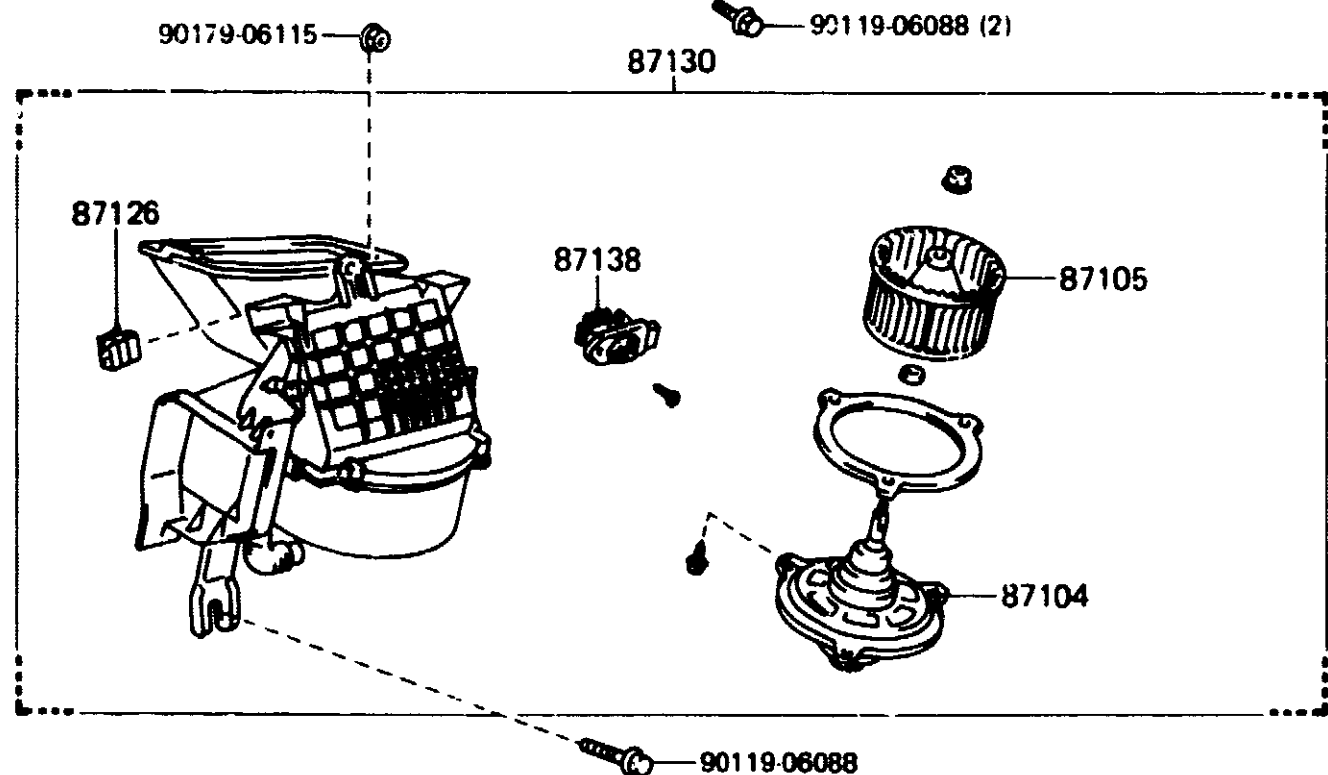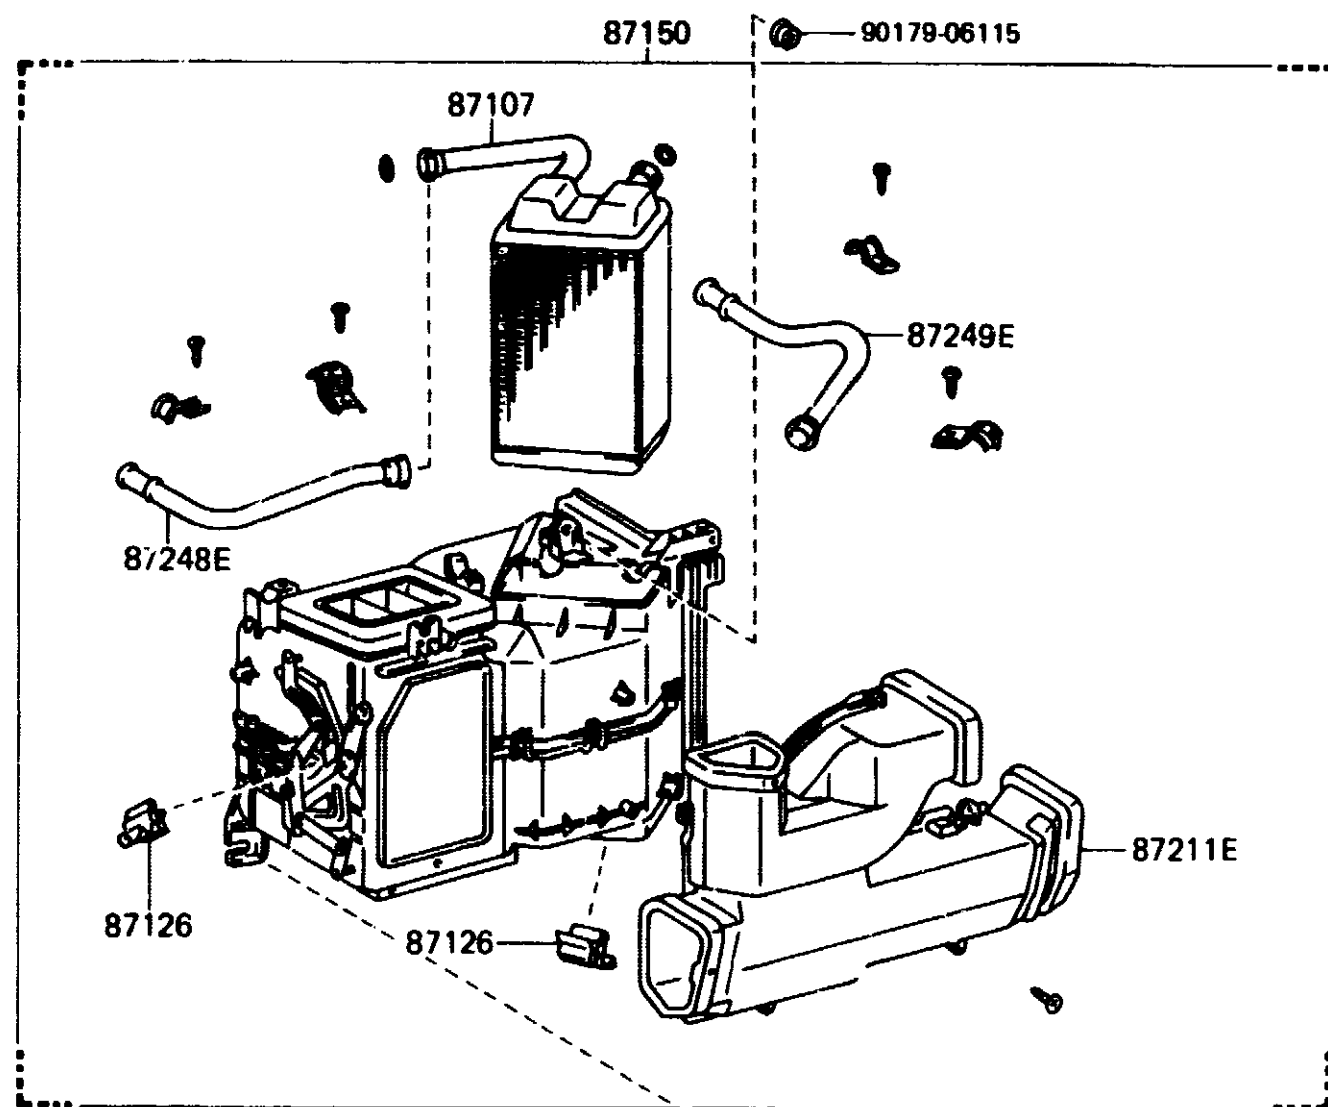

ME F423-A

MEF423A

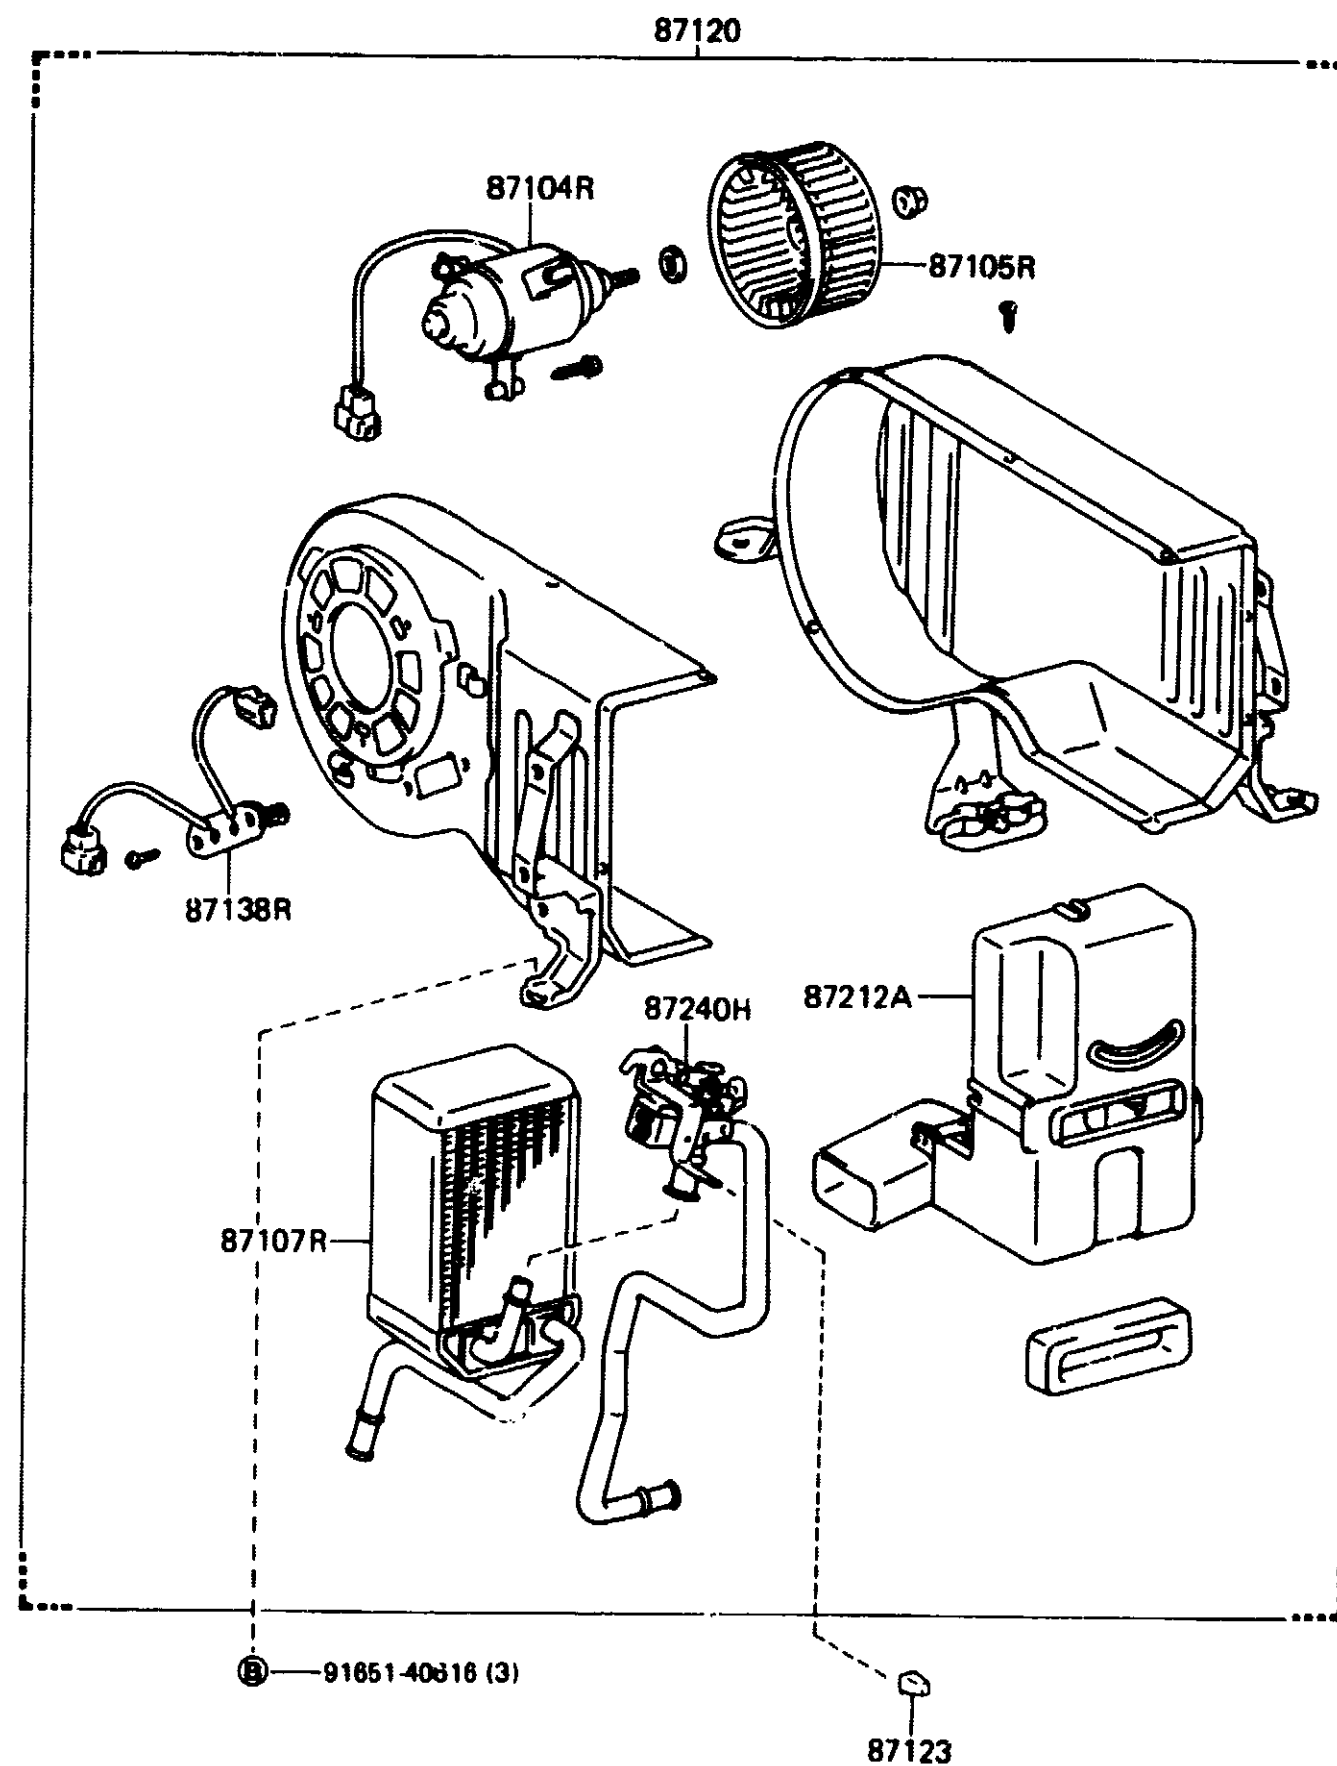

ME F329-A

MEF329A

FORK - GASKET

G12

M74-26-0044

GASKET
















PART	NAME	LOCATION
FORK, TRANSFER GEAR SHIFT, NO.1	-----	1-F7
FORK, TRANSFER GEAR SHIFT, NO.2	-----	1-F7
FORK, 1ST & 2ND SHIFT	-----	1-G6
FORK, 3RD & 4TH SHIFT	-----	1-G6
FORK, 5TH SHIFT	-----	1-G6
FRAME ASSY, DRIVE END, ALTERNATOR	-----	1-I3
FRAME ASSY, RECTIFIER END	-----	1-J3
FRAME ASSY, STARTER COMMUTATOR END	-----	1-K3
FRAME SUB-ASSY	-----	2-A1
FRAME SUB-ASSY, BACK DOOR OPENING	-----	2-L3
FRAME SUB-ASSY, FRONT DOOR, FRONT LOWER LH	-----	2-G4
FRAME SUB-ASSY, FRONT DOOR, FRONT LOWER RH	-----	2-G4
FRAME SUB-ASSY, REAR SEAT BACK	-----	2-K5
FRAME SUB-ASSY, REAR SEAT CUSHION	-----	2-K5
FRAME SUB-ASSY, VENT WINDOW GLASS, LH	-----	2-J4
FRAME SUB-ASSY, VENT WINDOW GLASS, RH	-----	2-J4
FRAME, FOLD SEAT LEG STOPPER	-----	2-B6
FRAME, FRONT DOOR WINDOW, REAR LOWER LH	-----	2-G4
FRAME, FRONT DOOR WINDOW, REAR LOWER RH	-----	2-G4
FUSE, FUSE BLOCK	-----	2-C9
FUSIBLE LINK	-----	2-I8
GAGE ASSY, FUEL RECEIVER	-----	2-L8
GAGE ASSY, FUEL SENDER	-----	2-C9
GAGE ASSY, OIL PRESSURE RECEIVER	-----	2-L8
GAGE ASSY, OIL PRESSURE SENDER	-----	2-C9
GAGE ASSY, WATER TEMPERATURE RECEIVER	-----	2-L8
GAGE ASSY, WATER TEMPERATURE SENDER	-----	2-C9
GAGE SUB-ASSY, OIL LEVEL	-----	1-I1
GARNISH, CENTER PILLAR, UPPER LH	-----	2-C4
GARNISH, CENTER PILLAR, UPPER RH	-----	2-C4
GARNISH, FRONT BODY PILLAR, LH	-----	2-B4
GARNISH, FRONT BODY PILLAR, RH	-----	2-B4
GARNISH, REAR PILLAR, UPPER LH	-----	2-C4
GARNISH, REAR PILLAR, UPPER RH	-----	2-C4
GASKET	-----	1-H2
GASKET (FOR BRAKE MASTER CYLINDER OUTLET VALVE)	-----	1-E10
GASKET (FOR FLUID OUTLET PLUG)	-----	1-D10
GASKET (FOR FRONT AXLE HOUSING PLUG)	-----	1-H8
GASKET (FOR FUEL TANK CAP)	-----	2-E7
GASKET (FOR FUEL TANK SUCTION TUBE)	-----	2-E7
GASKET (FOR FUEL TANK)	-----	2-E7
GASKET (FOR GOVERNOR HOUSING)	-----	1-H4
GASKET (FOR INJECTION PUMP HOUSING)	-----	1-H4
GASKET (FOR INJECTION PUMP OUTLET PIPE)	-----	1-F2
GASKET (FOR MANUAL TRANSMISSION FILLER PLUG)	-----	1-M5
GASKET (FOR MASTER CYLINDER)	-----	1-D10
GASKET (FOR OIL FILLER CAP)	-----	1-G1
GASKET (FOR OIL PAN DRAIN PLUG)	-----	1-I1
GASKET (FOR OIL PUMP OUTLET PIPE)	-----	1-E2
GASKET (FOR OIL STRAINER)	-----	1-E2
GASKET (FOR REAR AXLE HOUSING FILLER PLUG)	-----	1-B8
GASKET (FOR SUCTION TUBE)	-----	1-H7
GASKET (FOR TRANSFER CASE)	-----	1-M6
GASKET (FOR WARNING SWITCH)	-----	1-A5
GASKET KIT, DIFFERENTIAL CARRIER	-----	1-A8
GASKET KIT, ENGINE OVERHAUL	-----	1-E1
GASKET KIT, ENGINE VALVE GRIND	-----	1-E1
GASKET KIT, FRONT AXLE OVERHAUL	-----	1-E11
GASKET KIT, MANUAL TRANSMISSION OVERHAUL	-----	1-L5
GASKET KIT, POWER STEERING CROSS SHAFT OVERHAUL	-----	1-J9
GASKET KIT, POWER STEERING GEAR (FOR RECIRCULATING BALL)	-----	1-J9
GASKET KIT, POWER STEERING PUMP	-----	1-B9
GASKET, AIR CLEANER CAP	-----	1-F3
GASKET, BEARING COVER	-----	1-F4

PART	NAME	LOCATION
GASKET, BRAKE BOOSTER	-----	1-G10
GASKET, BRAKE DRUM OIL DEFLECTOR	-----	1-D8
GASKET, BRAKE MASTER CYLINDER	-----	1-E10
GASKET, CHECK VALVE CHAMBER PLUG	-----	1-J4
GASKET, CLUTCH BOOSTER BRACKET	-----	1-J5
GASKET, CLUTCH MASTER CYLINDER	-----	1-H5
GASKET, CYLINDER HEAD	-----	1-F1
GASKET, CYLINDER HEAD COVER	-----	1-G1
GASKET, DELIVERY VALVE	-----	1-E4
GASKET, DIAPHRAGM CYLINDER	-----	1-H7
GASKET, DRAIN	-----	1-H8
GASKET, DRAIN PLUG (FOR REAR AXLE HOUSING)	-----	1-B8
GASKET, DRAIN PLUG (MTM)	-----	1-M5
GASKET, ENGINE REAR OIL SEAL RETAINER	-----	1-K1
GASKET, EXHAUST MANIFOLD TO HEAD	-----	1-B3
GASKET, EXHAUST PIPE	-----	1-D3
GASKET, EXHAUST PIPE (FOR CENTER)	-----	1-D3
GASKET, FEED PUMP PISTON PLUG	-----	1-K4
GASKET, FILTER BOWL	-----	1-A5
GASKET, FILTER ELEMENT	-----	1-F3
GASKET, FREE WHEEL HUB	-----	1-K8
GASKET, FRONT AXLE OUTER SHAFT FLANGE	-----	1-J8
GASKET, FRONT BEARING RETAINER (MTM)	-----	1-A6
GASKET, FRONT DIFFERENTIAL CARRIER	-----	1-H8
GASKET, FRONT END PLATE	-----	1-K1
GASKET, FRONT TURN SIGNAL LAMP BODY, LH	-----	2-J7
GASKET, FRONT TURN SIGNAL LAMP BODY, RH	-----	2-J7
GASKET, FRONT TURN SIGNAL LAMP LENS, LH	-----	2-J7
GASKET, FRONT TURN SIGNAL LAMP LENS, RH	-----	2-J7
GASKET, FUEL SENDER GAGE	-----	2-C9
GASKET, INJECTION NOZZLE SEAT	-----	1-A4
GASKET, INJECTION PUMP	-----	1-C4
GASKET, KNUCKLE SPINDLE	-----	1-F11
GASKET, KNUCKLE SPINDLE OIL RETAINER	-----	1-F11
GASKET, LICENSE PLATE LAMP LENS	-----	2-A8
GASKET, MANIFOLD TO CYLINDER HEAD	-----	1-B3
GASKET, MANUAL TRANSMISSION CASE COVER	-----	1-G6
GASKET, OIL COOLER	-----	1-H2
GASKET, OIL FILTER	-----	1-G2
GASKET, OIL PUMP RELIEF VALVE	-----	1-E2
GASKET, OUTER REAR VIEW MIRROR, LH	-----	2-E10
GASKET, OUTER REAR VIEW MIRROR, RH	-----	2-E10
GASKET, OUTPUT SHAFT BEARING RETAINER	-----	1-A7
GASKET, REAR AXLE HOUSING COVER	-----	1-B8
GASKET, REAR DIFFERENTIAL CARRIER	-----	1-B8
GASKET, REAR SIDE MARKER LAMP	-----	2-B8
GASKET, REAR SIDE MARKER LAMP BODY, LH	-----	2-B8
GASKET, REAR SIDE MARKER LAMP BODY, RH	-----	2-B8
GASKET, REAR SIDE MARKER LAMP LENS	-----	2-B8
GASKET, SECTOR SHAFT END COVER	-----	1-L9
GASKET, SIDE TURN SIGNAL LAMP LENS, LH	-----	2-L7
GASKET, SIDE TURN SIGNAL LAMP LENS, RH	-----	2-L7
GASKET, TIMING GEAR (OR CHAIN) COVER	-----	1-K1
GASKET, TRANSFER ADAPTER	-----	1-M5
GASKET, TRANSFER CASE	-----	1-A7
GASKET, TRANSFER CASE, FRONT	-----	1-A7
GASKET, TRANSFER COVER	-----	1-A7
GASKET, TRANSFER POWER TAKE-OFF COVER	-----	1-A7
GASKET, TRANSFER SHIFT SHAFT GUIDE	-----	1-H7
GASKET, VENT WINDOW PIVOT, UPPER NO.1	-----	2-J4
GASKET, VENT WINDOW PIVOT, UPPER NO.2	-----	2-K4
GASKET, VENTURI	-----	1-C5
GASKET, WATER OUTLET	-----	1-L2
GASKET, WATER OUTLET HOUSING	-----	1-L2

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
77310-35061-	2-E7	81550-69125-	2-M7	82183-90K07-	2-H8	83909-12230-	2-L8	85310-90B00-	2-L9	86520-22120-	2-D10
77316-12050-	2-E7	-90K16-	2-M7	-90K08-	2-H8	83910-90K01-	2-L8	-90K01-	2-J9	-90K05-	2-D10
77319-90K00-	2-F7	81551-90K02-	2-M7	82184-90K00-	2-H8	-90K05-	2-L8	85316-23010-	2-L9	16995-90A01-	2-L8
77338-90K00-	2-F7	81555-90K02-	2-M7	-90K01-	2-H8	83919-12230-	2-L8	85330-90K03-	2-L9	-90K00-	2-M8
-90K01-	2-F7	-90K16-	2-M7	-90K03-	2-H8	84112-69355-	2-D9	-90K08-	2-J9	37100-90K09-	2-F10
77358-12020-	2-F7	81560-69125-	2-M7	-90K04-	2-H8	84118-90A00-	2-D9	85332-12320-	2-J9	-90K24-	2-F10
77366-12010-	2-F7	-90K16-	2-M7	-90K06-	2-H8	84119-90K00-	2-D9	85333-20010-	2-J9	87104-89110-	2-H10
77378-90K00-	2-F7	81561-90K02-	2-M7	-90K07-	2-H8	-90K02-	2-D9	-20020-	2-J9	-90K00-	2-H10
77391-32010-	2-F7	81730-19305-	2-L7	82185-90K00-	2-H8	84140-69105-	2-D9	85338-30010-	1-L2	-90K01-	2-H10
77601-60080-	2-F7	-90A01-	2-L7	82186-90K00-	2-I8	84210-60021-	2-D9	-74040-	1-L2	-90K03-	2-H10
77606-60030-	2-F7	31731-14110-	2-L7	82187-90K00-	2-I8	84222-60021-	2-D9	85342-14010-	2-J9	-90K04-	2-H10
77614-60050-	2-F7	81732-90A01-	2-B8	82345-12050-	2-I8	-60040-	2-D9	85343-87002-	2-J9	87105-14020-	2-H10
77625-60020-	2-F7	-90K16-	2-L7	-32020-	2-I8	84230-22051-	2-D9	-2-K9		-87002-	2-H10
77675-90K00-	2-F7	81740-19286-	2-L7	82616-12010-	2-C9	84310-60570-	2-D9	85348-89101-	2-J9	87107-90K01-	2-H10
77676-90K00-	2-F7	-90A01-	2-L7	82650-20011-	2-C9	84312-32010-	2-D9	85349-20010-	2-J9	-90K02-	2-H10
78111-95110-	2-G7	81741-14110-	2-L7	-35010-	2-C9	84332-69115-	2-D9	S 85355-14481-	2-L9	87110-90K00-	2-H10
78118-90K00-	2-G7	81742-90A01-	2-B8	82670-90K00-	2-I8	84340-30030-	2-D9	-16192-	2-J9	-90K01-	2-H10
78120-90K02-	2-G7	-90K16-	2-L7	82683-90K00-	2-C9	-32010-	2-D9	-20070-	2-L9	87126-12050-	2-H10
78180-90K10-	2-G7	81750-29145-	2-B8	-90K06-	2-C9	84450-60130-	2-D9	-87201-	2-L9	-90K00-	2-H10
78183-90A00-	2-G7	-90A01-	2-B8	-90K12-	2-C9	84460-22010-	1-D10	-89122-	2-L9	87130-90K02-	2-H10
78184-90K01-	2-G7	81751-14030-	2-B8	82821-24010-	2-E8	84461-60020-	2-D9	85440-60060-	2-E9	-90K03-	2-H10
78410-90K01-	2-G7	-89107-	2-B8	82823-12020-	2-I8	84556-24010-	2-D9	-60070-	2-E9	87138-90K00-	2-H10
78411-90K00-	2-G7	81754-91255-	2-B8	83101-20040-	2-K8	84580-36021-	2-G9	85500-12190-	2-E9	-90K01-	2-H10
78449-90300-	2-M7	81755-20060-	2-B8	-89101-	2-K8	84652-69445-	2-D9	-90K06-	2-E9	-90K02-	2-H10
78910-90K00-	2-A6	81760-90A00-	2-B8	83110-90K06-	2-K8	84653-22010-	2-D9	85520-14030-	2-E9	-90K03-	2-H10
78920-90K00-	2-A6	81761-89107-	2-B8	-90K12-	2-K8	84722-60050-	2-D9	-95400-	2-E9	87150-90K03-	2-H10
78950-90K00-03	2-A6	81850-90K00-	2-M8	-90K23-	2-K8	-60060-	2-D9	85613-31010-	1-I4	87200-90K02-	2-F10
-90K00-06	2-B6	-90K06-	2-M8	83128-90K00-	2-K8	84731-12010-	2-D9	85710-90K01-	2-M9	-90K11-	2-F10
79929-90K03-	2-B6	81930-90K00-	2-M8	83132-90K00-	2-K8	84732-90K01-	2-D9	-90K03-	2-M9	87201-90K01-	2-J10
81110-69265-	2-I7	-90K01-	2-M8	-90K04-	2-K8	-90K04-	2-D9	85720-90K01-	2-M9	-90K03-	2-J10
-90K01-	2-I7	81980-22070-	2-C9	-90K06-	2-K8	84790-90K01-	2-E9	-90K03-	2-M9	-90K05-	2-H10
81111-22150-	2-I7	-36060-	2-C9	83134-90K00-	2-K8	-90K02-	2-E9	85913-30020-	2-E9	-90K06-	2-J10
81113-90K00-	2-I7	82122-90K05-	2-E8	-90K01-	2-K8	84810-90K00-03	2-E9	-90K00-	2-E9	87208-90K07-	2-L10
81121-62010-	2-I7	-90K06-	2-E8	-90K05-	2-L8	-90K00-06	2-E9	85921-90A00-	2-E9	-90K15-	2-L10
81131-28050-	2-I7	-90K09-	2-E8	83138-90K00-	2-K8	84820-90K01-03	2-E9	-90A01-	2-E9	87212-90K00-	2-H10
81150-69265-	2-I7	82123-90K00-	2-E8	83145-90K00-	2-L8	-90K01-06	2-E9	85926-60010-	2-E9	87240-90K00-	2-L10
-90K01-	2-I7	-90K03-	2-E8	83180-60040-	2-L8	-90K04-03	2-E9	85930-90K03-	2-E9	-90K05-	2-H10
81153-90K00-	2-I7	-90K07-	2-H8	83242-90K03-	2-L8	-90K04-06	2-E9	85940-90K01-	2-E9	87245-18060-	2-L10
81240-22070-08	2-C8	82125-90K02-	2-H8	-90K04-	2-L8	84999-10110-	2-E9	-90K03-	2-E9	-90K04-	2-L10
-22080-08	2-C8	82131-90K06-	2-H8	83243-90K00-	2-L8	-10170-	2-D9	85991-12050-	2-E9	-90K16-	2-L10
-90K00-	2-C8	-90K81-	2-H8	-90K02-	2-L8	-50010-	2-L8	-90K01-	2-E9	-90K28-	2-L10
-90K01-	2-C8	-90L44-	2-H8	-90K03-	2-L8	-50080-	2-L8	85999-12050-	2-E9	-90K29-	2-L10
-90K04-	2-C8	82133-90K00-	2-H8	83244-90K00-	2-L8	85033-36120-	2-L9	-89101-	2-E9	-90K30-	2-L10
81241-20060-	2-C8	82141-90K05-	2-H8	83246-90K00-	2-L9	85035-90K01-	2-J9	86120-17010-	2-A10	-90K31-	2-L10
81260-90K00-	2-C8	82142-90K00-	2-H8	-90K01-	2-L8	-90K02-	2-L9	-17050-	2-A10	87248-90K02-	2-H10
-90K01-	2-C8	-90K01-	2-H8	-90K02-	2-L8	85110-90K04-	2-H9	-17051-	2-A10	-90K05-	2-H10
81261-90K00-	2-C8	82151-90K00-	2-H8	83247-90K01-	2-K8	-90K05-	2-I9	-90K05-	2-A10	-90K18-	2-L10
81270-69145-	2-A8	-90K01-	2-H8	-90K06-	2-K8	-90K06-	2-I9			-90K19-	2-L10
-69155-	2-A8	82152-90K00-	2-H8	-90K12-	2-K8	-90K07-	2-H9	86160-90K00-	2-B10	-95400-	2-L10
-90K01-	2-A8	-90K01-	2-H8	-90K26-	2-K8	85160-90K04-	2-H9	-90K01-	2-B10	87251-30200-	2-L10
81271-87004-	2-A8	82161-90K02-	2-H8	83290-90K00-	2-L8	85179-16150-	2-I9	86206-90K00-	2-A10	-90K00-	2-L10
81272-87004-	2-A8	-90K23-	2-H8	-90K02-	2-L8	85190-90K03-	2-H9	86211-90K00-	2-A10	87484-90K00-	2-I8
81276-90K02-	2-A8	82162-90K00-	2-H8	83320-69025-	2-C9	-90K06-	2-I9	86212-90K00-	2-A10	87810-90K00-	2-E10
81510-69245-	2-J7	-90K02-	2-H8	83340-90K00-	2-L8	85195-95J01-	2-I9	86260-16140-	2-A10	-90K02-	2-E10
-90K09-	2-J7	-90K15-	2-H8	83361-20030-	2-C9	85210-90K03-	2-H9	-17010-	2-A10	-90K04-	2-E10
81511-90K01-	2-J7	-90K17-	2-H8	83390-30020-	2-C9	85220-12500-	2-H9	-17011-	2-A10	87817-90K00-	2-E10
81512-90K01-	2-J7	-90K33-	2-H8	83420-20020-	2-C9	-22300-	2-I9	-19045-	2-A10	87828-30010-	2-E10
81514-90K01-	2-J7	-90K34-	2-H8	83520-60010-	2-C9	-22450-	2-H9	-90K01-	2-A10	-37005-	2-E10
81517-90K01-	2-J7	82171-90K04-	2-H8	-60020-	2-C9	85221-12210-	2-H9	86300-90K01-	2-C10	87834-20080-18	2-E10
81520-69245-	2-J7	82172-90K01-	2-H8	83530-14010-	2-G9	-16070-	2-I9	86309-90K01-	2-C10	87910-90K00-	2-E10
-90K09-	2-J7	82183-90K00-	2-H8	-14030-	2-G9	-22090-	2-H9	86392-90K00-	2-C10	87911-90K00-	2-E10
81521-90K01-	2-J7	-90K01-	2-H8	-30060-	2-D9	85261-90K02-	2-H9	86396-16020-	2-C10	87940-90K00-	2-E10
81524-90K01-	2-J7	-90K04-	2-H8	-36011-	2-D9	85310-12130-	2-J9	86510-22130-	2-D10	89422-30020-	2-F9
81527-90K01-	2-K7			83710-90K04-	2-L8	-22080-	2-L9	-90K05-	2-D10	90041-70001-	1-D2

ILLUSTRATED INDEX


G16

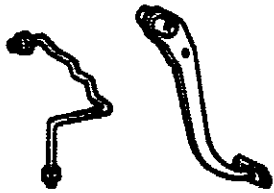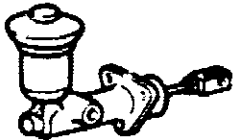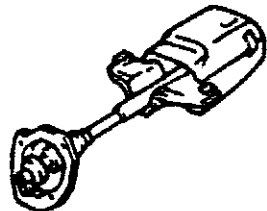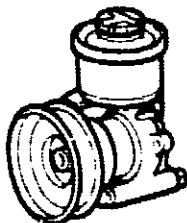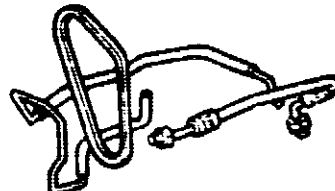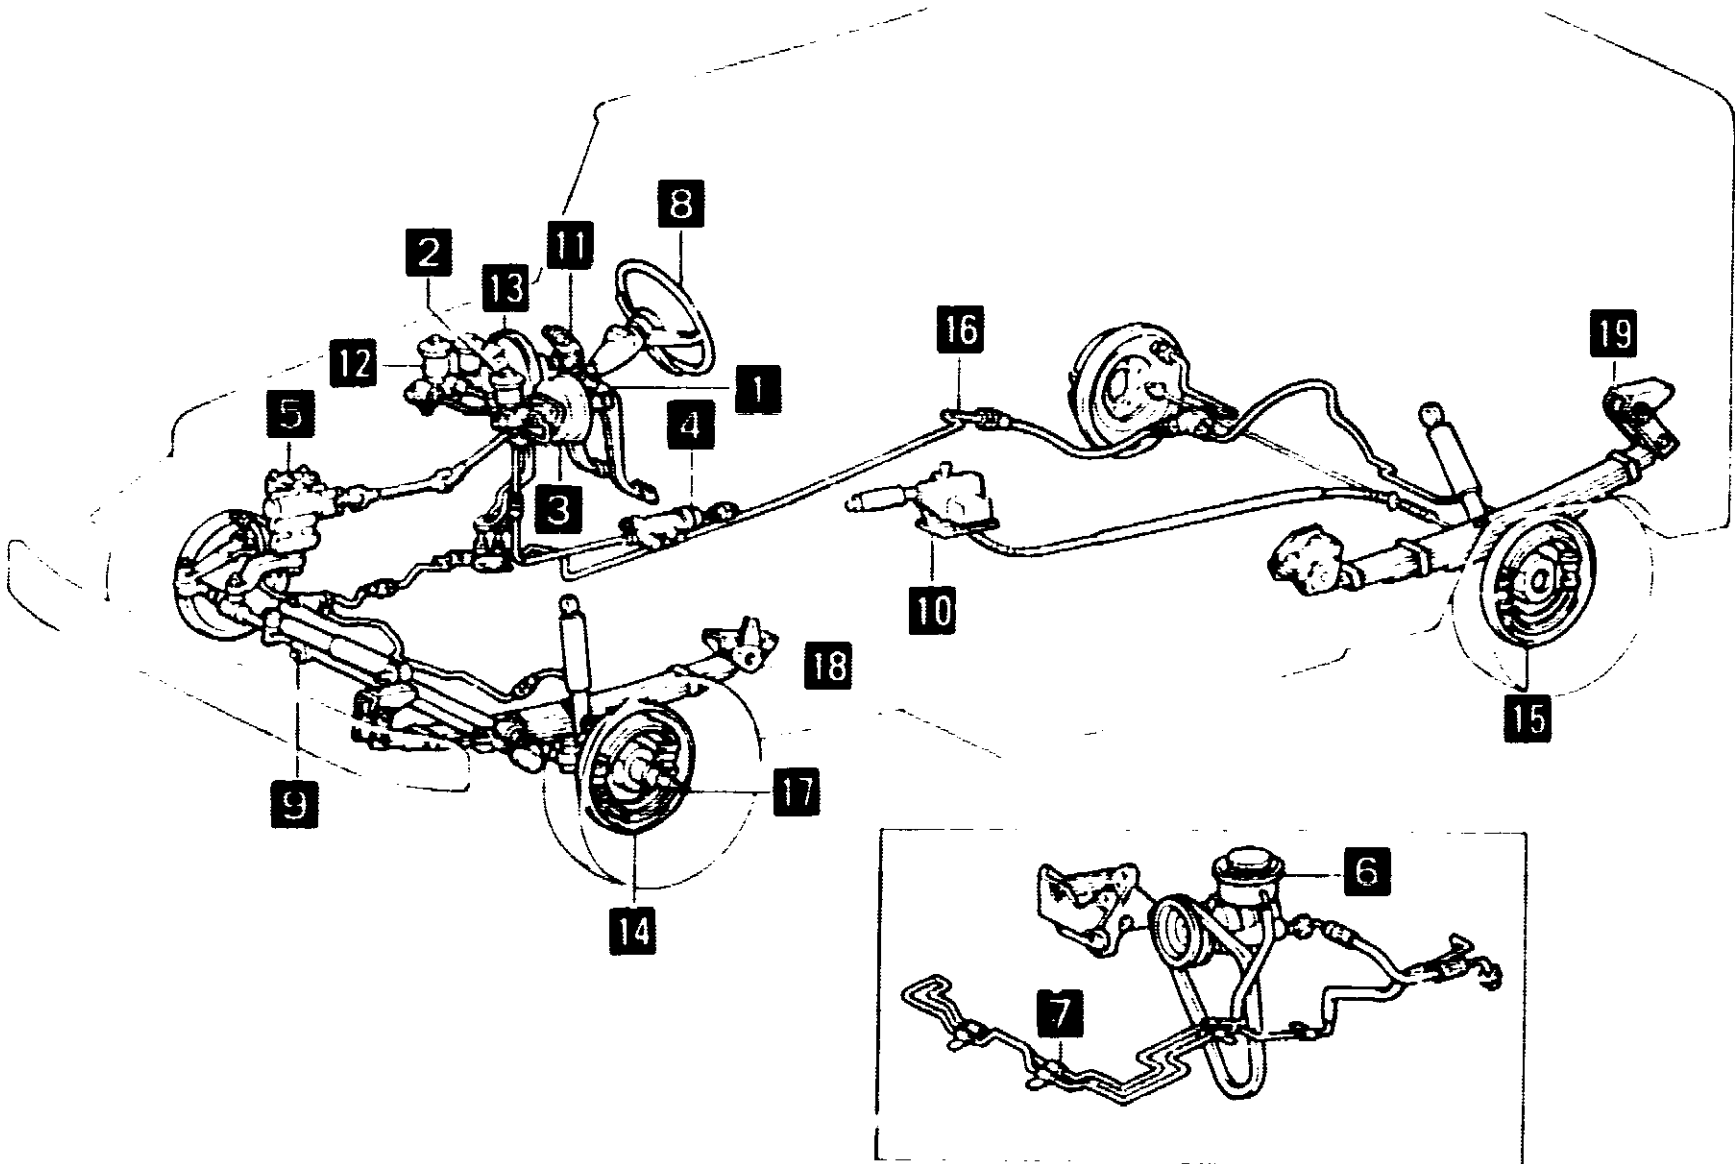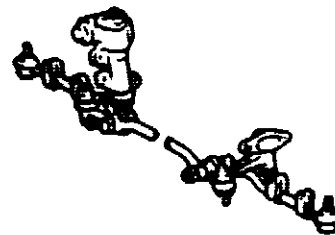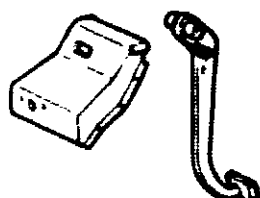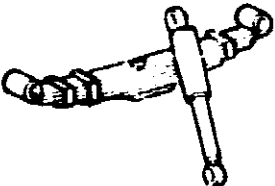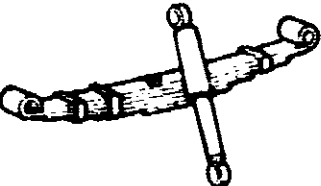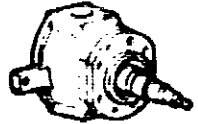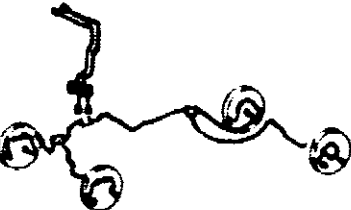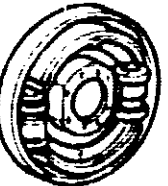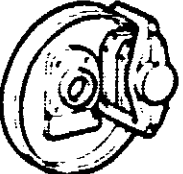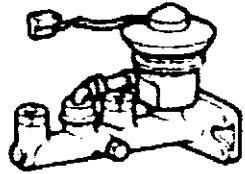1-E5 (31-02) 1	1-G5 (31-03) 2	1-I5 (31-04) 3	1-K5 (31-05) 4	1-L8 (45-01) 5	1-L9 (45-02) 6	1-E9 (45-03) 7
						
POWER TRAIN-CHASSIS GROUP (2/2) 						
						1-F9 (45-04) 8
						
						1-H9 (45-05) 9
						
						1-A10 (46-01) 10
						
						1-C10 (47-01) 11
						
1-K11 (48-04) 19						
						
1-G11 (48-03) 18	1-E11 (48-02) 17	1-M10 (47-08) 16	1-J10 (47-06) 15	1-H10 (47-05) 14	1-F10 (47-03) 13	1-D10 (47-02) 12
						
Front Spring	Front Axle Arm	Brake Tube & Clamp	Rear Backing Plate	Front Disc Brake Caliper	Brake Booster	Brake Master Cylinder

MC B936 A

GENUINE TOYOTA PARTS


(8411-)

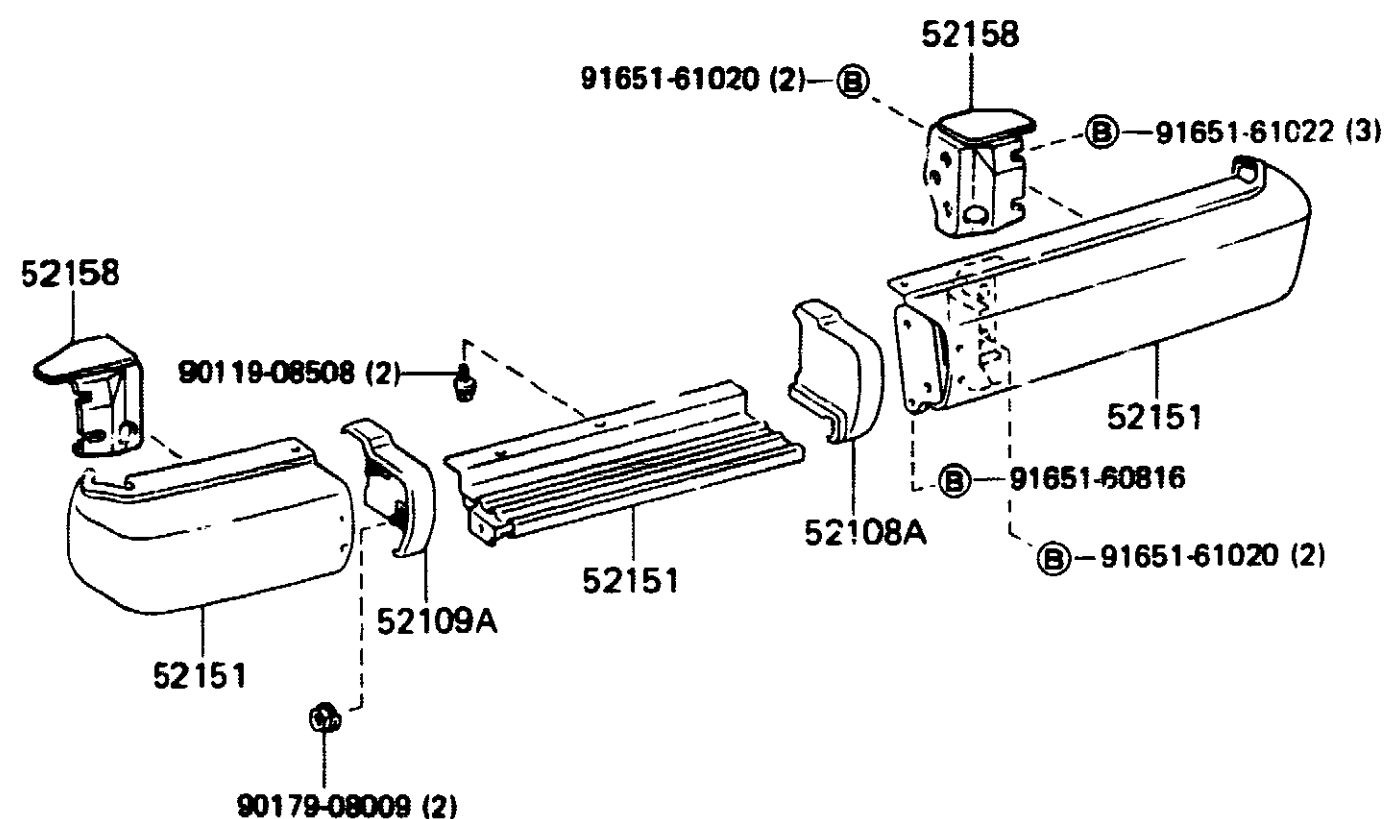

MB H448-B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	52-53 REAR BUMPER & BUMPER STAY						
8411-	BJ70	52108A BUMPER SUB-ASSY, REAR SIDE, RH		52108-60010-	1	81	
8411-	BJ70	52109A BUMPER SUB-ASSY, REAR SIDE, LH		52109-60010-	1	81	
8411-8510	BJ70	52151 BUMPER ASSY, REAR					
		LH, CHROME PLATING		52107-60030-	1	81	100
8411-8510	BJ70	LH		52107-60080-	1	81	100
8411-	BJ70	RH		52106-60030-	1	81	
8411-	BJ70	RH, CHROME PLATING		52106-60040-	1	81	
8411-	BJ70	CTR		52151-60090-	1	81	
8510-	BJ70	LH		52107-90K00-	1	101	
8510-	BJ70	LH, CHROME PLATING		52107-90K01-	1	101	
8411-8510	BJ70	52158 BRACKET, REAR BUMPER					
8411-	BJ70	LH		52174-60010-	1	81	100
8411-	BJ70	RH		52173-60010-	1	81	
8510-	BJ70	LH		52174-90K00-	1	101	

(8411-)

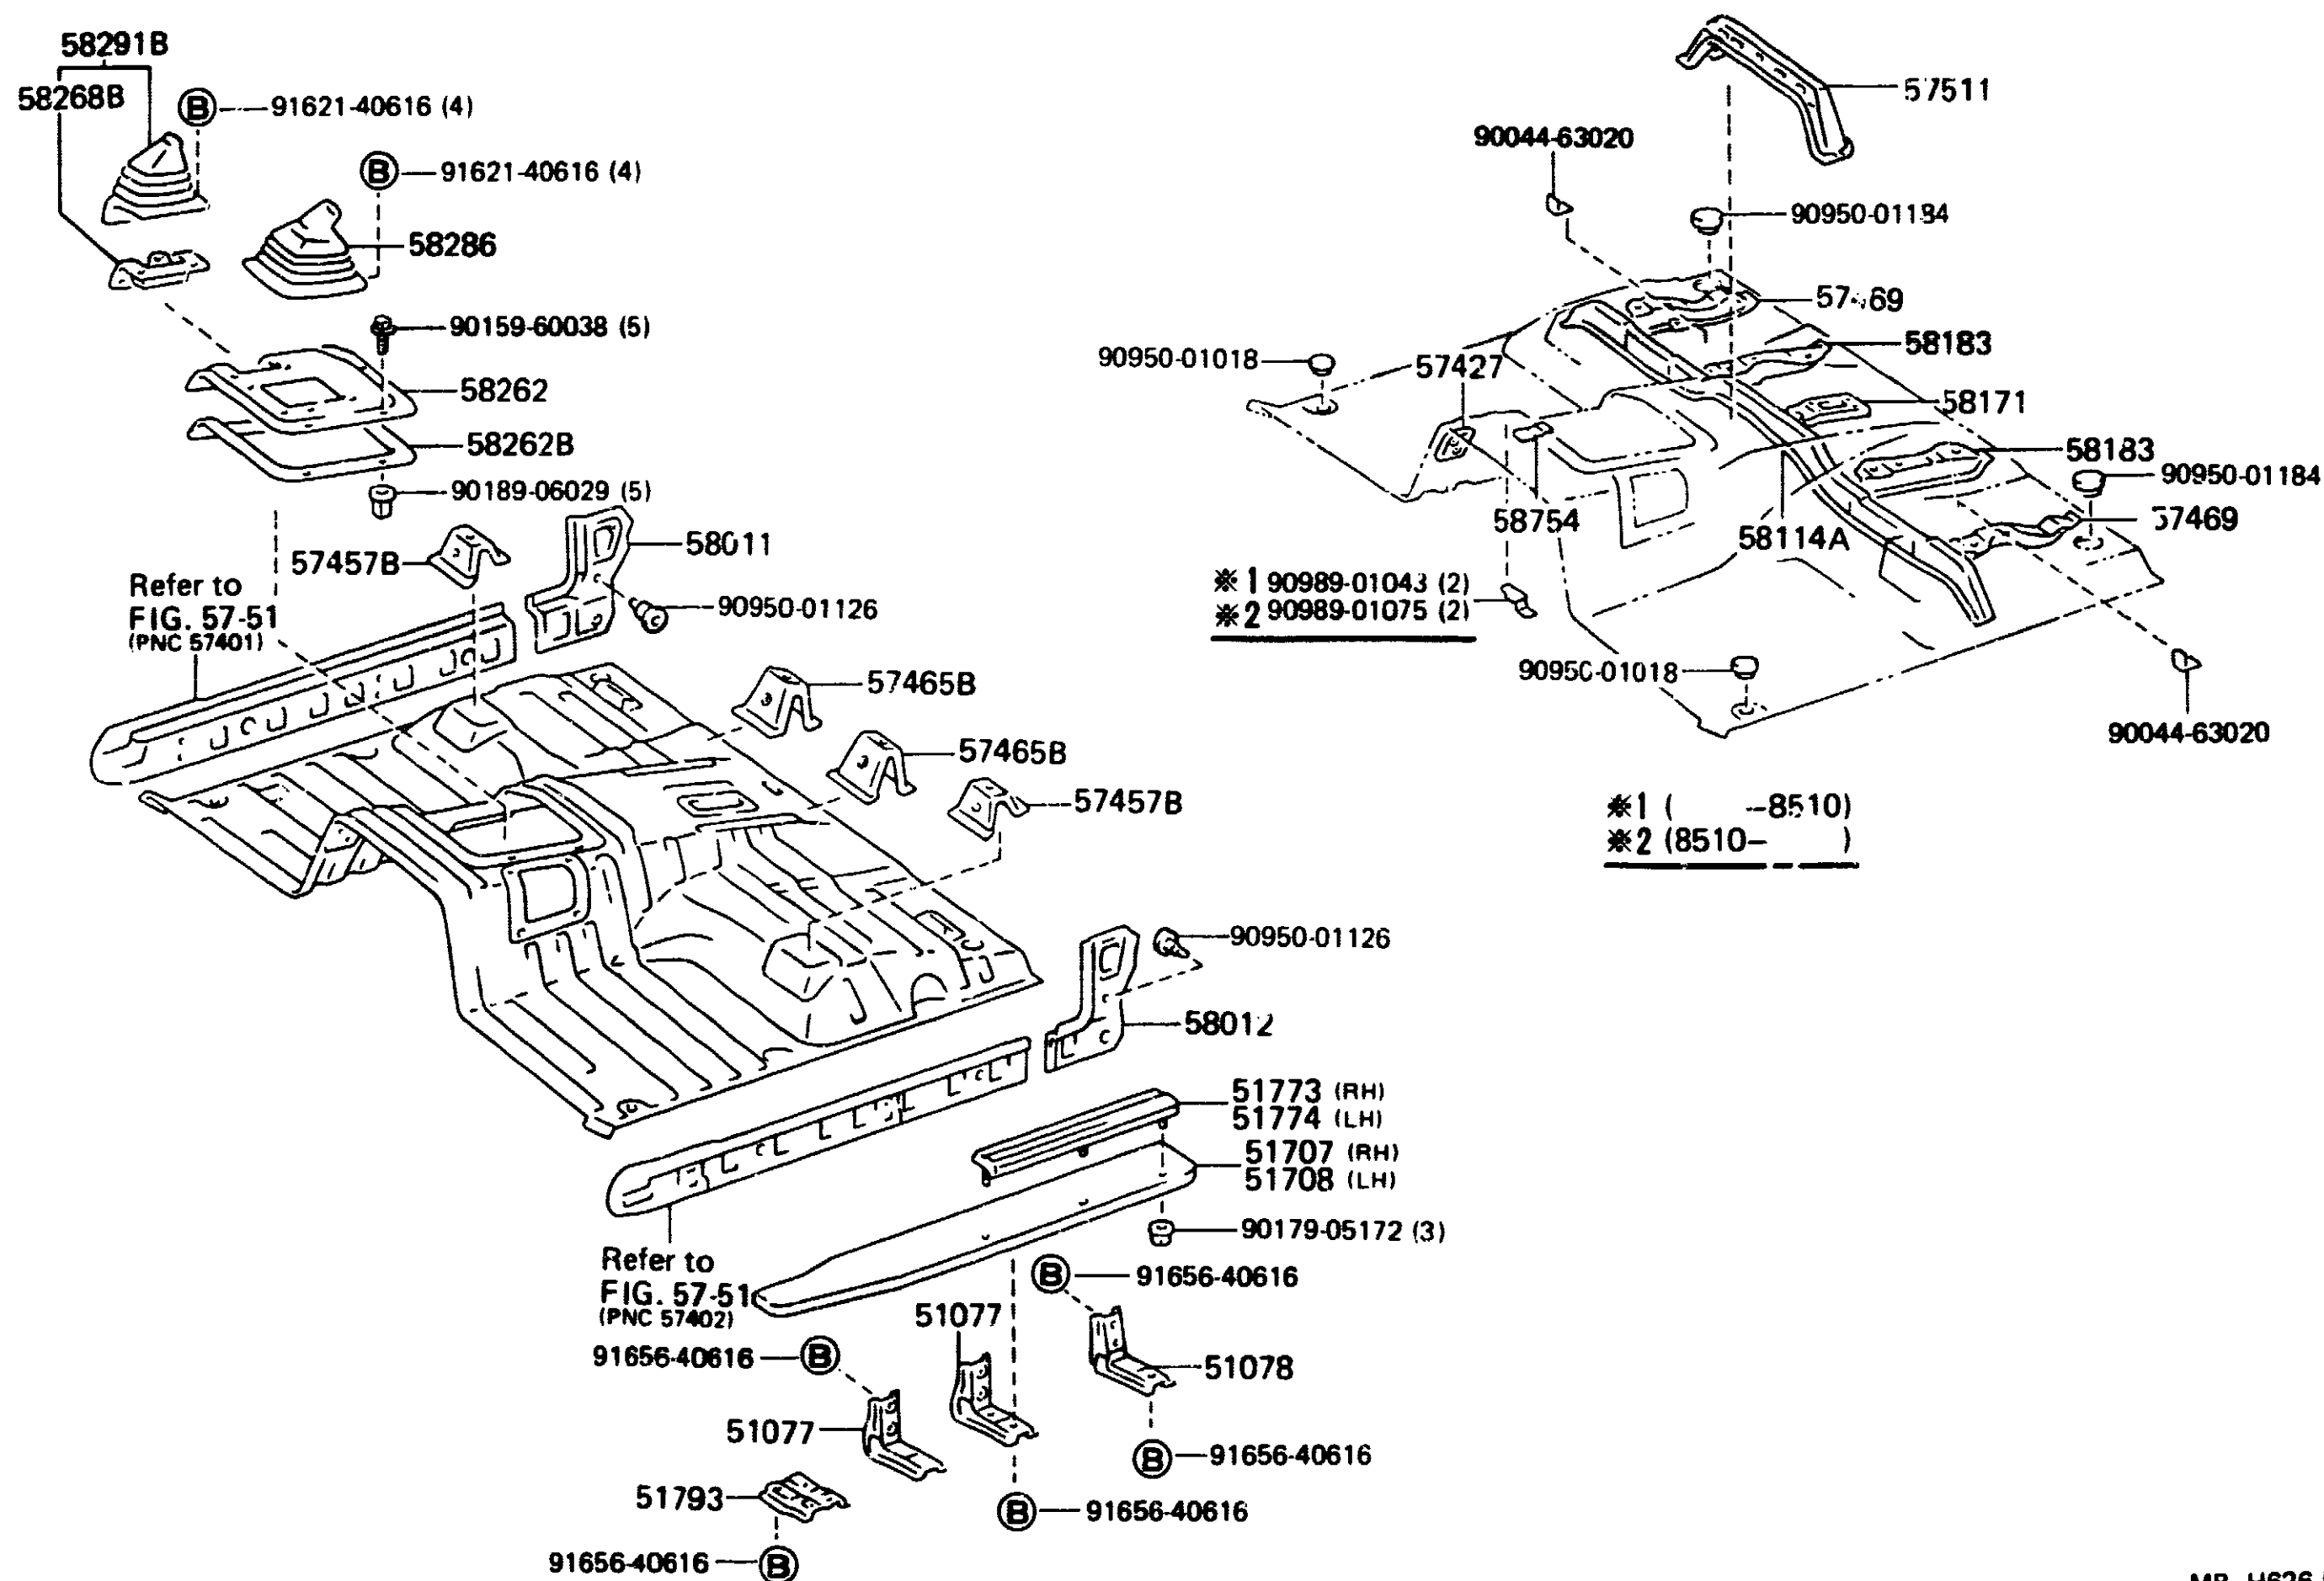

MB H626-D



PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	61725 CONTINUED BJ70	BOX, FUEL INLET W/FUEL FILTER DOOR PENER		61725-90K02-	1	81	
8411-	61743 BJ70	REINFORCEMENT, BACK DOOR OPENING, INNER	RH	61743-90K03-	1	81	
8411-	61744 BJ70	REINFORCEMENT, BACK DOOR OPENING, INNER	LH	61744-90K03-	1	81	
8411-	61745A BJ70	REINFORCEMENT, BACK DOOR OPENING, LOWER	RH	61745-90K00-	1	81	
8411-	61746A BJ70	REINFORCEMENT, BACK DOOR OPENING, LOWER	LH	61746-90K00-	1	81	
8411-	61748B BJ70	REINFORCEMENT, ROOF SIDE, INNER REAR,	LH	61749-90K00-	1	81	
8411-	61768B BJ70	REINFORCE, BELT ANCHOR TO ROOF SIDE, INNER REA R RH		61768-90K00-	1	81	
8411-	61769B BJ70	REINFORCE, BELT ANCHOR TO ROOF SIDE, INNER REA R LH		61769-90K00-	1	81	
8411-	61856 BJ70	BRACKET, REAR WASHER TANK, LOWER		61856-90K00-	1	81	
3411-	64198B BJ70	BRACKET, LOWER BACK RAIL, INNER SIDE	RH	64198-90K00-	1	81	
8411-	64199B BJ70	BRACKET, LOWER BACK RAIL, INNER SIDE	LH	64199-90K00-	1	81	
8411-	76607 BJ70	MUDGUARD SUB-ASSY, QUARTER PANEL, REAR	RH	76607-90K00-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	76608 BJ70	MUDGUARD SUB-ASSY, QUARTER PANEL, REAR	LH	76608-90K00-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	FROM	UP TO
8510-8608	BJ70	BOARD SUB-ASSY, FRONT DOOR TRIM, LH W/POWER WINDOW, GRAY		67620-90K33-03	1	101	140	
8510-8608	BJ70	W/POWER WINDOW, BEIGE		67620-90K33-05	1	101	140	
8510-	BJ70	GRAY		67620-90K35-03	1	101		
8510-	BJ70	BEIGE		67620-90K35-05	1	101		
8510-	BJ70	POCKET, FRONT DOOR TRIM, RH GRAY		67777-90K00-03	1	101		
8510-	BJ70	BROWN		67777-90K00-05	1	101		
8510-	BJ70	POCKET, FRONT DOOR TRIM, LH GRAY		67777-90K00-03	1	101		
8510-	BJ70	BROWN		67777-90K00-05	1	101		
8411-8510	BJ70	COVER, FRONT DOOR SERVICE HOLE, RH 67831-90K02- (67831-90K04-)			1	81	100	
8510-	BJ70	67831-90K04-			1	101		
8411-8510	BJ70	COVER, FRONT DOOR SERVICE HOLE, LH 67831-90K02- (67831-90K04-)			1	81	100	
8510-	BJ70	67831-90K04-			1	101		
8411-	BJ70	WEATHERSTRIP, FRONT DOOR, RH 67861-90K06-			1	81		
8411-	BJ70	RETAINER (FOR FRONT DOOR WEATHERSTRIP) 67868-30040-			44	81		
8411-	BJ70	WEATHERSTRIP, FRONT DOOR, LH 67862-90K06-			1	81		
8411-8608	BJ70	GLASS SUB-ASSY, FRONT DOOR, RH XTT, T=4.0		68111-90K00-	1	81	140	
8411-8608	BJ70	W/XVW, XTT, T=4.0		68111-90K02-	1	81	140	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	FROM	UP TO
8411-	BJ70	GLASS SUB-ASSY, FRONT DOOR, RH XTT, T=4.0		68111-90K04-	1	81		
8411-	BJ70	W/XVW, XTT, T=4.0		68111-90K06-	1	81		
8411-8608	BJ70	GLASS SUB-ASSY, FRONT DOOR, LH XTT, T=4.0		68112-90K00-	1	81	140	
8411-8608	BJ70	W/XVW, XTT, T=4.0		68112-90K02-	1	81	140	
8411-	BJ70	XTT, T=4.0		68112-90K04-	1	81		
8411-	BJ70	W/XVW, XTT, T=4.0		68112-90K06-	1	81		
8411-	BJ70	RUN, FRONT DOOR GLASS 68141-90K03-			2	81		
8411-	BJ70	CLIP, DOOR GLASS RUN 62367-10010-			2	81		
8411-	BJ70	RUN, FRONT DOOR GLASS, LOWER 68143-90K00-			2	81		
8411-	BJ70	WEATHERSTRIP, FRONT DOOR GLASS, OUTER RH 68160-90K00-			1	81		
8411-	BJ70	W/XVW, RH 68160-90K01-			1	81		
8411-	BJ70	LH 68210-90K00-			1	81		
8411-	BJ70	W/XVW, LH 68210-90K01-			1	81		
8411-	BJ70	CLIP (FOR FRONT DOOR GLASS OUTER WEATHERSTRIP) 68211-90K00-			14	81		
8411-	BJ70	WEATHERSTRIP ASSY, FRONT DOOR GLASS, INNER RH 68170-90K00-			1	81		
8411-	BJ70	W/XVW, RH 68170-90K01-			1	81		
8411-	BJ70	LH 68220-90K00-			1	81		
8411-	BJ70	W/XVW, LH 68220-90K01-			1	81		

*TEM=Tempered
*VW=Ventilator Window

*TT=Tinted Tempered

2-H5

GENUINE TOYOTA PARTS

69503

69503A

1 2 3

4 5 6 7

69051 69685 69511

69058 69513 69581

69054 69685 69551

69064 90151-40005

69062

69511 69685 69052

69059A


MB H775-A

MB H776-A

PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	67-65 LOCK CYLINDER SET						
8411-	+-----+ I 69051 I +-----+ BJ70	CYLINDER AND KEY SET, DOOR LOCK, RH		69051-90K02-	1	81	
8411-	+-----+ I 69052 I +-----+ BJ70	CYLINDER AND KEY SET, DOOR LOCK, LH		69052-90K02-	1	81	
8411-	+-----+ I 69054 I +-----+ BJ70	CYLINDER AND KEY SET, BACK DOOR LOCK		69052-90K02-	1	81	
8411-	+-----+ I 69058 I +-----+ BJ70	CYLINDER AND KEY SET, FUEL FILLER LID		69058-16101-	1	81	
8411-	+-----+ I 69059A I +-----+ BJ70	CYLINDER AND KEY SET, SPARE WHEEL LOCK		69059-90K02-	1	81	
8411-	+-----+ I 69062 I +-----+ BJ70	CYLINDER AND KEY SET, GLOVE COMPARTMENT LOCK BLACK		69056-90K02-01	1	81	
8411-8608	+-----+ I 69064 I +-----+ BJ70	CYLINDER AND KEY SET, IGNITION SWITCH LOCK		69057-90K02-	1	81	140
8608-	BJ70			69057-90K16-	1	141	
8411-8608	+-----+ I 69503 I +-----+ BJ70	CYLINDER SET, LOCK BLACK		69005-90K44-01	1	81	140
8411-8608	BJ70	W/SPARE CARRIER KEY, BLACK		69005-90K66-01	1	81	140
8608-	BJ70	BLACK		69005-90L66-01	1	141	
8411-	+-----+ I 69503A I +-----+ BJ70	KEY, BLANK		90999-00085-	1	81	
8411-	BJ70	W/PROTECTOR		90999-00106-	1	81	
8411-	+-----+ I 69511 I +-----+ BJ70	RETAINER, FRONT DOOR LOCK CYLINDER		69511-32010-	2	81	

GENUINE TOYOTA PARTS

(8411-)

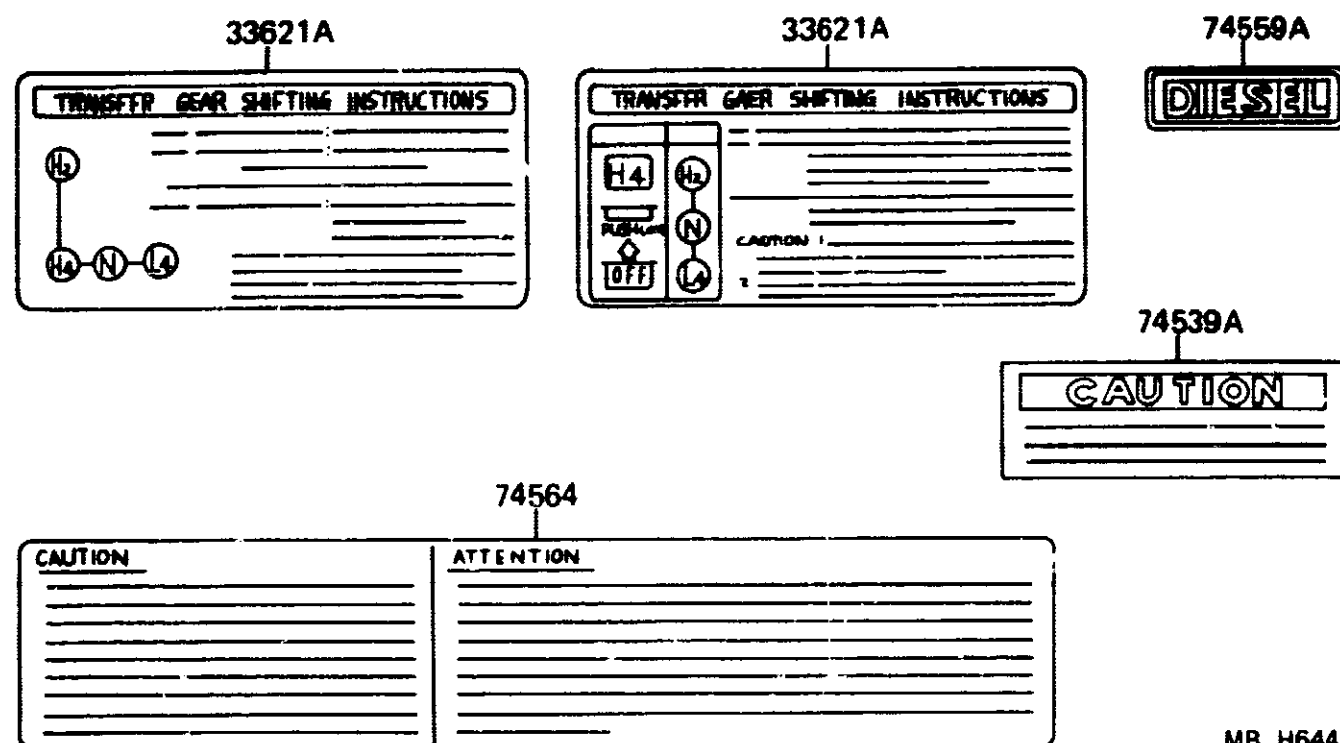

MB H644

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
	FIG. 74-55 CAUTION PLATE						
8411-	BJ70	33621A PLATE, CONTROL LEVER CAUTION		33621-60200-	1	81	
8411-	BJ70	TRANSFER CONTROL ELECTRIC TYPE		33621-60230-	1	81	
		74539A PLATE, FLAMABILITY, CAUTION		74539-20010-	2	81	
C 8411-8611	BJ70	74559A PLATE, FUEL CAUTION		74559-89101-	1	81	
8411-	BJ70	74564 PLATE, OFFROAD VEHICLE CAUTION		74564-60010-	2	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	78410D NUT, THROTTLE						
	BJ70			90179-11007-	1	81	
8411-8506	78449 GUIDE, THROTTLE CABLE						
	BJ70			78449-90300-	1	81	

[illegible]

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	82-02 WIRING & CLAMP						
8411-	82001	CABLE, BOND, NO.1		82123-90K07-	1	81	
	BJ70						
8411-	82125	WIRE, TRANSMISSION		82125-90K02-	1	81	
	BJ70						
8411-8510	82131	WIRE, COWL		82131-90K06-	1	81	100
	BJ70						
8510-8608	BJ70			82131-90K81-	1	101	140
8608-	BJ70			82131-90L44-	1	141	
8411-	82133	WIRE, COWL, NO.3		82133-90K00-	1	81	
	BJ70						
8411-	82141	WIRE, INSTRUMENT PANEL		82141-90K05-	1	81	
	BJ70						
8411-8510	82142	WIRE, INSTRUMENT PANEL, NO.2		82142-90K00-	1	81	100
	BJ70						
8510-	BJ70			82142-90K01-	1	101	
8411-8510	82151	WIRE, FRONT DOOR, RH		82151-90K00-	1	81	100
	BJ70						
8510-8608	BJ70			82151-90K01-	1	101	140
8411-8510	82152	WIRE, FRONT DOOR, LH		82152-90K00-	1	81	100
	BJ70						
8510-8608	BJ70			82152-90K01-	1	101	140
8411-8510	82161	WIRE, FLOOR		82161-90K02-	1	81	100
	BJ70						
8510-	BJ70			82161-90K23-	1	101	
8510-	BJ70	W/SUN ROOF		82161-90K24-	1	101	
8411-8510	BJ70			82162-90K00-	1	81	100


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-8510	82162	WIRE, FLOOR, NO.2		82162-90K02-	1	81	100
	BJ70						
8510-8608	82162	WIRE, FLOOR, NO.2		82162-90K15-	1	101	140
	BJ70						
8510-8608	82162	WIRE, FLOOR, NO.2		82162-90K17-	1	101	140
	BJ70						
8608-	BJ70			82162-90K33-	1	141	
8608-	BJ70			82162-90K34-	1	141	
8411-	82171	WIRE, ROOF, NO.1		82171-90K04-	1	81	
	BJ70						
8411-	BJ70	W/SUN ROOF		82172-90K01-	1	81	
8411-8510	82181B	WIRE, LUGGAGE ROOM, NO.3		82181-90K00-	1	81	
	BJ70						
8411-8510	BJ70			82183-90K01-	1	81	
8510-8510	BJ70			82183-90K07-	1		100
8510-8510	BJ70			82183-90K08-	1		100
8510-	BJ70			82183-90K04-	1	101	
8411-8510	82184	WIRE, BACK DOOR, NO.1		82184-90K00-	1	81	
	BJ70						
8411-8510	BJ70			82184-90K01-	1	81	
8510-8510	BJ70			82184-90K06-	1		100
8510-8510	BJ70			82184-90K07-	1		100
8510-	BJ70			82184-90K03-	1	101	
8510-	BJ70			82184-90K04-	1	101	
8411-	82185	WIRE, BACK DOOR, NO.2		82185-90K00-	1	81	
	BJ70						

*RWD=Rear Window Defogger

*RW=Rear Wiper

GENUINE TOYOTA PARTS

(8411-)

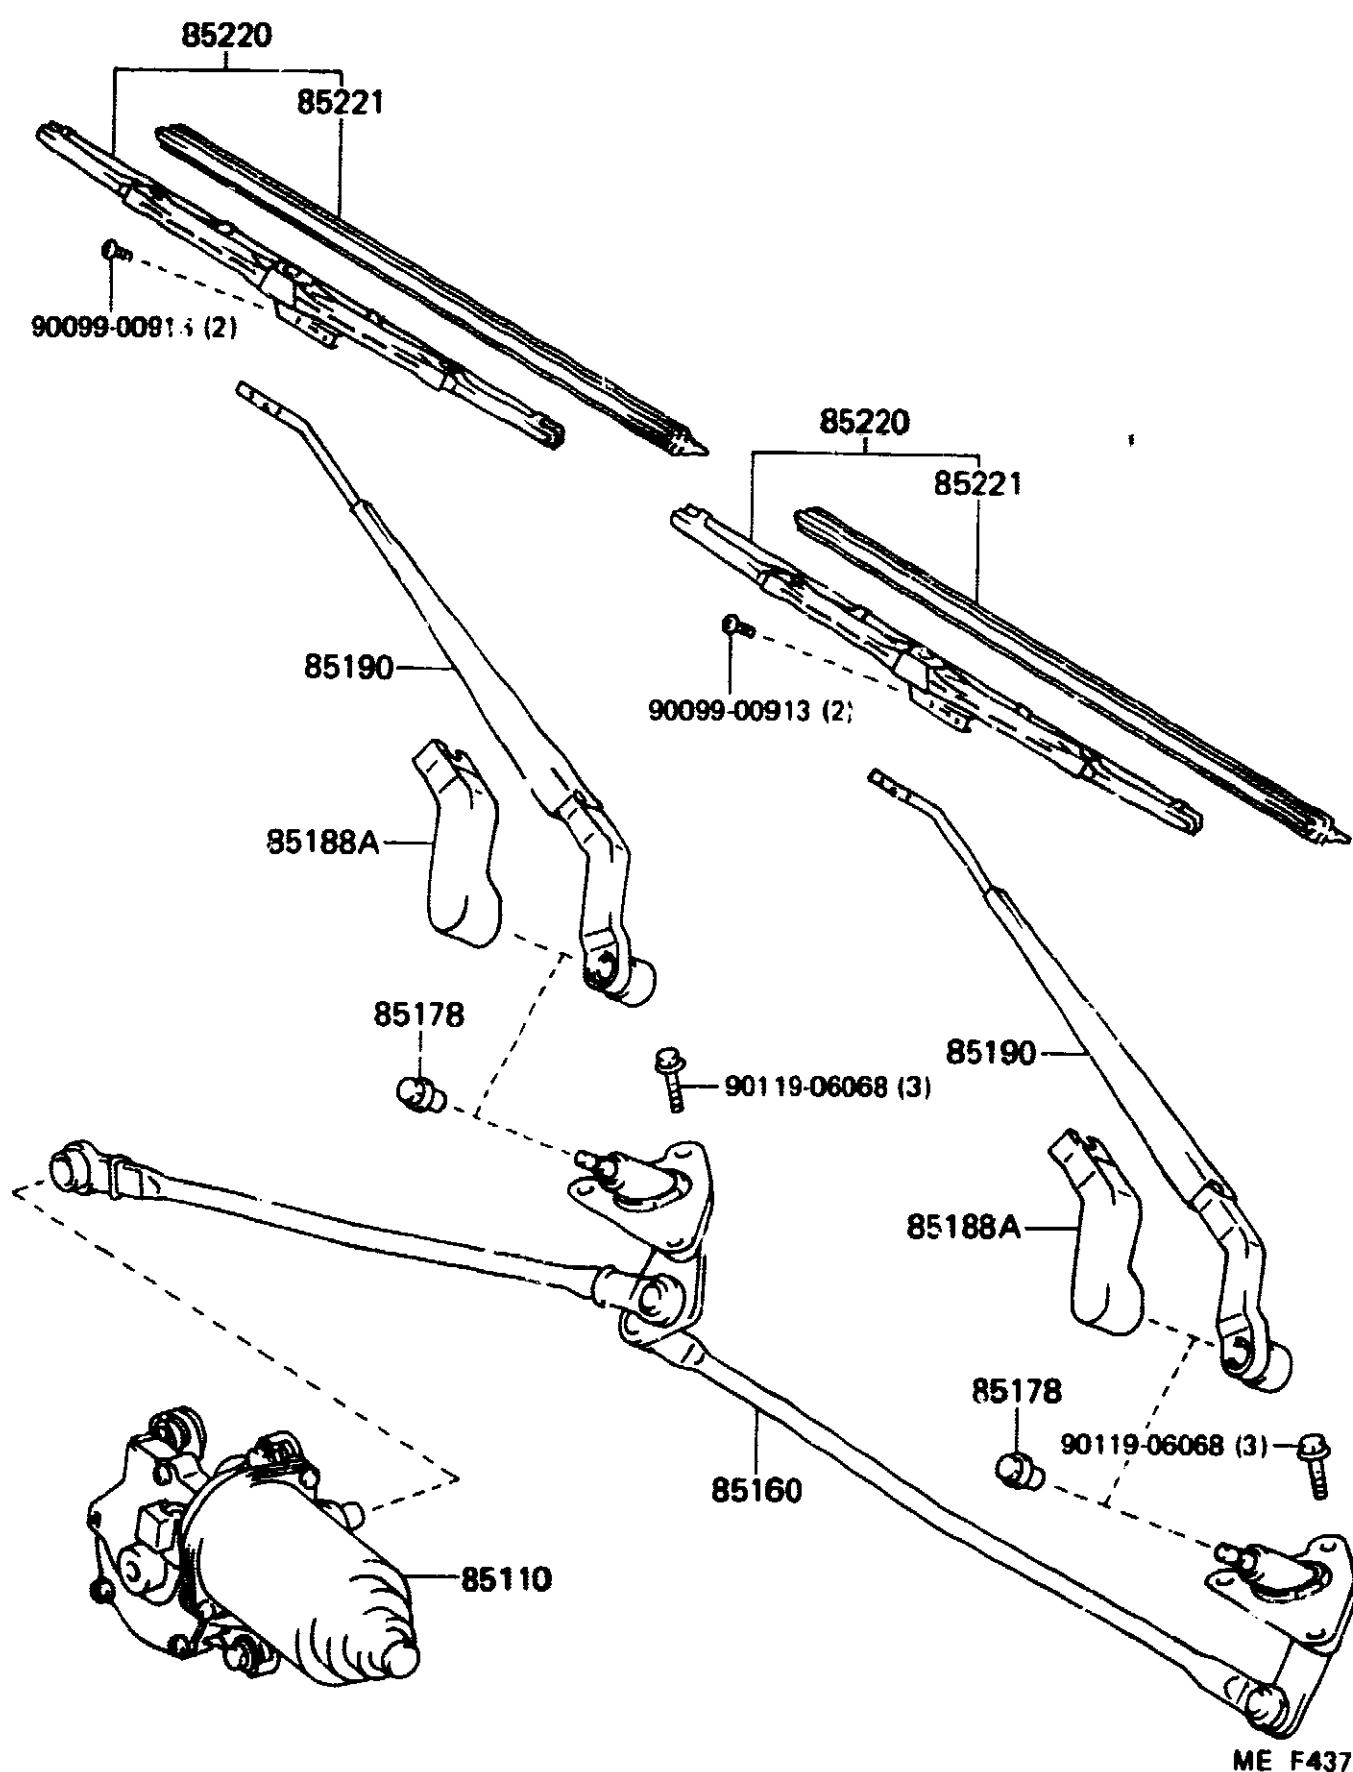

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	85-01 WINDSHIELD WIPER						
8411-8510	BJ70	MOTOR ASSY, WINDSHIELD WIPER		85110-90K04-	1	81	100
8510-	BJ70			85110-90K07-	1	101	
8411-	BJ70	LINK ASSY, WINDSHIELD WIPER		85160-90K04-	1	81	
8411-	BJ70	NUT (FOR WIPER ARM SETTING)		X 90176-08016-	2	81	
8411-	BJ70	CAP, WINDSHIELD WIPER PIVOT, NO.2		85261-90K02-	2	81	
8411-	BJ70	ARM ASSY, WINDSHIELD WIPER					
8411-	BJ70	LH		85190-90K03-	1	81	
8411-	BJ70	RH		85210-90K03-	1	81	
8411-	BJ70	BLADE ASSY, WINDSHIELD WIPER					
8411-	BJ70	LH		85220-12500-	1	81	
8411-	BJ70	RH		85220-22450-	1	81	
8411-	BJ70	BLADE, WINDSHIELD WIPER					
8411-	BJ70	LH		85221-12210-	1	81	
8411-	BJ70	RH		85221-22090-	1	81	

FIG.87-12

GENUINE TOYOTA PARTS

2-H10

M74-15-0706

GENUINE TOYOTA PARTS

PROD.DATE	MODELS		DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
							FROM	UP TO
FIG.	87-12 HEATING & AIR CONDITIONING - HEATER UNIT & BLOWER							
	+-----+							
	87104	MOTOR SUB-ASSY, HEATER BLOWER						
	+-----+							
8411-8510	BJ70				87104-89110-	1	81	100
8510-	BJ70				87104-90K00-	1	101	
	+-----+							
	87104R	MOTOR SUB-ASSY, REAR HEATER BLOWER						
	+-----+							
8411-8504	BJ70				* 87104-90K01- (87104-90K03-)	1	81	
8504-8510	BJ70				87104-90K03-	1		100
8510-	BJ70				87104-90K04-	1	101	
	+-----+							
	87105	FAN SUB-ASSY, HEATER BLOWER						
	+-----+							
8411-	BJ70				87105-14020-	1	81	
	+-----+							
	87105R	FAN SUB-ASSY, REAR HEATER BLOWER						
	+-----+							
8411-	BJ70				87105-87002-	1	81	
	+-----+							
	87107	UNIT SUB-ASSY, RADIATOR HEATER						
	+-----+							
8411-	BJ70				87107-90K01-	1	81	
	+-----+							
	87107R	UNIT SUB-ASSY, REAR HEATER						
	+-----+							
8411-	BJ70				87107-90K02-	1	81	
	+-----+							
	87120	HEATER ASSY, REAR						
	+-----+							
8411-8510	BJ70				87110-90K00-	1	81	100
8510-	BJ70				87110-90K01-	1	101	
	+-----+							
	87123	KNOB, HEATER						
	+-----+							
8411-	BJ70				55905-12070-	1	81	
	+-----+							
	87126	CLAMP, HEATER CONTROL						
	+-----+							
8411-	BJ70		HEATER RADIATOR		87126-12050-	2	81	
8411-	BJ7J		BLOWER		87126-90K00-	1	81	
	+-----+							
	87130	BLOWER ASSY, HEATER, FRONT						
	+-----+							
8411-8510	BJ70				87130-90K02-	1	81	100
8510-	BJ70				87130-90K03-	1	101	

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
	+-----+ 87138	RESISTOR, HEATER BLOWER					
8411-8510	BJ70			87138-90K00-	1	81	100
8510-	BJ70			87138-90K01-	1	101	
	+-----+ 87138R	RESISTOR, REAR HEATER BLOWER					
8411-8510	BJ70			87138-90K02-	1	81	100
8510-	BJ70			87138-90K03-	1	101	
	+-----+ 87150	RADIATOR ASSY, HEATER					
8411-	BJ70			87150-90K03-	1	81	
	+-----+ 87211E	DUCT, AIR					
8411-	BJ70			87201-90K05-	1	81	
	+-----+ 87212A	DUCT, AIR, REAR NO.1					
8411-	BJ70			87212-90K00-	1	81	
	+-----+ 87240H	VALVE ASSY, WATER UNIT					
8411-	BJ70			87240-90K05-	1	81	
	+-----+ 87248E	PIPE, HEATER WATER INLET, E (FOR HEATER UNIT)					
8411-	BJ70			87248-90K02-	1	81	
	+-----+ 87249E	PIPE, HEATER WATER OUTLET, E (FOR HEATER UNIT)					
8411-	BJ70			87248-90K05-	1	81	

GASKET - HANDLE

H12

M74-26-0045

HANDLE - HOSE

PART	NAME	LOCATION
GASKET, WATER PUMP	-----	1-J2
GASKET, WATER PUMP BODY	-----	1-I2
GEAR ASSY, POWER STEERING	-----	1-J9
GEAR OR SPROCKET, CAMSHAFT TIMING	-----	1-C2
GEAR OR SPROCKET, CRANKSHAFT TIMING	-----	1-B2
GEAR SUB-ASSY, REVERSE IDLER	-----	1-E6
GEAR SUB-ASSY, SLIDING ROOF DRIVE	-----	2-L3
GEAR SUB-ASSY, SPEEDOMETER DRIVEN (MTM)	-----	1-B6
GEAR SUB-ASSY, TRANSFER HIGH SPEED OUTPUT	-----	1-C7
GEAR SUB-ASSY, TRANSFER LOW SPEED OUTPUT	-----	1-C7
GEAR, COUNTER	-----	1-E6
GEAR, COUNTERSHAFT 5TH	-----	1-E6
GEAR, DRIVE	-----	1-L4
GEAR, FLYWHEEL RING	-----	1-B2
GEAR, FRONT DIFFERENTIAL SIDE	-----	1-H8
GEAR, IDLE, NO.1	-----	1-B2
GEAR, OIL PUMP DRIVE	-----	1-E2
GEAR, OIL PUMP DRIVEN	-----	1-E2
GEAR, POWER TAKE-OFF DRIVE	-----	1-C7
GEAR, REAR DIFFERENTIAL SIDE	-----	1-B8
GEAR, SPEEDOMETER DRIVE (FOR TRANSFER)	-----	1-C7
GEAR, STARTER IDLE	-----	1-L3
GEAR, TRANSFER IDLER	-----	1-C7
GEAR, TRANSFER INPUT	-----	1-C7
GEAR, 1ST	-----	1-D6
GEAR, 2ND	-----	1-D6
GEAR, 3RD	-----	1-D6
GEAR, 4TH	-----	1-D6
GLASS SUB-ASSY, FRONT DOOR, LH	-----	2-H4
GLASS SUB-ASSY, FRONT DOOR, RH	-----	2-H4
GLASS, BACK DOOR	-----	2-D5
GLASS, COMBINATION METER	-----	2-K8
GLASS, SIDE WINDOW, NO.1, FRONT (FOR SLIDE TYPE)	-----	2-J3
GLASS, SIDE WINDOW, NO.1, REAR (FOR SLIDE TYPE)	-----	2-J3
GLASS, VENT WINDOW, LH	-----	2-K4
GLASS, VENT WINDOW, RH	-----	2-K4
GLASS, WINDSHIELD	-----	2-F2
GOVERNOR ASSY, INJECTION PUMP	-----	1-H4
GRILLE SUB-ASSY, RADIATOR	-----	2-I1
GRILLE, ROOM VENTILATOR	-----	2-C4
GRIP ASSY, DOOR ASSIST, RH	-----	2-E6
GRIP SUB-ASSY, ASSIST, FRONT	-----	2-E6
GRIP SUB-ASSY, ASSIST, REAR	-----	2-E6
GRIP SUB-ASSY, DOOR ASSIST, LH	-----	2-F6
GRIP, INSTRUMENT PANEL SAFETY BAND	-----	2-E6
GROMMET (FOR BRAKE TUBE)	-----	1-B11
GROMMET (FOR HIGH & LOW SHIFT ROD)	-----	1-G7
GROMMET (FOR HOOD SUPPORT ROD)	-----	2-L1
GROMMET (FOR PARKING BRAKE FRONT CABLE)	-----	1-A10
GROMMET, SCREW (FOR GLOW PLUG)	-----	1-H3
GUARD, QUARTER WINDOW, LH	-----	2-J3
GUARD, QUARTER WINDOW, RH	-----	2-J3
GUIDE, BALL	-----	1-I4
GUIDE, OIL LEVEL GAGE	-----	1-K9
GUIDE, SIDE WIND, RH	-----	1-I1
GUIDE, THROTTLE CABLE	-----	2-M1
GUIDE, TRANSFER SHIFT LEVER	-----	2-H7
GUSSET, CROSSMEMBER, NO.2 LH	-----	1-G7
GUSSET, CROSSMEMBER, NO.2 RH	-----	2-A1
GUSSET, QUARTER WHEEL HOUSE, REAR LH	-----	2-A1
GUSSET, QUARTER WHEEL HOUSE, REAR RH	-----	2-G3
HANDLE ASSY, BACK DOOR INSIDE	-----	2-Q3
HANDLE ASSY, FRONT DOOR WINDOW REGULATOR	-----	2-F5
	-----	2-A5

PART	NAME	LOCATION
HANDLE ASSY, FRONT DOOR, OUTSIDE LH	-----	2-L4
HANDLE ASSY, FRONT DOOR, OUTSIDE RH	-----	2-L4
HANDLE SUB-ASSY, FRONT DOOR INSIDE, LH	-----	2-L4
HANDLE SUB-ASSY, FRONT DOOR INSIDE, RH	-----	2-L4
HANDLE, BACK DOOR OUTSIDE, LH	-----	2-F5
HANDLE, SEAT SUSPENSION CONTROL	-----	2-A6
HANGER, REAR SEAT SHOULDER BELT, LH	-----	2-D6
HANGER, REAR SEAT SHOULDER BELT, RH	-----	2-D6
HEAD SUB-ASSY, CYLINDER	-----	1-F1
HEAD, REVERSE & 5TH SHIFT	-----	1-H6
HEAD, 1ST & 2ND SHIFT	-----	1-H6
HEADLAMP ASSY, LH	-----	2-I7
HEADLAMP ASSY, RH	-----	2-I7
HEADLINING ASSY, SUN ROOF OR REMOVABLE ROOF	-----	2-D4
HEADLINING, ROOF NO.1	-----	2-D4
HEADREST ASSY, FRONT SEAT	-----	2-M5
HEADREST ASSY, REAR SEAT	-----	2-M5
HEATER AND ACCESSORY ASSY	-----	2-F10
HEATER AND ACCESSORY, REAR	-----	2-F10
HEATER ASSY, REAR	-----	2-H10
HINGE ASSY, BACK DOOR, LH	-----	2-F5
HINGE ASSY, BACK DOOR, RH	-----	2-F5
HINGE ASSY, FRONT DOOR, LOWER LH	-----	2-A5
HINGE ASSY, FRONT DOOR, LOWER RH	-----	2-A5
HINGE ASSY, FRONT DOOR, UPPER LH	-----	2-A5
HINGE ASSY, FRONT DOOR, UPPER RH	-----	2-A5
HINGE ASSY, HOOD, LH	-----	2-L1
HINGE ASSY, HOOD, RH	-----	2-L1
HINGE SUB-ASSY, GLOVE COMPARTMENT DOOR	-----	2-D2
HOLDER AND NOZZLE SET, NOZZLE	-----	1-A4
HOLDER ASSY, ALTERNATOR BRUSH	-----	1-J3
HOLDER ASSY, STARTER BRUSH	-----	1-L3
HOLDER SUB-ASSY, JACK	-----	2-B7
HOLDER, ANTENNA	-----	2-C10
HOLDER, DELIVERY VALVE	-----	1-D4
HOLDER, DOOR LOCK CONTROL KNOB	-----	2-Q5
HOLDER, SYNCHRONIZER RING	-----	1-E6
HOLDER, VISOR	-----	2-E6
HOLDER, W/RECTIFIER NEGATIVE, ALTERNATOR	-----	1-J3
HOLDER, W/RECTIFIER POSITIVE, ALTERNATOR	-----	1-J3
HOLDER, WASHER NOZZLE	-----	2-J9
HOOD SUB-ASSY	-----	2-J1
HOOD SUB-ASSY, METER	-----	2-C2
HOOK SUB-ASSY, ROPE	-----	2-L2
HOOK SUB-ASSY, ROPE, NO.1	-----	2-K5
HOOK, MALE, NO.1	-----	2-A3
HOOK, NO.1	-----	2-C1
HOOK, ROOF HEADLINING SUPPORT	-----	2-E4
HORN ASSY, HIGH PITCHED	-----	2-D10
HORN ASSY, LOW PITCHED	-----	2-D10
HOSE (FOR RADIATOR RESERVE TANK)	-----	1-L2
HOSE (FOR REAR AXLE BREATHER)	-----	1-B8
HOSE (FOR SLIDING OR REMOVABLE ROOF DRAIN)	-----	2-L3
HOSE OR PIPE, FUEL (FOR INJECTION PUMP TO FUEL FILTER)	-----	1-C4
HOSE, AIR CLEANER, NO.1	-----	1-F3
HOSE, AIR CLEANER, NO.2	-----	1-F3
HOSE, BREATHER	-----	1-L2
HOSE, CLUTCH	-----	1-F5
HOSE, CONNECTOR TO BRAKE BOOSTER	-----	1-G10
HOSE, CONNECTOR TO CHECK VALVE	-----	1-G10
HOSE, FLEXIBLE (FOR BRAKE TUBE)	-----	1-B11
	-----	1-C11
HOSE, FLEXIBLE (FOR FRONT)	-----	1-B11
HOSE, FLEXIBLE (FOR REAR BRAKE TUBE)	-----	1-C11

90043 - 90311



H14

H74-28-0046

90311 - 90501

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
90043-45027-	1-I1	90117-14177-	1-L11	90202-10103-	1-C11	90311-24001-	1-B9	90363-40035-	1-D6	90430-18244-	1-I1
90044-01010-	1-B2	90118-14107-	1-L11	90210-10001-	1-K9	-28004-	1-A6	-45002-	1-D5	-20006-	2-E7
-30026-	1-F2	-14158-	1-L11	-12001-	1-G1	-32013-	1-A6	90364-17010-	1-D7	-20007-	2-E7
-60053-	1-L2	-14160-	1-L11	90213-00013-	1-K10	-33085-	1-H8	-32003-	1-J9	-37140-	1-G1
-67103-	1-L2	-14187-	1-I11	-07010-	1-K10	-38134-	1-A8	-32007-	1-E6	90440-17021-	2-E1
90096-90001-	1-L4	-14188-	1-I11	90214-42030-	1-K8	-47001-	1-G8	-34006-	1-C7	-2-F1	
90099-02205-	1-K3	90119-08353-	1-M6	90215-09003-	1-H6	-48008-	1-D8	-38012-	1-C7	90445-12078-	1-L2
-02209-	1-I3	-10208-	1-B2	-42025-	1-I6	-48009-	1-M6	-44065-	1-D6	-22011-	2-E7
-04945-	1-H4	-10262-	1-M6	90240-06158-	1-K8	-48010-	1-M6	90365-32002-	1-E6	90446-06013-	2-L9
-05157-	2-I9	-12045-	1-L6	-08042-	1-H10	-48012-	1-M6	-40001-	1-E6	90447-12001-	1-B5
-07103-	1-J3	-12046-	1-L6	-08128-	1-A10	-50002-	1-K1	-40002-	1-D6	-12016-	1-B5
-10018-	1-L4	-12047-	1-L6	-10025-	1-G7	-47013-	1-D8	90366-17001-	1-F11	-14030-	2-E7
-10087-	1-E4	-12048-	1-L6	-10027-	2-F7	-50007-	1-K1	-30011-	1-A8	-14031-	2-E7
-10107-	1-L3	90170-08022-	1-D2	-10157-	1-G7	-62001-	1-J8	-35011-	1-G8	90460-01001-	1-E9
-10119-	1-L3	-09167-	2-D9	90249-08018-	1-F5	-95001-	1-K1	-35011-	1-D7	-26001-	1-E9
		-22058-	1-J9	-08068-	1-K10	-95003-	1-K1	-35053-	1-D7	-50016-	1-M2
-10137-	1-I3	-22058-	1-L9	-10017-	1-C10	90312-17001-	1-A6	-40004-	1-A8	90461-10387-	1-C8
-12010-	1-I4	90171-14042-	1-K9	90250-05008-	1-C9	-32002-	1-J9	90368-45066-	1-G8	90467-05031-06	2-M5
-13001-	1-H4	90175-08008-	1-F3	-05202-	1-D6	90313-13001-	1-F7	-45087-	1-G8	-05031-13	2-M5
-13002-	1-E4	90176-08016-	2-H9	-06009-	1-E6	-93011-	1-F11	-49084-	1-J8	-05032-08	2-B4
-14015-	1-J4	90179-00070-	2-I9	-07057-	1-J8	90331-12002-	1-G6	90369-22004-	1-K9	-06048-08	2-D4
-14055-	1-J3	-10070-	1-D3	-08024-	1-H7	-16050-	1-G6	-38003-	1-I2	-08011-	2-A2
-32089-	2-L9	-11007-	2-H7	-08120-	1-I1	-18001-	1-M6	-38003-	1-I2	-08030-	2-A2
-32103-	2-J9	-12044-	1-B2	-10003-	1-K1	-21001-	1-F1	90374-30003-	1-J9	-09006-	2-J1
-33075-	2-K9	-12086-	1-G9	-10192-	1-M6	-40024-	1-F1	90385-10064-	1-D11	-09012-23	2-B4
-33534-	1-L2	-22005-	1-L6	-10214-	1-B2	-51032-	1-H1	-12029-	1-A10	-09012-36	2-B4
-52066-	1-J3	-22011-	1-A8	-10215-	1-G6	-56001-	1-C2	-19057-	1-I11	-09014-	2-J1
90101-08055-	1-J11	-26002-	1-D6	-12146-	1-M5	90340-25001-	1-L9	90386-08002-	1-F5	-09030-	2-M1
-10439-	1-I10	-26004-	1-D6	-12216-	1-A6	90341-10004-	1-I6	-08155-	2-G7	-11085-	1-L2
-12021-	1-J10	90189-04024-	1-H3	-12216-	1-M5	-12008-	1-I6	-12014-13	2-A3	-12014-16	2-A3
-12060-	1-H10	90201-06177-	1-D2	90253-15005-	1-I1	-15001-	1-F7	-13192-	1-C10	-16001-	1-E10
90105-08142-	1-I6	-08106-	1-I4	90254-05004-	1-F7	-18006-	1-B8	90387-08002-	1-F5	-16002-	1-G10
-10039-	2-E1	-10092-	1-H6	-05016-	1-F7	1-B8	1-H8	-08099-	1-A9	-31110-	1-C11
-10103-	2-F1	-10227-	1-C2	90280-03015-	1-G6	-18057-	1-M6	-09006-	1-C11	-32002-	1-L9
-10194-	1-B2	-22005-	1-M6	-05008-	1-I6	90301-14001-	1-H8	-12004-	1-C10	-42001-	1-L2
-11013-	1-L7	-22007-	1-A8	90301-14001-	1-F6	-18004-	1-M5	90389-18002-	1-F5	90468-12003-	1-H10
-12053-	1-A8	-26003-	1-G8	-18018-	1-B9	-20003-	1-M6	-18071-	1-H11	-18071-	2-L5
-13004-	1-B2	-30003-	1-D6	-20001-	1-D10	-20004-	1-M6	90401-14030-	1-L11	90480-01069-	1-B11
-16003-	1-B2	-35002-	1-J9	-22001-	1-B6	90345-52001-	1-A5	-18002-	1-A5	-15296-	2-L1
90106-12022-	1-E11	-40551-	1-C7	-27003-	1-B6	-53001-	1-E2	-17158-	1-E2	-17401-	1-G7
90109-06008-	1-D10	-40552-	1-G8	-32002-	1-H2	-53020-	1-B8	90404-10018-	1-B8	90501-05141-	1-J4
-16001-	1-H1	-40553-	1-A8	-33002-	1-C9	90360-06004-	1-H8	-10019-	1-H8	-10067-	1-I6
90113-08001-	1-H6	-40554-	1-G8	-34004-	1-J9	-06021-	1-F1	90405-09089-	1-F5	-10083-	1-G9
-10003-	1-I6	-40555-	1-A8	-51001-	1-C7	-08009-	1-D6	-09090-	1-G10	-10745-	1-A10
90114-1124-	1-D8	-40556-	1-A8	-53002-	1-K9	-10003-	1-K9	-09091-	1-G10	-12099-	1-G9
-10039-	1-M6	-40557-	1-G8	-60001-	1-F7	90361-05001-	1-F7	-09094-	1-G10	-12103-	1-C9
90116-08123-	1-D2	-40558-	1-G8	-60122-	1-I6	-06049-	1-I6	90407-10003-	1-D10	-12447-	1-C9
-08146-	1-H5	-40559-	1-A8	-63001-	1-B9	-10037-	1-I6	90413-04005-	1-J7	-13011-	1-I6
-08325-	1-J8	-40560-	1-A8	-64002-	1-M8	90363-12002-	1-B11	-10042-	1-B11	-14029-	1-F7
-10048-	1-K1	-40561-	1-G8	-65145-	1-C4	-17004-	1-C11	-10106-	1-C11	-14069-	1-H6
-10056-	1-B3	-40562-	1-A8	-77001-	1-J9	-20024-	1-B11	-10174-	1-B11	-14076-	1-H6
-10074-	1-A8	-40563-	1-G8	90310-09001-	1-J9	-28001-	1-D5	90430-01003-	2-K4	-16163-	1-D2
-10075-	1-G8	-40564-	1-A8	90311-13066-	1-C9	-35013-	1-D6	-06104-	1-D10	-20012-	1-J10
-10076-	1-A8	-40565-	1-G8	-16002-	1-K9	-35017-	1-D6	-07001-	2-J4	-23014-	1-C9
-10087-	1-B3	-40566-	1-A8	-18001-	1-L9	-35022-	1-M8	-09251-	1-D10	-23018-	1-C2
-10098-	1-B3	-40567-	1-G8	-19002-	1-H7	-40018-	1-C7	-10022-	1-E10	-29003-	1-F7
-12007-	1-E11	-40568-	1-A8	-22005-	1-I6	-40018-	1-D7	-18008-	1-H7	-40205-	2-J4
90117-14016-	1-I11	-40569-	1-G8	-22005-	1-K9	-40018-	1-D6	-18012-	1-M5	-45011-	1-M8
-14017-	1-I11	-40570-	1-A8	-22005-	1-K9	-40018-	1-D6	-18012-	1-M6	-45114-	1-L9
-14176-	1-L11	-40571-	1-G8	-22005-	1-F7	-40018-	1-D6	-18012-	1-E2	-47003-	1-C2

ILLUSTRATED INDEX

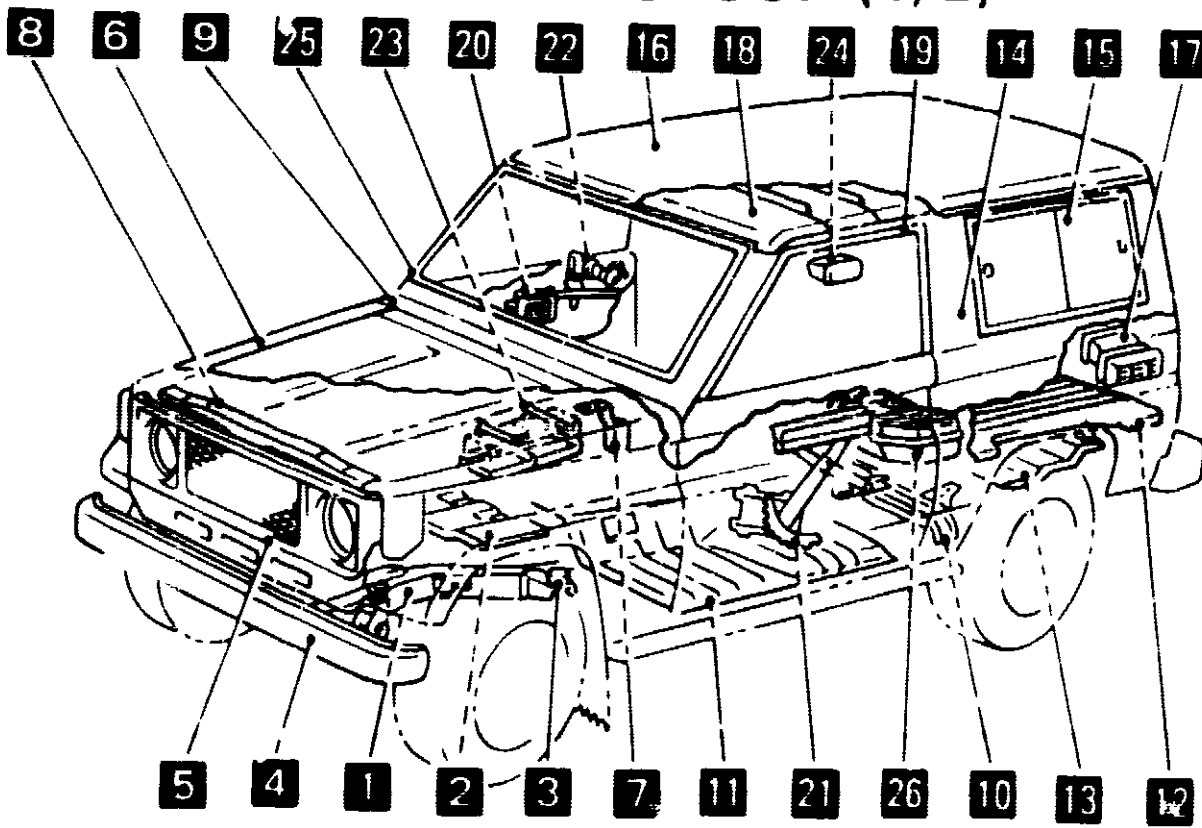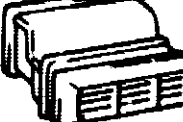2-A1 (51-51) 1  Frame	2-C1 (51-52) 2  Crossmember & Under Cover	2-E1 (52-51) 3  Cab & Body Mounting	2-G1 (52-52) 4  Front Bumper & Stay	2-I1 (53-51) 5  Radiator Grille	2-J1 (53-53) 6  Hood & Front Fender	2-L1 (53-54) 7  Hood Lock & Hinge
2-H5 (67-65) 22  Lock Cylinder Set	BODY GROUP (1/2) 					
2-A5 (67-54) 21  Front Door Regulator & Hinge						
2-L4 (67-53) 20  Front Door Lock & Handle						
2-F4 (67-51) 19  Front Door Panel & Glass	2-G6 (74-54) 23  Battery Carrier	2-I6 (74-56) 24  Ash Receptacle	2-K6 (75-52) 25  Moulding	2-C7 (77-51) 26  Fuel Tank & Tube	2-M1 (53-55) 8  Front Fender Apron	2-F2 (55-53) 9  Cowl Panel & Glass
2-D4 (64-52) 18  Roof Headling & Pad	2-A4 (61-55) 17  Rear & Roof Ventilator	2-K3 (61-53) 16  Roof Panel & Back Panel	2-I3 (61-52) 15  Side Window	2-E3 (61-51) 14  Side Member	2-M2 (58-53) 13  Floor Insulator	2-K2 (58-52) 12  Rear Floor Panel & Member

MB 1741


FIG.53-51 RADIATOR GRILLE

2-I1

GENUINE TOYOTA PARTS

M74-13-0059

(8411-)

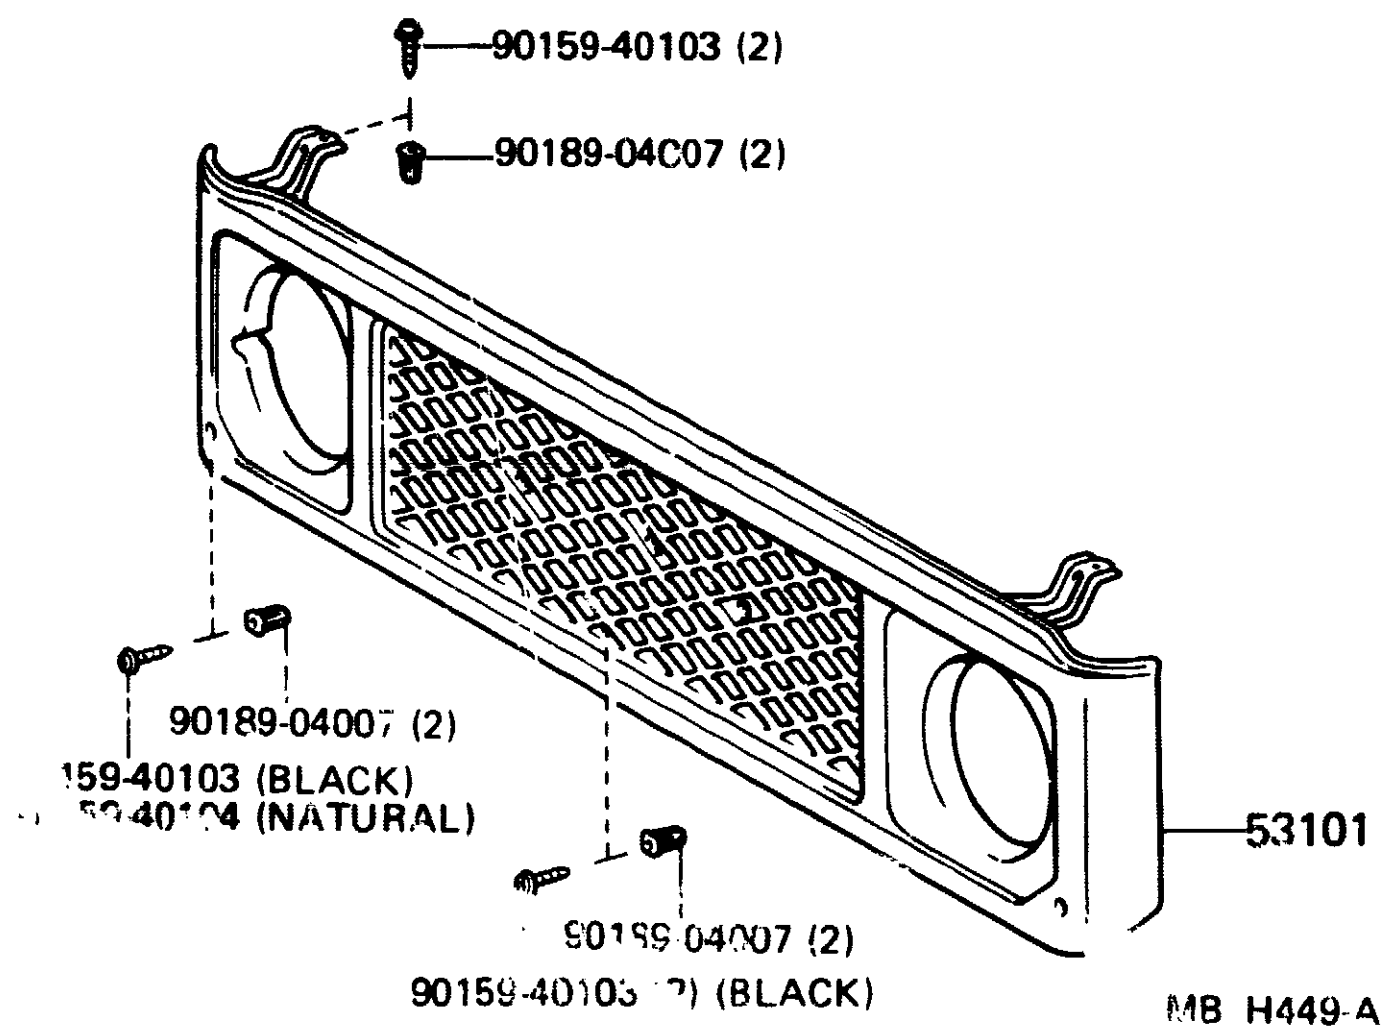



PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
FIG.	53-51 RADIATOR GRILLE						
		+					
	1 53101	GRILLE SUB-ASSY, RADIATOR					
	+						
8411-	BJ70			53101-90K00-	1	81	
8411-	BJ70	CHROME PLATED		53101-90K01-	1	81	

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
FIG.	58-51	FRONT FLOOR PANEL & FRONT FLOOR MEMBER					
8411-	BJ70	BRACKET SUB-ASSY, SIDE STEP, NO.2		51077-90K00-	4	81	
8411-	BJ70	BRACKET SUB-ASSY, SIDE STEP, NO.3		51078-90K00-	2	81	
8411-	BJ70	STEP SUB-ASSY, RH		51707-90K00-	1	81	
8411-	BJ70	CHROME PLATED		51707-90K02-	1	81	
8411-	BJ70	STEP SUB-ASSY, LH		51708-90K00-	1	81	
8411-	BJ70	CHROME PLATED		51708-90K02-	1	81	
8411-	BJ70	COVER, STEP PLATE, OUTER RH		51773-90K00-	2	81	
8411-	BJ70	COVER, STEP PLATE, OUTER LH		51773-90K00-	2	81	
8411-	BJ70	BRACKET, SIDE STEP, NO.1		51793-90K00-	2	81	
8411-	BJ70	REINFORCEMENT, FRONT FLOOR TO BRACE		57427-90K00-	1	81	
8411-	BJ70	BRACKET, FRONT SEAT, FRONT		57457-90K00-	2	81	
8411-	BJ70	BRACKET, FRONT SEAT INSIDE		57465-90K00-	2	81	
8411-	BJ70	BRACKET, FRONT SEAT, OUTSIDE		57468-90K00-	1	81	
8411-	BJ70		RH	57469-90K00-	1	81	
8411-	BJ70		LH	57469-90K00-	1	81	


*SUS= Suspension Seat

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
8411-	BJ70	REINFORCEMENT, FRONT FLOOR, CENTER		57511-90K00-	1	81	
8411-	BJ70	XSUS		57511-90K01-	1	81	
8411-	BJ70	PANEL SUB-ASSY, FRONT FLOOR SIDE, RH		58011-90K00-	1	81	
8411-	BJ70	PANEL SUB-ASSY, FRONT FLOOR SIDE, LH		58012-90K00-	1	81	
8411-8510	BJ70	REINFORCEMENT, FRONT FLOOR PANEL		58114-90K00-	1	81	100
8510-	BJ70			58114-90K03-	1	101	
8411-	BJ70	REINFORCEMENT, PARKING BRAKE BASE		58171-90K00-	1	81	
8411-8510	BJ70	BRACKET, FRONT SEAT MOUNTING, INSIDE		58184-90K00-	1	81	100
8411-	BJ70	LH		58183-90K00-	1	81	
8510-	BJ70	RH		58184-90K02-	1	101	
8411-	BJ70	COVER, TRANSMISSION		58261-90K01-	1	81	
8411-	BJ70	PACKING, TRANSMISSION COVER		58263-90K00-	1	81	
8411-8510	BJ70	SEAL, TRANSFER LEVER BOOT		58268-90K00-	1	81	100
8411-8604	BJ70	BOOT, SHIFT AND SELECT LEVER, NO.1		58280-90K00-	1	81	
8604-	BJ70			58280-90K02-	1		


(8411-)

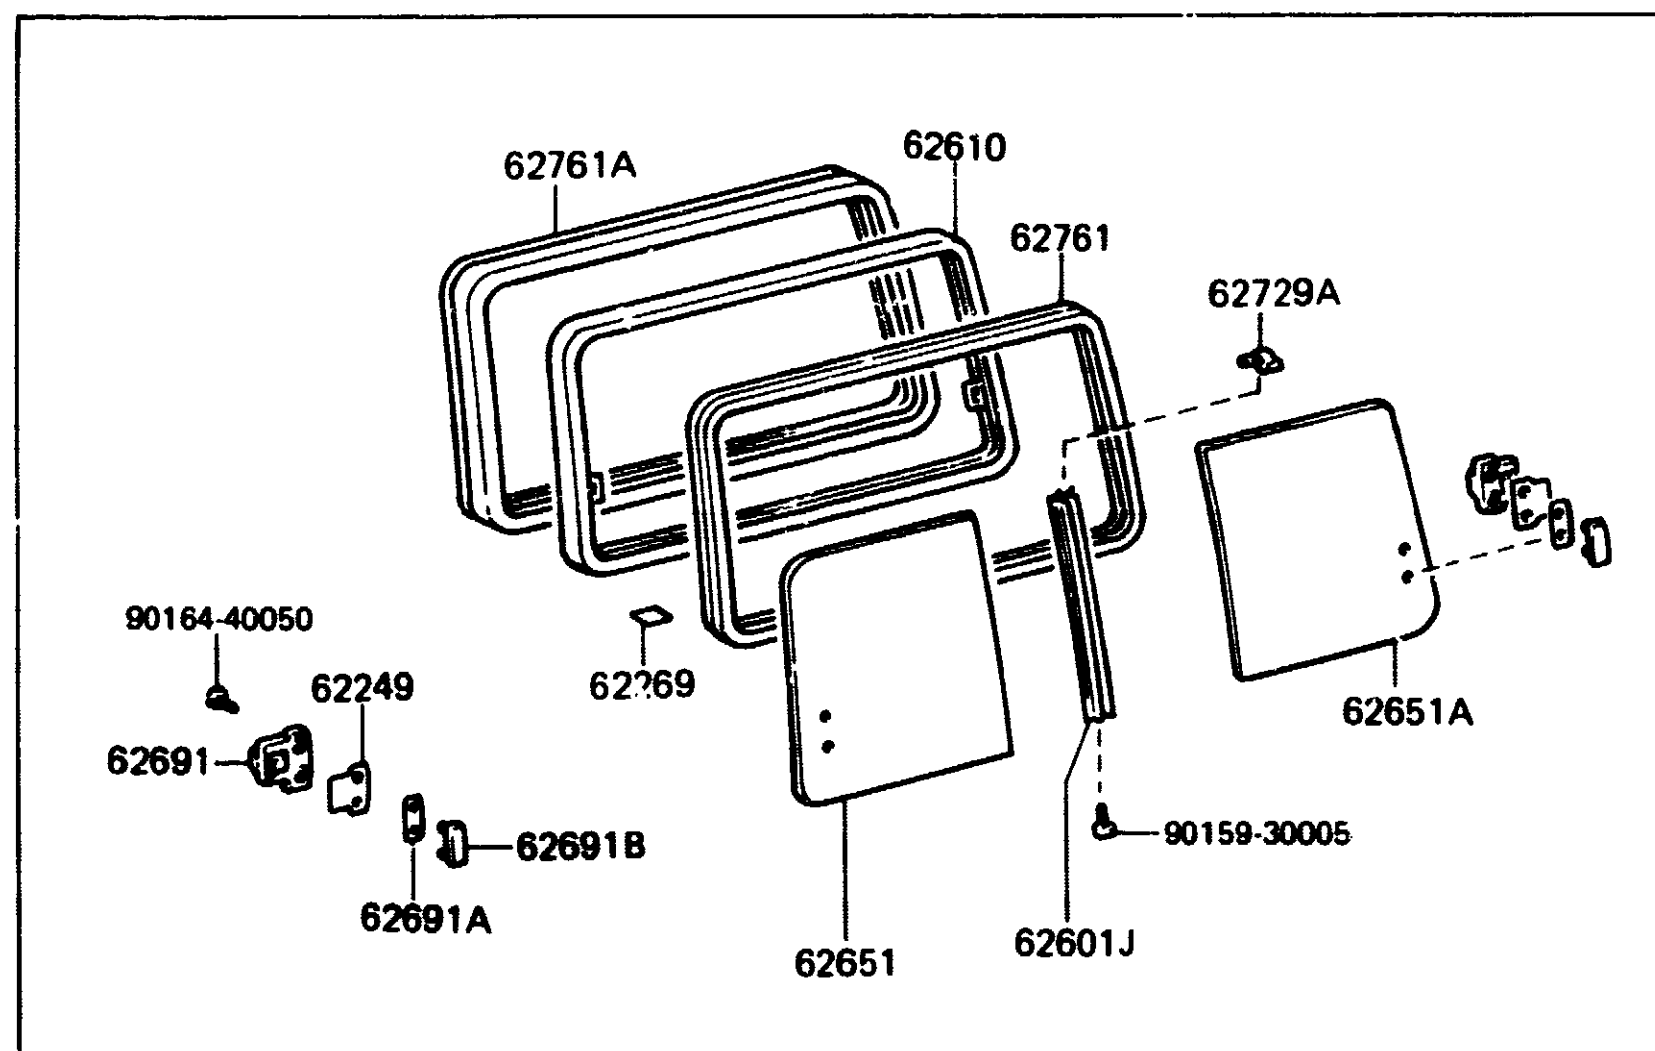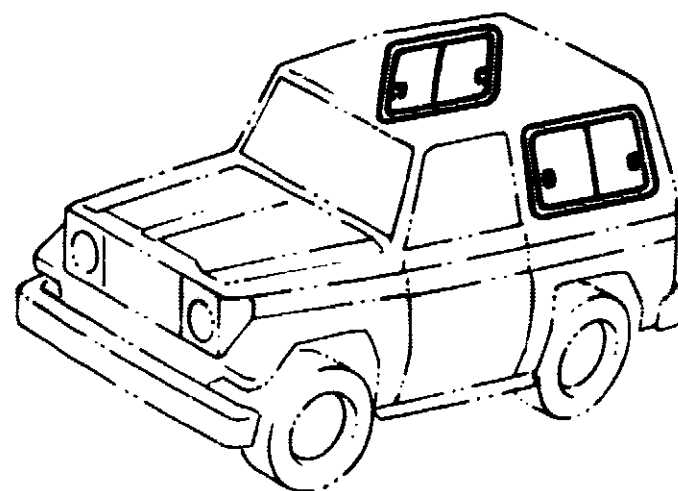

(8610-)

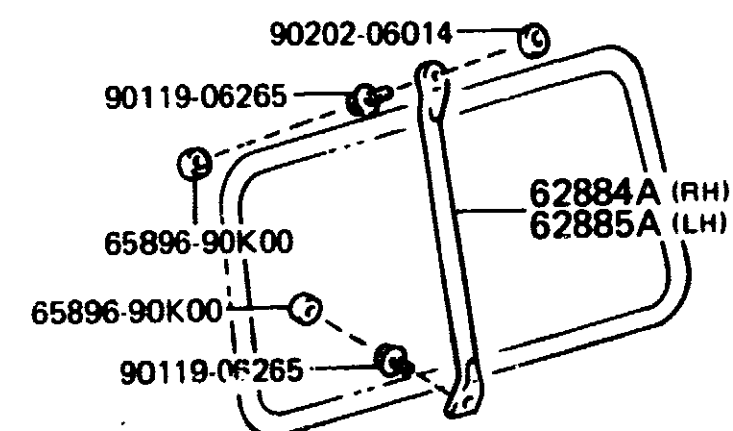


(-8610)

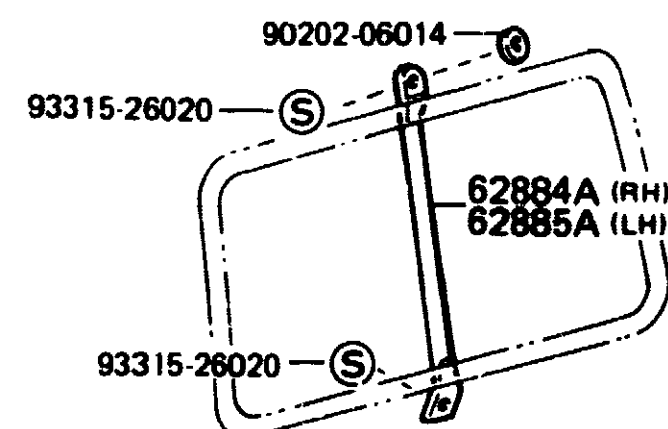


MB H631-A

GENUINE TOYOTA PARTS


(8411-)

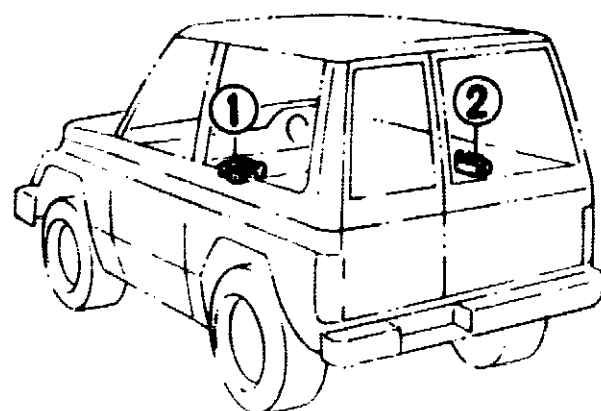

①

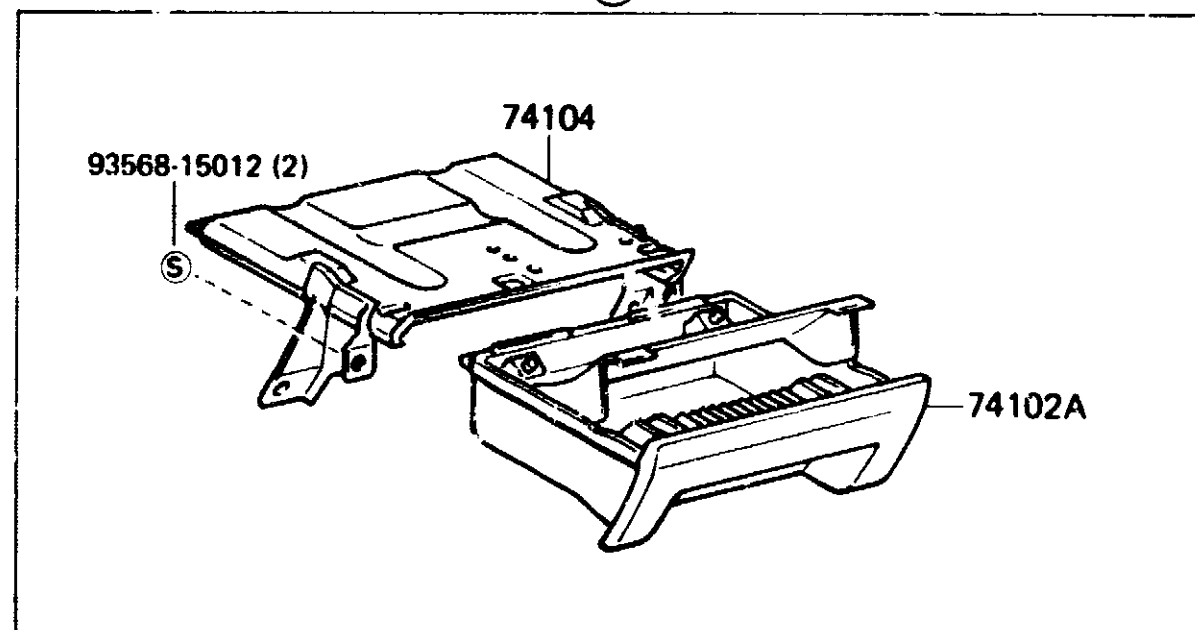

②

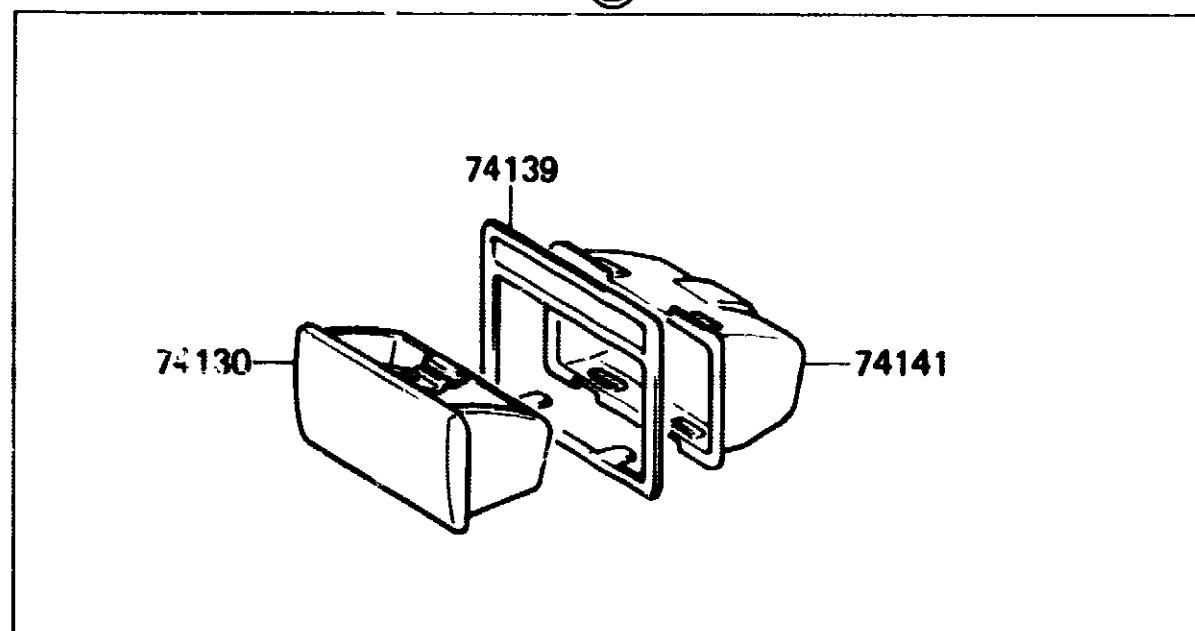


MB H490

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	74-56 ASH RECEPTACLE						
		74102A RECEPTACLE ASSY, FRONT ASH					
8411-	BJ70	GRAY		74102-90K00-03	1	81	
8411-	BJ70	BEIGE		74102-90K00-05	1	81	
		74104 RETAINER SUB-ASSY, ASH RECEPTACLE, NO. 1					
8411-	BJ70			74104-90K00-	1	81	
		74130 RECEPTACLE ASSY, REAR ASH					
8411-	BJ70	BROWN		74105-10010-10	2	81	
8411-	BJ70	GRAY		74105-10010-13	2	81	
		74139 RETAINER, REAR ASH RECEPTACLE, OUTER					
8411-	BJ70			74135-10030-	2	81	
		74141 RETAINER, REAR ASH RECEPTACLE, INNER					
8411-	BJ70			74137-10030-	2	81	

(8411-)

GENUINE TOYOTA PARTS

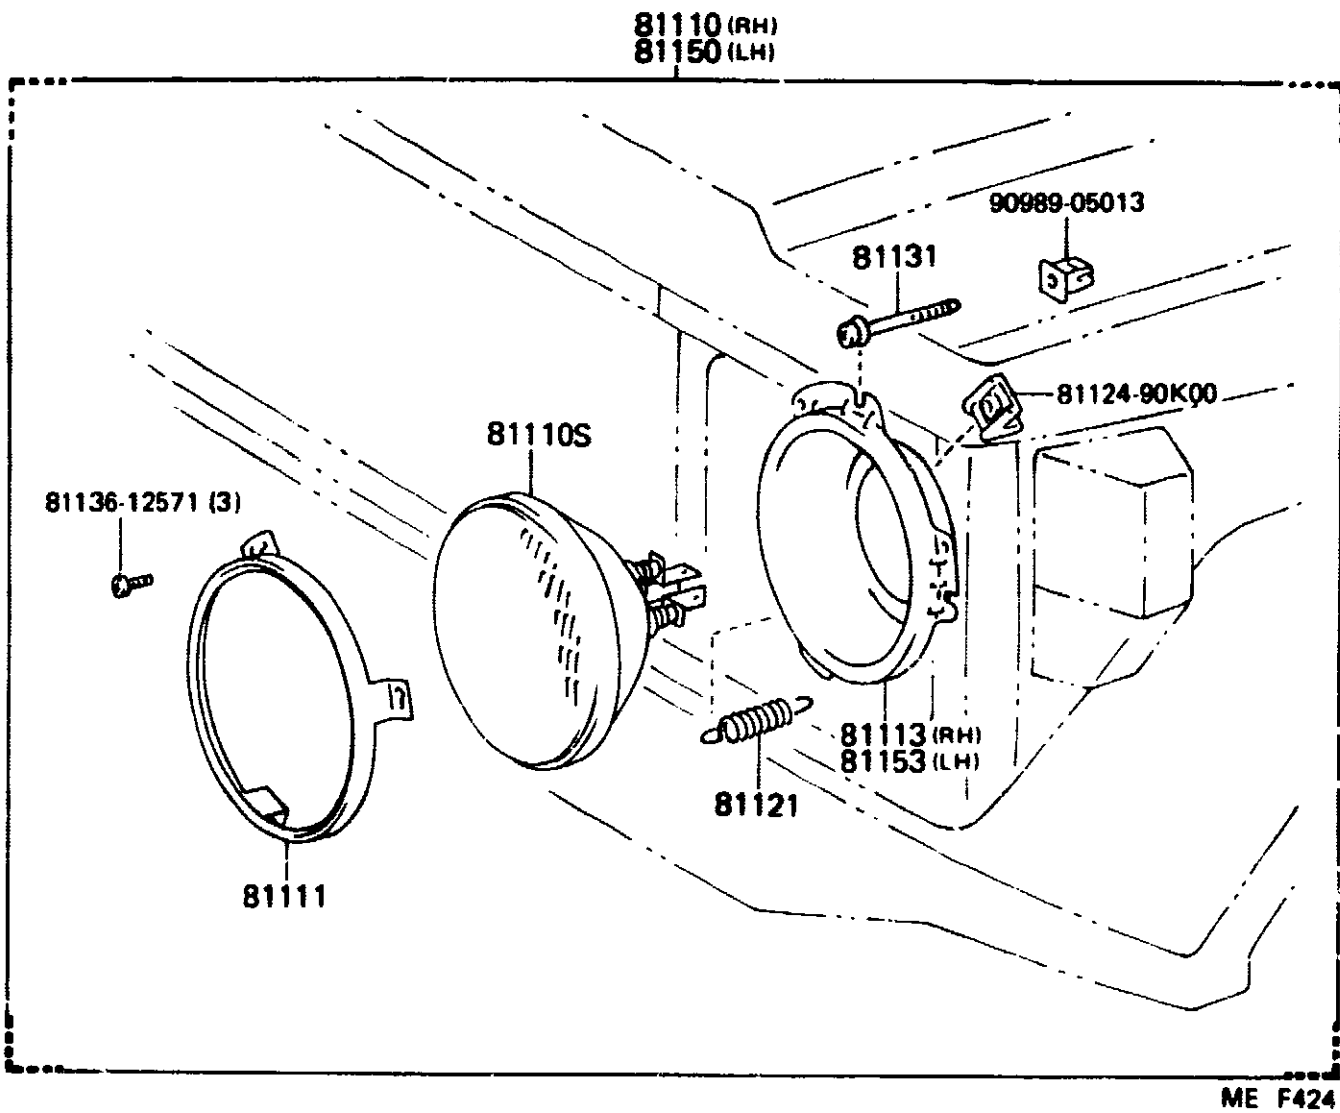

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	81-01 HEADLAMP						
8411-8608	+	+					
	81110	HEADLAMP ASSY, RH					
8411-8608	+	+					
	BJ70			# 81110-69265- (81110-90K01-	1	81	140
8411-8608	+	+					
	BJ70			81110-90K01-	1	141	
8411-8608	+	+					
	81110S	SEALED BEAM UNIT, NO. 1					
8411-8608	+	+					
	BJ70	12V 60/50W		90981-01046-	2	81	
8411-8608	+	+					
	81111	RING, SEALED BEAM RETAINING					
8411-8608	+	+					
	BJ70			81111-22150-	1	81	
8411-8608	+	+					
	81113	RING, SEALED BEAM MOUNTING, NO. 1 RH					
8411-8608	+	+					
	BJ70			81113-90K00-	1	81	
8411-8608	+	+					
	81121	SPRING, HEADLAMP TENSION					
8411-8608	+	+					
	BJ70			81121-62010-	2	81	
8411-8608	+	+					
	81131	SCREW, HEADLAMP ADJUSTING					
8411-8608	+	+					
	BJ70			81131-28050-	4	81	
8411-8608	+	+					
	81150	HEADLAMP ASSY, LH					
8411-8608	+	+					
	BJ70			# 81150-69265- (81150-90K01-	1	81	140
8411-8608	+	+					
	BJ70			81150-90K01-	1	141	
8411-8608	+	+					
	81153	RING, SEALED BEAM MOUNTING, NO. 1 LH					
8411-8608	+	+					
	BJ70			81153-90K00-	1	81	


FIG.85-02 REAR WIPER

2-I9

M74-13-0097

GENUINE TOYOTA PARTS

(8411-)

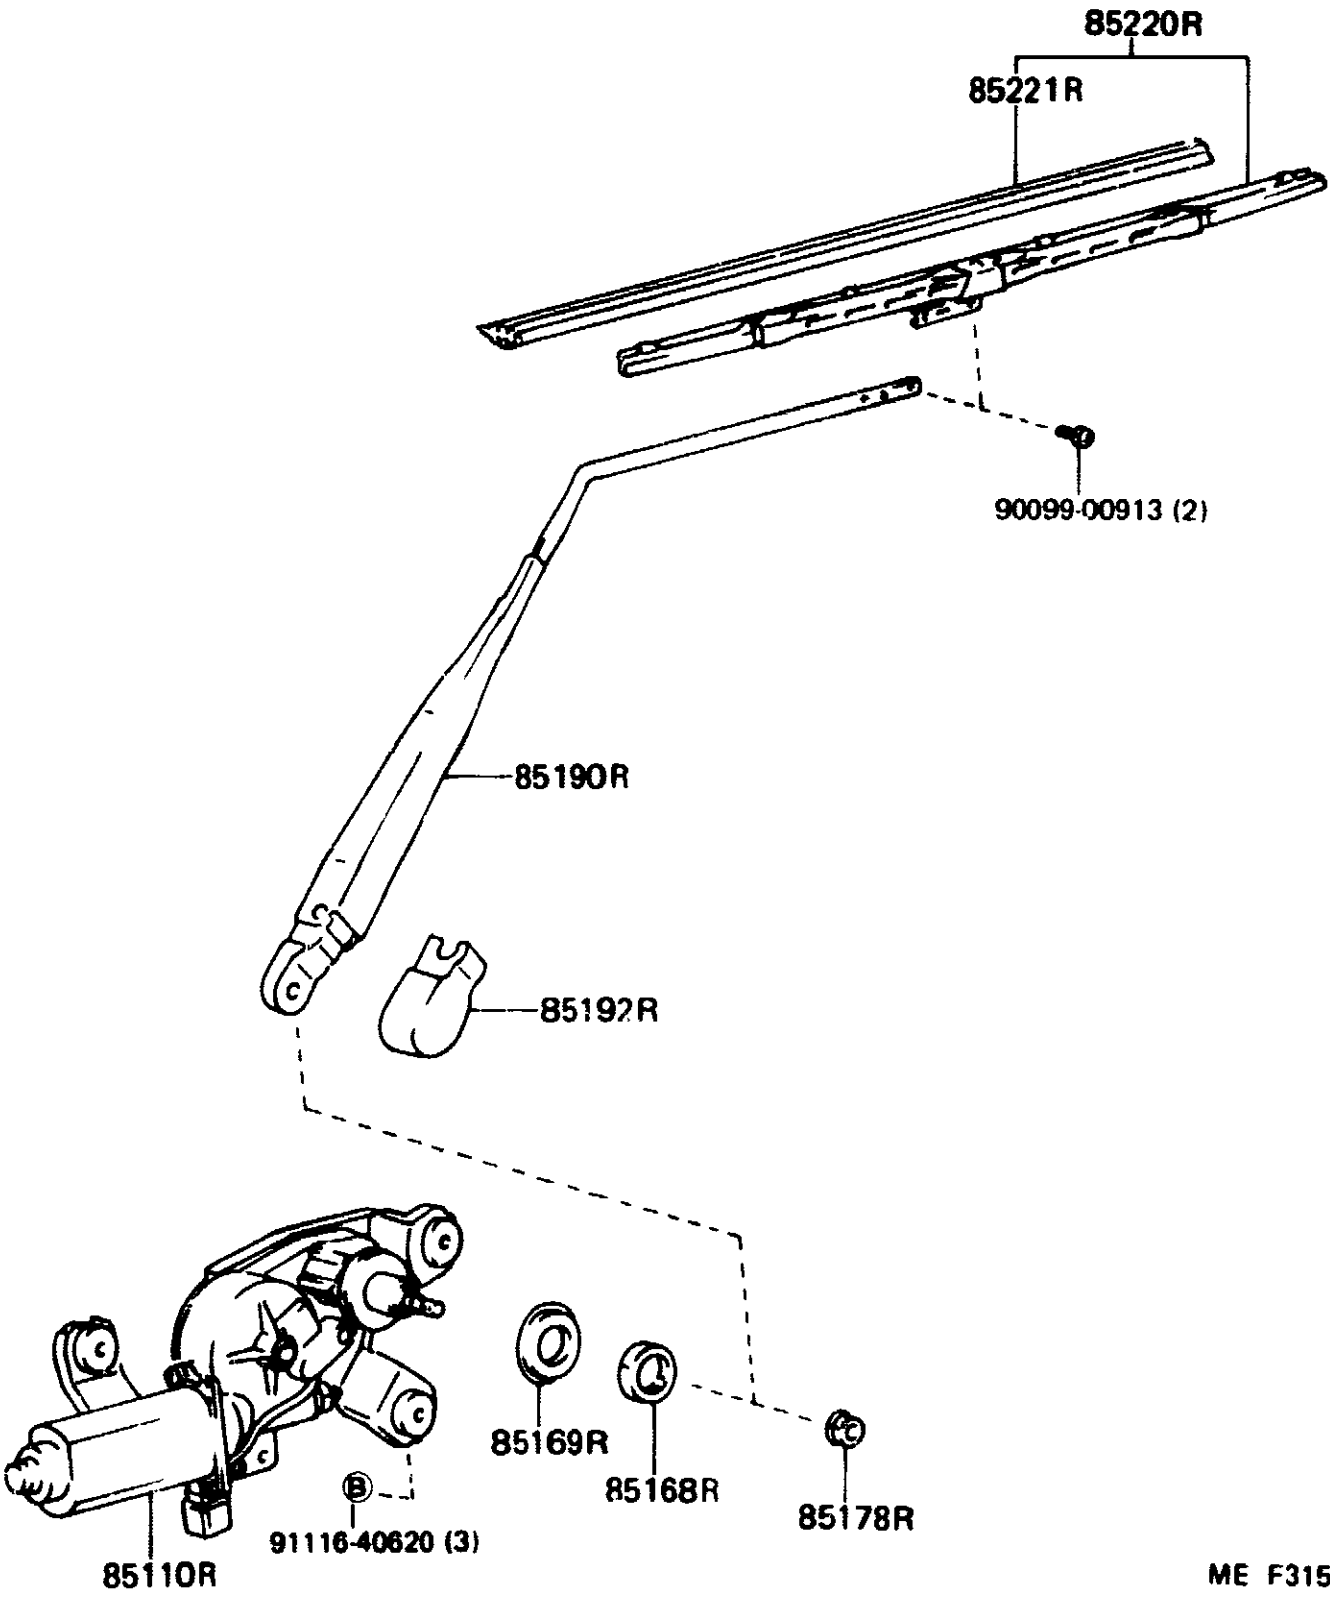

ME F315


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	85-02 REAR WIPER						
8411-8510	BJ70	1 85110R MOTOR ASSY, REAR WIPER		85110-90K05-	1	81	100
8510-	BJ70	1 85168R NUT, REAR WIPER LINK PIVOT, NO.1		85110-90K06-	1	101	
8411-	BJ70	1 85169R WASHER, REAR WIPER LINK PIVOT, NO.1		90099-05157-	1	81	
8411-	BJ70	1 85178R NUT (FOR REAR WIPER ARM SETTING)		85179-16150-	1	81	
8411-	BJ70	1 85190R ARM ASSY, REAR WIPER		90179-06070-	1	81	
8411-	BJ70	1 85192R COVER, REAR WIPER ARM		85190-90K06-	1	81	
8411-	BJ70	1 85220R BLADE ASSY, REAR WIPER		85195-95J01-	1	81	
8411-	BJ70	1 85221R BLADE, REAR WIPER		85220-22300-	1	81	
8411-	BJ70			85221-16070-	1	81	

(8411-)

(8411-)


ILLUST. NO. 10F2

ILLUST. NO. 20F2

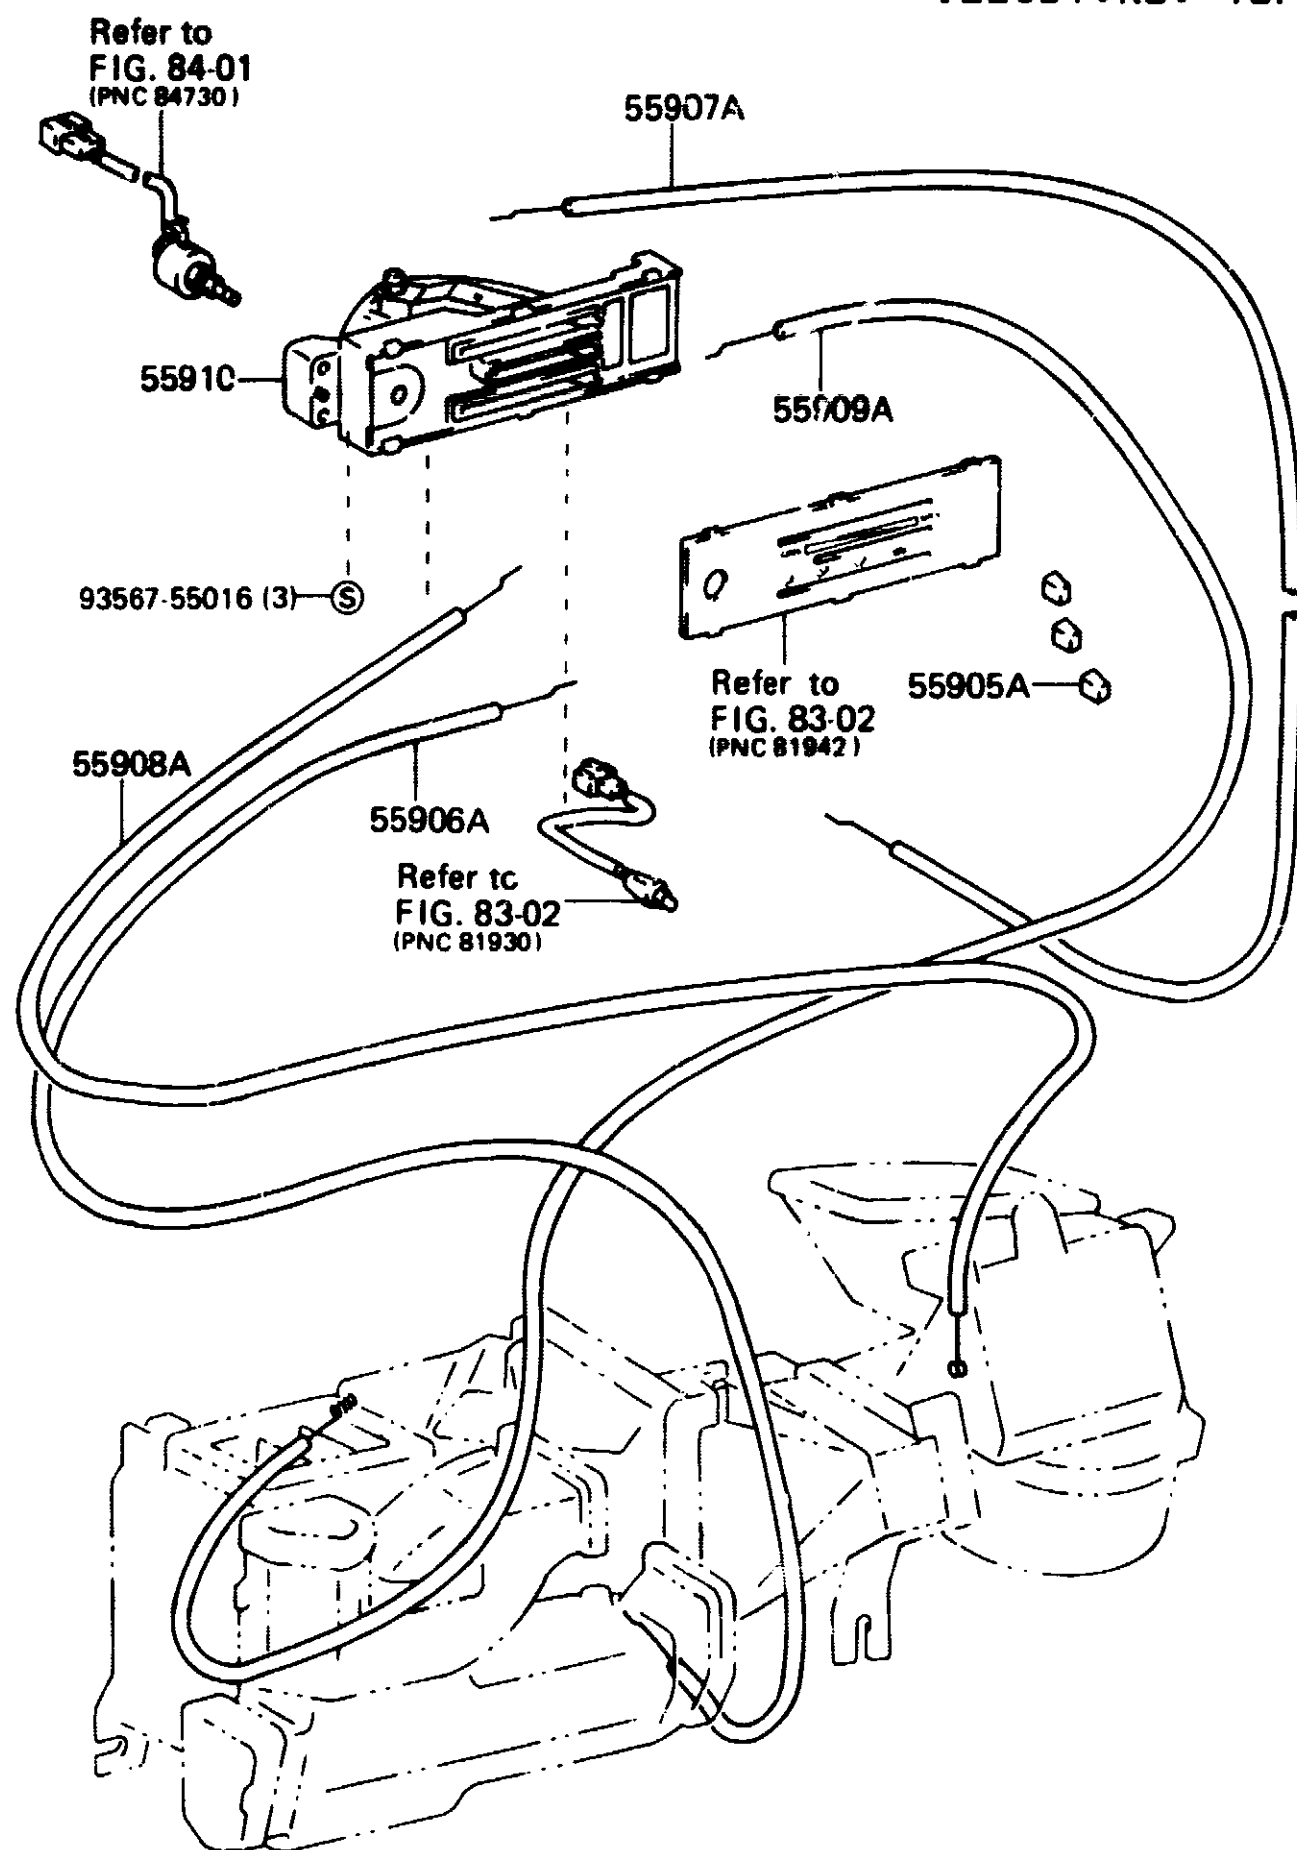

ME F419-B

MEF419B

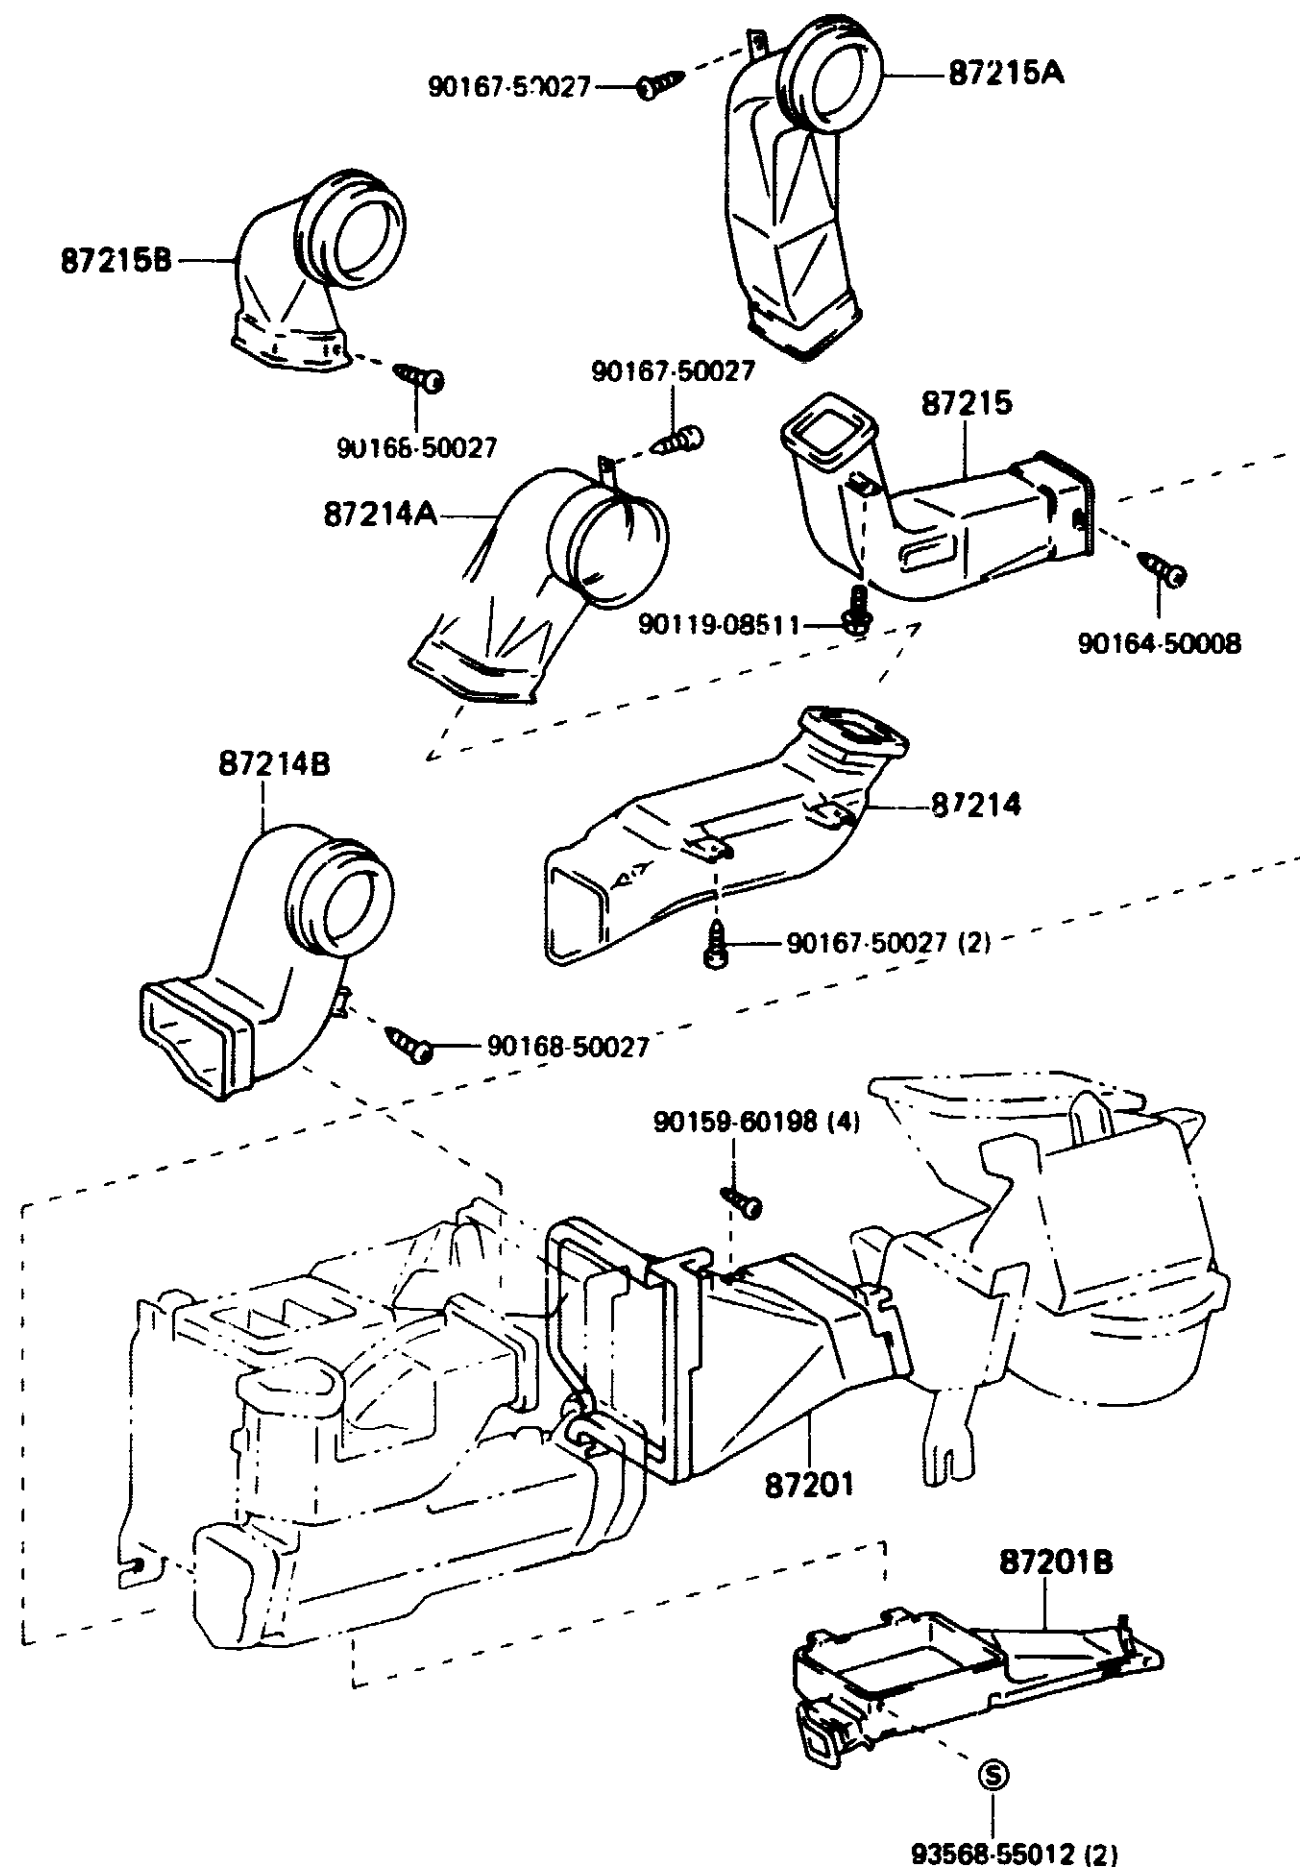

ME F420-C

MEF420C

HOSE - HUB

I 12






H74-26-0046


HUB - LEAF





PART	NAME	LOCATION
HOSE, FUEL	-----	1-B4
HOSE, FUEL (FOR FUEL EVAPORATIVE SEPARATOR)	-----	2-E7
HOSE, FUEL TANK SUB INLET	-----	2-E7
HOSE, FUEL, NO.1 (FOR FUEL TANK)	-----	2-E7
HOSE, FUEL, NO.1 (FOR MAIN TUBE, NO.1)	-----	2-E7
HOSE, FUEL, NO.1 (FOR MAIN TUBE, NO.2)	-----	2-E7
HOSE, FUEL, NO.1 (FOR MAIN TUBE, NO.3)	-----	2-F7
HOSE, FUEL, NO.2 (FOR MAIN TUBE, NO.3)	-----	2-F7
HOSE, HEATER WATER INLET, A (FROM ENGINE)	-----	2-L10
HOSE, HEATER WATER INLET, E (TO HEATER UNIT)	-----	2-L10
HOSE, HEATER WATER OUTLET, A (FROM HEATER UNIT)	-----	2-L10
HOSE, HEATER WATER OUTLET, B	-----	2-L10
HOSE, HEATER WATER OUTLET, E (TO ENGINE)	-----	2-L10
HOSE, NO.1 (FOR CLUTCH BOOSTER VACUUM)	-----	1-J5
HOSE, NO.1 (FOR FRONT AXLE BREATHER)	-----	1-H8
HOSE, NO.2 (FOR CLUTCH BOOSTER VACUUM)	-----	1-J5
HOSE, NO.2 (FOR RADIATOR RESERVE TANK)	-----	1-L2
HOSE, NO.3 (FOR CLUTCH BOOSTER VACUUM)	-----	1-J5
HOSE, OIL RESERVOIR TO PUMP	-----	1-E9
HOSE, RADIATOR, INLET	-----	1-L2
HOSE, RADIATOR, OUTLET	-----	1-L2
HOSE, REAR HEATER WATER INLET, A (FROM ENGINE)	-----	2-L10
HOSE, REAR HEATER WATER INLET, B	-----	2-L10
HOSE, REAR HEATER WATER INLET, E (TO HEATER UNIT)	-----	2-L10
HOSE, REAR HEATER WATER OUTLET, A (FROM HEATER UNIT)	-----	2-L10
HOSE, REAR HEATER WATER OUTLET, E (TO ENGINE)	-----	2-L10
HOSE, REAR WASHER (FROM JOINT TO NOZZLE)	-----	2-L9
HOSE, RETURN, NO.1	-----	1-E9
HOSE, RETURN, NO.2	-----	1-E9
HOSE, UNION TO CONNECTOR	-----	1-G10
HOSE, VACCUM NO.1 (VENTURI TO GOVERNOR)	-----	1-B5
HOSE, VACCUM NO.2 (VENTURI TO GOVERNOR)	-----	1-B5
HOSE, VACUUM PUMP OIL INLET	-----	1-M3
HOSE, VACUUM PUMP OIL OUTLET	-----	1-M3
HOSE, VACUUM RESERVOIR TO CONNECTOR	-----	1-G10
HOSE, VACUUM, NO.1 (FOR FRONT DRIVE SHIFT)	-----	1-J7
HOSE, VACUUM, NO.2 (FOR FRONT DRIVE SHIFT)	-----	1-J7
HOSE, VACUUM, NO.3 (FOR FRONT DRIVE SHIFT)	-----	1-J7
HOSE, VACUUM, NO.4 (FOR FRONT DRIVE SHIFT)	-----	1-J7
HOSE, WATER BY-PASS	-----	1-L2
HOSE, WINDSHIELD WASHER (FROM JOINT TO NOZZLE)	-----	2-K9
HOSE, WINDSHIELD WASHER (FROM MOTOR TO JOINT OR NOZZLE)	-----	2-J9
HOUSING ASSY, FRONT AXLE	-----	1-H8
HOUSING ASSY, REAR AXLE	-----	1-B8
HOUSING ASSY, STARTER DRIVE	-----	1-K3
HOUSING ASSY, STEERING GEAR	-----	1-L9
HOUSING SUB-ASSY, POWER STEERING GEAR	-----	1-J9
HOUSING SUB-ASSY, PUMP, FRONT	-----	1-B9
HOUSING SUB-ASSY, PUMP, REAR	-----	1-B9
HOUSING SUB-ASSY, SLIDING ROOF OR REMOVABLE ROOF	-----	2-L3
HOUSING SUB-ASSY, STEERING GEAR	-----	1-K9
HOUSING SUB-ASSY, VALVE	-----	1-J9
HOUSING, CLUTCH	-----	1-M5
HOUSING, GOVERNOR DIAPHRAGM	-----	1-H4
HOUSING, QUARTER PANEL END, LH	-----	2-G3
HOUSING, QUARTER PANEL END, RH	-----	2-G3
HOUSING, SHIFT LEVER	-----	1-I6
HOUSING, STEERING COLUMN	-----	1-M8
HOUSING, WATER OUTLET	-----	1-L2
HUB ASSY, FREE WHEEL	-----	1-K8
HUB, CLUTCH RELEASE BEARING	-----	1-D5
HUB, FRONT AXLE	-----	1-K8
HUB, TIMER	-----	1-L4
HUB, TRANSFER CLUTCH	-----	1-D7



PART	NAME	LOCATION
HUB, TRANSMISSION CLUTCH, NO.2	-----	1-E6
INSULATOR ASSY, COWL TOP	-----	2-F2
INSULATOR ASSY, DASH PANEL	-----	2-A2
INSULATOR, ENGINE MOUNTING, FRONT	-----	1-L1
INSULATOR, ENGINE MOUNTING, REAR NO.1	-----	1-L1
INSULATOR, EXHAUST MANIFOLD HEAT, NO.1	-----	1-B3
INSULATOR, EXHAUST MANIFOLD HEAT, NO.2	-----	1-B3
INSULATOR, FRONT FLOOR HEAT, NO.1	-----	2-M2
INSULATOR, FRONT FLOOR HEAT, NO.2	-----	2-M2
INSULATOR, HOOD	-----	2-J1
INSULATOR, MAIN MAFFLAR HEAT	-----	2-M2
JACK ASSY	-----	1-A1
JAR ASSY, REAR WASHER	-----	2-L9
JAR ASSY, WINDSHIELD WASHER	-----	2-J9
JOINT OR UNION, FRONT HEATER HOSE THROUGH OR INLET VALVE	-----	2-L10
JOINT OR UNION, WATER HOSE THROUGH	-----	2-L10
JOINT, REAR WASHER ELBOW	-----	2-L9
JOINT, REAR WASHER HOSE, NO.1	-----	2-L9
JOINT, REAR WASHER HOSE, NO.2	-----	2-L9
JOINT, ROOF DRIP CHANNEL	-----	2-F3
JOINT, SUN ROOF OPENING TRIM	-----	2-D4
JOINT, WINDSHIELD WASHER ELBOW, NO.1	-----	2-J9
JOINT, WINDSHIELD WASHER HOSE	-----	2-J9
JOINT, WINDSHIELD WASHER HOSE, NO.1	-----	2-J9
KEY (FOR CRANKSHAFT TIMING GEAR)	-----	1-B2
KEY (FOR NO.3 LEVER)	-----	1-H4
KEY (FOR SPRAIN SHAFT)	-----	1-E4
KEY, BLANK	-----	2-H5
KEY, CRANKSHAFT (FOR CRANKSHAFT PULLEY SET)	-----	1-B2
KEY, SYNCHROMESH SHIFTING (FOR NO.3 CLUTCH HUB)	-----	1-E6
KEY, SYNCHROMESH SHIFTING, NO.2	-----	1-E6
KEY, VALVE STOPPER	-----	1-G10
KEY, VALVE STOPPER (FOR CLUTCH BOOSTER)	-----	1-J5
KEY, VANE PUMP PULLEY	-----	1-B9
KEY, WOODRUFF (FOR REVERSE IDLER GEAR SHAFT)	-----	1-F6
KEY, WOODRUFF (FOR TIMING GEAR)	-----	1-C2
KNOB AND ELEMENT ASSY, CIGARETTE LIGHTER	-----	2-E9
KNOB SUB-ASSY, SHIFT LEVER	-----	1-F7
KNOB SUB-ASSY, SHIFT LEVER (FOR FLOOR SHIFT)	-----	1-J6
KNOB, CLOCK	-----	2-L8
KNOB, FUEL TANK CAP	-----	2-F7
KNOB, HEATER	-----	2-H10
KNOB, HEATER BLOWER SWITCH	-----	2-D9
KNOB, HEATER CONTROL	-----	2-J10
KNOB, LIGHT CONTROL RHEOSTAT	-----	2-D9
KNOB, PARKING BRAKE RELEASE ROD	-----	1-A10
KNOB, THROTTLE CABLE	-----	2-G7
KNOB, TRIP COUNTER	-----	2-K8
KNUCKLE, STEERING, LH	-----	1-E11
KNUCKLE, STEERING, RH	-----	1-E11
LAMP ASSY, FRONT TURN SIGNAL, LH	-----	2-J7
LAMP ASSY, FRONT TURN SIGNAL, RH	-----	2-J7
LAMP ASSY, HEATER CONTROL INDICATOR, NO.1	-----	2-M8
LAMP ASSY, INDICATOR	-----	2-M8
LAMP ASSY, LICENSE PLATE	-----	2-A8
LAMP ASSY, MAP	-----	2-C8
LAMP ASSY, REAR COMBINATION, LH	-----	2-M7
LAMP ASSY, REAR COMBINATION, RH	-----	2-M7
LAMP ASSY, REAR SIDE MARKER, LH	-----	2-B8
LAMP ASSY, REAR SIDE MARKER, RH	-----	2-B8
LAMP ASSY, ROOM, NO.1	-----	2-C8
LAMP ASSY, SIDE TURN SIGNAL, LH	-----	2-L7
LAMP ASSY, SIDE TURN SIGNAL, RH	-----	2-L7
LEAF, FRONT SPRING, NO.1	-----	1-H11

PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION	PART NUMBER	LOCATION
90502-29001-	1-J6	90562-18151-	1-H5	90937-01198-	1-K7	90999-70067-	1-F11	96411-12800-	1-H1		
90506-09035-	2-A6	-30002-	1-J9	-01199-	1-K7	-73088-	1-B2	-13000-	1-H1		
-12031-	1-J10	-31002-	1-J9	-01200-	1-K7	91121-51070-	1-C10	-13500-	1-H1		
-16053-	2-M5	-32002-	1-J9	90942-01007-	2-D1	1-F5	-41200-	1-F1			
-18031-	1-J10	-48001-	1-J9	-01047-	1-E8	91131-50828-	1-F5	1-G6			
-20033-	1-K10	-67001-	1-J9	-02052-	1-D8	-50835-	2-G7	-41400-	1-I1		
-23009-	1-M8	90564-70001-	1-C7	-02053-	1-J8	91611-60610-	1-M6	-41800-	1-G6		
-26011-	1-J10	-70002-	1-C7	-03079-	1-E8	-60828-	1-K5	-42500-	1-F1		
-26014-	1-J10	-70003-	1-C7	-03080-	1-E8	-60855-	1-D2	-42800-	1-F1		
90507-12022-	1-C10	-70004-	1-C7	-03081-	1-E8	-60865-	1-D2	1-H1			
-14001-	1-A9	-70005-	1-C7	-03082-	1-E8	-61020-	1-M6	-43000-	1-H1		
-14015-	1-F5	-70006-	1-C7	-03083-	1-E8	91651-60830-	1-M6	-43500-	1-H1		
-16007-	2-A6	-70007-	1-C7	-03084-	1-E8	-61030-	1-L6	96431-53828-	1-H1		
90508-16079-	2-M5	-70008-	1-C7	-03085-	1-E8	-61040-	1-L6	96432-23814-	1-H1		
-16080-	2-M5	-70009-	1-C7	-03086-	1-E8	92132-60825-	1-B3	96710-01008-	1-H4		
-29017-	2-G7	-70010-	1-C7	-03107-	1-E8	94115-71200-	1-J10	96711-19010-	1-H6		
90520-07001-	1-H6	-70011-	1-C7	-05009-	1-E8	94183-60800-	1-J11	-19010-	1-H7		
-08098-	1-H6	-70012-	1-C7	90945-02034-	1-M8	94184-61200-	1-M9	1-J9			
-14002-	1-I6	-70013-	1-C7	90948-01003-	1-I11	95161-10416-	1-B2	-19013-	1-C9		
-15001-	1-C9	90910-02046-	1-F1	-02002-	1-I11	-10519-	1-B2	-19014-	1-C9		
-17042-	1-M8	-09070-	1-I1	-02015-	1-J11	1-C2	-19016-	1-B9			
-27091-	1-I8	-09072-	1-H1	-02017-	1-I11	95332-04020-	1-B4	-24057-	1-M8		
-28036-	1-I8	90913-02051-	1-C2	-02032-	1-J11	-06010-	2-E7	96740-02063-	1-M3		
-29024-	1-L7	-03019-	1-D2	-02033-	1-D11	-06020-	2-E7	96940-33005-	1-B11		
-29025-	1-L7	-05021-	1-D2	-03011-	1-I11	-06030-	2-E7	1-C11			
-29026-	1-L7	90915-01015-	1-I1		1-M11	-06040-	1-H8	-33505-	1-C11		
-29027-	1-L7	90916-03059-	1-L2	-03015-	1-I11	-06060-	1-B8	-33605-	1-C11		
-30214-	1-E6	90917-06012-	1-D3		1-M11	1-H8	-08020-	-39855-	1-B11		
-30216-	1-E6	-10020-	2-F7	90949-01323-	1-H8	2-E7	97600-30307-	1-C7			
-30218-	1-E6	90923-02072-	1-M3	90950-01155-	2-D2	2-F7	99132-11075-	2-A8			
-31001-	1-J8	-02073-	1-M3	90980-05022-	2-A10	2-E7	-11270-	2-J7			
-33107-	1-D7	-05014-	1-H2	-05052-	2-A10	S 95333-06022-	2-E7	2-M7			
-33110-	1-D7	90930-03058-	1-L9	-05067-	2-A10	S -06040-	1-H8	-12034-	2-K8		
-36015-	1-D6	-03075-	1-M6	-05086-	2-A10	S -06060-	1-B8	2-M8			
-36016-	1-D6	-03097-	1-C8	-05106-	2-A10	S -08020-	2-E7	-12080-	2-J7		
-36250-	1-E6		1-H8	-05110-	2-A10	S 2-F7	-12100-	2-C8			
-36251-	1-E6	90931-01017-	1-F5	90981-01046-	2-I7	95411-19930-	1-J7	-21270-	2-M7		
-36252-	1-E6	-01020-	1-F5	-11020-	2-B8	-19995-	1-J7	99134-12030-	2-K8		
-36253-	1-E6	90937-01117-	1-D8		2-L7	95441-09190-	1-G10	2-M8			
-36254-	1-E6	-01116-	1-C8	-12005-	2-C8	-09260-	1-J7	2-C8			
-36255-	1-E6	-01119-	1-D8	-12015-	2-B8	-09300-	1-J7	99142-87175-	2-E8		
90521-01002-	1-M8	-01120-	1-D8	-16014-	2-J7	-09420-	1-J5	99343-01195-	1-A3		
-34002-	1-A2	-01121-	1-D8		2-M7	95444-09240-	1-G10	-11510-	1-A3		
-44002-	1-B9	-01122-	1-D8	-16015-	2-M7	96111-10490-	1-L2	99556-20055-	2-L10		
	1-J9	-01132-	1-K7	-16016-	2-A8	-10510-	1-M2	-20080-	2-L10		
-75023-	1-D7	-01136-	1-K7		2-J7	-10560-	1-M2	-20100-	2-L10		
90522-40043-	1-H10	-01140-	1-K7	-16019-	2-C8	-10710-	1-F3	-30055-	2-L10		
-48044-	1-H10	-01147-	1-K7					-30100-	2-L10		
90523-15025-	1-H6	-01148-	1-K7	90982-05031-	2-E8	-10800-	1-F3	99911-10250-	1-B1		
90530-06001-	2-A3	-01149-	1-K7	-08233-	2-I8	-10830-	1-F3	-11200-	1-B1		
90541-03005-	2-D2	-01150-	1-K7	-08249-	2-I3	96132-30600-	1-B8	-20250-	1-B1		
-03015-	2-D2	-01151-	1-K7	-09002-	2-C9		1-H8	S 99913-11500-	1-A1		
-05018-	2-F7	-01152-	1-K7	-09003-	2-C9	96151-01700-	1-C9	-12000-	1-A1		
-06008-	1-C10	-01153-	1-K7	-09004-	2-C9	-02000-	1-E10	S 99914-10810-	1-A1		
	1-F5	-01154-	1-K7	-09005-	2-C9	96152-00300-	1-M8	-11012-	1-A1		
	2-G7	-01155-	1-K7	90987-01003-	2-E9	96160-00500-	1-K10	-11214-	1-A1		
-09038-	2-G4	-01156-	1-K7	-01004-	2-E9	-01000-	1-J5	-11417-	1-A1		
90560-10406-	1-G7	-01157-	1-K7	-02004-	2-E9	96411-11200-	1-F1	99915-10700-	1-A1		
-12233-	2-E1	-01158-	1-K7	-02005-	2-E9	-11400-	1-I1				
-34001-	1-D7	-01184-	1-K7	-02006-	2-E9	-11600-	1-G6				
-35008-	1-C7	-01191-	1-K7	-03001-	2-E9		1-M6				
-36001-	1-D6	-01192-	1-K7	-03002-	2-E9	-11800-	1-G6				
-38003-	1-D7	-01193-	1-K7	90997-00085-	2-H3	-12500-	1-F1				
90561-04010-	1-G9	-01194-	1-K7	-00106-	2-H5	-12800-	1-F1				

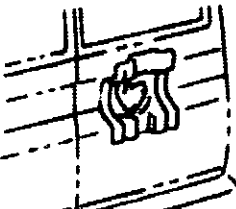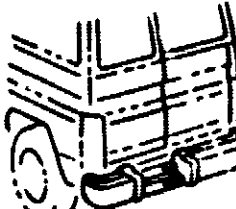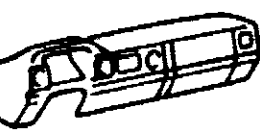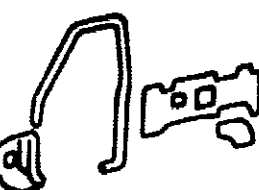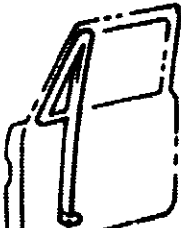2-D1 (51-53) 1	2-H1 (52-53) 2	2-B2 (55-51) 3	2-A3 (58-54) 4	2-C3 (58-55) 5	2-B4 (64-51) 6	2-J4 (67-52) 7
						
Spare Wheel Carrier	Rear Bumper & Stay	Instrument Panel	Floor Mat & Pad	Console Box	Inside Trim Board	Ventilator Window

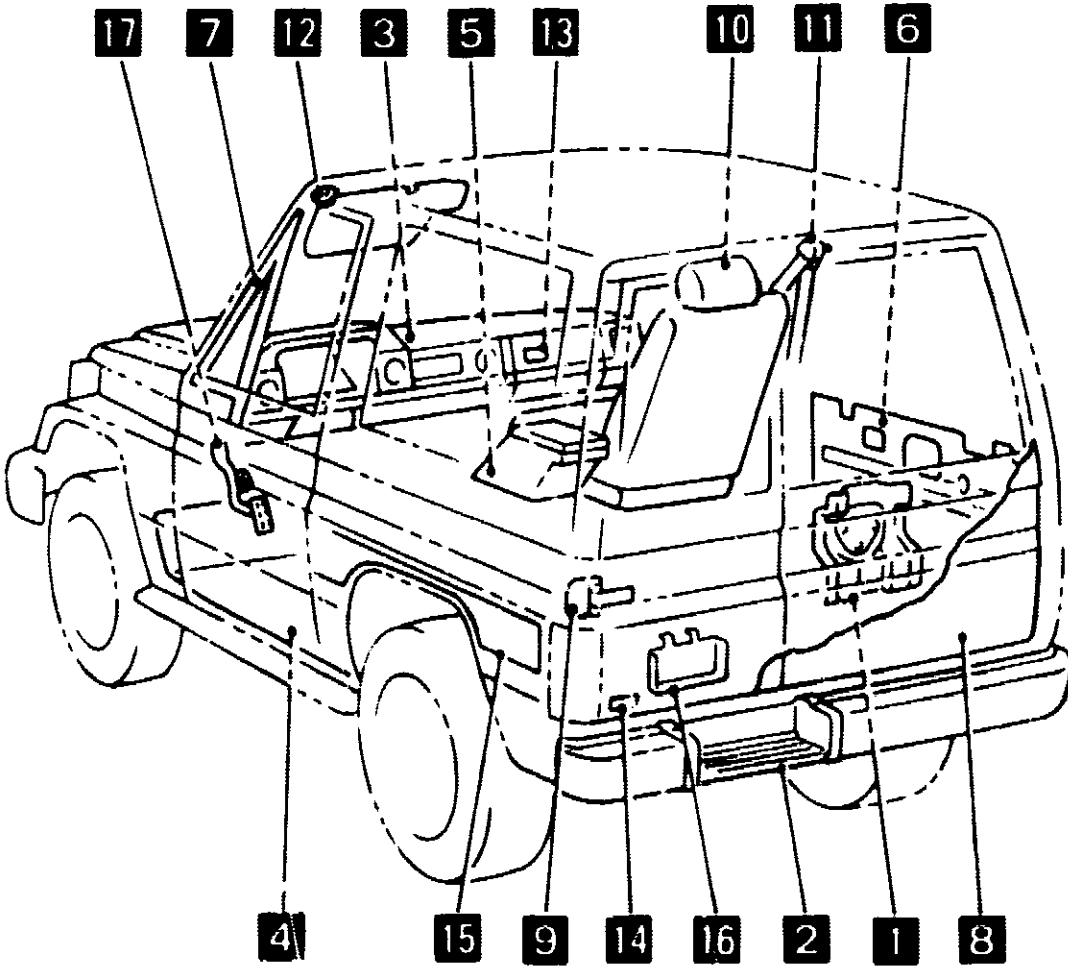BODY GROUP (2/2)						
						

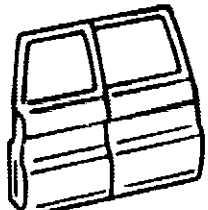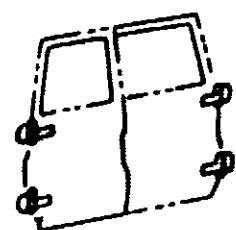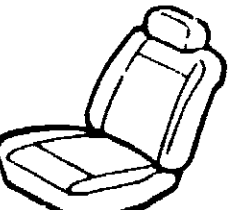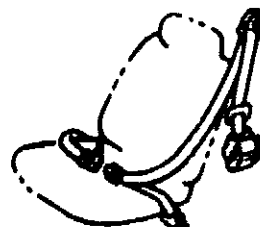
2-C5 (67-61) 8	2-F5 (67-62) 9	2-J5 (71-51) 10	2-C6 (71-52) 11
			
Back Door Panel & Glass	Back Door Lock & Hinge	Seat & Seat Track	Seat Belt

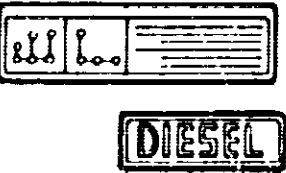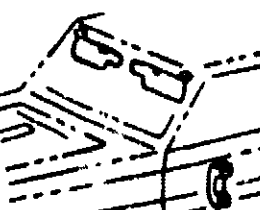2-G7 (78-51) 12	2-97 (75-54) 16	2-M6 (75-53) 15	2-J6 (75-51) 14	2-H6 (74-55) 13	2-E6 (74-51) 12
					
Accelerator Link	Tool Box & License Bracket	Body Stripes	Emblem & Name Plate	Caution Plate	Armrest & Visor

2-J1

GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
	FIG. 53-53 HOOD & FRONT FENDER						
	+-----+ 53301 HOOD SUB-ASSY +-----+						
C 8411-8507	BJ70			# 53301-90K05- (53301-90K13-	1	81	
C 8507-8608	BJ70			# 53301-90K13- (53301-90K27-	1		140
8608-	BJ70			53301-90K27-	1	141	
	+-----+ 53303 PANEL SUB-ASSY, HOOD SIDE, RH +-----+						
8411-	BJ70			53303-90K05-	1	81	
	+-----+ 53304 PANEL SUB-ASSY, HOOD SIDE, LH +-----+						
8411-8510	BJ70			53304-90K05-	1	81	100
8411-8608	BJ70	W/RADIO		53304-90K06-	1	81	140
8608-	BJ70			53304-90K14-	1	141	
	+-----+ 53341B INSULATOR, HOOD +-----+						
8411-8510	BJ70			# 53341-90K01- (53341-90K05-	1	81	100
8510-	BJ70			53341-90K05-	1	101	
	+-----+ 53341C CLIP (FOR HOOD INSULATOR) +-----+						
C 8411-8702	BJ70			90467-09006-	16	81	
C 8702-	BJ70			90467-09014-	16		
	+-----+ 53381 SEAL, HOOD TO RADIATOR SUPPORT +-----+						
8411-	BJ70			53381-90K01-	1	81	
	+-----+ 53381A CLIP (FOR HOOD TO RADIATOR SUPPORT SEAL) +-----+						
8411-	BJ70			90467-08011-	6	81	
	+-----+ 53382 BUMPER, HOOD, FRONT +-----+						
8411-8511	BJ70			# 53382-95189- (53382-90K00-	2	81	
8511-	BJ70			53382-90K00-	2		
	+-----+ 53386 BUMPER, HOOD, REAR +-----+						
8411-	BJ70			53392-30062-	4	81	

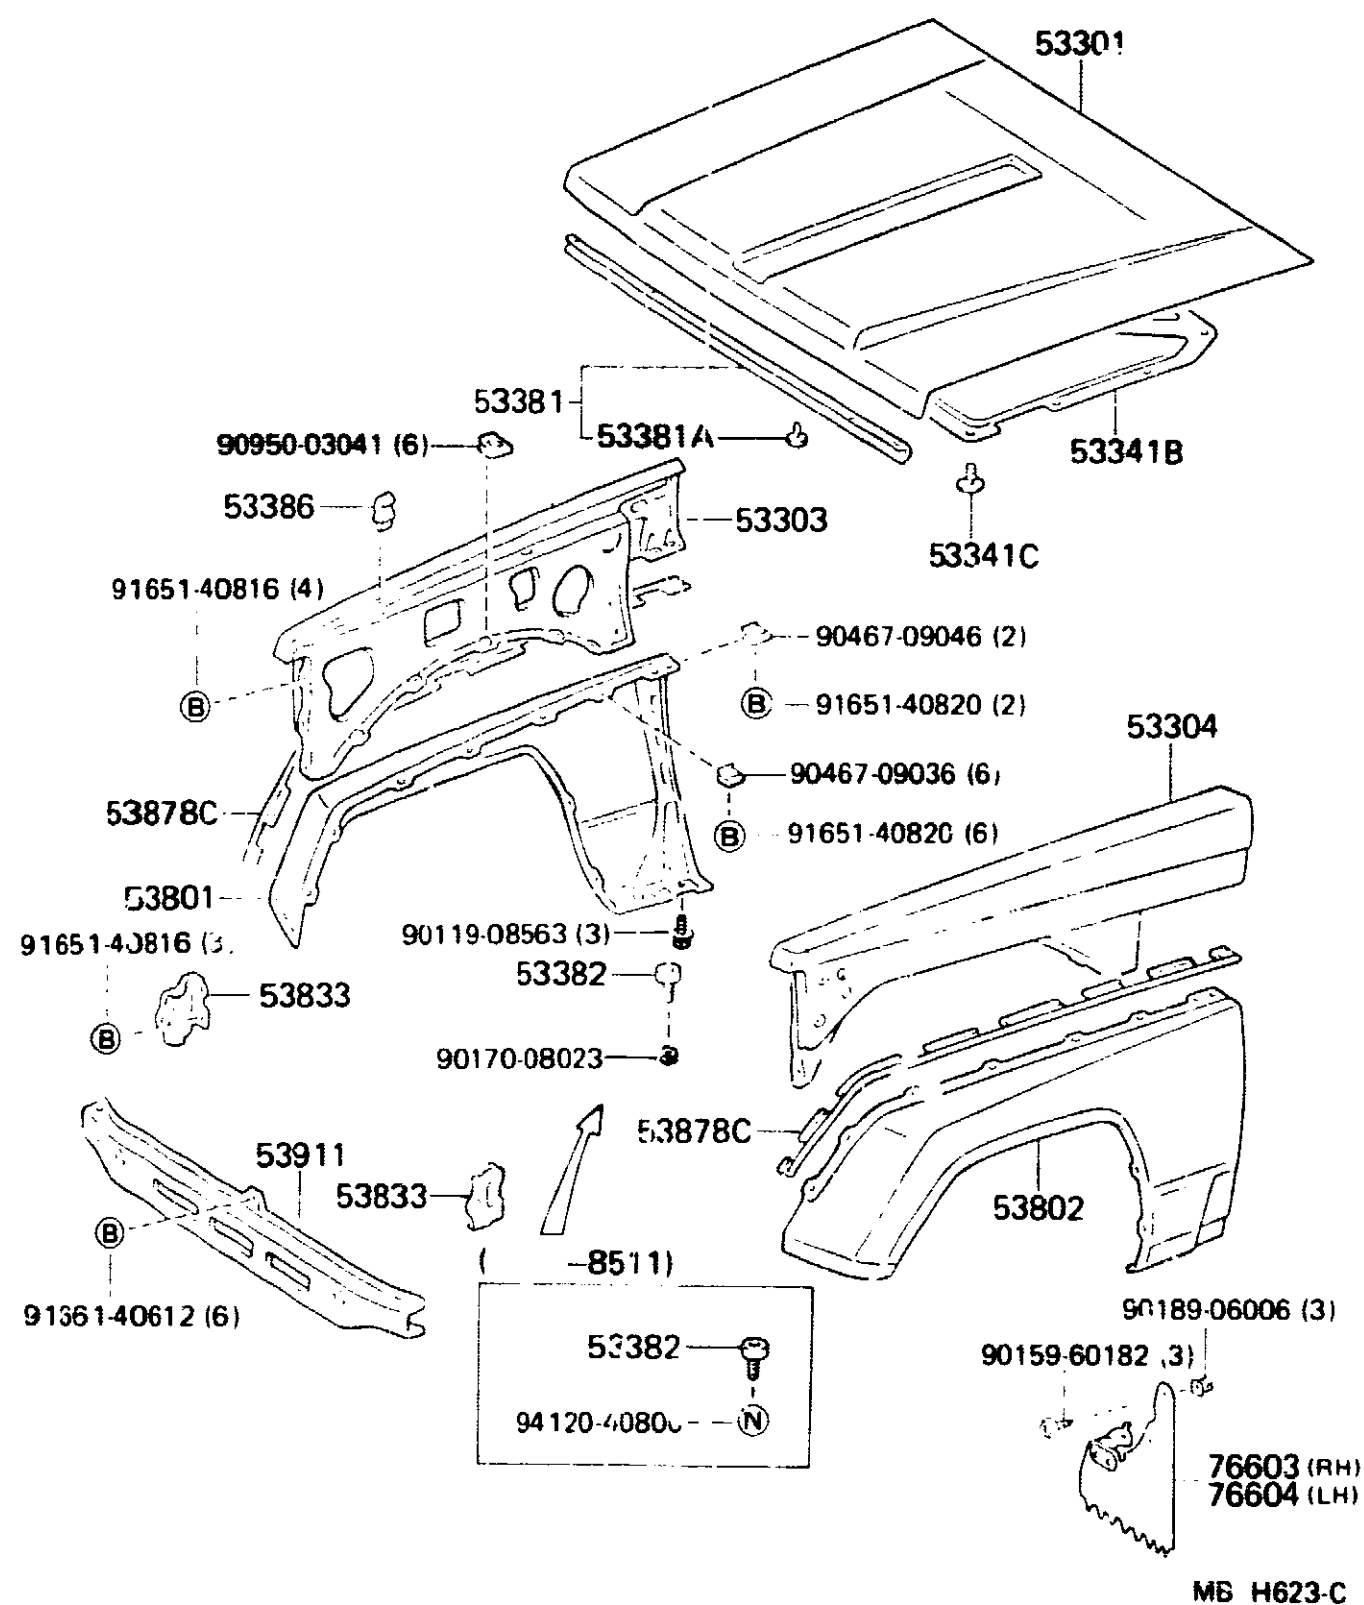

MBH623C

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	61-52 SIDE WINDOW						
8411-	62249	PLATE, SIDE WINDOW		62249-95700-	4	81	
	BJ70						
8411-	62269	FILM, SIDE WINDOW FRAME		62269-90K01-	12	81	
	BJ70						
8411-	62601J	WEATHERSTRIP, SIDE WINDOW CENTER, NO.1					
	BJ70	RH		67045-90K00-	1	81	
8411-	BJ70	LH		67046-90K00-	1	81	
8411-	62610	SASH ASSY, SIDE WINDOW OUTER, NO.1 (FOR SLIDE TYPE)					
	BJ70	RH		62705-90K00-	1	81	
8411-	BJ70	LH		62706-90K00-	1	81	
8411-8608	62651	GLASS, SIDE WINDOW, NO.1, FRONT (FOR SLIDE TYPE)					
	BJ70	RH, XTEM, T=4.0		62711-90K02-	1	81	140
8411-8608	BJ70	LH, XTEM, T=4.0		62712-90K02-	1	81	140
8411-	BJ70	RH, XTT, T=4.0		62711-90K03-	1	81	
8411-	BJ70	LH, XTT, T=4.0		62712-90K03-	1	81	
8411-8608	62651A	GLASS, SIDE WINDOW, NO.1, REAR (FOR SLIDE TYPE)					
	BJ70	RH, XTEM, T=4.0		62713-90K00-	1	81	140
8411-8608	BJ70	LH, XTEM, T=4.0		62714-90K00-	1	81	140
411-	BJ70	RH, XTT, T=4.0		62713-90K01-	1	81	
8411-	BJ70	LH, XTT, T=4.0		62714-90K01-	1	81	
8411-	62691	LOCK, SIDE WINDOW, NO.1 GLASS (FOR SLIDE TYPE)					
	BJ70			62910-95703-	4	81	
8411-	62691A	PACKING, SIDE WINDOW LOCK, NO.1					
	BJ70			62792-95A00-	4	81	


*TEM=Tempered

*TT=Tinted Tempered

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-8512	62691B	RETAINER, SIDE WINDOW LOCK, NO.1					
	BJ70			62793-95J00-	4	81	
8512-	BJ70			62793-95704-	4		
8411-	62729A	PAD, WINDOW CENTER SASH					
	BJ70			62729-90K00-	2	81	
8411-	62761	RUN, SIDE WINDOW, NO.1 (FOR SLIDE TYPE)					
	BJ70	RH		62755-90K00-	1	81	
8411-	BJ70	LH		62756-90K00-	1	81	
8411-	62761A	WEATHERSTRIP, SIDE WINDOW, NO.1 (FOR SLIDE TYPE)					
	BJ70	RH		62741-90K01-	1	81	
8411-	BJ70	LH		62742-90K01-	1	81	
8411-	62884A	GUARD, QUARTER WINDOW, RH					
	BJ70			62884-90K01-	1	81	
8411-	62885A	GUARD, QUARTER WINDOW, LH					
	BJ70			62884-90K01-	1	81	

(8411-)

GENUINE TOYOTA PARTS

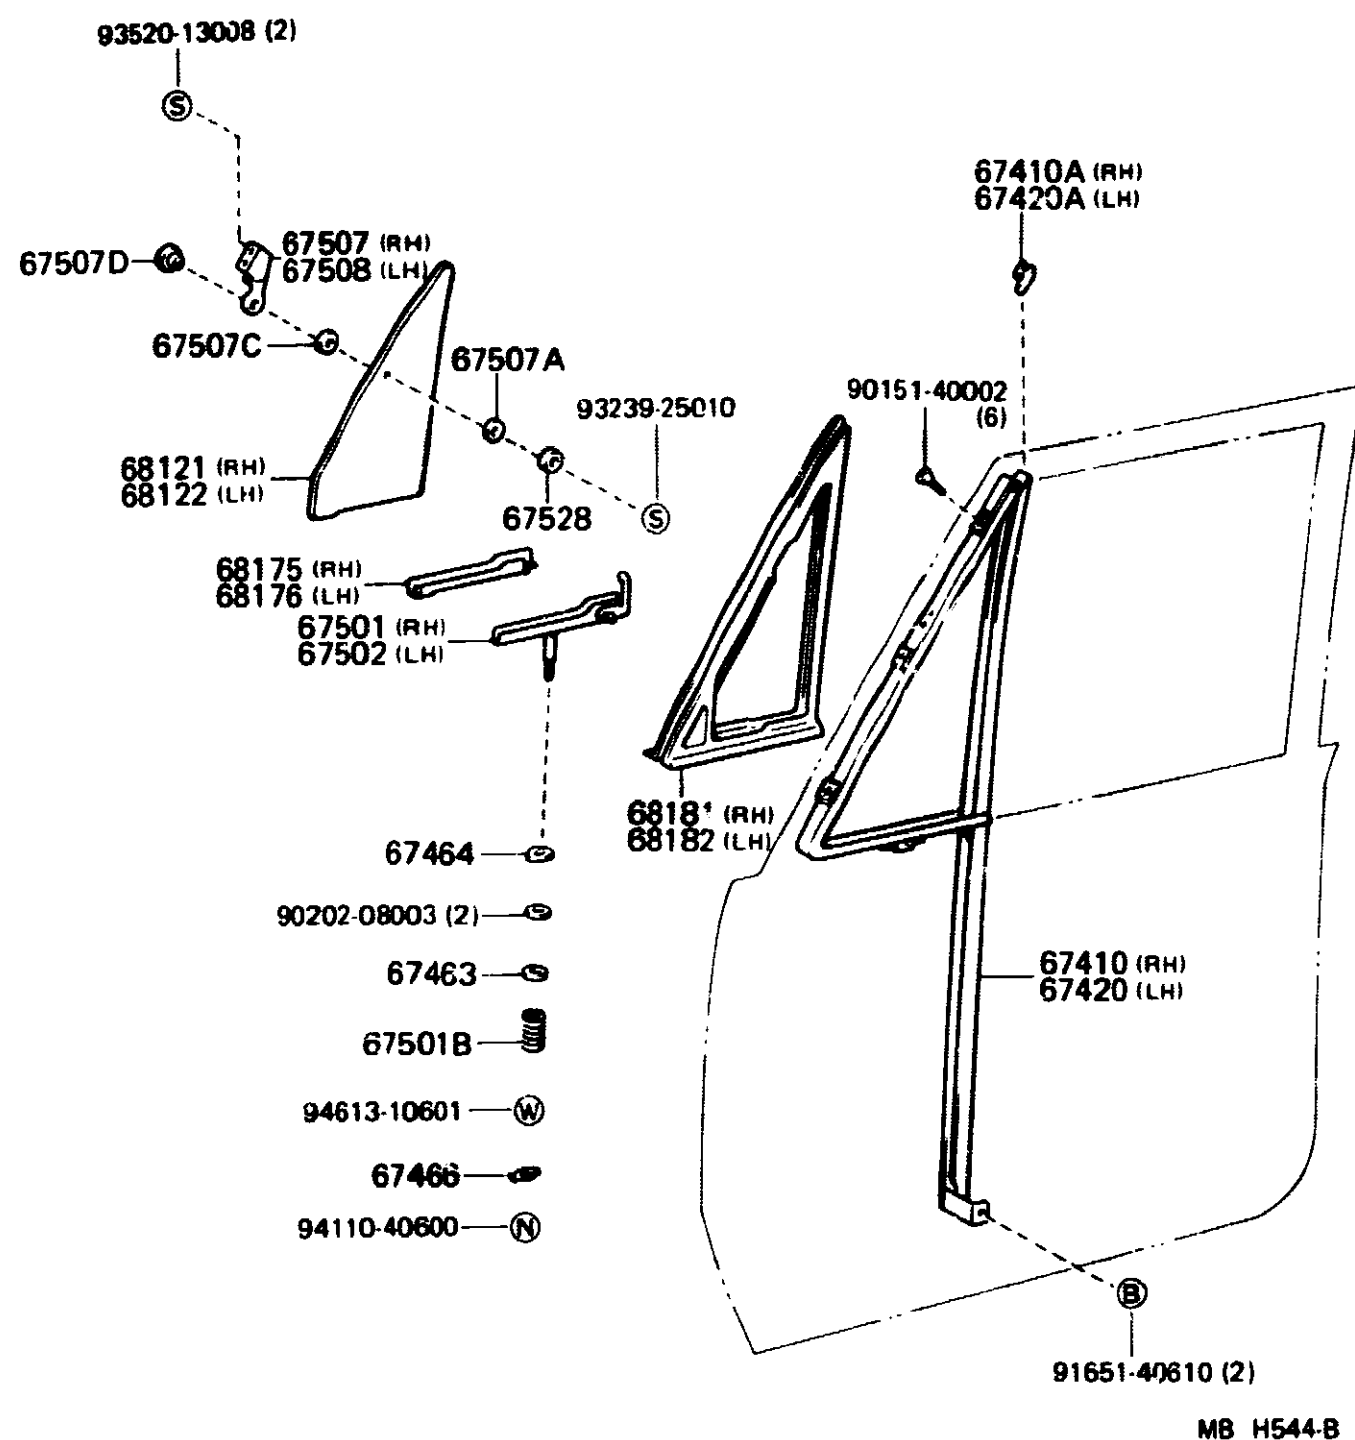


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	67-52 FRONT DOOR VENTILATOR WINDOW						
8411-	BJ70	BAR ASSY, FRONT DOOR WINDOW DIVISION, RH		67503-90K00-	1	81	
8411-	BJ70	SEAL, FRONT DOOR DIVISION BAR, RH NO.1		67533-90K00-	1	81	
8411-	BJ70	BAR ASSY, FRONT DOOR WINDOW DIVISION, LH		67504-90K00-	1	81	
8411-	BJ70	SEAL, FRONT DOOR DIVISION BAR, LH NO.1		67534-90K00-	1	81	
8411-	BJ70	WASHER, REVOLVING, DOOR VENTILATING WINDOW LOWER PIVOT		67463-20011-	2	81	
8411-	BJ70	STOPPER, DOOR VENTILATING WINDOW OPENING		67577-90A00-	2	81	
8411-	BJ70	WASHER, LOCK (FOR VENT WINDOW GLASS FRAME)		67466-89101-	2	81	
8411-	BJ70	FRAME SUB-ASSY, VENT WINDOW GLASS, RH		67505-90K00-	1	81	
8411-	BJ70	SPRING, COMPRESSION (FOR VENT WINDOW GLASS FRAME)		90501-40205-	2	81	
8411-	BJ70	FRAME SUB-ASSY, VENT WINDOW GLASS, LH		67506-90K00-	1	81	
8411-	BJ70	PIVOT SUB-ASSY, VENT WINDOW, UPPER RH		67507-90K00-	1	81	
8411-	BJ70	GASKET, VENT WINDOW PIVOT, UPPER NO.1		90430-07001-	2	81	

(8411-)

ILLUST. NO. 10F2



FR Seat

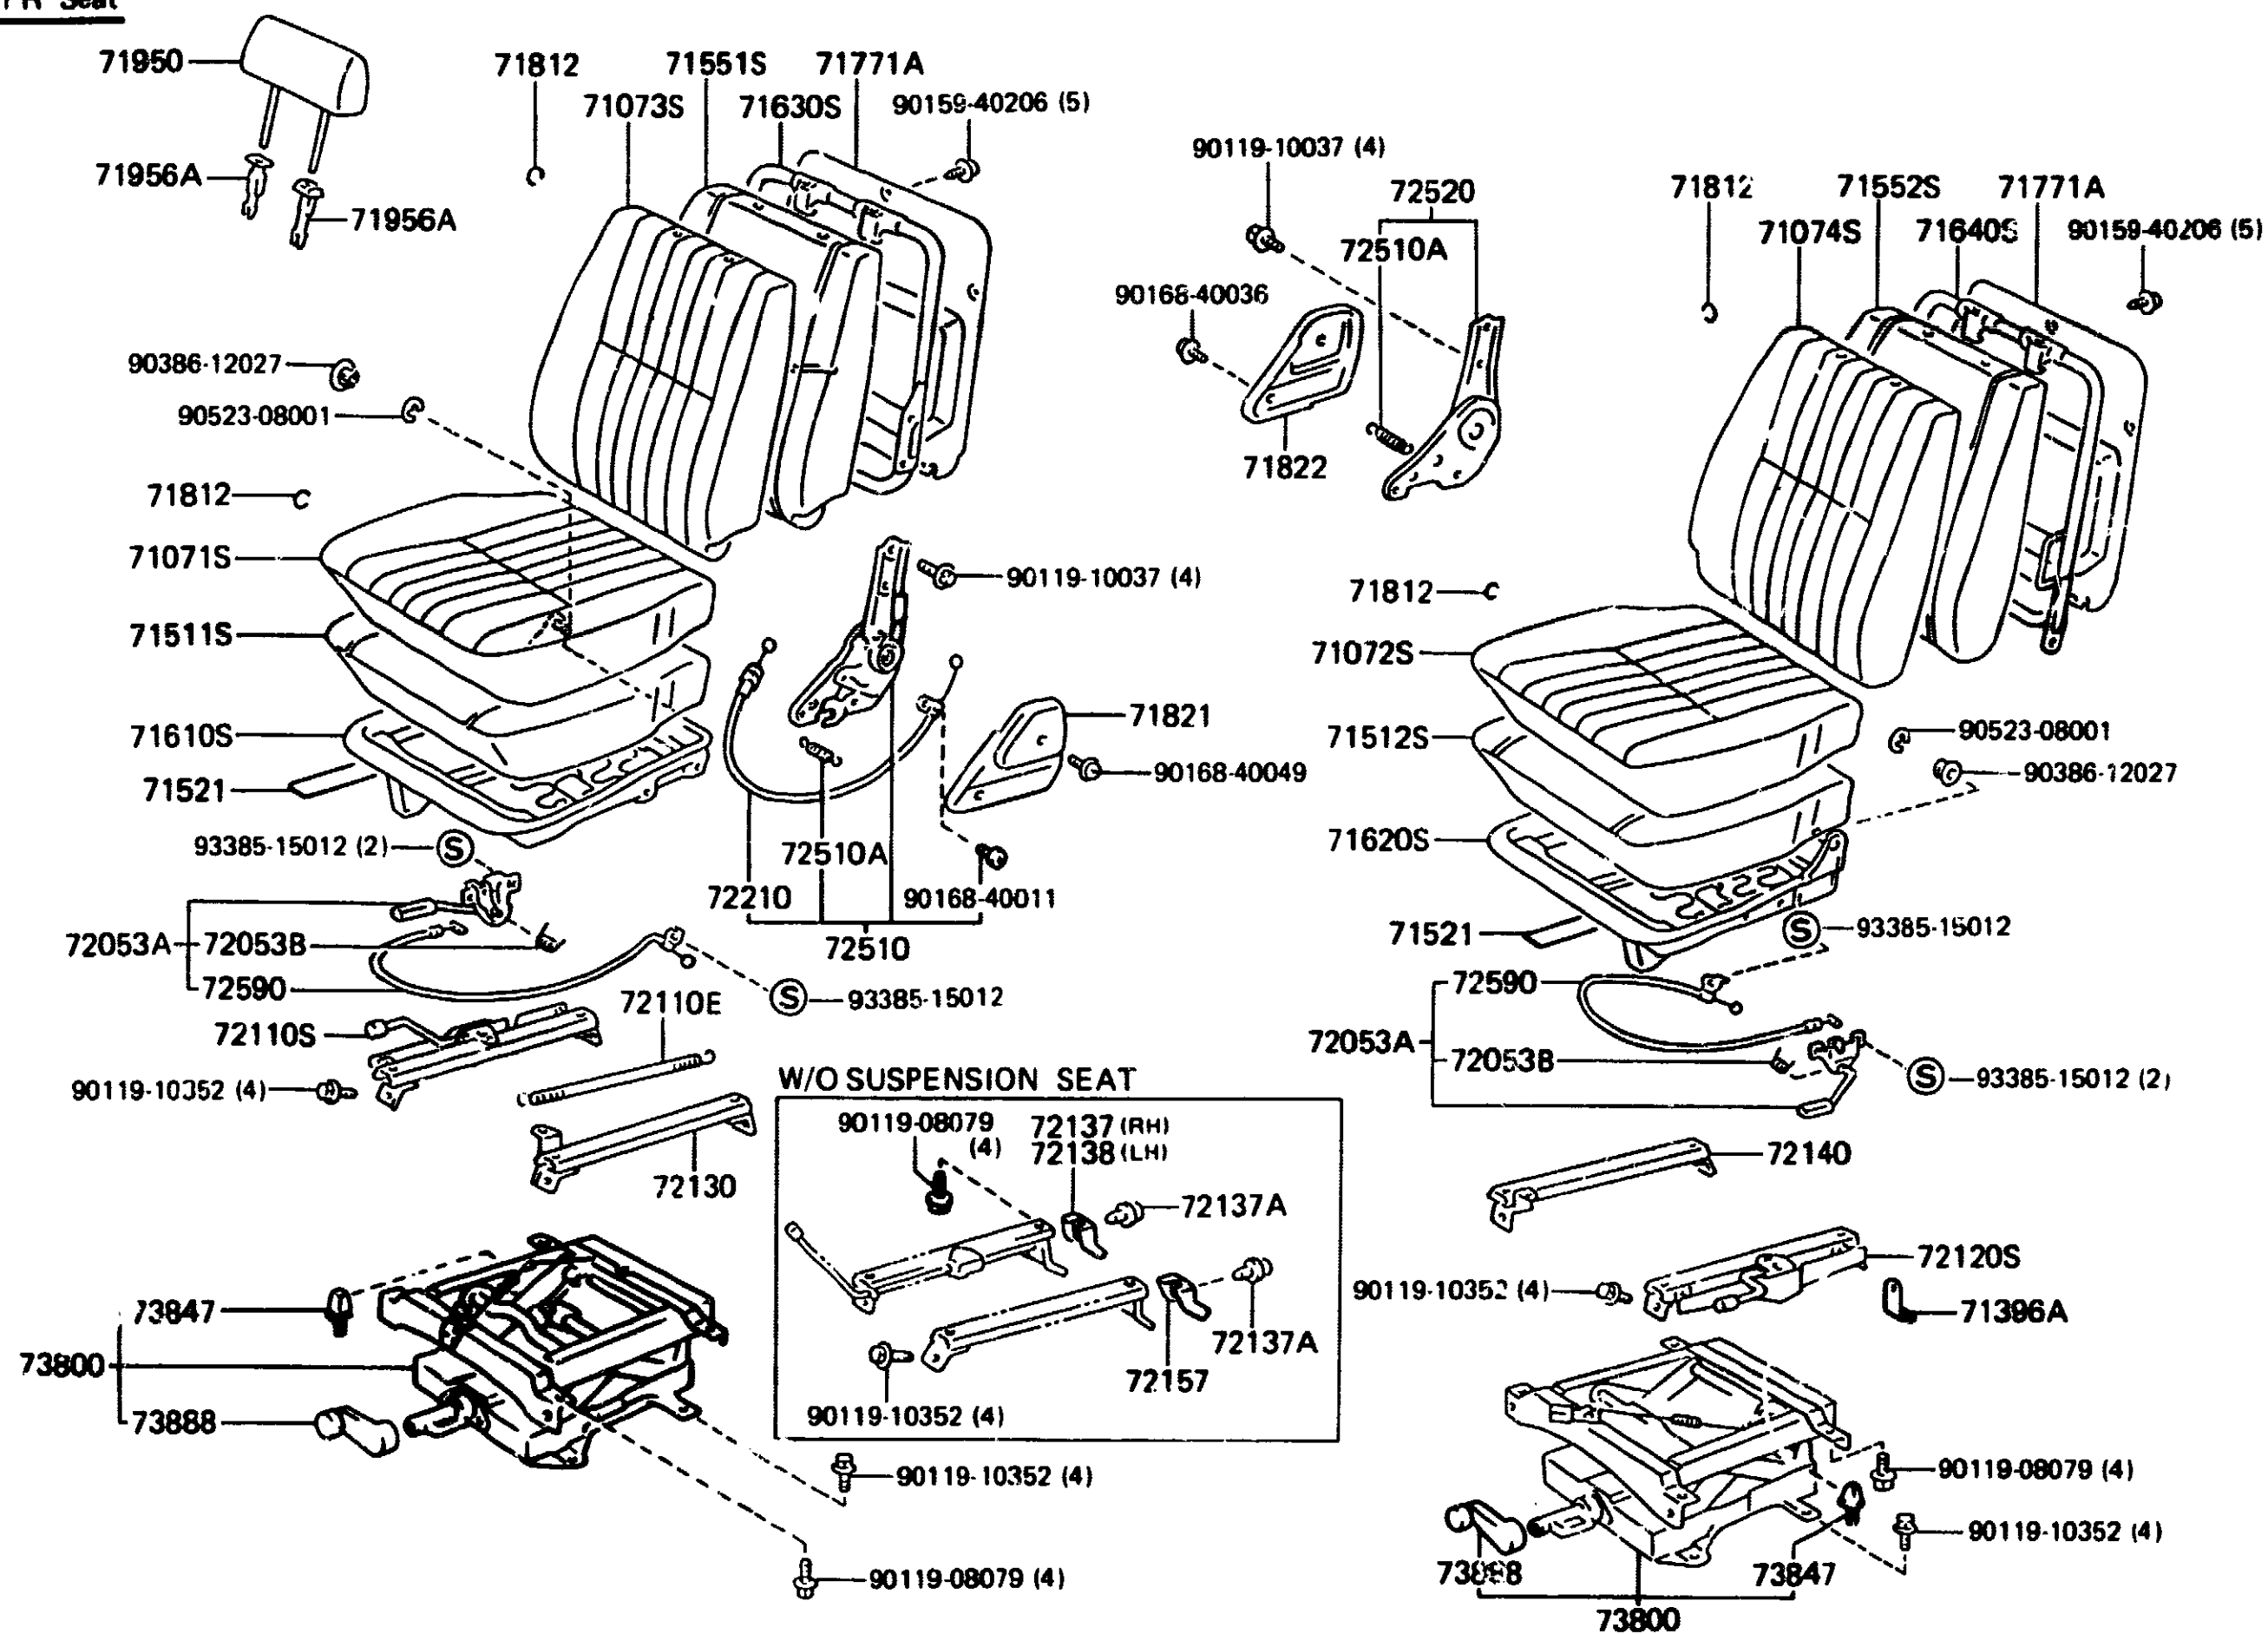

MB H639-D

(8411-)

GENUINE TOYOTA PARTS

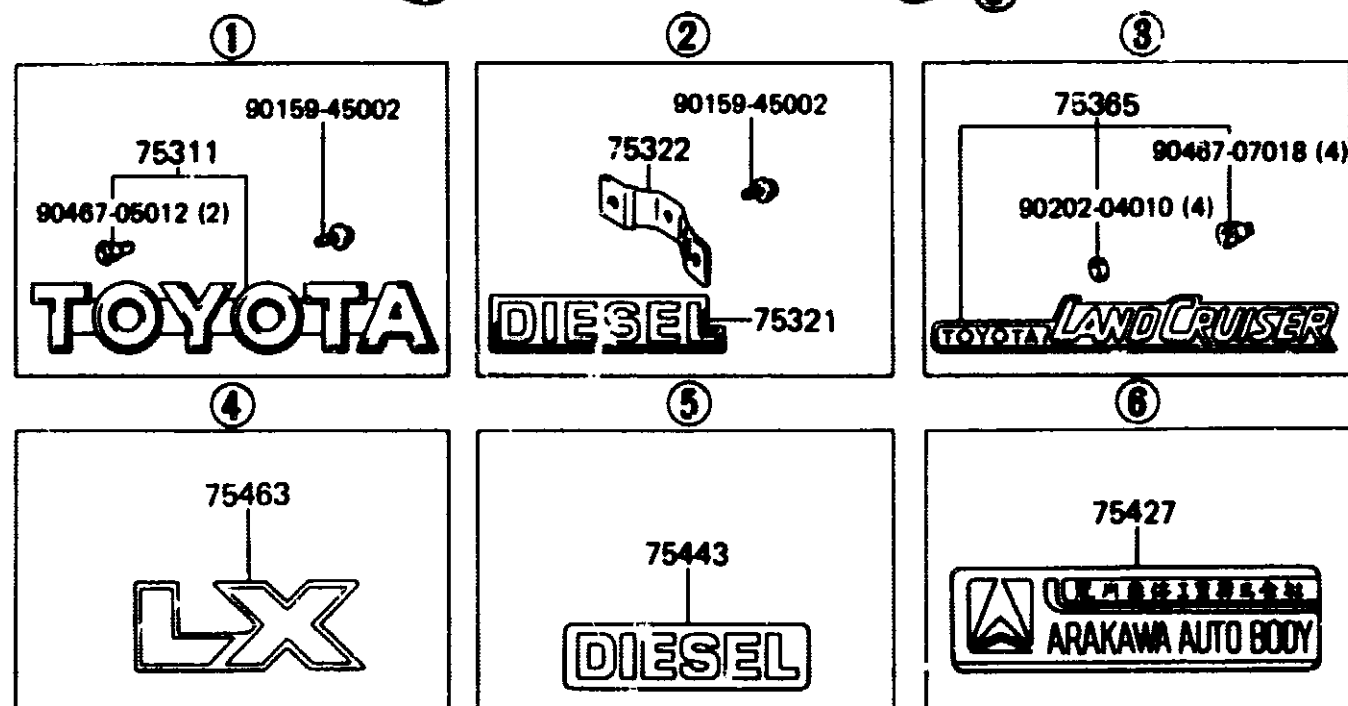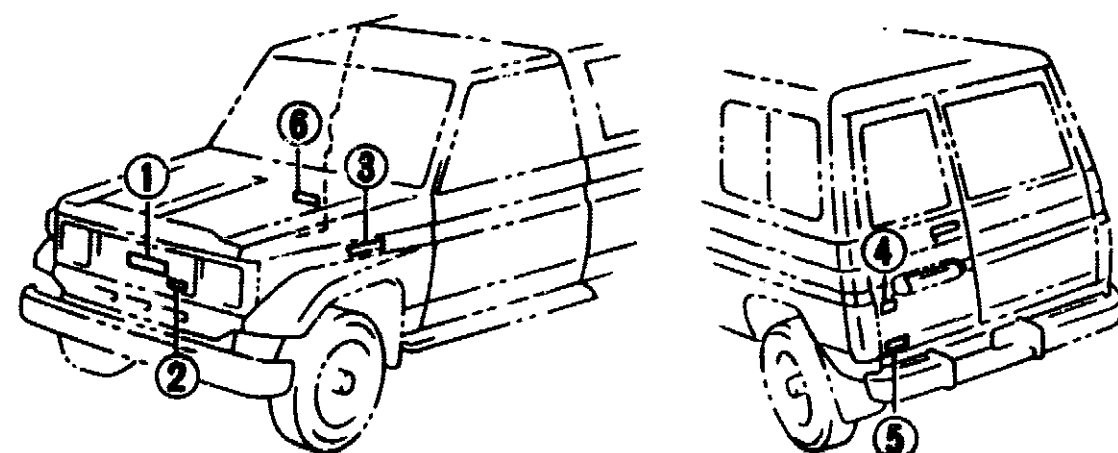


MB H045-B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	75-51 EMBLEM & NAME PLATE						
8411-	BJ70	EMBLEM, RADIATOR GRILLE (OR FRONT PANEL)		75311-90K00-	1	81	
8411-	BJ70	PLATE, RADIATOR GRILLE OR FRONT PANEL NAME		75312-90K00-	1	81	
8411-	BJ70	RETAINER, RADIATOR GRILLE NAME PLATE		75318-90K00-	1	81	
8411-	BJ70	EMBLEM, FRONT FENDER		75370-90A02-	2	81	
8411-	BJ70	PLATE, FRONT DOOR NAME		75427-90K00-	1	81	
8411-	BJ70	PLATE, BACK DOOR NAME, NO.3		75450-90K00-	1	81	
8411-	BJ70	PLATE, REAR NAME, NO.4 (GRADE MARK)		75441-90K00-	1	81	

(8411-)

GENUINE TOYOTA PARTS

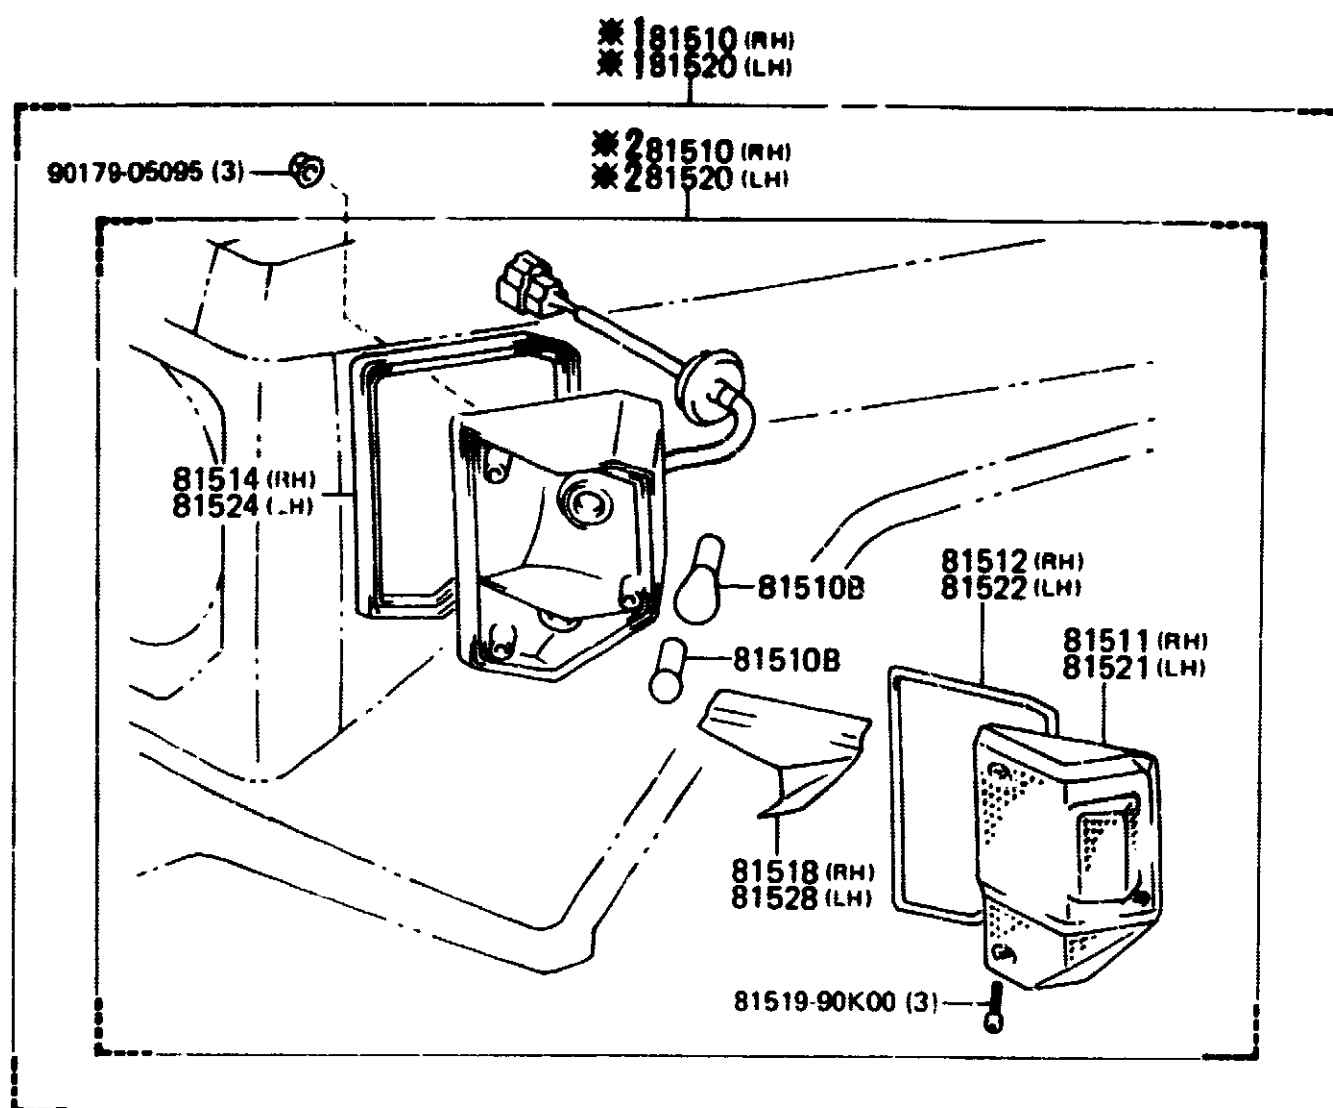

* 1 (-8510)
* 2 (8510-)

ME G696-B


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	81-03 FRONT TURN SIGNAL LAMP						
8411-8510	BJ70	LAMP ASSY, FRONT TURN SIGNAL, RH		81510-69245-	1	81	100
8510-	BJ70			81510-90K09-	1	101	
8411-8510	BJ70	BULB (FOR FRONT TURN SIGNAL LAMP)					
8411-8510	BJ70	12V 27W(TURNING)		99132-11270-	2	81	100
8411-8510	BJ70	12V 8W(CLEARANCE)		99132-12080-	2	81	100
8510-	BJ70	24V 21W(TURNING)		90981-16014-	2	101	
8510-	BJ70	24V 5W(CLEARANCE)		90981-16016-	2	101	
8411-	BJ70	LENS, FRONT TURN SIGNAL LAMP, RH		81511-90K01-	1	81	
8411-	BJ70	GASKET, FRONT TURN SIGNAL LAMP LENS, RH		81512-90K01-	1	81	
8411-	BJ70	GASKET, FRONT TURN SIGNAL LAMP BODY, RH		81514-90K01-	1	81	
8411-	BJ70	SHADE, FRONT TURN SIGNAL LAMP, RH		81517-90K01-	1	81	
8411-8510	BJ70	LAMP ASSY, FRONT TURN SIGNAL, LH		81520-69245-	1	81	100
8510-	BJ70			81520-90K09-	1	101	
8411-	BJ70	LENS, FRONT TURN SIGNAL LAMP, LH		81521-90K01-	1	81	
8411-	BJ70	GASKET, FRONT TURN SIGNAL LAMP LENS, LH		81512-90K01-	1	81	
8411-	BJ70	GASKET, FRONT TURN SIGNAL LAMP BODY, LH		81524-90K01-	1	81	

(8411-8510)

(8411-)


ILLUST. NO. 10F2

ILLUST. NO. 10F2

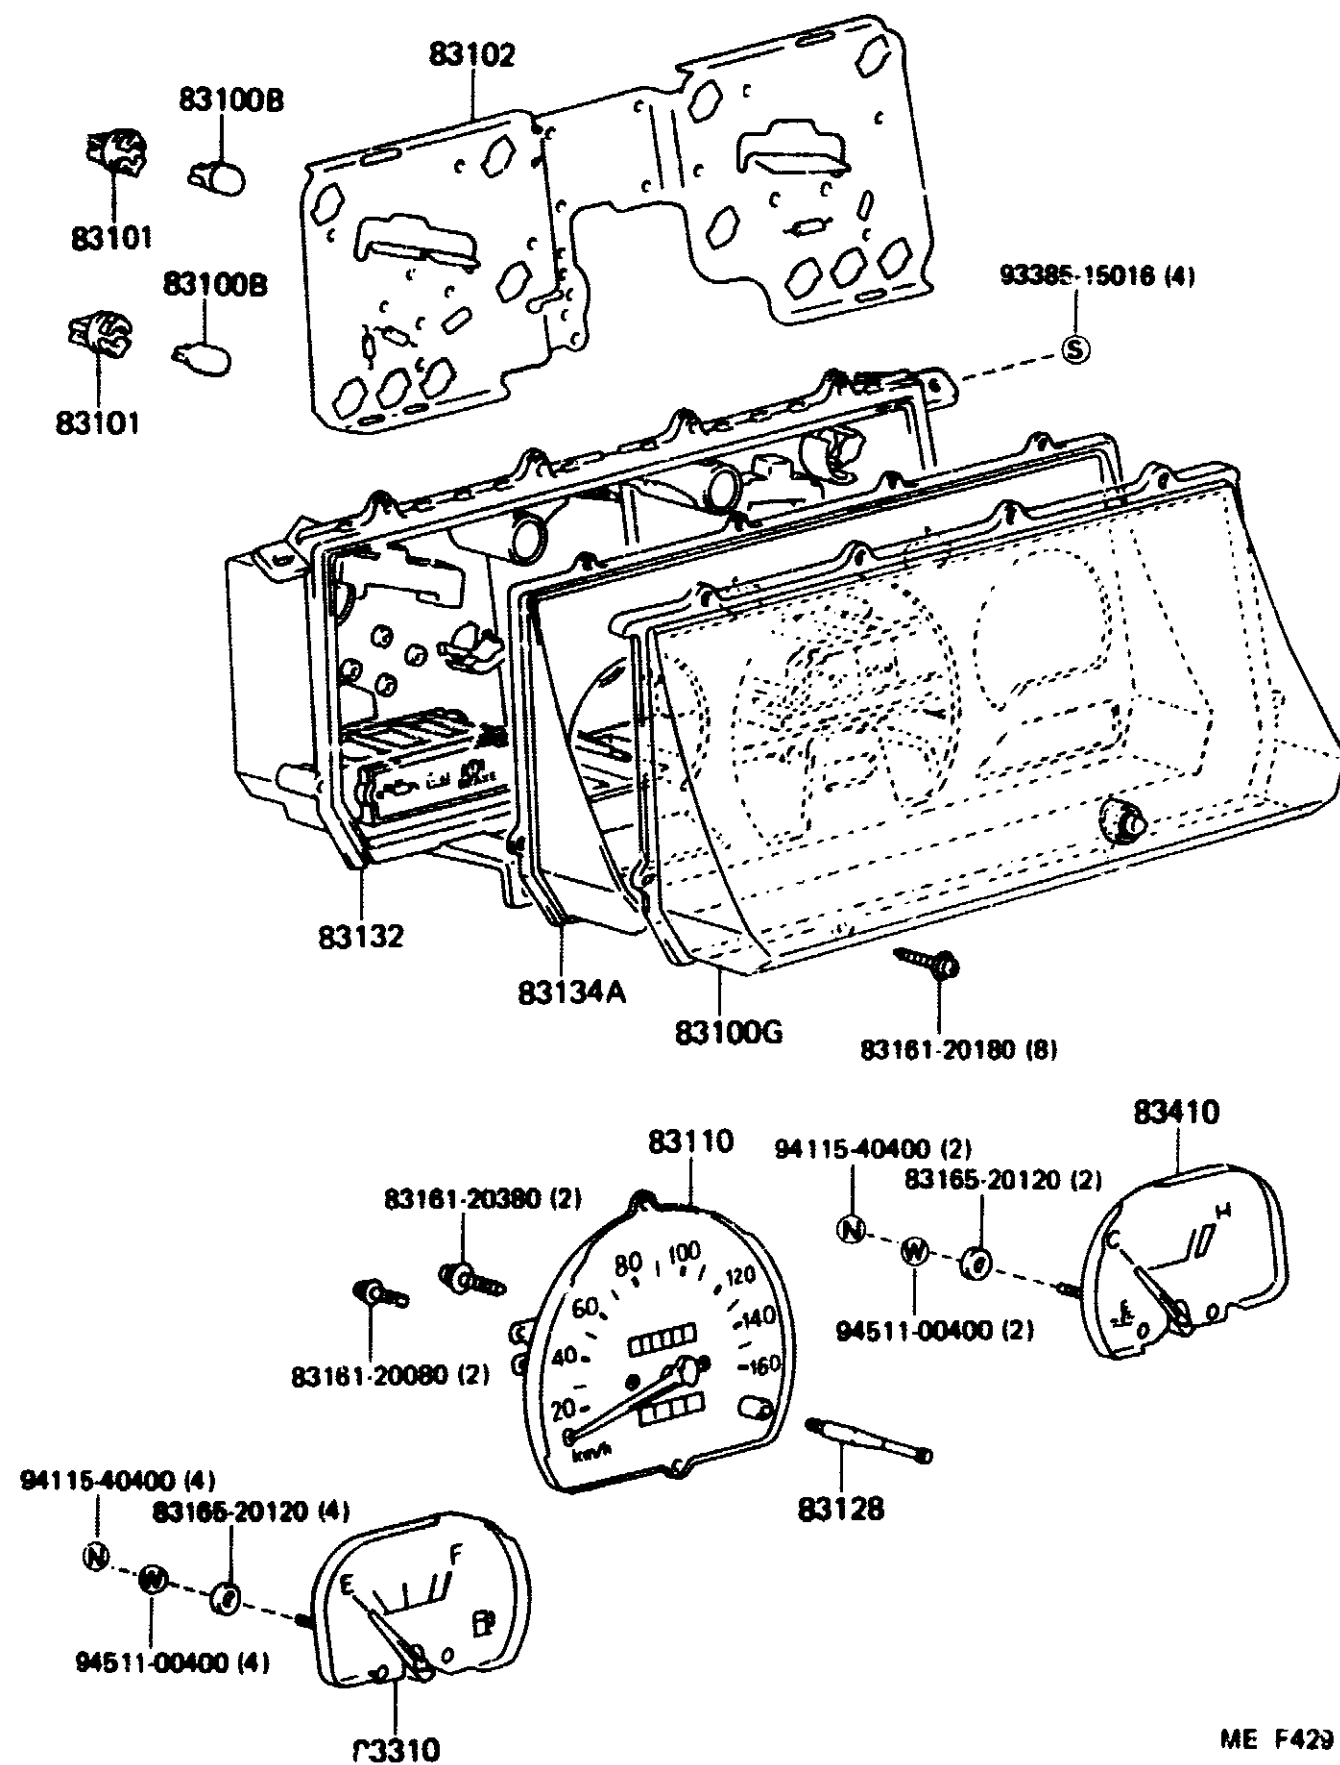

ME F429

MEF429

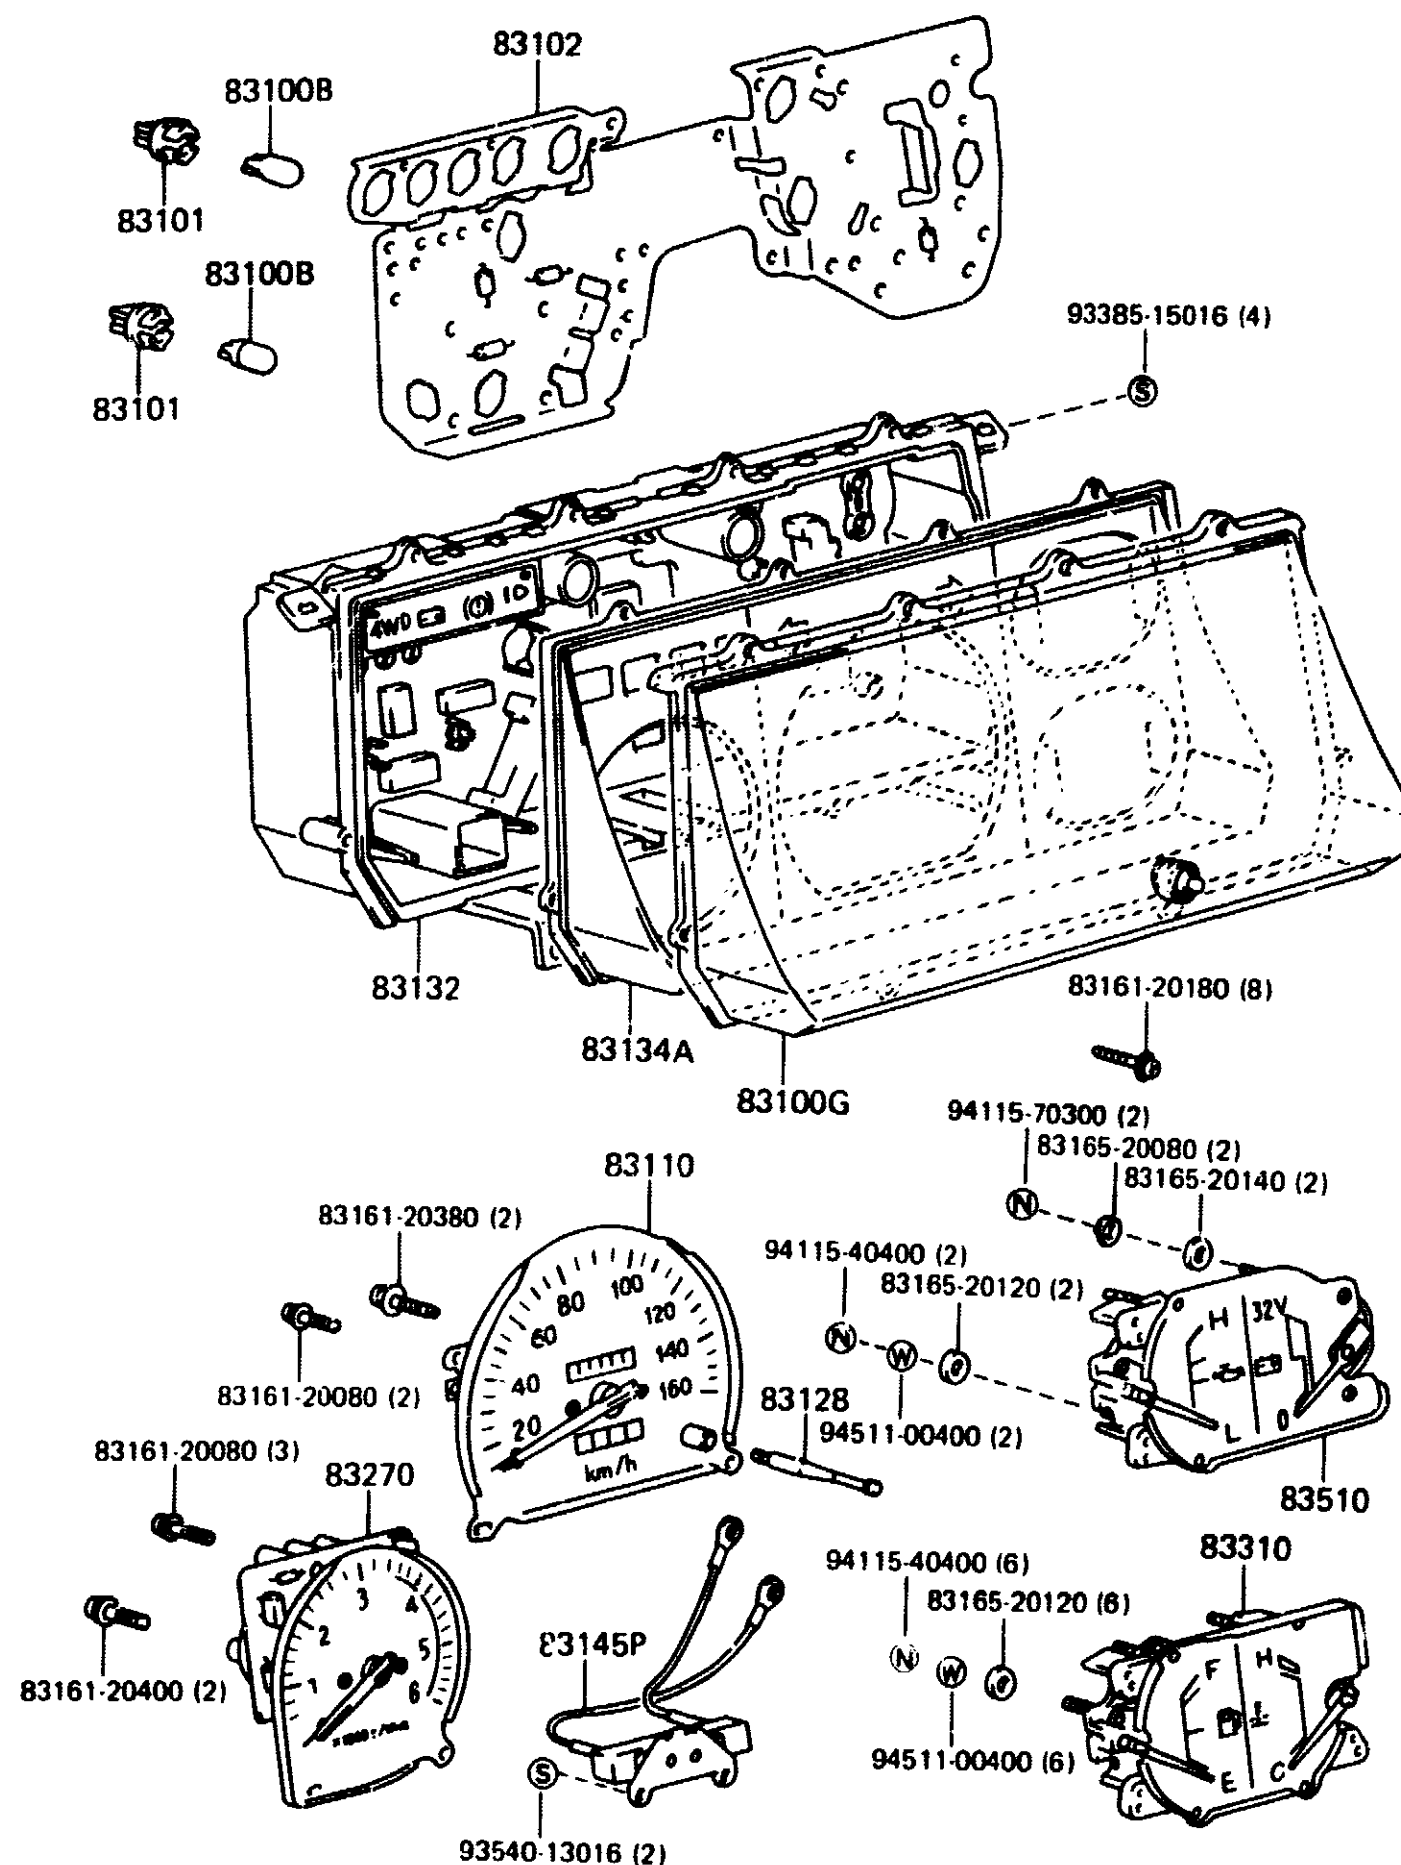


ME F430-A

MEF430A

(8411-)

GENUINE TOYOTA PARTS

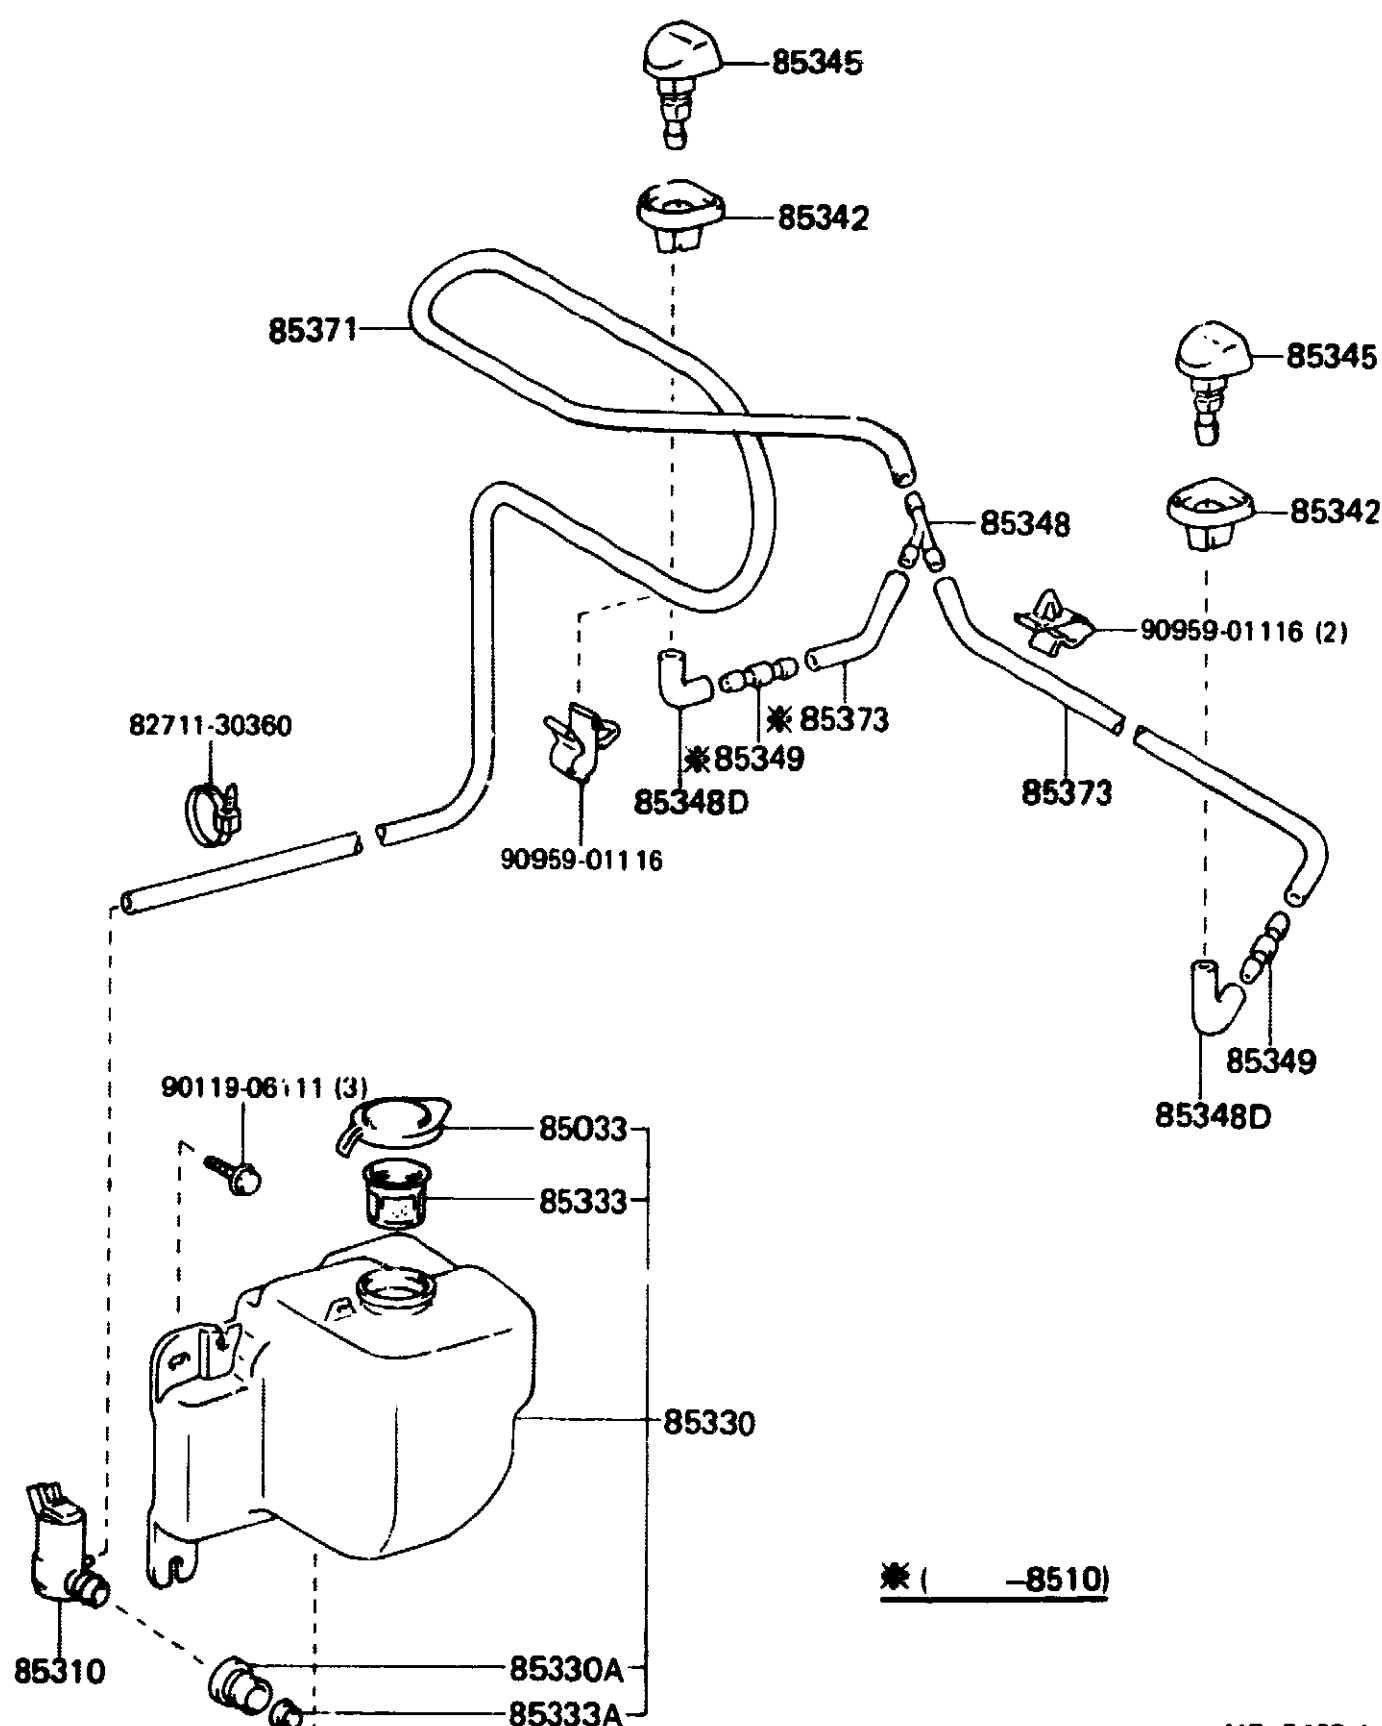

ME F438-A

*H.L=Cut hose to length as specified in remarks

MEF438A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	85-03 WINDSHIELD WASHER						
8411-	85033	CAP ASSY, WINDSHIELD WASHER		85332-12320-	1	81	
BJ70							
8411-8510	85310	MOTOR AND PUMP ASSY, WINDSHIELD WASHER		85310-12130-	1	81	100
8510-	BJ70			85310-90K01-	1	101	
8411-	85330	JAR ASSY, WINDSHIELD WASHER		85330-90K08-	1	81	
BJ70							
8411-	85330A	BUSH, WINDSHIELD WASHER JAR		90099-32103-	1	81	
BJ70							
8411-	85333	FILTER, WINDSHIELD WASHER JAR		85333-20010-	1	81	
BJ70							
8411-	85333A	FILTER, WINDSHIELD WASHER JAR, NO.2		85333-20020-	1	81	
BJ70							
8411-	85342	HOLDER, WASHER NOZZLE		85342-14010-	2	81	
BJ70							
8411-	85345	NOZZLE, WINDSHIELD WASHER		85035-90K01-	2	81	
BJ70							
8411-	85348	JOINT, WINDSHIELD WASHER HOSE		85348-89101-	1	81	
BJ70		3 WAY					
8411-	85348D	JOINT, WINDSHIELD WASHER ELBOW, NO.1		85355-16192-	2	81	
BJ70							
8411-	85349	JOINT, WINDSHIELD WASHER HOSE, NO.1		85349-20010-	2	81	
BJ70							
8411-8510	85371	HOSE, WINDSHIELD WASHER (FROM MOTOR TO JOINT OR NOZZLE)		85343-87002-	1	81	100
BJ70		XH,L=1470					
8510-	BJ70	XH,L=1760			1	101	

FIG.87-15

GENUINE TOYOTA PARTS

2-J10

M74-15-0707

GENUINE TOYOTA PARTS












PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
FIG.	87-15 HEATING & AIR	CONDITIONING - CONTROL & AIR DUCT					
8411-	BJ70	DEF-VENT & WARM-COOL		55905-89110-	2	81	
8411-	BJ70	FRESH-RECIRC		55905-95J01-	1	81	
8411-	BJ70	CABLE SUB-ASSY, DEFROSTER DAMPER CONTROL		55906-90K01-	1	81	
8411-	BJ70	CABLE SUB-ASSY, WATER VALVE CONTROL		55907-90K01-	1	81	
8411-	BJ70	CABLE SUB-ASSY, AIR INLET DAMPER CONTROL		55908-90K01-	1	81	
8411-	BJ70	CABLE SUB-ASSY, AIRMIX DAMPER CONTROL		55909-90K01-	1	81	
8411-	BJ70	CONTROL ASSY, HEATER OR BOOST VENTILATOR		55910-90K00-	1	81	
8411-	BJ70	DUCT SUB-ASSY, AIR, NO.1		87201-90K01-	1	81	
8411-8510	BJ70	DUCT SUB-ASSY, AIR, NO.2		87201-90K03- (87201-90K06-)	1	81	100
8510-	BJ70	DUCT SUB-ASSY, AIR, NO.2		87201-90K06-	1	101	
8411-	BJ70	DUCT, AIR, SIDE NO.1 RH		55088-90K01-	1	81	
8411-	BJ70	DUCT, AIR, SIDE NO.2 RH		55846-90K01-	1	81	
8411-	BJ70	DUCT, AIR, SIDE NO.3 RH		55087-90K01-	1	81	

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
8411-8608	BJ70	DUCT, AIR, SIDE NO.1 LH		55085-90K01- (55084-60H02-)	1	81	140
8608-	BJ70	DUCT, AIR, SIDE NO.2 LH		55844-90K09-	1	141	
8411-8608	BJ70	DUCT, AIR, SIDE NO.2 LH		55084-90K01-	1	81	140
8608-	BJ70	DUCT, AIR, SIDE NO.3 LH		55084-90K05-	1	141	
8411-	BJ70	DUCT, AIR, SIDE NO.3 LH		55086-90K01-	1	81	

PART	NAME	LOCATION
LEAF, FRONT SPRING, NO.2	-----	1-H11
LEAF, FRONT SPRING, NO.3	-----	1-H11
LEAF, FRONT SPRING, NO.4	-----	1-H11
LEAF, FRONT SPRING, NO.5	-----	1-H11
LEAF, REAR SPRING, NO.1	-----	1-L11
LEAF, REAR SPRING, NO.2	-----	1-L11
LEAF, REAR SPRING, NO.3	-----	1-L11
LEAF, REAR SPRING, NO.4	-----	1-L11
LEAF, REAR SPRING, NO.5	-----	1-L11
LEAF, REAR SPRING, NO.6	-----	1-L11
LEG, REAR SEAT	-----	2-L5
LENS AND COVER, MAP LAMP	-----	2-C8
LENS, FRONT TURN SIGNAL LAMP, LH	-----	2-J7
LENS, FRONT TURN SIGNAL LAMP, RH	-----	2-J7
LENS, LICENSE PLATE LAMP	-----	2-A8
LENS, REAR COMBINATION LAMP, LH	-----	2-M7
LENS, REAR COMBINATION LAMP, RH	-----	2-M7
LENS, REAR SIDE MARKER LAMP, LH	-----	2-B8
LENS, REAR SIDE MARKER LAMP, RH	-----	2-B8
LENS, ROOM LAMP, NO.1	-----	2-C8
LENS, SIDE TURN SIGNAL LAMP, LH	-----	2-L7
LENS, SIDE TURN SIGNAL LAMP, RH	-----	2-L7
LEVER ASSY, PARKING BRAKE	-----	1-A10
LEVER ASSY, SHIFT (FOR FLOOR SHIFT)	-----	1-J6
LEVER SUB-ASSY, FRONT DRIVE SHIFT LINK	-----	1-F7
LEVER SUB-ASSY, HIGH & LOW SHIFT INNER	-----	1-7
LEVER SUB-ASSY, INJECTION PUMP, NO.1	-----	1-H4
LEVER SUB-ASSY, INJECTION PUMP, NO.3	-----	1-H4
LEVER SUB-ASSY, RECLINING REMOTE CONTROL	-----	2-M5
LEVER SUB-ASSY, STEERING TILT	-----	1-A9
LEVER SUB-ASSY, THROTTLE SHAFT ADJUSTING	-----	1-B5
LEVER, AUTOMATIC ADJUST, LH (FOR REAR BRAKE)	-----	1-L10
LEVER, AUTOMATIC ADJUST, RH (FOR REAR BRAKE)	-----	1-L10
LEVER, CABLE GUIDE SUPPORT	-----	1-B10
LEVER, FRONT DRIVE SHIFT LINK	-----	1-H7
LEVER, JACK HANDLE	-----	1-A1
LEVER, PARKING BRAKE SHOE, LH	-----	1-K10
LEVER, PARKING BRAKE SHOE, RH	-----	1-K10
LEVER, SHIFT & SELECT	-----	1-I6
LEVER, SHIFT, INNER NO.1	-----	1-I6
LEVER, TRANSFER FRONT DRIVE SHIFT	-----	1-F7
LEVER, TRANSFER HIGH & LOW SHIFT	-----	1-F7
LEVER, TRANSFER HIGH AND LOW SHIFT OUTER	-----	1-G7
LIFTER, VALVE	-----	1-D2
LIGHTER ASSY, CIGARETTE	-----	2-E9
LINER, CYLINDER	-----	1-I1
LINING, REAR BRAKE SHOE (FOR FRONT OR UPPER)	-----	1-K10
LINING, REAR BRAKE SHOE (FOR REAR OR LOWER)	-----	1-K10
LINK ASSY, FRONT DOOR OPEN CONTROL, LH	-----	2-L4
LINK ASSY, FRONT DOOR OPEN CONTROL, RH	-----	2-L4
LINK ASSY, WINDSHIELD WIPER	-----	2-H9
LOCK ASSY, BACK DOOR	-----	2-F5
LOCK ASSY, BACK DOOR, LOWER	-----	2-G5
LOCK ASSY, BACK DOOR, UPPER	-----	2-G5
LOCK ASSY, FRONT DOOR, LH	-----	2-L4
LOCK ASSY, FRONT DOOR, RH	-----	2-L4
LOCK ASSY, HOOD	-----	2-L1
LOCK SUB-ASSY, FUEL FILLER OPENING LID	-----	2-E7
LOCK SUB-ASSY, GLOVE COMPARTMENT DOOR	-----	2-D2
LOCK SUB-ASSY, REAR SEAT BACK, LH	-----	2-A6
LOCK SUB-ASSY, REAR SEAT BACK, RH	-----	2-A6
LOCK, FRONT DIFFERENTIAL BEARING ADJUSTING NUT	-----	1-G8
LOCK, REAR AXLE SHAFT	-----	1-D8
LOCK, REAR DIFFERENTIAL BEARING ADJUSTING NUT	-----	1-B8

PART	NAME	LOCATION
LOCK, SIDE WINDOW, NO.1 GLASS (FOR SLIDE TYPE)	-----	2-J3
LOCK, VALVE SPRING RETAINER	-----	1-D2
LOUVER, COWL VENTILATOR	-----	2-F2
LOUVER, VENT INNER, LH	-----	2-A4
LOUVER, VENT INNER, RH	-----	2-A4
MANIFOLD, EXHAUST	-----	1-B3
MANIFOLD, INTAKE	-----	1-B3
MASTER SWITCH ASSY, POWER WINDOW REGULATOR	-----	2-E9
MAT ASSY, REAR FLOOR	-----	2-B3
MAT, FLOOR, FRONT	-----	2-A3
MAT, FLOOR, REAR	-----	2-B3
MAT, REAR WHEEL HOUSE, LH	-----	2-A3
MAT, REAR WHEEL HOUSE, RH	-----	2-A3
MEMBER SUB-ASSY, MAIN FLOOR SIDE, LH	-----	2-G2
MEMBER SUB-ASSY, MAIN FLOOR SIDE, RH	-----	2-G2
MEMBER SUB-ASSY, REAR FLOOR CROSS, NO.1	-----	2-G2
MEMBER SUB-ASSY, REAR FLOOR CROSS, NO.2	-----	2-G2
MIRROR ASSY, INNER REAR VIEW	-----	2-E10
MIRROR ASSY, OUTER REAR VIEW, LH	-----	2-E10
MIRROR ASSY, OUTER REAR VIEW, RH	-----	2-E10
MOTOR AND PUMP ASSY, WINDSHIELD WASHER	-----	2-J9
MOTOR ASSY, POWER WINDOW REGULATOR, FRONT LH	-----	2-M9
MOTOR ASSY, POWER WINDOW REGULATOR, FRONT RH	-----	2-M9
MOTOR ASSY, REAR WASHER	-----	2-L9
MOTOR ASSY, REAR WIPER	-----	2-I9
MOTOR ASSY, WINDSHIELD WIPER	-----	2-H9
MOTOR SUB-ASSY, HEATER BLOWER	-----	2-H10
MOTOR SUB-ASSY, REAR HEATER BLOWER	-----	2-H10
MOTOR, FUEL CONTROL	-----	2-G9
MOULDING, BACK WINDOW CORNER, LOWER LH	-----	2-L6
MOULDING, BACK WINDOW CORNER, LOWER RH	-----	2-L6
MOULDING, BACK WINDOW CORNER, UPPER LH	-----	2-L6
MOULDING, BACK WINDOW CORNER, UPPER RH	-----	2-L6
MOULDING, BACK WINDOW MOULDING JOINT, CENTER	-----	2-L6
MOULDING, BACK WINDOW OUTSIDE CENTER	-----	2-L6
MOULDING, BACK WINDOW SIDE, LH	-----	2-L6
MOULDING, BACK WINDOW SIDE, RH	-----	2-L6
MOULDING, BACK WINDOW, LOWER	-----	2-L6
MOULDING, BACK WINDOW, UPPER	-----	2-L6
MOULDING, ROOF DRIP SIDE FINISH, FRONT LH	-----	2-K6
MOULDING, ROOF DRIP SIDE FINISH, FRONT RH	-----	2-K6
MOULDING, ROOF DRIP SIDE FINISH, REAR LH	-----	2-K6
MOULDING, ROOF DRIP SIDE FINISH, REAR RH	-----	2-K6
MOULDING, ROOF DRIP, REAR	-----	2-L6
MOULDING, SUN ROOF OR REMOVABLE ROOF OPENING TRIM	-----	2-D4
MOULDING, WINDSHIELD CORNER, LOWER LH	-----	2-K6
MOULDING, WINDSHIELD CORNER, LOWER RH	-----	2-K6
MOULDING, WINDSHIELD CORNER, UPPER LH	-----	2-K6
MOULDING, WINDSHIELD CORNER, UPPER RH	-----	2-K6
MOULDING, WINDSHIELD SIDE, LH	-----	2-K6
MOULDING, WINDSHIELD SIDE, RH	-----	2-K6
MOULDING, WINDSHIELD, LOWER	-----	2-K6
MOULDING, WINDSHIELD, UPPER	-----	2-K6
MUDGUARD SUB-ASSY, FRONT FENDER, LH	-----	2-K1
MUDGUARD SUB-ASSY, FRONT FENDER, RH	-----	2-K1
MUDGUARD SUB-ASSY, QUARTER PANEL, REAR LH	-----	2-H3
MUDGUARD SUB-ASSY, QUARTER PANEL, REAR RH	-----	2-H3
MUDGUARD, LOWER BACK PANEL, FRONT LH	-----	2-L2
MUDGUARD, LOWER BACK PANEL, FRONT RH	-----	2-L2
NIPPLE SUB-ASSY, OVERFLOW (FOR PNEUMATIC BELLOWS)	-----	1-I4
NOZZLE ASSY	-----	1-A4
NOZZLE ASSY, ASSIST DEFROSTER	-----	2-E2
NOZZLE ASSY, DEFROSTER	-----	2-E2
NOZZLE, OIL	-----	1-I1

ILLUSTRATED INDEX

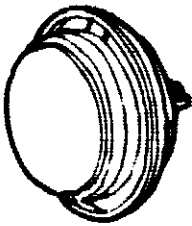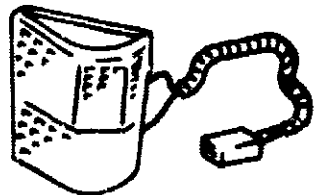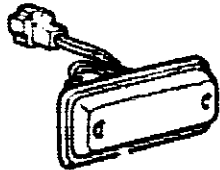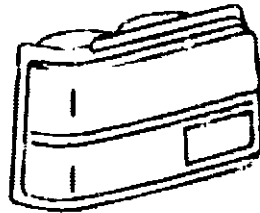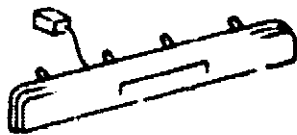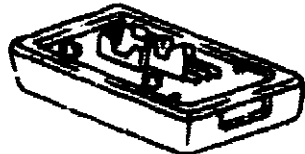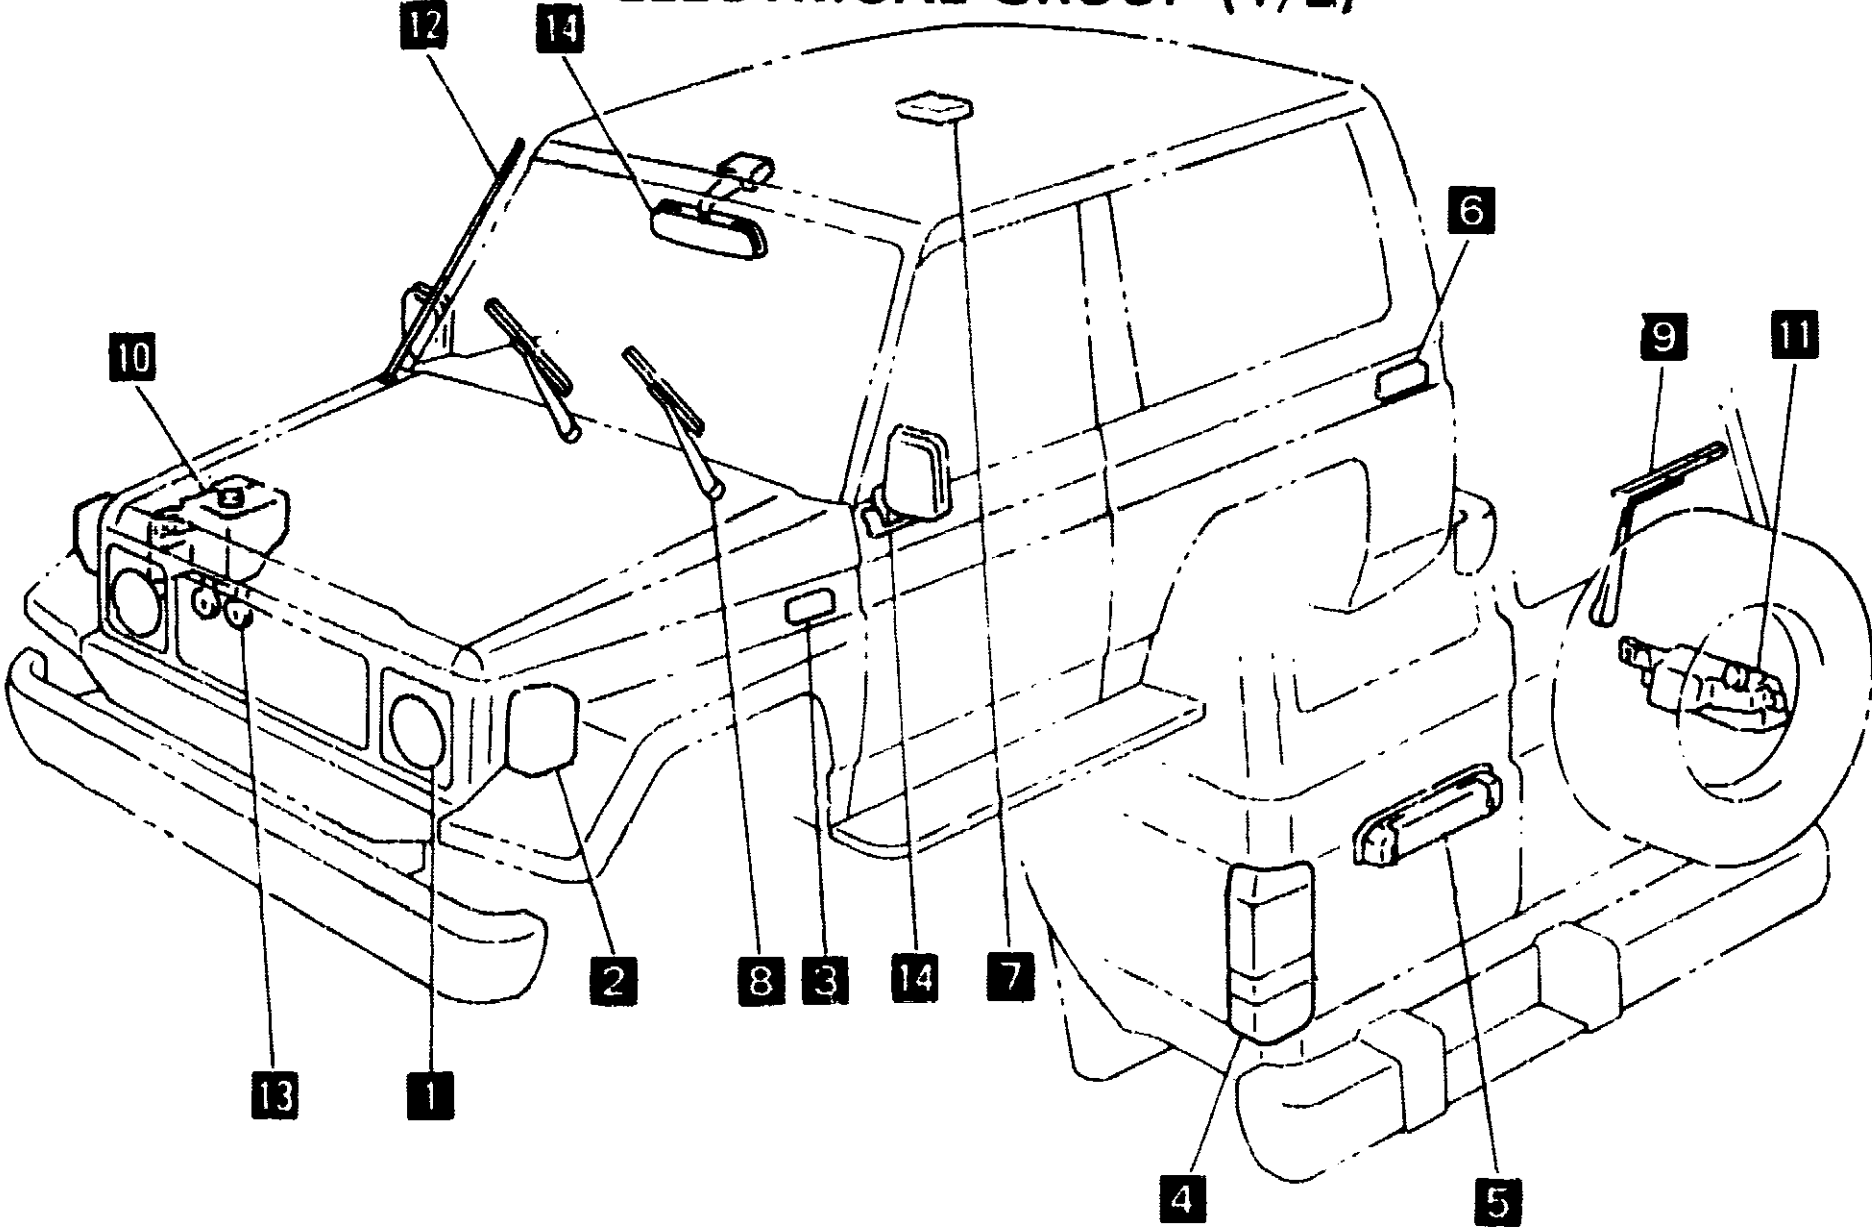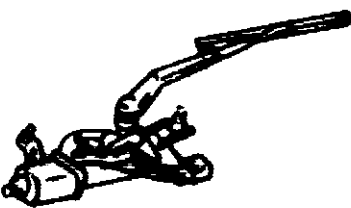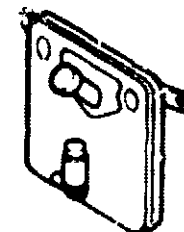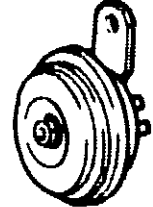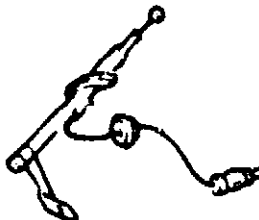2-17 (81-01) 1	2-J7 (81-03) 2	2-L7 (81-06) 3	2-M7 (81-11) 4	2-A8 (81-13) 5	2-B8 (81-14) 6	2-C8 (81-21) 7
						
Headlamp	Front Turn Signal Lamp	Side Turn Signal Lamp	Rear Combination Lamp	License Plate Lamp	Rear Side Marker Lamp	Interior Lamp
ELECTRICAL GROUP (1/2) 						
						2-H9 (85-01) 8
						
						Windshield Wiper
						2-19 (85-02) 9
						
						Rear Wiper
						2-J9 (85-03) 10
						
						Windshield Washer
						2-L9 (85-04) 11
						
						Rear Washer
				2-E10 (87-01) 12	2-D10 (86-11) 13	2-C10 (86-04) 14
						
				Mirror	Horn	Antenna


(8411-)




(8411-)

(8411-)

ILLUST. NO. 10F2


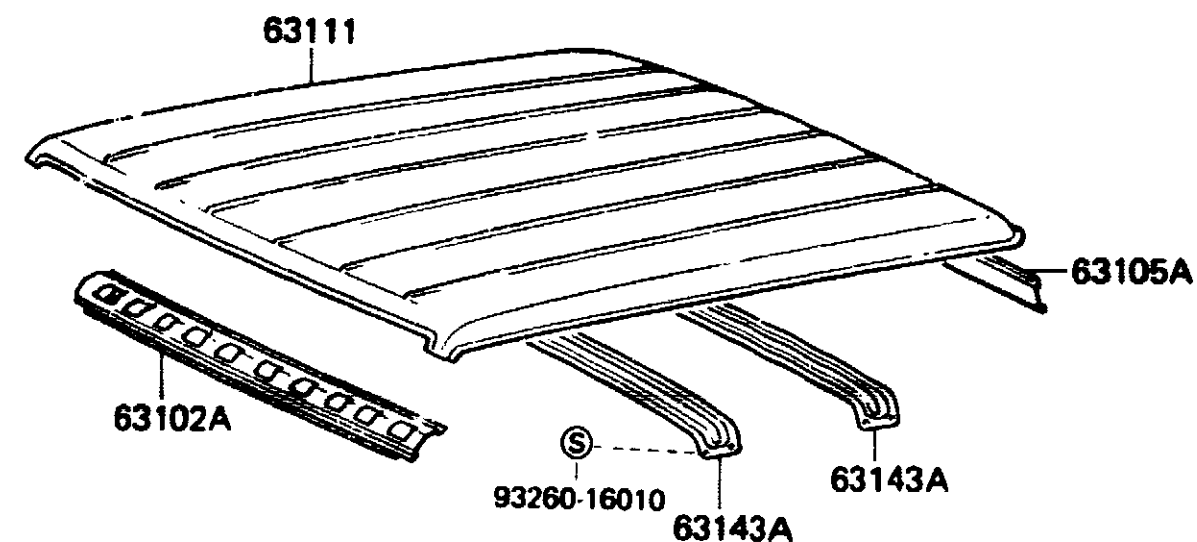


W/ SUN ROOF

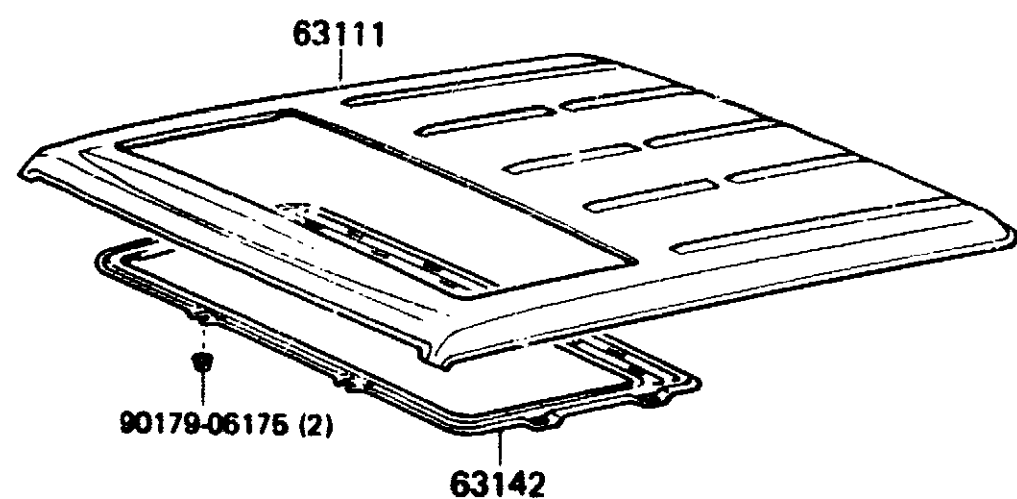

MB H632-A

ILLUST. NO. 20F2

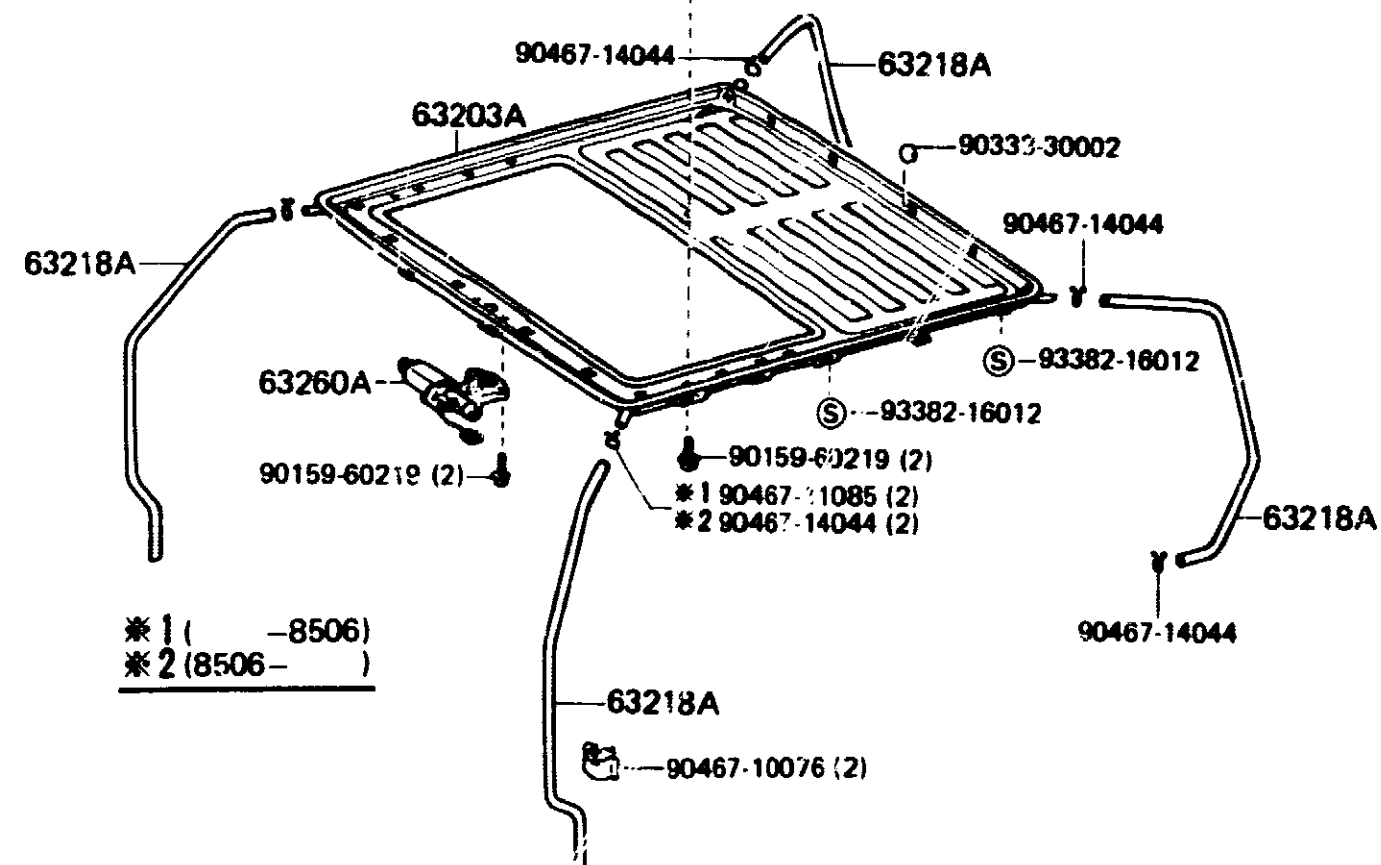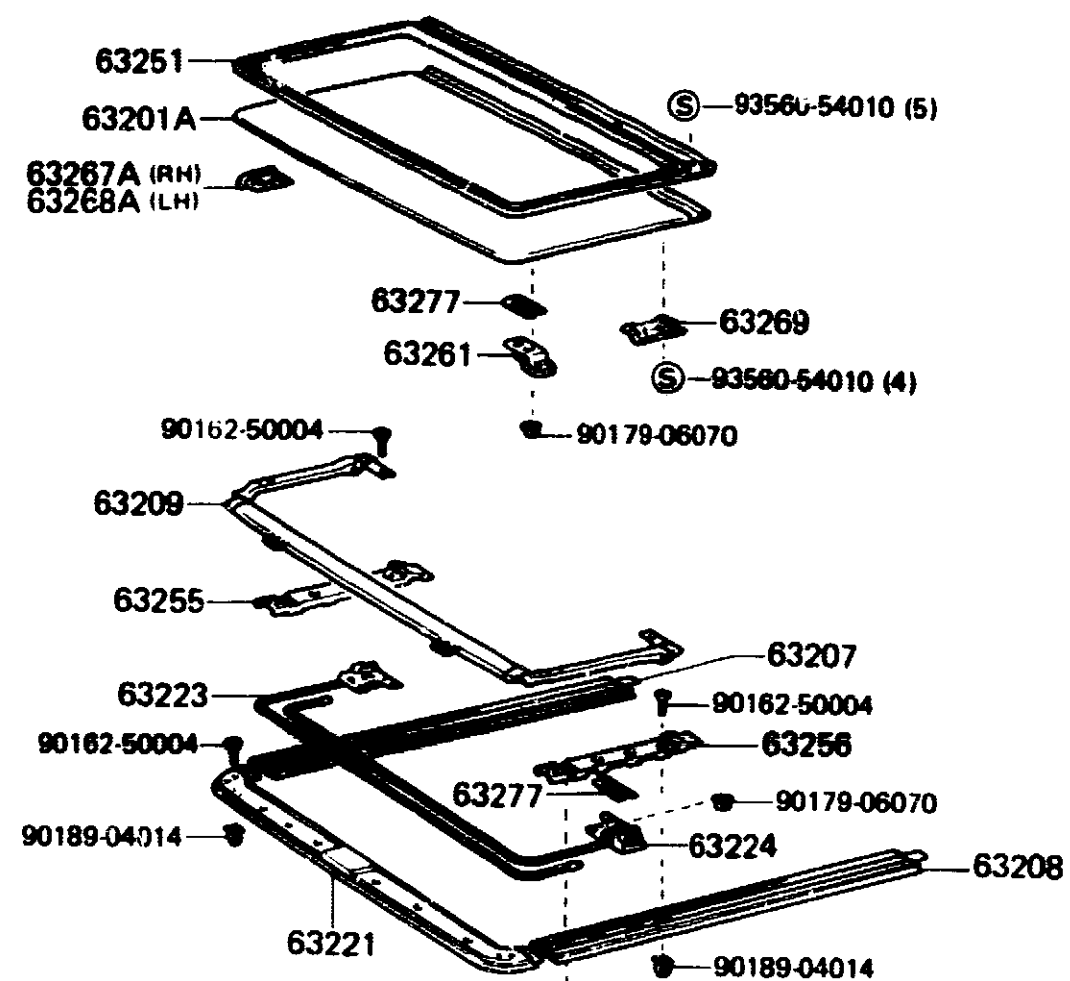

*1 (-8506)
*2 (8506-)

MB H464-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	67507C BJ70	GASKET, VENT WINDOW PIVOT, UPPER NO.2		90430-04003-	2	81	
8411-	67507D BJ70	RETAINER, VENT WINDOW PIVOT, UPPER		62735-89101-	2	81	
8411-	67508 BJ70	PIVOT SUB-ASSY, VENT WINDOW, UPPER LH		67508-90K00-	1	81	
8411-	67528 BJ70	PLATE, VENT WINDOW UPPER PIVOT		67528-89101-	2	81	
8411-	68121 BJ70	GLASS, VENT WINDOW, RH XTEM, T=4.0		68121-90K00-	1	81	
8411-	68122 BJ70	GLASS, VENT WINDOW, LH XTEM, T=4.0		68122-90K00-	1	81	
8411-	68175 BJ70	WEATHERSTRIP, VENT WINDOW FRAME, RH		68175-90K00-	1	81	
8411-	68176 BJ70	WEATHERSTRIP, VENT WINDOW FRAME, LH		68176-90K00-	1	81	
8411-	68181 BJ70	WEATHERSTRIP, VENT WINDOW, NO.1 RH		68181-90K00-	1	81	
8411-	68182 BJ70	WEATHERSTRIP, VENT WINDOW, NO.1 LH		68182-90K00-	1	81	


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO

*TEM = Tempered

(8411-)

GENUINE TOYOTA PARTS

ILLUST.NO. 20F2

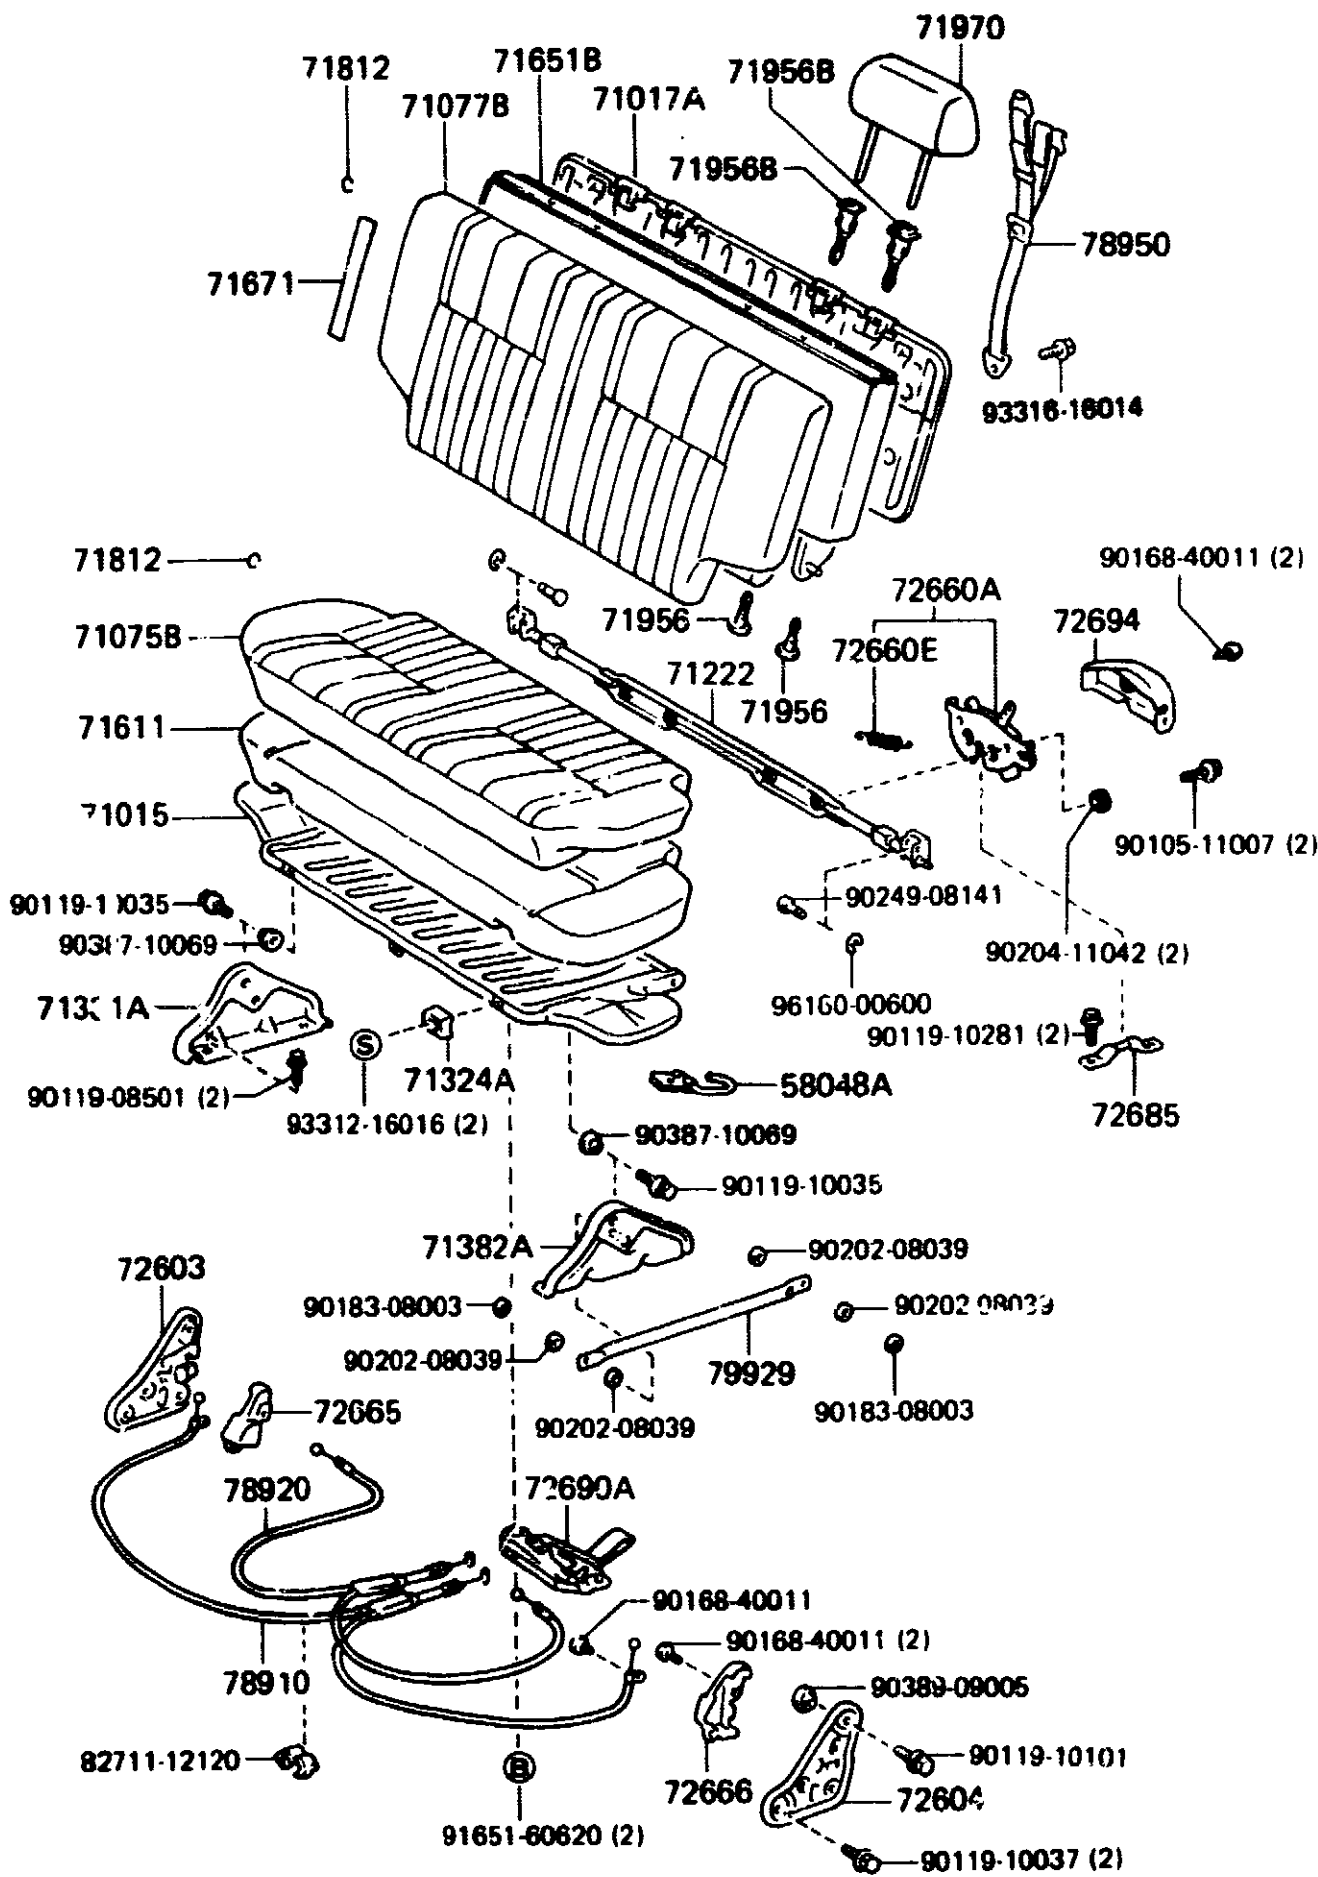



MB H640-D

MBH640D

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
FIG.	71-51 SEAT & SEAT TRACK						
		58048A HOOK SUB-ASSY, ROPE, NO.1					
8510-	BJ70			58048-90K00-	2	101	
		71015 FRAME SUB-ASSY, REAR SEAT CUSHION					
8411-	BJ70			71015-90K00-	1	81	
		71017A FRAME SUB-ASSY, REAR SEAT BACK					
8411-8510	BJ70			71017-90K00- (71017-90K08-)	1	81	100
8510-	BJ70			71017-90K08-	1	101	
		71071S COVER, FRONT SEAT CUSHION, RH (FOR SEPARATE TYPE)					
8411-8510	BJ70	VL,GRAY		71071-90K08-03	1	81	100
8411-8510	BJ70	VL,BEIGE		71071-90K08-05	1	81	100
8411-	BJ70	FB,GRAY		71071-90K14-03	1	81	
8411-	BJ70	FB,BEIGE		71071-90K14-05	1	81	
		71072S COVER, FRONT SEAT CUSHION, LH (FOR SEPARATE TYPE)					
8411-8510	BJ70	VL,GRAY		71072-90K05-03	1	81	100
8411-8510	BJ70	VL,BEIGE		71072-90K05-05	1	81	100
8411-	BJ70	FB,GRAY		71072-90K15-03	1	81	
8411-	BJ70	FB,BEIGE		71072-90K15-05	1	81	
		71073S COVER, FRONT SEAT BACK, RH (FOR SEPARATE TYPE)					
8411-8510	BJ70	VL,GRAY		71073-90K16-03	1	81	100
8411-8510	BJ70	VL,BEIGE		71073-90K16-05	1	81	100
8411-	BJ70	FB,GRAY		71073-90K17-03	1	81	
8411-	BJ70	FB,BEIGE		71073-90K17-05	1	81	
		71074S COVER, FRONT SEAT BACK, LH (FOR SEPARATE TYPE)					
8411-8510	BJ70	VL,GRAY		71074-90K12-03	1	81	100
8411-8510	BJ70	VL,BEIGE		71074-90K12-05	1	81	100
8411-	BJ70	FB,GRAY		71074-90K13-03	1	81	
8411-	BJ70	FB,BEIGE		71074-90K13-05	1	81	

GENUINE TOYOTA PARTS

(8411-)

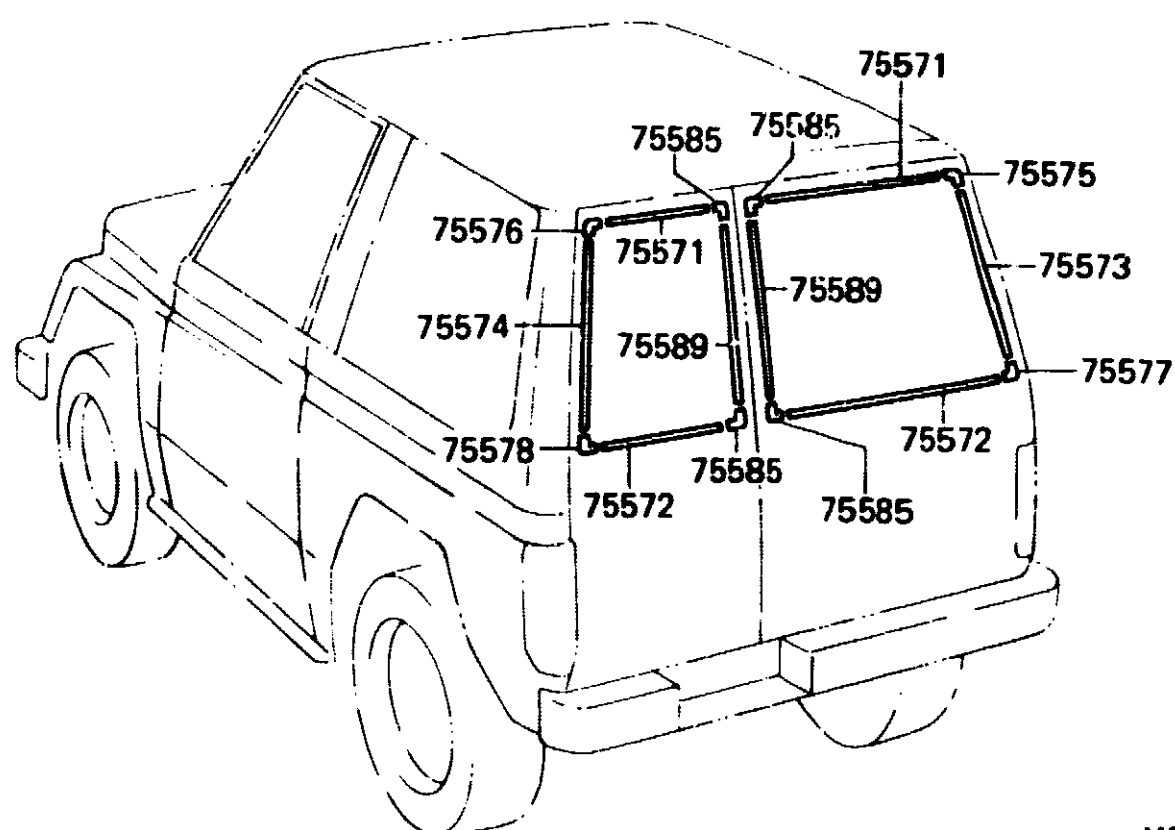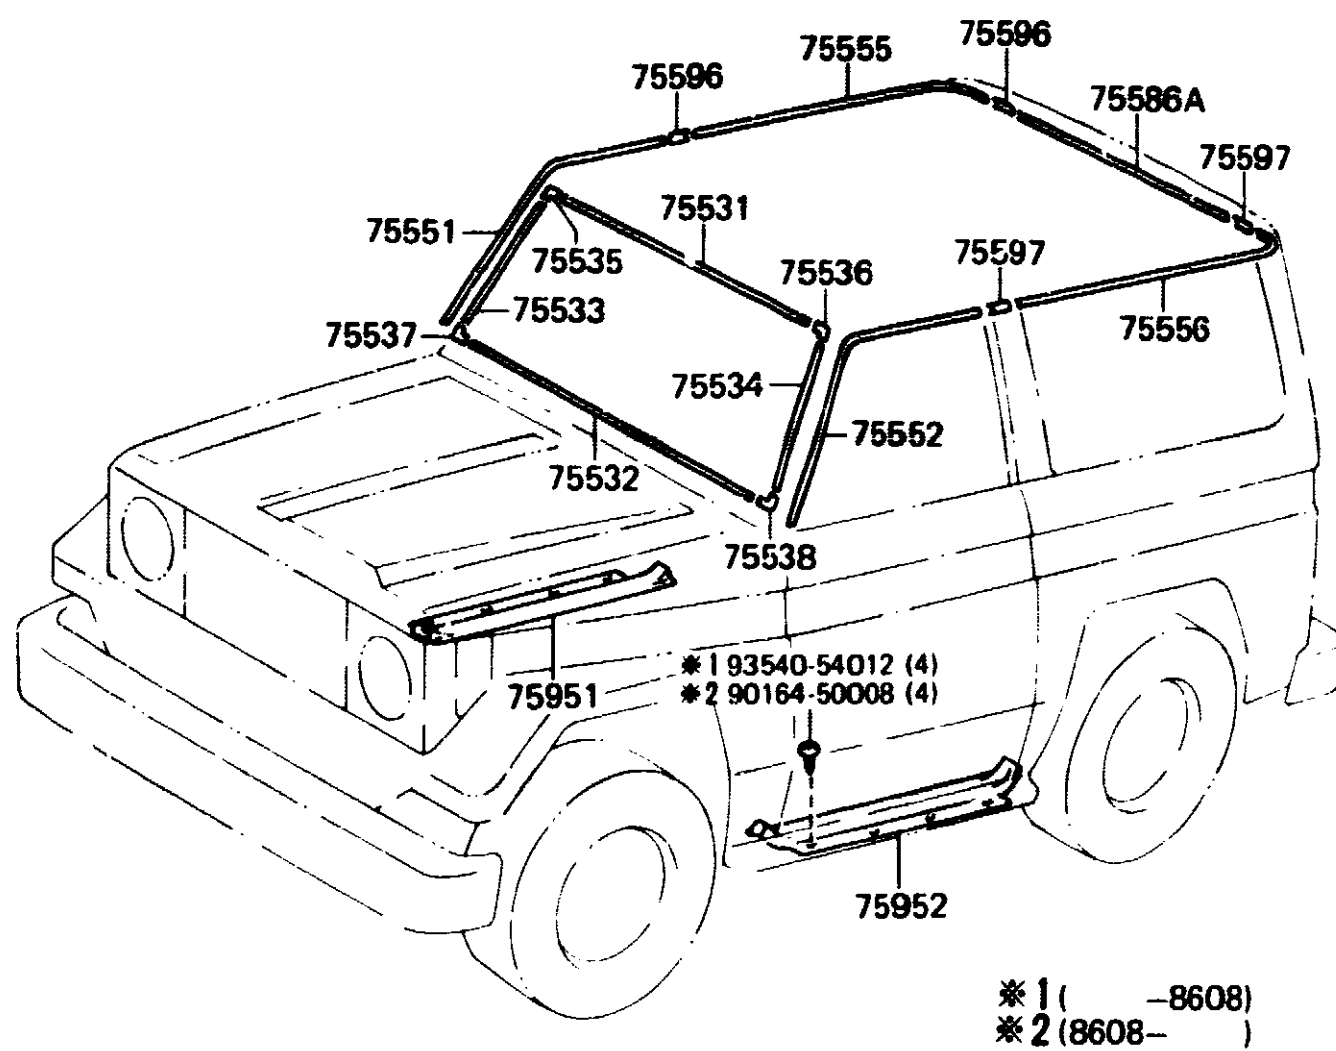

MB H646-B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	75-52 MOULDING						
8411-	BJ70	MOULDING, WINDSHIELD, UPPER		75531-90K00-	1	81	
8411-	BJ70	MOULDING, WINDSHIELD, LOWER		75535-90K00-	1	81	
8411-	BJ70	MOULDING, WINDSHIELD SIDE, RH		75533-90K00-	1	81	
8411-	BJ70	MOULDING, WINDSHIELD SIDE, LH		75533-90K00-	1	81	
8411-	BJ70	MOULDING, WINDSHIELD CORNER, UPPER RH		75541-90K00-	1	81	
8411-	BJ70	MOULDING, WINDSHIELD CORNER, UPPER LH		75541-90K00-	1	81	
8411-	BJ70	MOULDING, WINDSHIELD CORNER, LOWER RH		75543-90K00-	1	81	
8411-	BJ70	MOULDING, WINDSHIELD CORNER, LOWER LH		75543-90K00-	1	81	
8411-	BJ70	MOULDING, ROOF DRIP SIDE FINISH, FRONT RH		75505-90K00-	1	81	
8411-	BJ70	MOULDING, ROOF DRIP SIDE FINISH, FRONT LH		75506-90K00-	1	81	
8411-	BJ70	MOULDING, ROOF DRIP SIDE FINISH, REAR RH		75553-90K00-	1	81	
8411-	BJ70	MOULDING, ROOF DRIP SIDE FINISH, REAR LH		75554-90K00-	1	81	

FIG. 81-03

GENUINE TOYOTA PARTS

2-K7

M74-15-0696

GENUINE TOYOTA PARTS


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	+-----+ 81*28 +-----+ BJ70	SHADE, FRONT TURN SIGNAL LAMP, LH		81527-90K01-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO

(8411-)

GENUINE TOYOTA PARTS

ILLUST.NO. 20F2

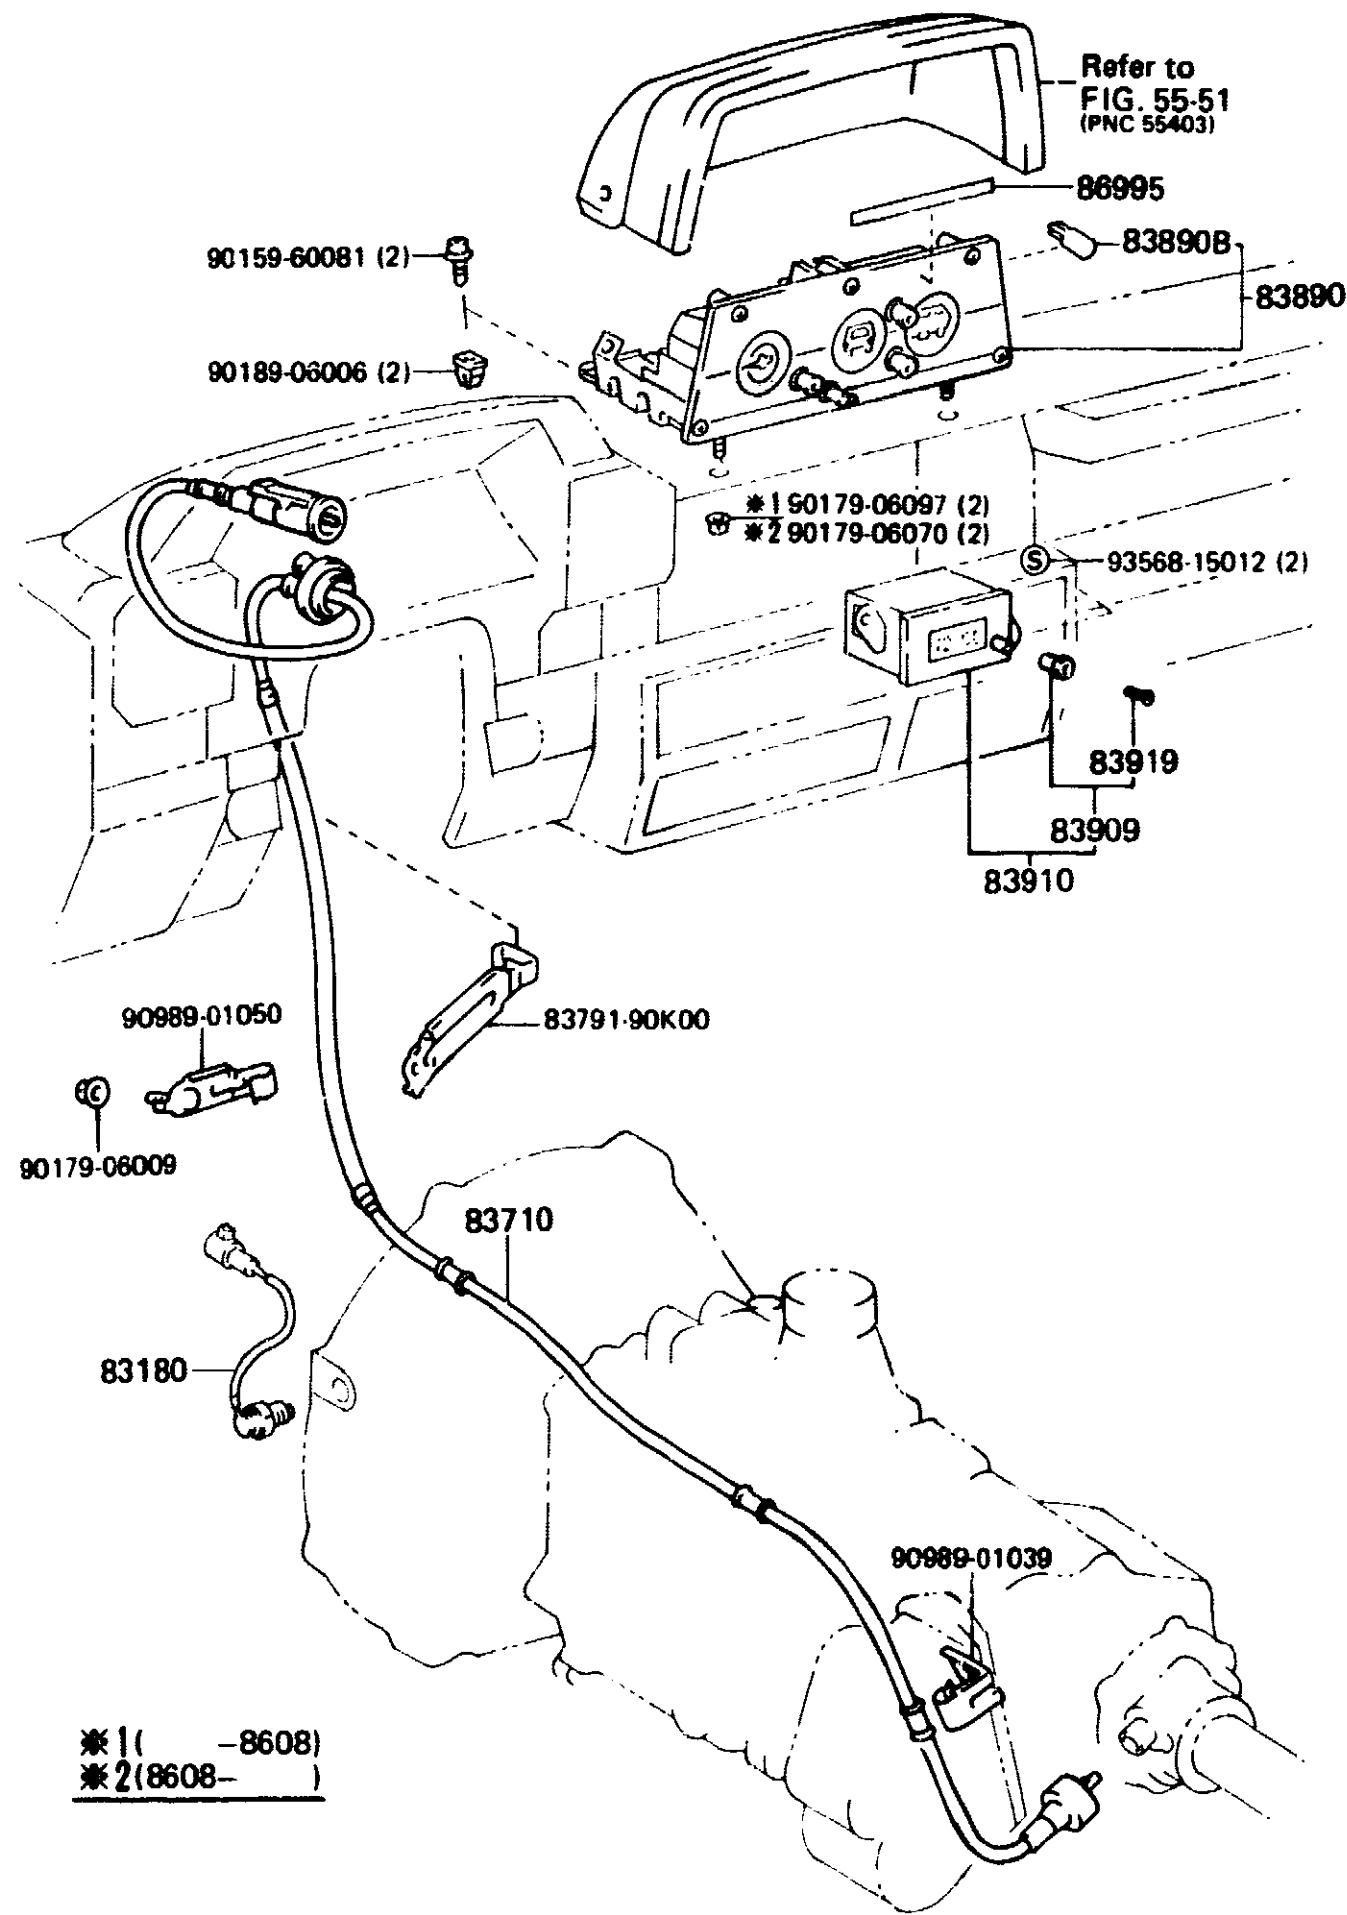

ME F431-C

MEF431C

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	83-01 METER						
	83100B	BULB, COMBINATION METER, NO.1					
8411-8510	BJ70	12V 3.4W		99132-12034-	1	81	100
8510-	BJ70	24V 3W		99134-12030-	10	101	
	83100G	GLASS, COMBINATION METER					
8411-	BJ70			83138-90K00-	1	81	
	83101	SOCKET SUB-ASSY, COMBINATION METER BULB					
8411-8510	BJ70			83101-20040-	1	81	100
8510-	BJ70			83101-89101-	10	101	
	83102	PLATE SUB-ASSY, COMBINATION METER CIRCUIT, NO.					
8411-8510	BJ70	W/TACHOMETER		83247-90K01-	1	81	100
8411-8510	BJ70			83247-90K06-	1	81	100
8510-8608	BJ70			83247-90K12-	1	101	140
8608-	BJ70			83247-90K26-	1	141	
	83110	SPEEDOMETER ASSY					
8411-8510	BJ70			83110-90K12-	1	81	100
8411-8608	BJ70	W/TACHOMETER		83110-90K06-	1	81	140
8608-	BJ70			83110-90K23-	1	141	
	83128	KNOB, TRIP COUNTER					
8411-	BJ70			83128-90K00-	1	81	
	83132	CASE, COMBINATION METER					
8411-8510	BJ70			83132-90K04-	1	81	100
8411-8608	BJ70	W/TACHOMETER		83132-90K00-	1	81	140
8608-	BJ70			83132-90K06-	1	141	
	83134A	COVER, COMBINATION GAGE					
8411-8510	BJ70			83134-90K01-	1	81	100
8411-8609	BJ70	W/TACHOMETER		83134-90K00-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
	+-----+ 85373 +-----+	HOSE, WINDSHIELD WASHER (FROM JOINT TO NOZZLE)					
8411-8510	BJ70	XH, L=140		85343-87002-	1	81	100
8411-8510	BJ70	XH, L=610			1	81	100
8510-	BJ70	XH, L=650		90099-33075-	1	101	

PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO

*H. L.=Cut hose to length as specified in remarks


FIG.87-16 HEATING & AIR CONDITIONING -
WATER PIPING

2-K10


M74-11-0176

(8411-)

(8411-)

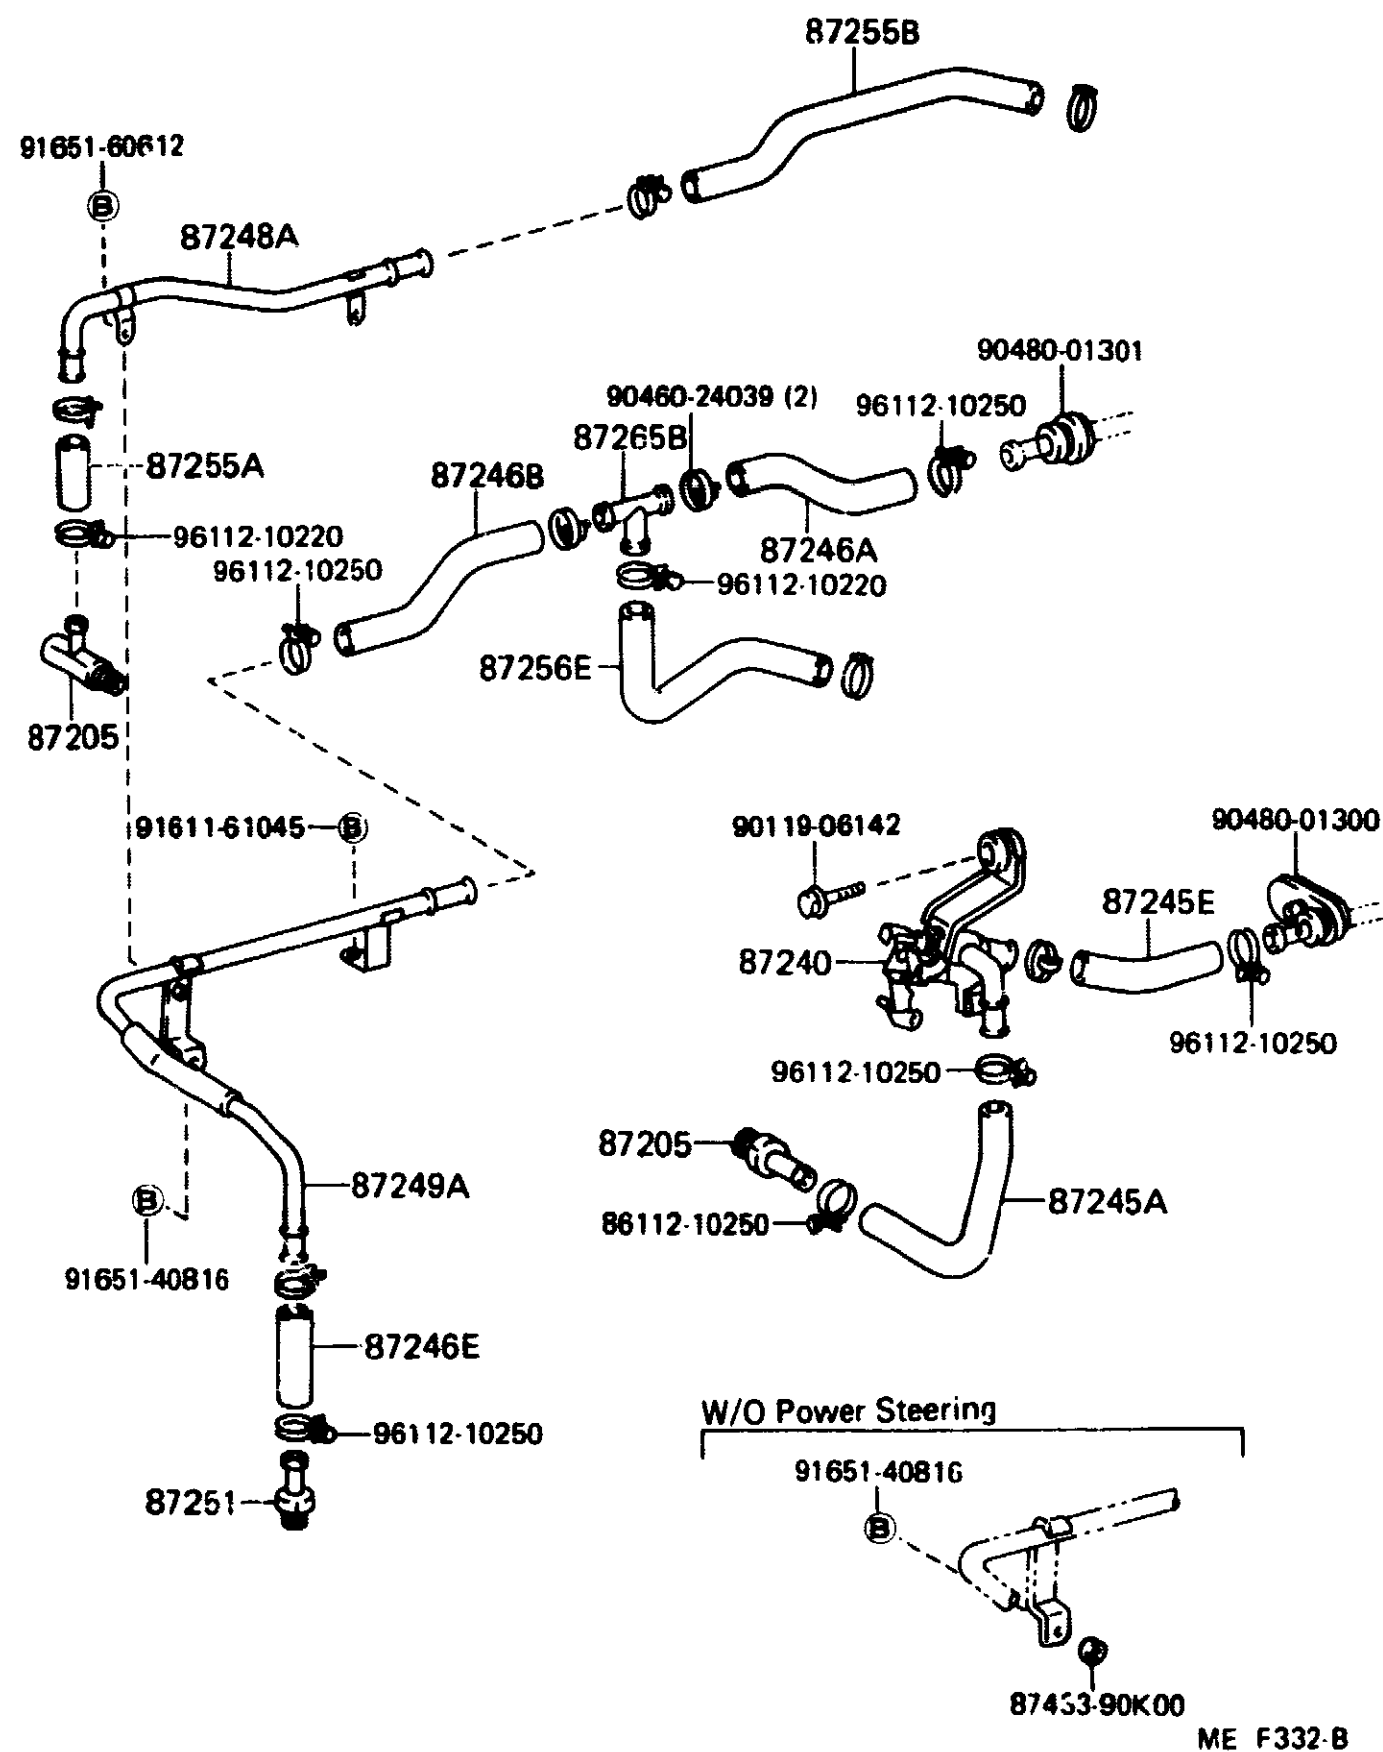

ME F332-B

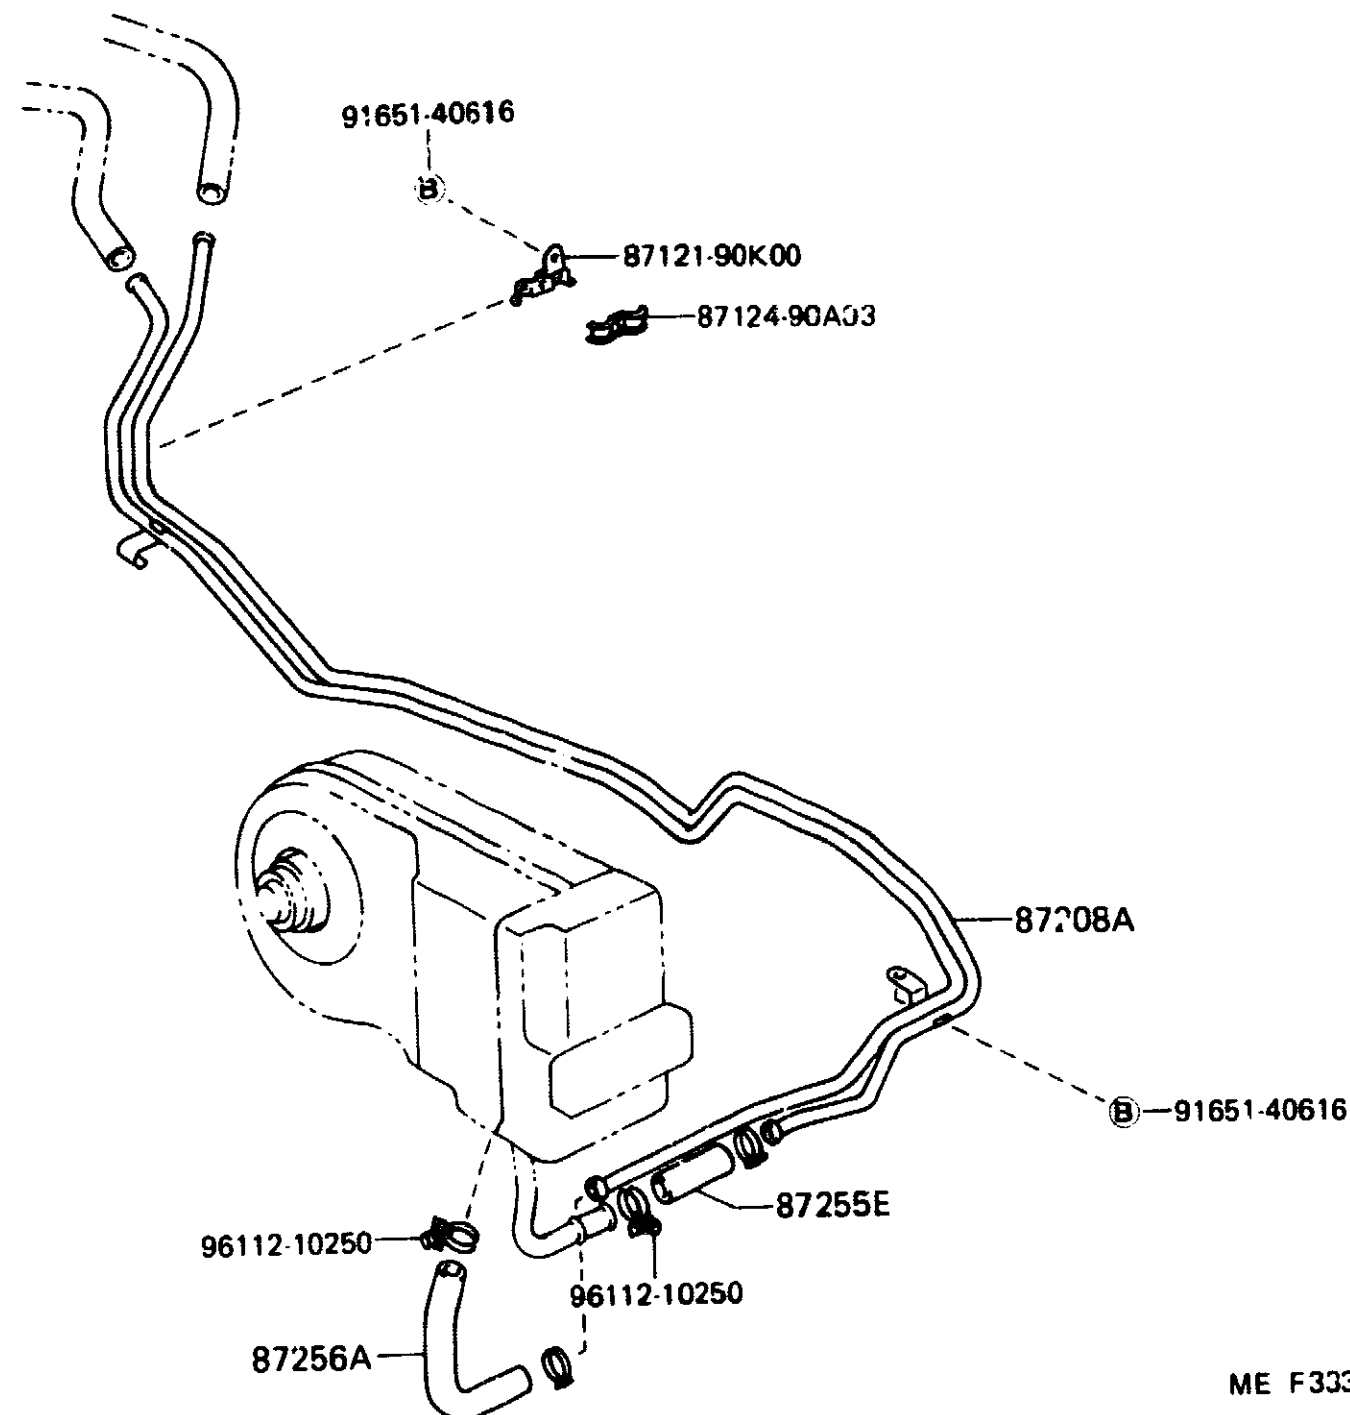

ME F333

MEF332B

MEF333

NOZZLE - PAD

K12

M74-26-0048

PAD - PIN


PART	NAME	LOCATION
NOZZLE, REAR WASHER	-----	2-L9
NOZZLE, SUB-ASSY OIL, NO.1	-----	1-I1
NOZZLE, WINDSHIELD WASHER	-----	2-J9
NUT (FOR BACKING PLATE TO REAR AXLE HOUSING SETTING)	-----	1-J10
NUT (FOR COUNTER GEAR SHAFT)	-----	1-E6
NUT (FOR DRIVE PINION COMPANION FLANGE FRONT)	-----	1-G8
NUT (FOR DRIVE PINION COMPANION FLANGE REAR)	-----	1-A8
NUT (FOR FRONT STABILIZER BAR)	-----	1-J11
NUT (FOR MANUAL TRANSMISSION OUTPUT SHAFT REAR SET)	-----	1-D6
NUT (FOR REAR WIPER ARM SETTING)	-----	2-I9
NUT (FOR RING PACKING SETTING)	-----	1-A4
NUT (FOR STEERING DAMPER)	-----	1-M9
NUT (FOR TRANSFER OUTPUT SHAFT)	-----	1-L6
NUT (FOR WIPER ARM SETTING)	-----	2-H9
NUT, ANTENNA	-----	2-C10
NUT, CAP (FOR CYLINDER HEAD COVER)	-----	1-G1
NUT, CASTLE (FOR TIE ROD END)	-----	1-K9
NUT, EXHAUST PIPE SET STUD BOLT	-----	1-D3
NUT, FRONT DIFFERENTIAL BEARING ADJUSTING	-----	1-G8
NUT, FRONT SPRING CENTER BOLT	-----	1-I11
NUT, FRONT WHEEL ADJUSTING	-----	1-K8
NUT, GOVERNOR IDLING SPRING SET	-----	1-H4
NUT, HEXAGON (FOR CONNECTING ROD BOLT)	-----	1-B2
NUT, HEXAGON (FOR CROSSSHAFT TO PITMAN ARM SETTING)	-----	1-J9
NUT, HEXAGON (FOR VALVE ADJUSTING)	-----	1-D2
NUT, HEXAGON (FOR SECTOR SHAFT TO PITMAN ARM SETTING)	-----	1-L9
NUT, HUB (FOR AXLE)	-----	1-E8
NUT, LOCK	-----	1-K9
NUT, LOCK, NO.1	-----	1-K9
NUT, NOZZLE RETAINING	-----	1-A4
NUT, REAR DIFFERENTIAL BEARING ADJUSTING	-----	1-B8
NUT, REAR SPRING CENTER BOLT	-----	1-L11
NUT, REAR WIPER LINK PIVOT, NO.1	-----	2-I9
NUT, SPARE WHEEL, HUB	-----	2-D1
NUT, STEERING WHEEL SET	-----	1-G9
NUT, THROTTLE	-----	2-H7
NUT, TIMER ROUND	-----	1-F4
NUT, WING (FOR AIR CLEANER)	-----	1-F3
NUT, WORM BEARING ADJUSTING SCREW LOCK	-----	1-K9
NUT, CASTLE (FOR RELAY ROD)	-----	1-K9
ORNAMENT SUB-ASSY, WHEEL HUB	-----	1-E8
OUTLET, WATER	-----	1-L2
PACKING (FOR RADIATOR DRAIN COCK)	-----	1-L2
PACKING, REAR FLOOR SERVICE HOLE	-----	2-L2
PACKING, SIDE WINDOW LOCK, NO.1	-----	2-C3
PACKING, TRANSMISSION COVER	-----	2-I2
PACKING, VACUUM PUMP	-----	1-J3
	-----	1-M3
PAD KIT, DISC BRAKE, FRONT	-----	1-H10
PAD, ACCELERATOR PEDAL	-----	2-G7
PAD, BACK DOOR HINGE	-----	2-F5
PAD, BRAKE PEDAL	-----	1-C10
PAD, CLUTCH PEDAL	-----	1-F5
PAD, FRONT SEAT BACK, LH (FOR SEPARATE TYPE)	-----	2-L5
PAD, FRONT SEAT BACK, RH (FOR SEPARATE TYPE)	-----	2-L5
PAD, FRONT SEAT CUSHION SILENCER, A	-----	2-L5
PAD, FRONT SEAT CUSHION, LH (FOR SEPARATE TYPE)	-----	2-L5
PAD, FRONT SEAT CUSHION, RH (FOR SEPARATE TYPE)	-----	2-L5
PAD, FUEL FILLER LID LOCK CYLINDER	-----	2-I5
PAD, HOOD HINGE, NO.1	-----	2-L1
PAD, LOCK CYLINDER	-----	2-I5
PAD, REAR SEAT BACK (FOR BENCH TYPE)	-----	2-L5
PAD, REAR SEAT BACK SILENCER, A	-----	2-L5
PAD, REAR SEAT CUSHION	-----	2-L5

PART	NAME	LOCATION
PAD, ROOF SILENCER, NO.1	-----	2-D4
PAD, ROOF SILENCER, NO.2	-----	2-D4
PAD, SPARE WHEEL BRACKET	-----	2-D1
PAD, WINDOW CENTER SASH	-----	2-J3
PAN SUB-ASSY, OIL	-----	1-I1
PAN, REAR FLOOR	-----	2-L2
PANEL SUB-ASSY, BACK DOOR	-----	2-D5
PANEL SUB-ASSY, BODY LOWER BACK	-----	2-L2
PANEL SUB-ASSY, BODY LOWER BACK, INNER	-----	2-L2
PANEL SUB-ASSY, COWL	-----	2-F2
PANEL SUB-ASSY, COWL SIDE, LH	-----	2-F3
PANEL SUB-ASSY, COWL SIDE, RH	-----	2-F3
PANEL SUB-ASSY, DASH	-----	2-A2
PANEL SUB-ASSY, FRONT DOOR, LH	-----	2-G4
PANEL SUB-ASSY, FRONT DOOR, RH	-----	2-G4
PANEL SUB-ASSY, FRONT FLOOR SIDE, LH	-----	2-I2
PANEL SUB-ASSY, FRONT FLOOR SIDE, RH	-----	2-I2
PANEL SUB-ASSY, HOOD SIDE, LH	-----	2-J1
PANEL SUB-ASSY, HOOD SIDE, RH	-----	2-J1
PANEL SUB-ASSY, INSTRUMENT	-----	2-C2
PANEL SUB-ASSY, INSTRUMENT CLUSTER FINISH	-----	2-C2
PANEL SUB-ASSY, ROOF SIDE, INNER LH	-----	2-G3
PANEL SUB-ASSY, ROOF SIDE, INNER RH	-----	2-G3
PANEL SUB-ASSY, ROOF WIND DEFLECTOR	-----	2-L3
PANEL SUB-ASSY, SLIDING ROOF OR REMOVABLE ROOF	-----	2-L3
PANEL SUB-ASSY, WINDSHIELD HEADER	-----	2-L3
PANEL, CONSOLE REAR END	-----	2-C3
PANEL, FRONT DOOR, OUTER LH	-----	2-G4
PANEL, FRONT DOOR, OUTER RH	-----	2-G4
PANEL, FRONT FENDER SIDE, LOWER	-----	2-K1
PANEL, FRONT VALANCE	-----	2-K1
PANEL, INSTRUMENT CLUSTER FINISH, CENTER NO.1	-----	2-C2
PANEL, INSTRUMENT CLUSTER FINISH, CENTER NO.2	-----	2-D2
PANEL, QUARTER WHEEL HOUSE, INNER LH	-----	2-G3
PANEL, QUARTER WHEEL HOUSE, INNER RH	-----	2-G3
PANEL, QUARTER WHEEL HOUSE, OUTER LH	-----	2-G3
PANEL, QUARTER WHEEL HOUSE, OUTER RH	-----	2-G3
PANEL, QUARTER, LH	-----	2-G3
PANEL, QUARTER, RH	-----	2-G3
PANEL, REAR FLOOR SIDE, REAR LH	-----	2-L2
PANEL, REAR FLOOR SIDE, REAR RH	-----	2-L2
PANEL, ROCKER, OUTER LH	-----	2-G3
PANEL, ROCKER, OUTER RH	-----	2-G3
PANEL, ROOF	-----	2-L3
PAWL ASSY, TILT STEERING	-----	1-A9
PEDAL SUB-ASSY, BRAKE	-----	1-C10
PEDAL SUB-ASSY, CLUTCH	-----	1-F5
PICKUP, TACHOMETER	-----	2-L8
PIECE, BALANCE (FOR PROPELLER SHAFT)	-----	1-K7
PIECE, BALANCE (FOR REAR BRAKE DRUM)	-----	1-D8
PIECE, DISTANCE (FOR NOZZLE)	-----	1-A4
PIECE, GEAR SPLINE, NO.5	-----	1-D6
PILLAR SUB-ASSY, CENTER BODY, INNER LH	-----	2-G3
PILLAR SUB-ASSY, CENTER BODY, INNER RH	-----	2-G3
PILLAR SUB-ASSY, FRONT BODY, INNER LH	-----	2-F3
PILLAR SUB-ASSY, FRONT BODY, INNER RH	-----	2-F3
PILLAR SUB-ASSY, FRONT BODY, OUTER LH	-----	2-F3
PILLAR SUB-ASSY, FRONT BODY, OUTER RH	-----	2-F3
PIN	-----	1-C5
PIN (FOR BACK DOOR CHECK)	-----	2-E5
PIN (FOR FRONT DOOR CHECK)	-----	2-I4
PIN (FOR FUEL TANK BAND)	-----	2-F7
PIN (FOR HIGH & LOW SHIFT ROD)	-----	1-G7
PIN (FOR PUSH ROD)	-----	1-C10

ILLUSTRATED INDEX


2-D8 (82-01)

1

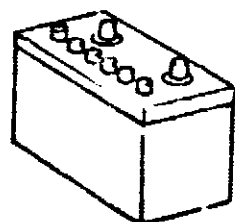

Battery & Cable


2-F8 (82-02)

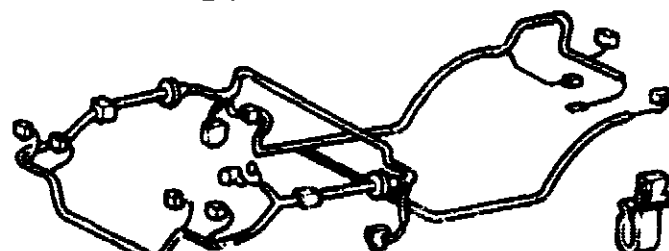

Wiring & Clamp

2


2-J8 (83-01)

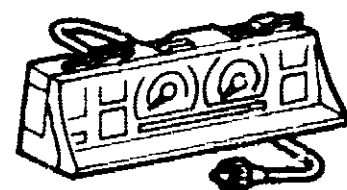

Meter

3


2-M8 (83-02)

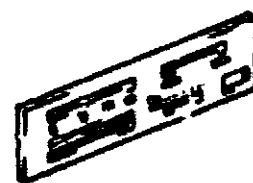

Indicator

4


2-A9 (84-01)

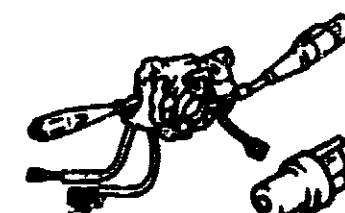

Switch & Relay

5


2-G9 (84-06)

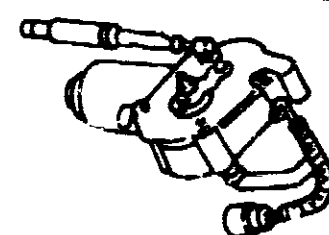

EDIC


6

ELECTRICAL GROUP (2/2)

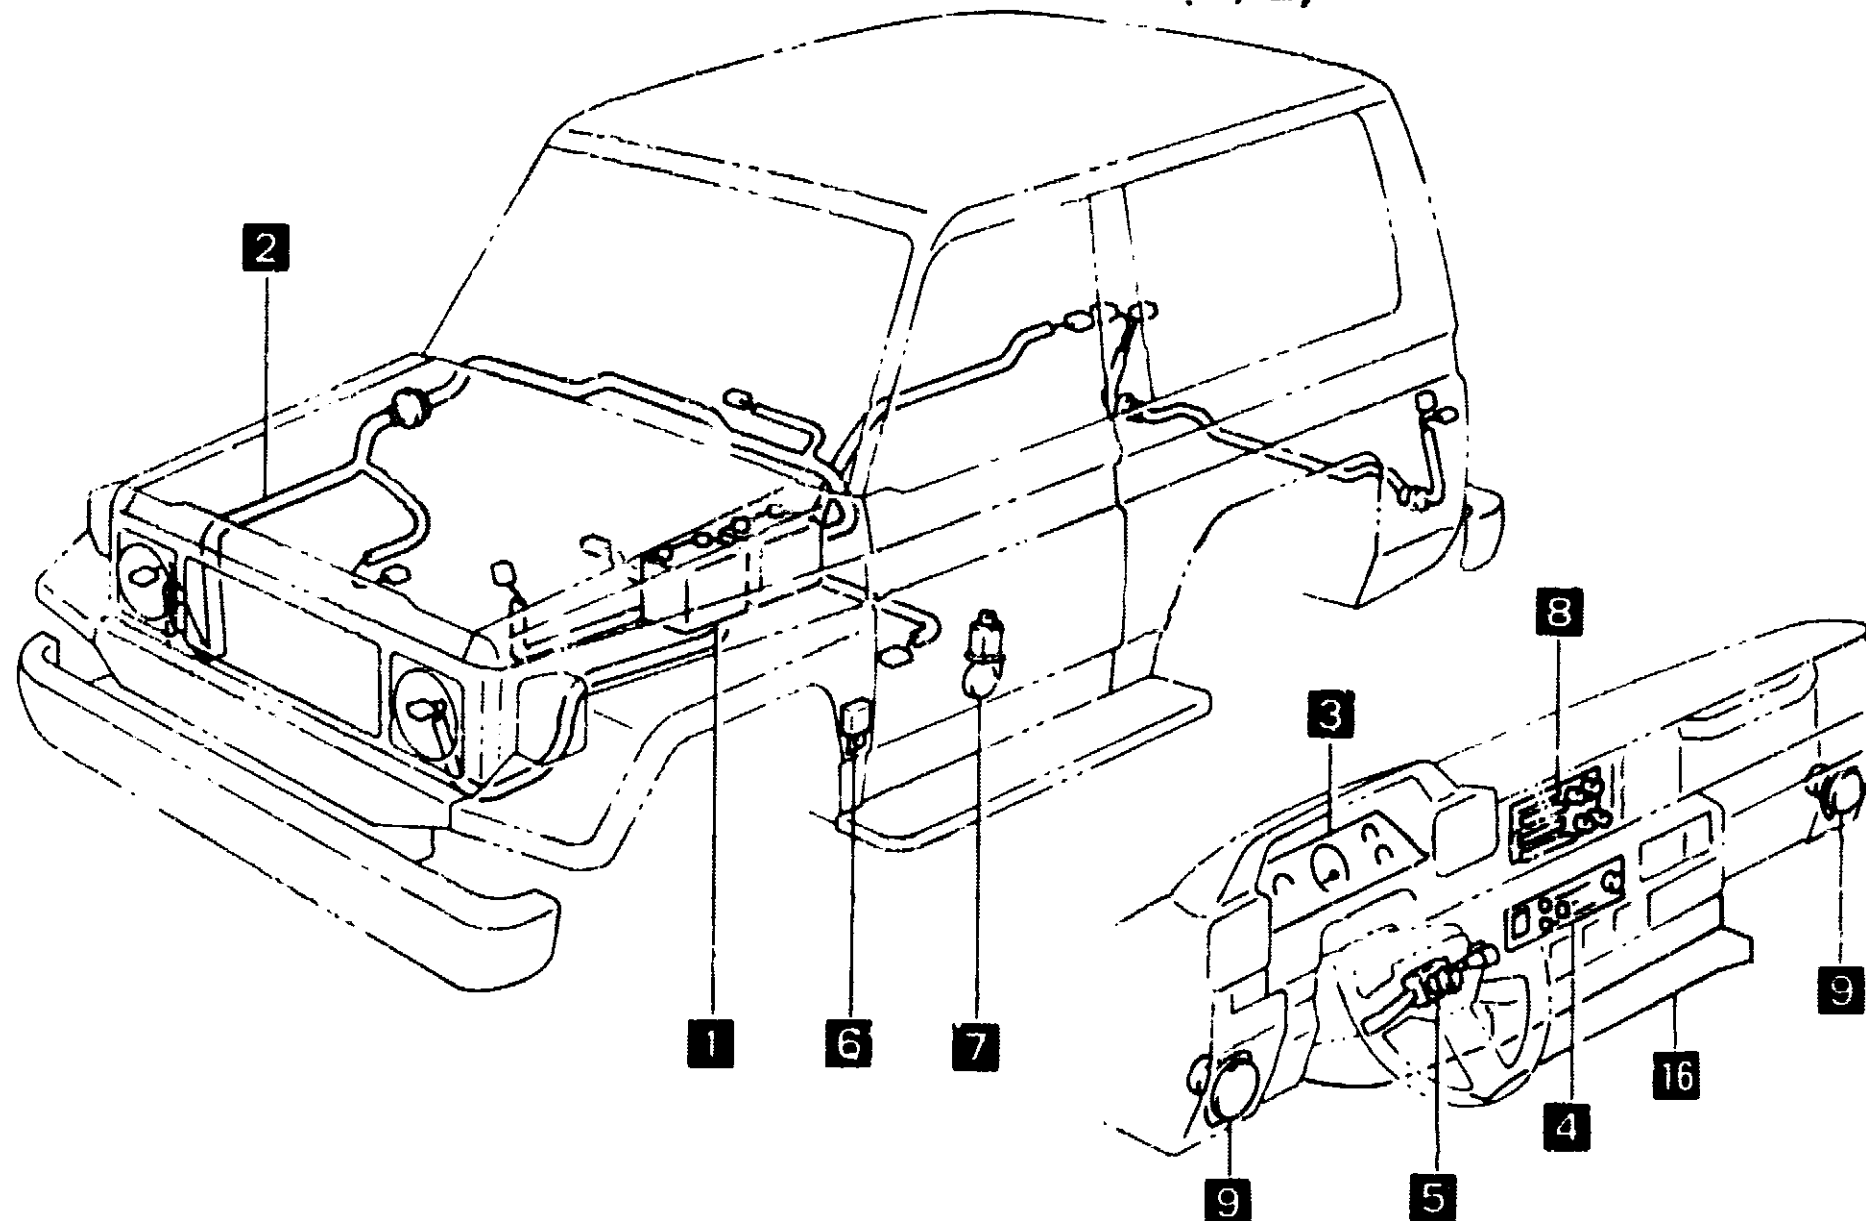

2-M9 (85-11)


7

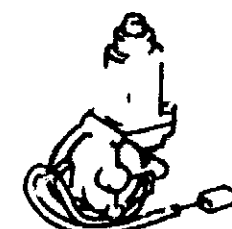

Door Motor & Door Solenoid

2-A10 (86-01)


8

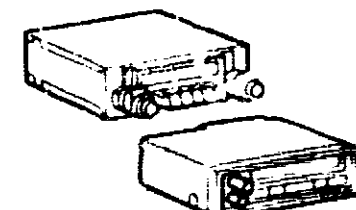

Radio & Tape Player

2-B10 (86-02)

9

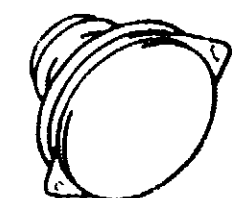


Speaker

2-K10 (87-16) Piping

2-G10 (87-12) Unit

10

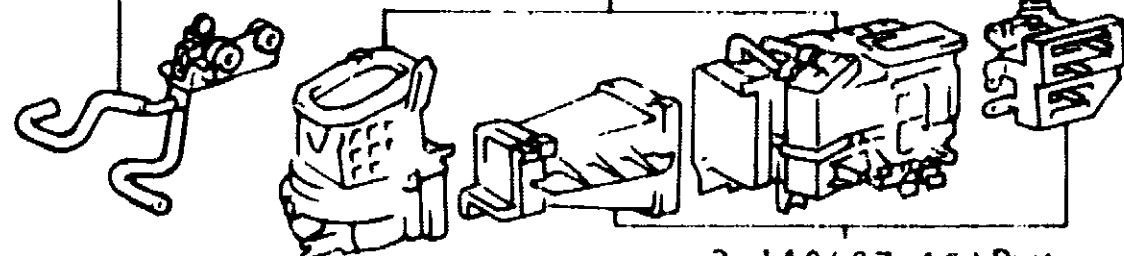


2-F10
(87-11)
Set

2-I10 (87-15) Duct

(8411-)

GENUINE TOYOTA PARTS

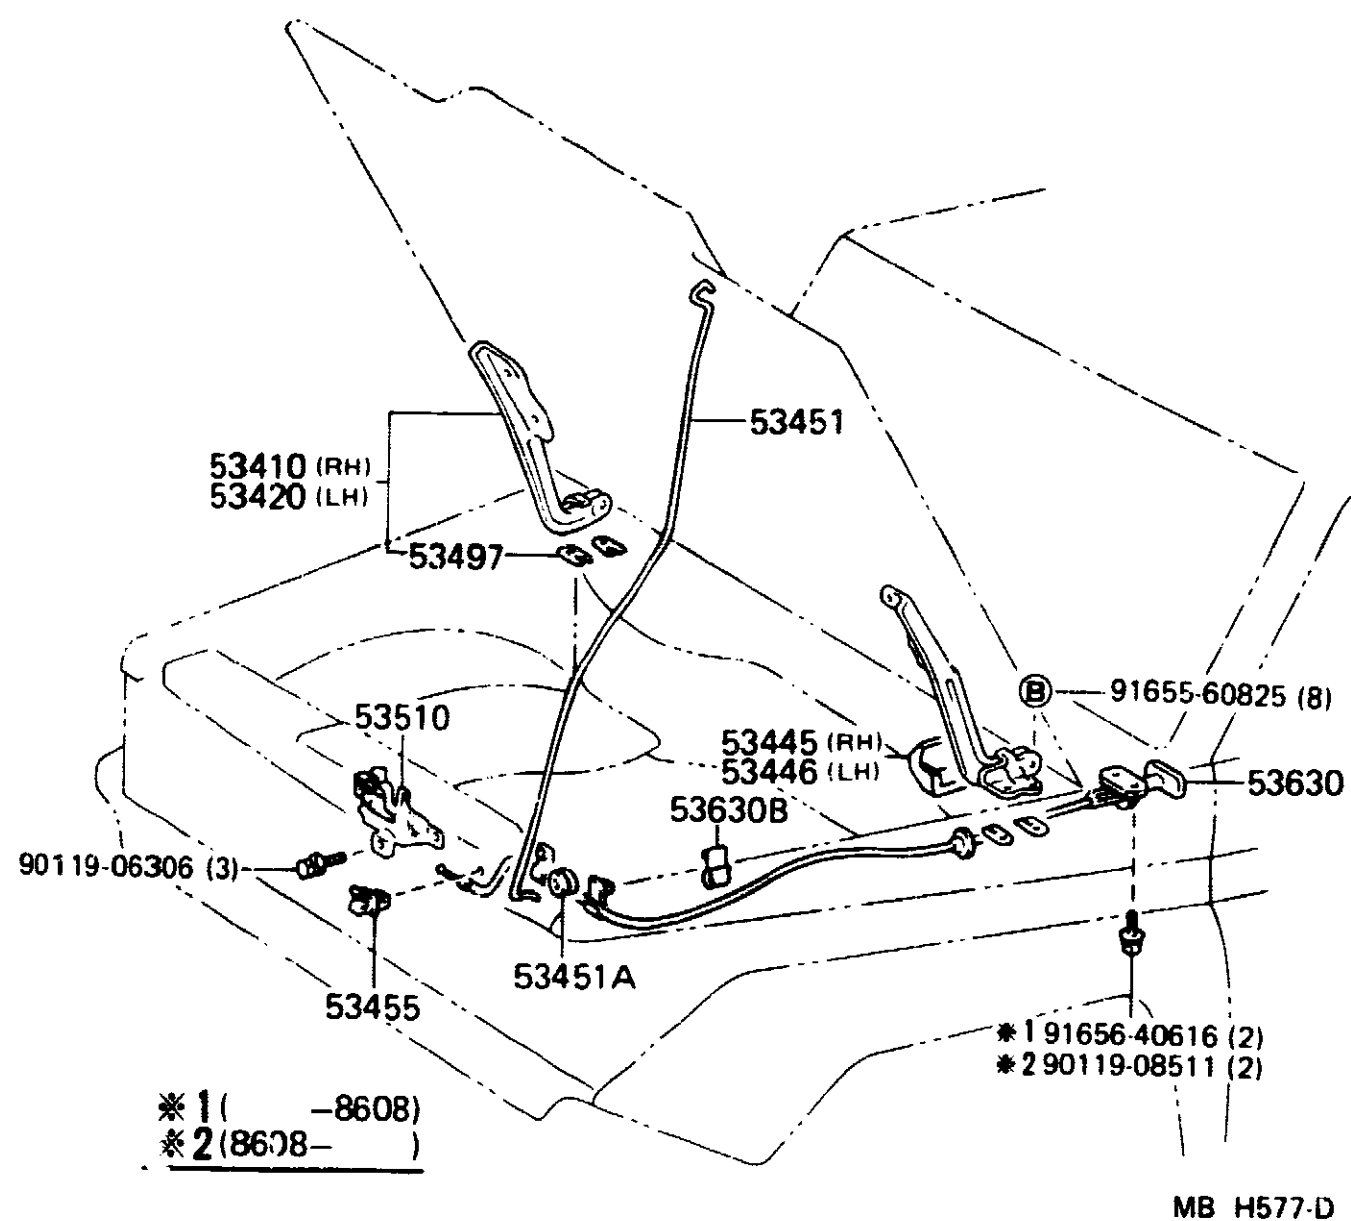

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	53-54 HOOD LOCK & HINGE						
8411-	BJ70	HINGE ASSY, HOOD, RH		53410-90K00-	1	81	
8411-	BJ70	HINGE ASSY, HOOD, LH		53420-90K00-	1	81	
8411-8510	BJ70	COVER, HOOD HINGE, RH		53445-90K00-	1	81	100
8411-8510	BJ70	COVER, HOOD HINGE, LH		53446-90K00-	1	81	100
8411-	BJ70	ROD, HOOD SUPPORT		53451-90K01-	1	81	
8411-	BJ70	GROMMET (FOR HOOD SUPPORT ROD)		90480-15296-	1	81	
8411-	BJ70	CLAMP, HOOD SUPPORT ROD		53455-14020-	1	81	
8411-	BJ70	PAD, HOOD HINGE, NO. 1		53497-90K00-	4	81	
8411-	BJ70	LOCK ASSY, HOOD		53510-90K01-	1	81	
8411-8608	BJ70	CABLE ASSY, HOOD LOCK CONTROL		53630-90K01-	1	81	140
8608-	BJ70			53630-90K02-	1	141	
8411-	BJ70	CLAMP (FOR HOOD LOCK CONTROL CABLE)		69749-12010-	4	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	58-52	REAR FLOOR PANEL & REAR FLOOR MEMBER					
8411-	+	+					
	57627C	COVER, REAR FLOOR SIDE MEMBER, RH		57627-90K00-	1	81	
8411-	+	+					
	57628C	COVER, REAR FLOOR SIDE MEMBER, LH		57628-90K00-	1	81	
8411-	+	+					
	57663B	PANEL, REAR FLOOR SIDE, REAR RH		57663-90K00-	1	81	
8411-	+	+					
	57664B	PANEL, REAR FLOOR SIDE, REAR LH		57664-90K00-	1	81	
8411-	+	+					
	58247C	REINFORCEMENT, REAR SEAT CUSHION HINGE, RH		58247-90K00-	1	81	
8411-	+	+					
	58248C	REINFORCEMENT, REAR SEAT CUSHION HINGE, LH		58248-90K02-	1	81	
8411-	+	+					
	58266B	BRACKET, FUEL TUBE CLAMP		58266-90K00-	2	81	
8411-	+	+					
	58307	PANEL SUB-ASSY, BODY LOWER BACK		58307-90K01-	1	81	140
8411-8608	+	+					
	58307	PANEL SUB-ASSY, BODY LOWER BACK, INNER		58307-90K11-	1	101	140
8510-8608	+	+					
	58307	PANEL SUB-ASSY, BODY LOWER BACK, INNER		58307-90K17-	1	141	
8608-	+	+					
	58308	PANEL SUB-ASSY, BODY LOWER BACK, INNER		58308-90K00-	1	81	
8411-	+	+					
	58311	PAN, REAR FLOOR		58311-90K02-	1	81	
8411-	+	+					
	58325E	COVER, REAR FLOOR SERVICE HOLE		58325-90K00-	1	81	
8411-	+	+					

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	+	+					
	58336B	REINFORCEMENT, REAR FLOOR PAN		58336-90K00-	1	81	
8411-	+	+					
	58339B	PACKING, REAR FLOOR SERVICE HOLE		58339-90K00-	1	81	
8411-	+	+					
	58343A	BRACKET, REAR FLOOR HEAT INSULATOR, NO. 2		58346-90K00-	2	81	
8411-	+	+					
	58351B	REINFORCEMENT, REAR FLOOR PANEL, RH		58351-90K00-	1	81	
8411-	+	+					
	58352B	REINFORCEMENT, REAR FLOOR PANEL, LH		58352-90K00-	1	81	
8411-	+	+					
	58357A	REINFORCEMENT, JACK CARRIER		58357-90K00-	1	81	
8411-	+	+					
	64745C	COVER, LOWER BACK SERVICE HOLE, RH		64745-90K00-	1	81	
8411-	+	+					
	64746C	COVER, LOWER BACK SERVICE HOLE, LH		64746-90K00-	1	81	
8411-	+	+					
	66301	HOOK SUB-ASSY, ROPE		66301-90K00-	1	101	140
8510-8608	+	+					
	76617	MUDGUARD, LOWER BACK PANEL, FRONT RH		76617-90K00-	1	81	
8411-8606	+	+					
	76618	MUDGUARD, LOWER BACK PANEL, FRONT LH		76618-90K00-	1	81	
8606-	+	+					
	76618	MUDGUARD, LOWER BACK PANEL, FRONT LH		76618-90K01-	1		
8411-8606	+	+					
	76618	MUDGUARD, LOWER BACK PANEL, FRONT LH		76618-90K01-	1		
8606-	+	+					

FIG. 61-53

GENUINE TOYOTA PARTS

2-L3

M74-15-0671


GENUINE TOYOTA PARTS

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	61-53 ROOF PANEL & BACK PANEL						
8411-8510	BJ70	63102A PANEL SUB-ASSY, WINDSHIELD HEADER		63102-90K00-	1	81	100
8510-	BJ70			63102-90K02-	1	101	
8411-8608	BJ70	63105A FRAME SUB-ASSY, BACK DOOR OPENING		63105-90K00-	1	81	140
8608-	BJ70			63105-90K08-	1	141	
8411-	BJ70	63111 PANEL, ROOF		63111-90K00-	1	81	
8411-	BJ70	W/SUN ROOF		63111-90K03-	1	81	
8411-	BJ70	63142 REINFORCEMENT, ROOF PANEL, NO. 2		63142-30010-	1	31	
8411-	BJ70	63143A REINFORCEMENT, ROOF PANEL		63141-90K00-	2	81	
8411-	BJ70	63201A PANEL SUB-ASSY, SLIDING ROOF OR REMOVABLE ROOF		63201-30010-	1	81	
8411-8506	BJ70	63203A HOUSING SUB-ASSY, SLIDING ROOF OR REMOVABLE ROOF		63203-90K00-	1	81	
8506-	BJ70			63250-90K00-	1		
8411-	BJ70	63207 RAIL SUB-ASSY, SLIDING ROOF GUIDE, RH		63207-22010-	1	81	
8411-	BJ70	63208 RAIL SUB-ASSY, SLIDING ROOF GUIDE, LH		63208-22010-	1	81	
8411-8504	BJ70	63209 PANEL SUB-ASSY, ROOF WIND DEFLECTOR		63209-30010-	1	81	
8504-	BJ70			63209-90A01-	1		

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-8506	BJ70	63218A HOSE (FOR SLIDING OR REMOVABLE ROOF DRAIN)		63249-90K00-	2	81	
8411-8506	BJ70			63249-90K01-	2	81	
8506-8510	BJ70			63249-90K02-	2		100
8506-	BJ70				2		
8510-	BJ70			63249-90K03-	2	101	
8411-	BJ70	63221 CASING, SLIDING ROOF CABLE GUIDE		63221-22010-	1	81	
8411-	BJ70	63223 CABLE, SLIDING ROOF DRIVE, RH		63223-30010-	1	81	
8411-	BJ70	63224 CABLE, SLIDING ROOF DRIVE, LH		63224-30010-	1	81	
8411-	BJ70	63251 WEATHERSTRIP, SLIDING ROOF PANEL OR REMOVABLE ROOF		63251-30010-	1	81	
8411-	BJ70	63255 COVER, SLIDING ROOF GUIDE RAIL, RH		63255-22020-	1	81	
8411-	BJ70	63256 COVER, SLIDING ROOF GUIDE RAIL, LH		63255-22020-	1	81	
8411-8510	BJ70	63260A GEAR SUB-ASSY, SLIDING ROOF DRIVE		63260-90A02-	1	81	100
8510-	BJ70			63260-90A03-	1	101	
8411-	BJ70	63261 SHOE, SLIDING ROOF, FRONT		63261-22010-	2	81	
8411-	BJ70	63267A PROTECTOR, SLIDING ROOF WEATHERSTRIP, RH		63267-30010-	1	81	
8411-	BJ70	63268A PROTECTOR, SLIDING ROOF WEATHERSTRIP, LH		63268-30010-	1	81	

GENUINE TOYOTA PARTS

(8411-)

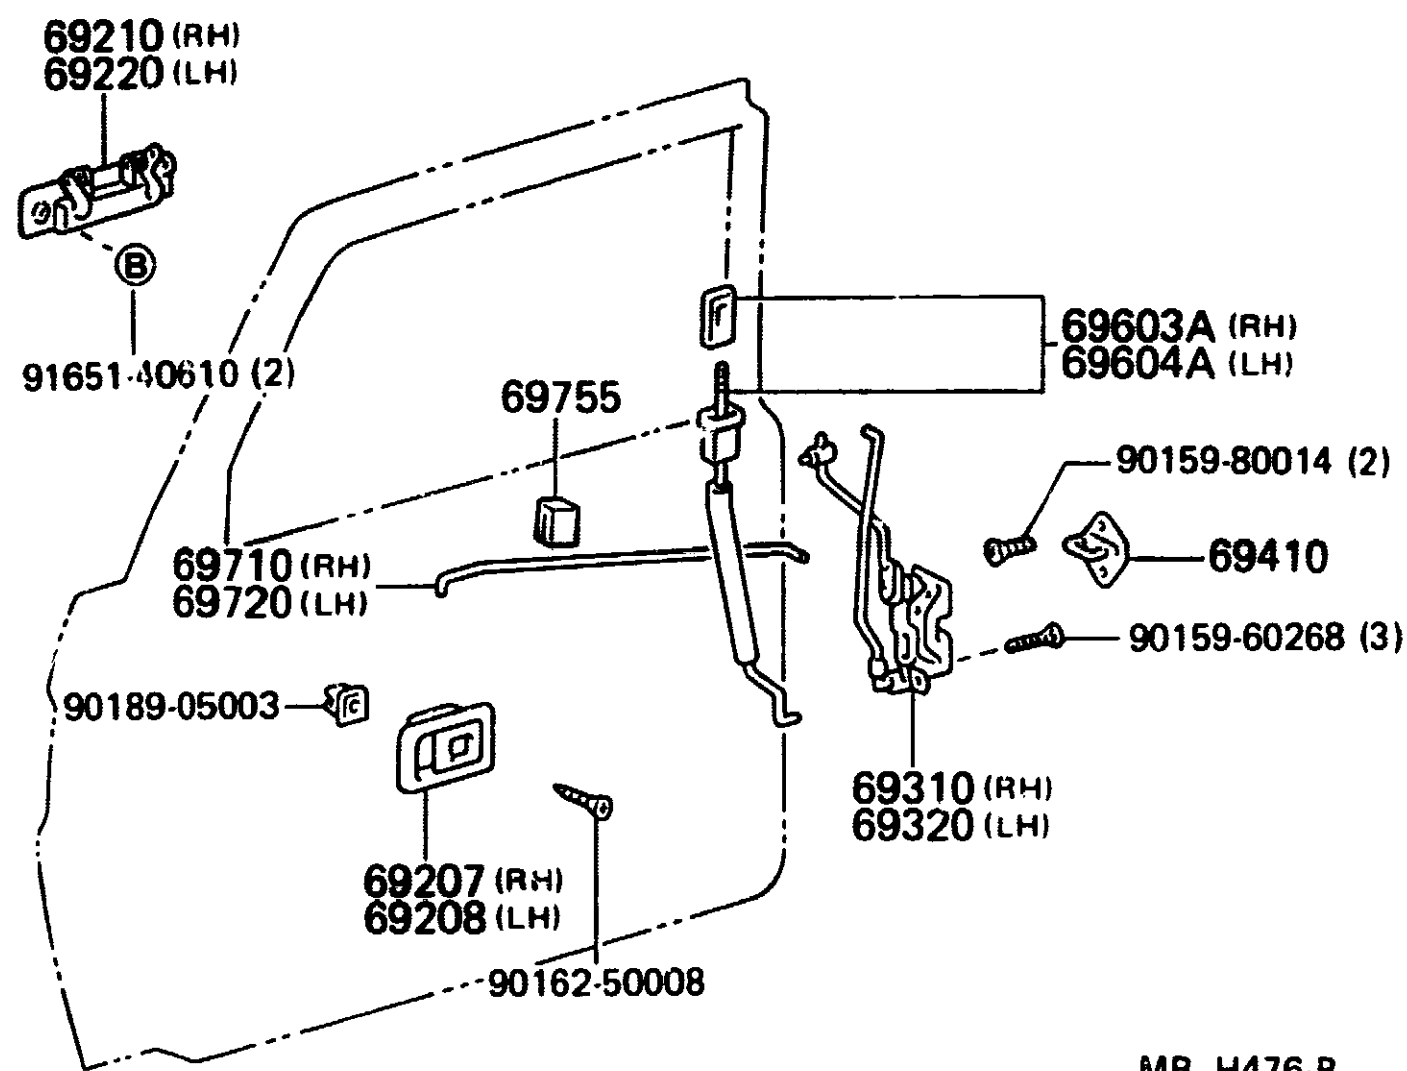

MB H476-B

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	67-53 FRONT DOOR LOCK & HANDLE						
	69207	HANDLE SUB-ASSY, FRONT DOOR INSIDE, RH					
8411-	BJ70	GRAY		69205-10040-03	1	81	
8411-	BJ70	BROWN		69205-10040-06	1	81	
	69208	HANDLE SUB-ASSY, FRONT DOOR INSIDE, LH					
8411-	BJ70	GRAY		69206-10040-03	1	81	
8411-	BJ70	BROWN		69206-10040-06	1	81	
	69210	HANDLE ASSY, FRONT DOOR, OUTSIDE RH					
8411-	BJ70			69210-90K00-	1	81	
	69220	HANDLE ASSY, FRONT DOOR, OUTSIDE LH					
8411-	BJ70			69220-90K00-	1	81	
	69310	LOCK ASSY, FRONT DOOR, RH					
8411-	BJ70			69310-90K00-	1	81	
	69320	LOCK ASSY, FRONT DOOR, LH					
8411-	BJ70			69320-90K00-	1	81	
	69410	PLATE ASSY, FRONT DOOR LOCK STRIKER					
8411-	BJ70			69410-87001-	2	81	
	69603A	ROD SUB-ASSY, FRONT DOOR LOCK REMOTE CONTROL, RH					
8411-	BJ70	GRAY		69603-90K00-03	3	81	
8411-	BJ70	BROWN		69603-90K00-06	3	81	
	69604A	ROD SUB-ASSY, FRONT DOOR LOCK REMOTE CONTROL, LH					
8411-	BJ70	GRAY		69604-90K00-03	1	81	
8411-	BJ70	BROWN		69604-90K00-06	1	81	
	69710	LINK ASSY, FRONT DOOR OPEN CONTROL, RH					
8411-	BJ70			69711-90K00-	1	81	
	69720	LINK ASSY, FRONT DOOR OPEN CONTROL, LH					
8411-	BJ70			69712-90K00-	1	81	

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
		71075B COVER, REAR SEAT CUSHION (FOR BENCH TYPE)					
8411-8510	BJ70	VL,GRAY		71075-90K06-03	1	81	100
8411-8510	BJ70	VL,BEIGE		71075-90K06-05	1	81	100
8411-	BJ70	FB,GRAY		71075-90K07-03	1	81	
8411-	BJ70	FB,BEIGE		71075-90K07-05	1	81	
		71077B COVER, REAR SEAT BACK (FOR BENCH TYPE)					
8411-8510	BJ70	VL,GRAY		71077-90K08-03	1	81	100
8411-8510	BJ70	VL,BEIGE		71077-90K08-05	1	81	100
8411-	BJ70	FB,GRAY		71077-90K09-03	1	81	
8411-	BJ70	FB,BEIGE		71077-90K09-05	1	81	
		71222 LEG, REAR SEAT					
8411-	BJ70			71033-90K02-01	1	81	
		71324A CUSHION, REAR SEAT					
8411-	BJ70			71324-90K00-	2	81	
		71381A BRACKET, REAR SEAT CUSHION SET, RH					
8411-	BJ70			71381-90K02-	1	81	
		71382A BRACKET, REAR SEAT CUSHION SET, LH					
8411-	BJ70			71308-90K00-	1	81	
		71396A PLATE, REAR SEAT BAND HOOK					
8411-	BJ70			71396-90K00-	1	81	
		71511S PAD, FRONT SEAT CUSHION, RH (FOR SEPARATE TYPE)					
8411-	BJ70			71501-90K02-	1	81	
		71512S PAD, FRONT SEAT CUSHION, LH (FOR SEPARATE TYPE)					
8411-	BJ70			71502-90K02-	1	81	
		71521 PAD, FRONT SEAT CUSHION SILENCER, A					
8411-	BJ70			71521-90K00-	4	81	


PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
		71551S PAD, FRONT SEAT BACK, RH (FOR SEPARATE TYPE)					
8411-	BJ70			71505-90K02-	1	81	
		71552S PAD, FRONT SEAT BACK, LH (FOR SEPARATE TYPE)					
8411-	BJ70			71506-90K02-	1	81	
		71610S SPRING ASSY, FRONT SEAT CUSHION, RH (FOR SEPARATE TYPE)					
8411-	BJ70			71610-90K00-	1	81	
8411-	BJ70	SUSPENSION SEAT		71610-90K01-	1	81	
		71611 PAD, REAR SEAT CUSHION					
8411-	BJ70			71611-90K03-	1	81	
		71620S SPRING ASSY, FRONT SEAT CUSHION, LH (FOR SEPARATE TYPE)					
8411-	BJ70			71620-90K00-	1	81	
8411-	BJ70	SUSPENSION SEAT		71620-90K01-	1	81	
		71630S SPRING ASSY, FRONT SEAT BACK, RH (FOR SEPARATE TYPE)					
8411-	BJ70			71013-90K03-	1	81	
		71640S SPRING ASSY, FRONT SEAT BACK, LH (FOR SEPARATE TYPE)					
8411-	BJ70			71014-90K03-	1	81	
		71651B PAD, REAR SEAT BACK (FOR BENCH TYPE)					
8411-8510	BJ70			71507-90K02- (71507-90K10-)	1	81	100
8510-	BJ70			71507-90K10-	1	101	
		71671 PAD, REAR SEAT BACK SILENCER, A					
8510-	BJ70			71671-90K00-	4	101	
		71771A BOARD, FRONT SEAT BACK					
8411-	BJ70			71771-90K00-	2	81	
		71812 RING, HOG, SMALL					
8411-	BJ70			90468-18071-	53	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
	+-----+ 75571	MOULDING, BACK WINDOW, UPPER					
8411-	BJ70	RH		75571-90K00-	1	81	
8411-	BJ70	LH		75572-90K00-	1	81	
	+-----+ 75572	MOULDING, BACK WINDOW, LOWER					
8411-	BJ70	RH		75575-90K00-	1	81	
8411-	BJ70	LH		75576-90K00-	1	81	
	+-----+ 75573	MOULDING, BACK WINDOW SIDE, RH					
8411-	BJ70			75589-90K00-	4	81	
	+-----+ 75574	MOULDING, BACK WINDOW SIDE, LH					
8411-	BJ70			75589-90K00-	4	81	
	+-----+ 75575	MOULDING, BACK WINDOW CORNER, UPPER RH					
8411-	BJ70			75581-90K00-	1	81	
	+-----+ 75576	MOULDING, BACK WINDOW CORNER, UPPER LH					
8411-	BJ70			75581-90K00-	1	81	
	+-----+ 75577	MOULDING, BACK WINDOW CORNER, LOWER RH					
8411-	BJ70			75583-90K00-	1	81	
	+-----+ 75578	MOULDING, BACK WINDOW CORNER, LOWER LH					
8411-	BJ70			75583-90K00-	1	81	
	+-----+ 75585	MOULDING, BACK WINDOW MOULDING JOINT, CENTER					
8411-	BJ70			75585-90K00-	4	81	
	+-----+ 75586A	MOULDING, ROOF DRIP, REAR					
8411-	BJ70			75586-90K00-	1	31	
	+-----+ 75589	MOULDING, BACK WINDOW OUTSIDE CENTER					
8411-	BJ70			75589-90K00-	2	81	
	+-----+ 75596	COVER, ROOF DRIP SIDE FINISH MOULDING JOINT, R					
8411-	BJ70			75596-90A00-	2	81	

PROD. DATE	MODELS	DESCRIPTION	R/F	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
8411-	+-----+ 75597	COVER, ROOF DRIP SIDE FINISH MOULDING JOINT, L		75596-90A00- ^H	2	81	
	BJ70						
8411-	+-----+ 75951	PLATE, FRONT DOOR SCUFF, OUTSIDE RH		67913-90K00-03	1	81	
	BJ70						
8411-	BJ70	BROWN		67913-90K00-06	1	81	
8411-	+-----+ 75952	PLATE, FRONT DOOR SCUFF, OUTSIDE LH		67913-90K00-03	1	81	
	BJ70						
8411-	BJ70	BROWN		67913-90K00-06	1	81	

GENUINE TOYOTA PARTS

(8411-)

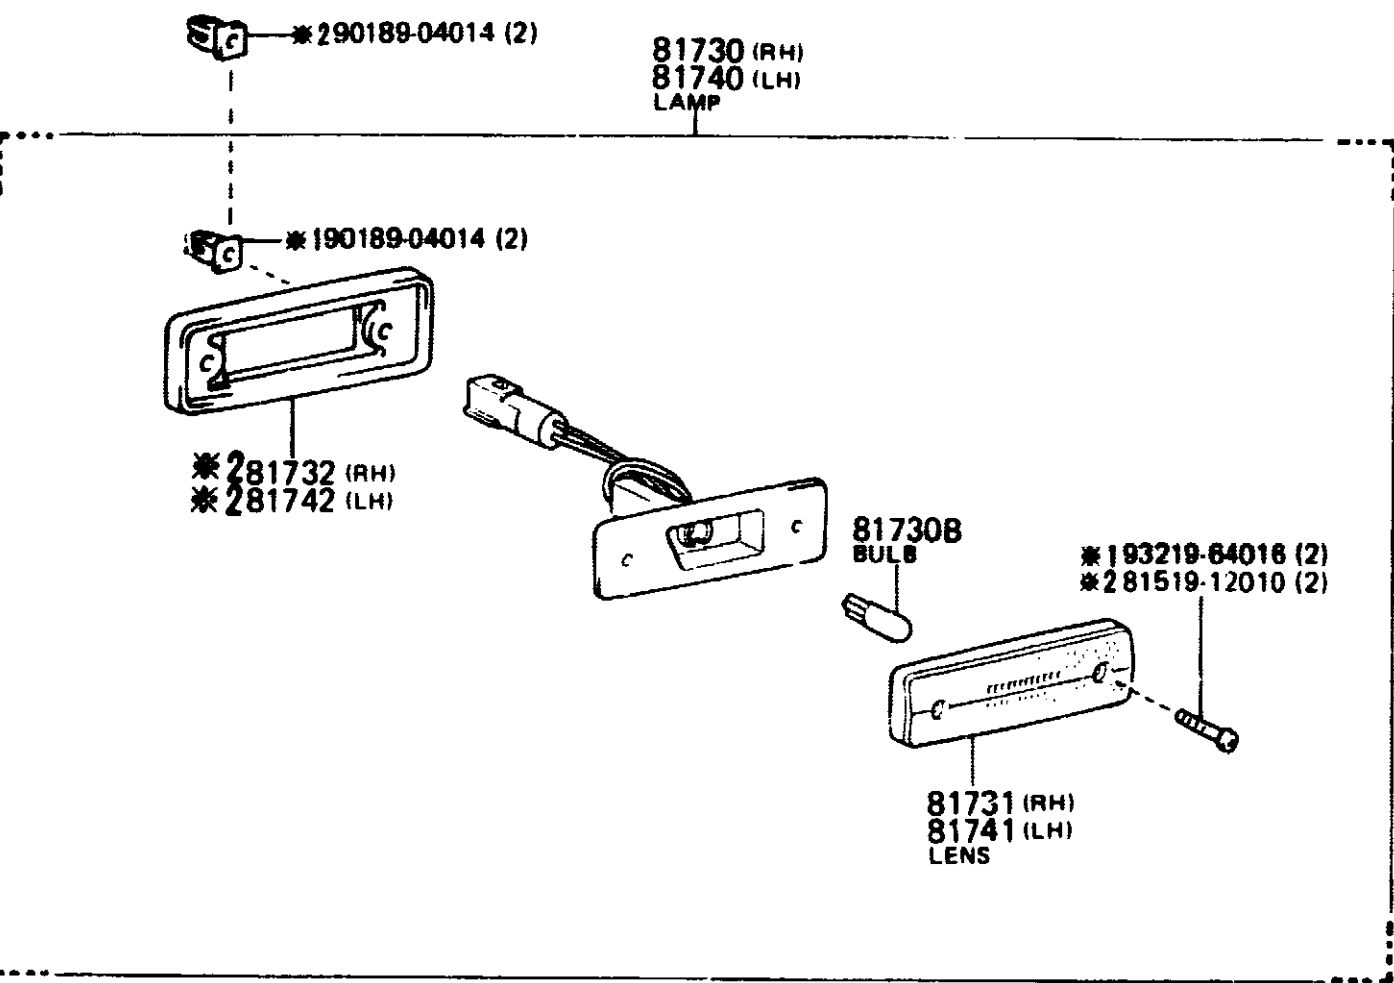

*1(-8510)
*2(8510-)


ME F425-A

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	81-06 SIDE TURN SIGNAL LAMP						
	+	+					
	81730	LAMP ASSY, SIDE TURN SIGNAL, RH					
	+	+					
8411-8510	BJ70			81730-19305-	1	81	100
8510-	BJ70			81730-90A01-	1	101	
	+	+					
	81730B	BULB (FOR SIDE TURN SIGNAL LAMP)					
	+	+					
8411-8510	BJ70	12V 3.8W		90981-11020-	2	81	100
8510-	BJ70	24V 5W		90981-12015-	2	101	
	+	+					
	81731	LENS, SIDE TURN SIGNAL LAMP, RH					
	+	+					
8411-	BJ70			81731-14110-	1	81	
	+	+					
	81732	GASKET, SIDE TURN SIGNAL LAMP LENS, RH					
	+	+					
8510-	BJ70			81732-90A01-	1	101	
	+	+					
	81740	LAMP ASSY, SIDE TURN SIGNAL, LH					
	+	+					
8411-8510	BJ70			81740-19286-	1	81	100
8510-	BJ70			81740-90A01-	1	101	
	+	+					
	81741	LENS, SIDE TURN SIGNAL LAMP, LH					
	+	+					
8411-	BJ70			81741-14110-	1	81	
	+	+					
	81742	GASKET, SIDE TURN SIGNAL LAMP LENS, LH					
	+	+					
8510-	BJ70			81742-90A01-	1	101	

PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
	+-----+ 83890B BULB, CLINOMETER +-----+						
8411-8510	BJ70	12V 3.4W		84999-50010-	2	81	100
8510-	BJ70	24V 3W		34999-50080-	2	101	
	+-----+ 83909 KNOB, CLOCK +-----+						
8411-8510	BJ70			83909-12230-	1	81	
	+-----+ 83910 CLOCK ASSY +-----+						
8411-8510	BJ70			83910-90K01-	1	81	100
8510-	BJ70			83910-90K05-	1	101	
	+-----+ 83919 SCREW, CLOCK +-----+						
8411-8510	BJ70			83919-12230-	1	81	
	+-----+ 86995 PLATE, CAUTION (FOR CLINOMETER) +-----+						
8411-	BJ70			86995-90A01-	1	81	

(8411-)

GENUINE TOYOTA PARTS

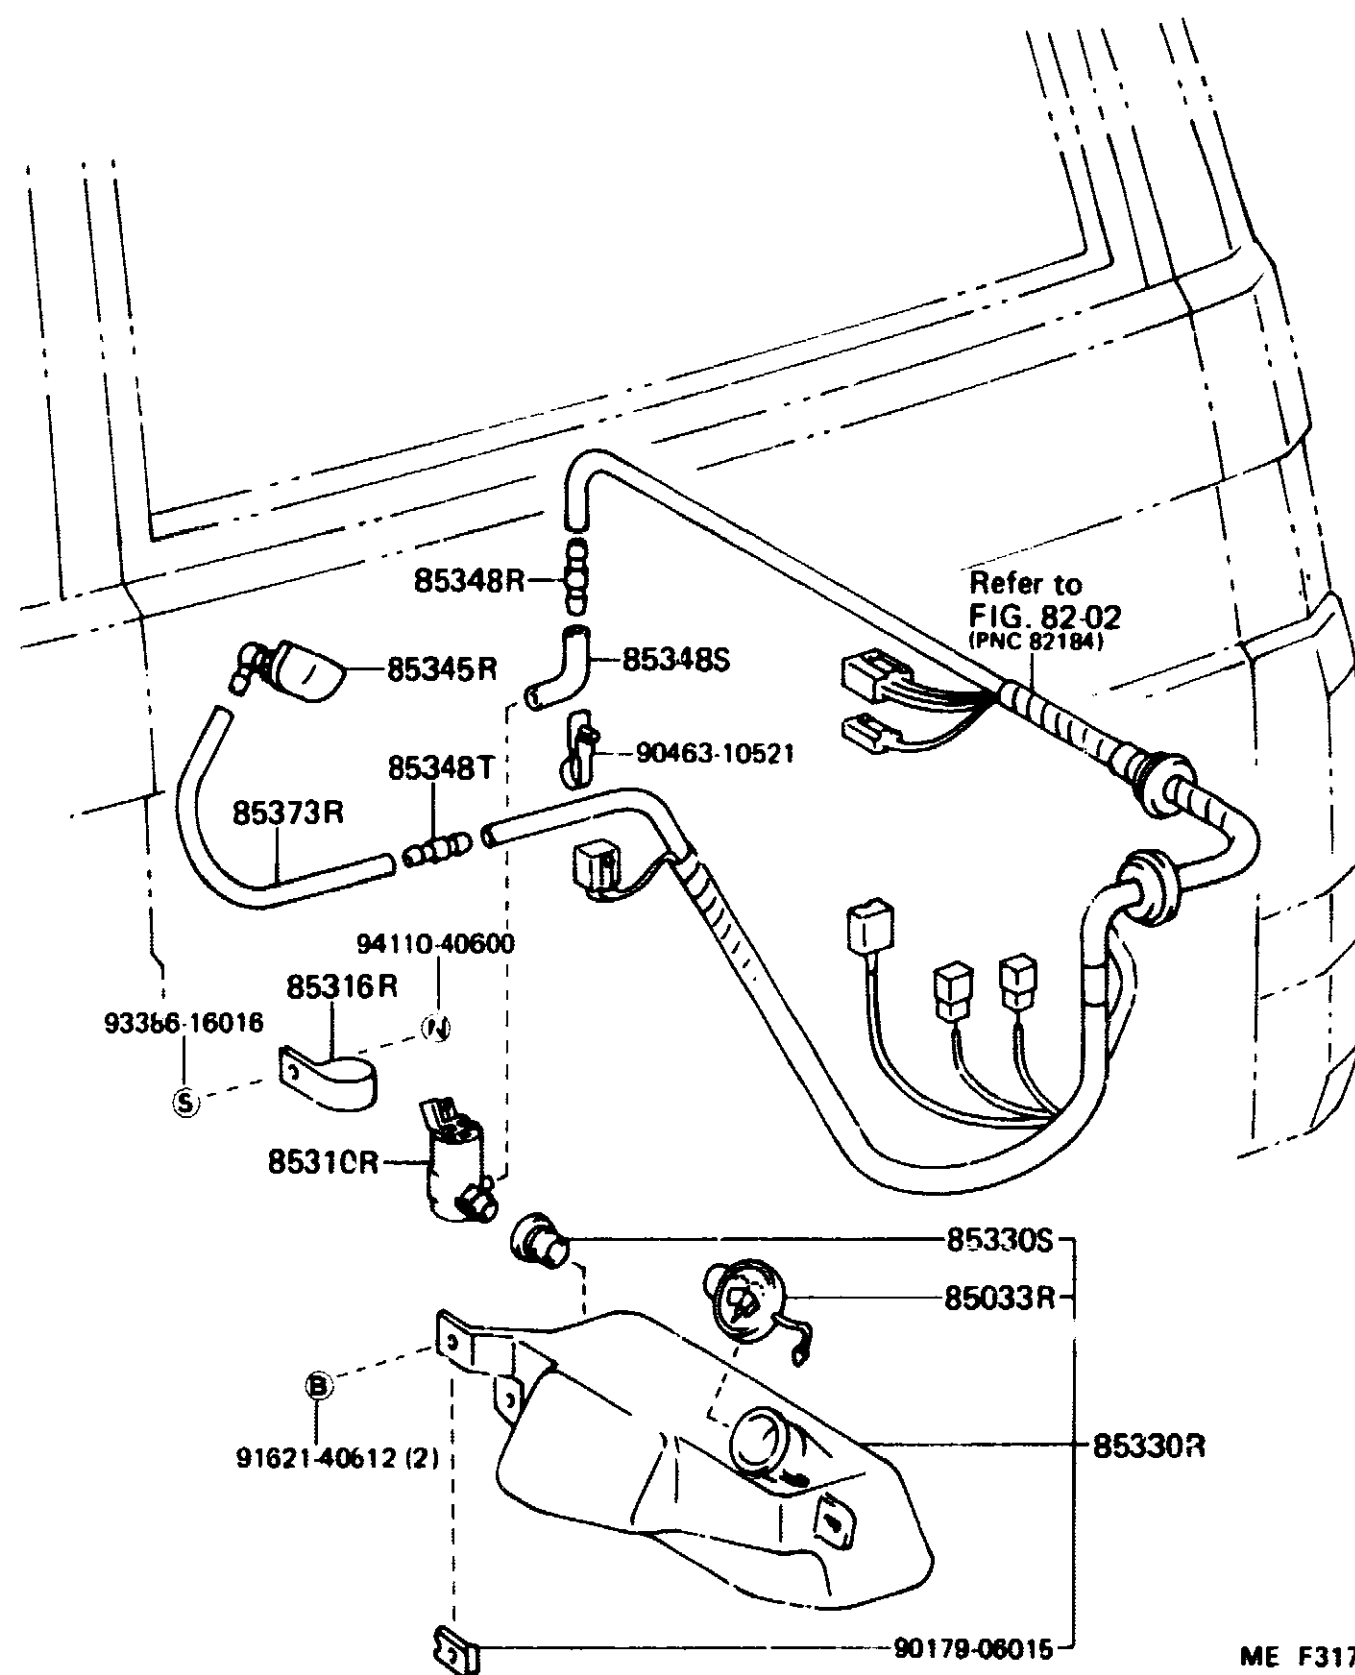

ME F317

PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	85-04 REAR WASHER						
8411-	BJ70	85033R CAP ASSY, REAR WASHER		85033-36120-	1	81	
8411-8510	BJ70	85310R MOTOR ASSY, REAR WASHER		85310-22080-	1	81	100
8510-	BJ70			85310-90800-	1	101	
8411-	BJ70	85316R SUPPORT, REAR WASHER MOTOR		85316-23010-	1	81	
8411-	BJ70	85330R JAR ASSY, REAR WASHER		85330-90K03-	1	81	
8411-	BJ70	85330S BUSH, REAR WASHER JAR		90099-32089-	1	81	
8411-	BJ70	85345R NOZZLE, REAR WASHER		85035-90K02-	1	81	
8411-8510	BJ70	85348R JOINT, REAR WASHER HOSE, NO.1		# 85355-87201- (85349-89122-	1	81	100
8510-	BJ70			# 85355-89122- (85349-89122-	1	101	
C 8411-8705	BJ70	85348S JOINT, REAR WASHER ELBOW		# 85355-20070- (85355-14481-	1	81	
C 8705-	BJ70			85355-14481-	1		
8411-8510	BJ70	85348T JOINT, REAR WASHER HOSE, NO.2		# 85355-87201- (85349-89122-	1	81	100
8510-	BJ70			# 85355-89122- (85349-89122-	1	101	
8411-	BJ70	85373R HOSE, REAR WASHER (FROM JOINT TO NOZZLE)		XH, L= 230 90446-06013-	1	81	

*H. L=Cut hose to length as specified in remarks

FIG.87-16

GENUINE TOYOTA PARTS

2-L10

M74-15-0708

GENUINE TOYOTA PARTS

PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE		PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO							FROM	UP TO
FIG.	87-16 HEATING & AIR CONDITIONING - WATER PIPING														
8411-	BJ70	JOINT OR UNION, FRONT HEATER HOSE THROUGH OR INLET VALVE		87251-30200-	1	81		8411-8508	BJ70	HOSE, REAR HEATER WATER INLET, A (FROM ENGINE)		99556-20055-	1	81	
8411-	BJ70	FR HEATER		87251-90K00-	1	81		8508-	BJ70	XH,L=55		99556-20100-	1		
8411-	BJ70	RR HEATER		87251-90K00-	1	81				HOSE, REAR HEATER WATER INLET, B		87245-90K28-	1	81	
8411-8703	BJ70	PIPE SUB-ASSY, HEATER WATER, A		87208-90K07-	1	81		8411-	BJ70						
8703-	BJ70			87208-90K15-	1					HOSE, REAR HEATER WATER INLET, E (TO HEATER UNIT)		99556-20080-	1	81	
8411-	BJ70	VALVE ASSY, HEATER WATER		87240-90K00-	1	81		8411-	BJ70	HOSE, REAR HEATER WATER OUTLET, A (FROM HEATER UNIT)		87245-90K16-	1	81	
8411-	BJ70	HOSE, HEATER WATER INLET, A (FROM ENGINE)		87245-90K04-	1	81		8411-	BJ70	HOSE, REAR HEATER WATER OUTLET, E (TO ENGINE)		87245-90K29-	1	81	
8411-	BJ70	HOSE, HEATER WATER INLET, E (TO HEATER UNIT)		87245-1B060-	1	81		8411-	BJ70	CONNECTOR, HEATER WATER HOSE, NO.2		87248-95400-	1	81	
8411-	BJ70	HOSE, HEATER WATER OUTLET, A (FROM HEATER UNIT)		87245-90K30-	1	81									
8411-	BJ70	HOSE, HEATER WATER OUTLET, B		87245-90K31-	1	81									
8411-8508	BJ70	HOSE, HEATER WATER OUTLET, E (TO ENGINE)		99556-30055-	1	81									
8508-	BJ70	XH,L=55		99556-30100-	1										
8411-	BJ70	PIPE, HEATER WATER INLET, A		87248-90K19-	1	81									
8411-	BJ70	PIPE, HEATER WATER OUTLET, A		87248-90K18-	1	81									
8411-	BJ70	JOINT OR UNION, WATER HOSE THROUGH		87251-30200-	1	81									

*H. L= Cut hose to length as specified in remarks

PIN - PLATE

L12

M74-26-0049

PLATE - PLUG

PART	NAME	LOCATION
PIN (FOR STEERING TILT LEVER) -----		1-A9
PIN (FOR TRANSMISSION CASE COVER) -----		1-G6
PIN (FOR 5TH GEAR THRUST WASHER) -----		1-E6
PIN ASSY, REVERSE RESTRICT -----		1-I6
PIN KIT, FRONT SPRING -----		1-H11
PIN KIT, REAR SPRING -----		1-L11
PIN OR BALL (FOR 1ST GEAR THRUST WASHER) -----		1-D6
PIN, DIFFERENTIAL PINION SHAFT -----		1-B8
PIN, FEED PUMP TAPPET ROLLER -----		1-K4
PIN, FRONT DIFFERENTIAL PINION SHAFT -----		1-H8
PIN, NOZZLE HOLDER PRESSURE -----		1-A1
PIN, SHIFTING -----		1-I4
PIN, SHOE HOLD DOWN SPRING (FOR REAR BRAKE) -----		1-J10
PIN, SLOTTED SPRING (FOR REVERSE RESTRICT PIN) -----		1-I6
PIN, SLOTTED SPRING (FOR SHIFT FORK SET) -----		1-G6
PIN, SLOTTED SPRING (FOR SHIFT FORK) -----		1-F7
PIN, STRAIGHT (FOR CAM RING) -----		1-C9
PIN, STRAIGHT (FOR CYLINDER HEAD SET) -----		1-I1
PIN, STRAIGHT (FOR ENGINE REAR OIL SEAL) -----		1-I1
PIN, STRAIGHT (FOR FLYWHEEL) -----		1-B2
PIN, STRAIGHT (FOR FRONT DRIVE SHIFT LINK LEVER) -----		1-H7
PIN, STRAIGHT (FOR MANUAL TRANSMISSION CASE) -----		1-M5
PIN, STRAIGHT (FOR OUTER SHAFT FLANGE) -----		1-J8
PIN, STRAIGHT (FOR TIMING GEAR CASE) -----		1-K1
PIN, STRAIGHT (FOR TIMING GEAR COVER SET) -----		1-I1
PIN, STRAIGHT (FOR TRANSFER ADAPTER) -----		1-A6
PIN, STRAIGHT (FOR TRANSFER CASE) -----		1-M6
PIN, THROTTLE VALVE SHAFT -----		1-B5
PIN, VACUUM PUMP DOWEL, NO.1 -----		1-M3
PIN, W/HOLE (FOR CLUTCH MASTER CYLINDER PUSH ROD CLEVIS) -----		1-F5
PIN, W/HOLE (FOR DISC BRAKE ANTIRATTLE) -----		1-H10
PIN, W/HOLE (FOR PARKING BRAKE CABLE) -----		1-A10
PIN, W/HOLE (FOR REAR BRAKE) -----		1-K10
PINION, FRONT DIFFERENTIAL -----		1-H8
PINION, PLUNGER CONTROL -----		1-E4
PINION, REAR DIFFERENTIAL -----		1-B8
PIPE ASSY, EXHAUST, CENTER -----		1-D3
PIPE ASSY, EXHAUST, FRONT -----		1-D3
PIPE ASSY, NOZZLE LEAKAGE -----		1-B4
PIPE ASSY, NOZZLE LEAKAGE, NO.2 -----		1-B4
PIPE ASSY, TAIL -----		1-D3
PIPE SUB-ASSY, FUEL TANK INLET -----		2-E7
PIPE SUB-ASSY, HEATER WATER, A -----		2-L10
PIPE SUB-ASSY, INJECTION, NO.1 -----		1-C4
PIPE SUB-ASSY, INJECTION, NO.2 -----		1-C4
PIPE SUB-ASSY, INJECTION, NO.3 -----		1-C4
PIPE SUB-ASSY, INJECTION, NO.4 -----		1-C4
PIPE SUB-ASSY, OIL PUMP OUTLET -----		1-E2
PIPE SUB-ASSY, OIL, INJECTION PUMP OUTLET -----		1-F2
PIPE, HEATER WATER INLET, A -----		2-L10
PIPE, HEATER WATER INLET, E (FOR HEATER UNIT) -----		2-H10
PIPE, HEATER WATER OUTLET, A -----		2-L10
PIPE, HEATER WATER OUTLET, E (FOR HEATER UNIT) -----		2-H10
PIPE, OIL RECEIVER -----		1-M6
PISTON SUB-ASSY, W/PIN -----		1-A2
PISTON, BOOSTER (FOR CLUTCH BOOSTER) -----		1-J5
PISTON, BRAKE BOOSTER -----		1-G10
PISTON, FEED PUMP -----		1-J4
PISTON, FRONT DISC BRAKE -----		1-H10
PIVOT SUB-ASSY, VENT WINDOW, UPPER LH -----		2-K4
PIVOT SUB-ASSY, VENT WINDOW, UPPER RH -----		2-J4
PIVOT, SHIFT ARM -----		1-H6
PLATE (FOR STARTER YOKE) -----		1-K3
PLATE ASSY, FRONT DOOR LOCK STRIKER -----		2-L4

PART	NAME	LOCATION
PLATE SET, VALVE HOLDER LOCK -----		1-D4
PLATE SUB-ASSY, BRAKE BACKING, REAR LH -----		1-J10
PLATE SUB-ASSY, BRAKE BACKING, REAR RH -----		1-J10
PLATE SUB-ASSY, COMBINATION METER CIRCUIT, NO.1 -----		2-K8
PLATE SUB-ASSY, HORN BUTTON CONTACT, NO.1 -----		1-G9
PLATE, AIR CLEANER CAUTION (FOR ENGINE MODEL) -----		1-G3
PLATE, BACK DOOR NAME, NO.3 -----		2-J6
PLATE, BATTERY CAUTION -----		2-E8
PLATE, BEARING RETAINER, ALTERNATOR -----		1-I3
PLATE, CAMSHAFT SHIM -----		1-E4
PLATE, CAMSHAFT THRUST -----		1-C2
PLATE, CAUTION (FOR CLINOMETER) -----		2-L8
PLATE, CAUTION (FOR FUSE) -----		2-C9
PLATE, CONTROL LEVER CAUTION -----		2-H6
PLATE, CRANKSHAFT PULLEY, NO.2 -----		1-B2
PLATE, CURRENT SENSOR -----		2-C9
PLATE, DISTANCE (FOR FRONT) -----		1-I11
PLATE, DISTANCE (FOR REAR) -----		1-M11
PLATE, ENGINE CAUTION & ENGINE NAME -----		1-G3
PLATE, ENGINE SERVICE COVER CATCH -----		2-J2
PLATE, FLAMABILITY, CAUTION -----		2-H6
PLATE, FRONT DOOR NAME -----		2-J6
PLATE, FRONT DOOR SCUFF, OUTSIDE LH -----		2-L6
PLATE, FRONT DOOR SCUFF, OUTSIDE RH -----		2-L6
PLATE, FUEL CAUTION -----		2-H6
PLATE, HORN CONTACT -----		2-D9
PLATE, IDLE GEAR THRUST -----		1-B2
PLATE, INSTRUMENT PANEL, LH -----		2-C2
PLATE, INSTRUMENT PANEL, RH -----		2-C2
PLATE, LOAD SENSING VALVE SET -----		1-D11
PLATE, LOCK (FOR TRANSFER GEAR) -----		1-D7
PLATE, OFFROAD VEHICLE CAUTION -----		2-H6
PLATE, POWER STEERING OIL RESERVOIR CAUTION -----		1-D9
PLATE, RADIATOR GRILLE OR FRONT PANEL NAME -----		2-J6
PLATE, REAR END -----		1-K1
PLATE, REAR NAME, NO.4 (GRADE MARK) -----		2-J6
PLATE, REAR SEAT BAND HOOK -----		2-L5
PLATE, SIDE WINDOW -----		2-J3
PLATE, SIDE, REAR -----		1-C9
PLATE, SPEEDOMETER SLEEVE LOCK (MTM) -----		1-B6
PLATE, STEERING COLUMN HOLE COVER -----		1-M8
PLATE, STIFFENER, LH (MTM) -----		1-A6
PLATE, STIFFENER, RH (MTM) -----		1-A6
PLATE, TAPPET ADJUSTING SHIM -----		1-E4
PLATE, TRANSFER DIAPHRAGM -----		1-H7
PLATE, VANE PUMP -----		1-C9
PLATE, VENT WINDOW UPPER PIVOT -----		2-K4
PLATE, VOLTAGE CAUTION -----		2-E9
PLATE, WATER PUMP -----		1-I2
PLIERS -----		1-A1
PLUG (FOR FRONT AXLE HOUSING) -----		1-H8
PLUG (FOR FUEL TANK) -----		2-E7
PLUG (FOR MANUAL TRANSMISSION FILLER) -----		1-M5
PLUG (FOR OIL PAN DRAIN) -----		1-I1
PLUG (FOR REAR AXLE HOUSING FILLER) -----		1-B8
PLUG (FOR REVERSE RESTRICT PIN) -----		1-I6
PLUG (FOR STEERING KNUCKLE) -----		1-E11
PLUG (FOR TRANSFER CASE) -----		1-M6
PLUG ASSY, GLOW -----		1-H3
PLUG SUB-ASSY, ADJUSTER -----		1-J9
PLUG SUB-ASSY, DRAIN -----		1-H8
PLUG SUB-ASSY, DRAIN (FOR REAR AXLE HOUSING) -----		1-B8
PLUG SUB-ASSY, DRAIN (MTM) -----		1-M5
PLUG, AIR VENT -----		1-A5

FIGURE NUMBER INDEX


LOCATION	FIG.No.	SUMMARY	LOCATION	FIG.No.	SUMMARY	LOCATION	FIG.No.	SUMMARY
TOOL GROUP			FUEL GROUP			1-I8	43-02	DRIVE SHAFT
1-A1	09-01	STANDARD TOOL	1-A4	22-01	INJECTION NOZZLE	1-J8	43-03	FRONT AXLE HUB
ENGINE GROUP			1-C4	22-02	INJECTION PUMP ASSEMBLY	1-L8	45-01	STEERING COLUMN & SHAFT
1-C1	11-01	PARTIAL ENGINE ASSEMBLY	1-D4	22-03	INJECTION PUMP BODY	1-B9	45-02	VANE PUMP & RESERVOIR
1-D1	11-02	SHORT BLOCK ASSEMBLY	1-G4	22-04	PNEUMATIC GOVERNOR	1-E9	45-03	OIL COOLER & TUBE
1-E1	11-03	ENGINE OVERHAUL GASKET KIT	1-J4	22-06	FUEL FEED PUMP	1-F9	45-04	STEERING WHEEL
1-F1	11-04	CYLINDER HEAD	1-L4	22-07	AUTOMATIC TIMER	1-H9	45-05	STEERING GEAR & LINK
1-H1	11-05	CYLINDER BLOCK	1-M4	23-02	FUEL FILTER	1-A10	46-01	PARKING BRAKE & CABLE
1-J1	11-06	TIMING GEAR COVER & REAR END PLATE	1-B5	26-06	VENTURI	1-C10	47-01	BRAKE PEDAL & BRACKET
1-L1	11-07	MOUNTING	POWER TRAIN-CHASSIS GROUP			1-D10	47-02	BRAKE MASTER CYLINDER
1-M1	12-01	VENTILATION HOSE	1-D5	31-01	CLUTCH & RELEASE FORK	1-F10	47-03	BRAKE BOOSTER
1-A2	13-01	CRANKSHAFT & PISTON	1-E5	31-02	CLUTCH PEDAL & FLEXIBLE HOSE	1-H10	47-05	FRONT DISC BRAKE CALIPER & DUST COVER
1-C2	13-02	CAMSHAFT & VALVE	1-G5	31-03	CLUTCH MASTER CYLINDER	1-J10	47-06	REAR BACKING PLATE & WHEEL CYLINDER
1-E2	15-01	OIL PUMP	1-I5	31-04	CLUTCH BOOSTER	1-M10	47-08	BRAKE TUBE & CLAMP
1-G2	15-02	OIL FILTER	1-K5	31-05	CLUTCH RELEASE CYLINDER	1-E11	48-02	FRONT AXLE ARM & STEERING KNUCKLE
1-H2	15-03	OIL COOLER	1-L5	33-01	TRANSAXLE OR TRANSMISSION ASSY & GASKET KIT (MTM)	1-G11	48-03	FRONT SPRING & SHOCK ABSORBER
1-I2	16-01	WATER PUMP	1-M5	33-02	CLUTCH HOUSING & TRANSMISSION CASE (MTM)	1-K11	48-04	REAR SPRING & SHOCK ABSORBER
1-K2	16-03	RADIATOR & WATER OUTLET	1-B6	33-04	SPEEDOMETER DRIVEN GEAR (MTM)			
1-A3	16-05	V-BELT	1-C6	33-06	TRANSMISSION GEAR (MTM)			
1-B3	17-01	MANIFOLD	1-G6	33-07	GEAR SHIFT FORK & LEVER SHAFT (MTM)			
1-C3	17-02	EXHAUST PIPE	1-J6	33-12	SHIFT LEVER & RETAINER			
1-E3	17-03	AIR CLEANER	1-K6	36-08	TRANSFER ASSEMBLY & GASKET KIT			
1-G3	17-09	CAUTION PLATE & NAME PLATE	1-L6	36-09	TRANSFER CASE & EXTENSION HOUSING			
1-H3	19-01	IGNITION COIL & SPARK PLUG	1-B7	36-10	TRANSFER GEAR			
1-I3	19-03	ALTERNATOR	1-E7	36-11	TRANSFER LEVER & SHIFT ROD			
1-K3	19-04	STARTER	1-H7	36-12	DIAPHRAGM CYLINDER			
1-M3	19-05	VACUUM PUMP	1-I7	36-16	VACUUM SHIFT VALVE & TUBE			
			1-K7	37-01	PROPELLER SHAFT & UNIVERSAL JOINT			
			1-M7	41-01	REAR AXLE HOUSING & DIFFERENTIAL			
			1-D8	41-02	REAR AXLE SHAFT & HUB			
			1-E8	41-03	DISC WHEEL & WHEEL CAP			
			1-F8	43-01	FRONT AXLE HOUSING & DIFFERENTIAL			

LAND CRUISER (U. S. A)



GENUINE TOYOTA PARTS

(8411-)

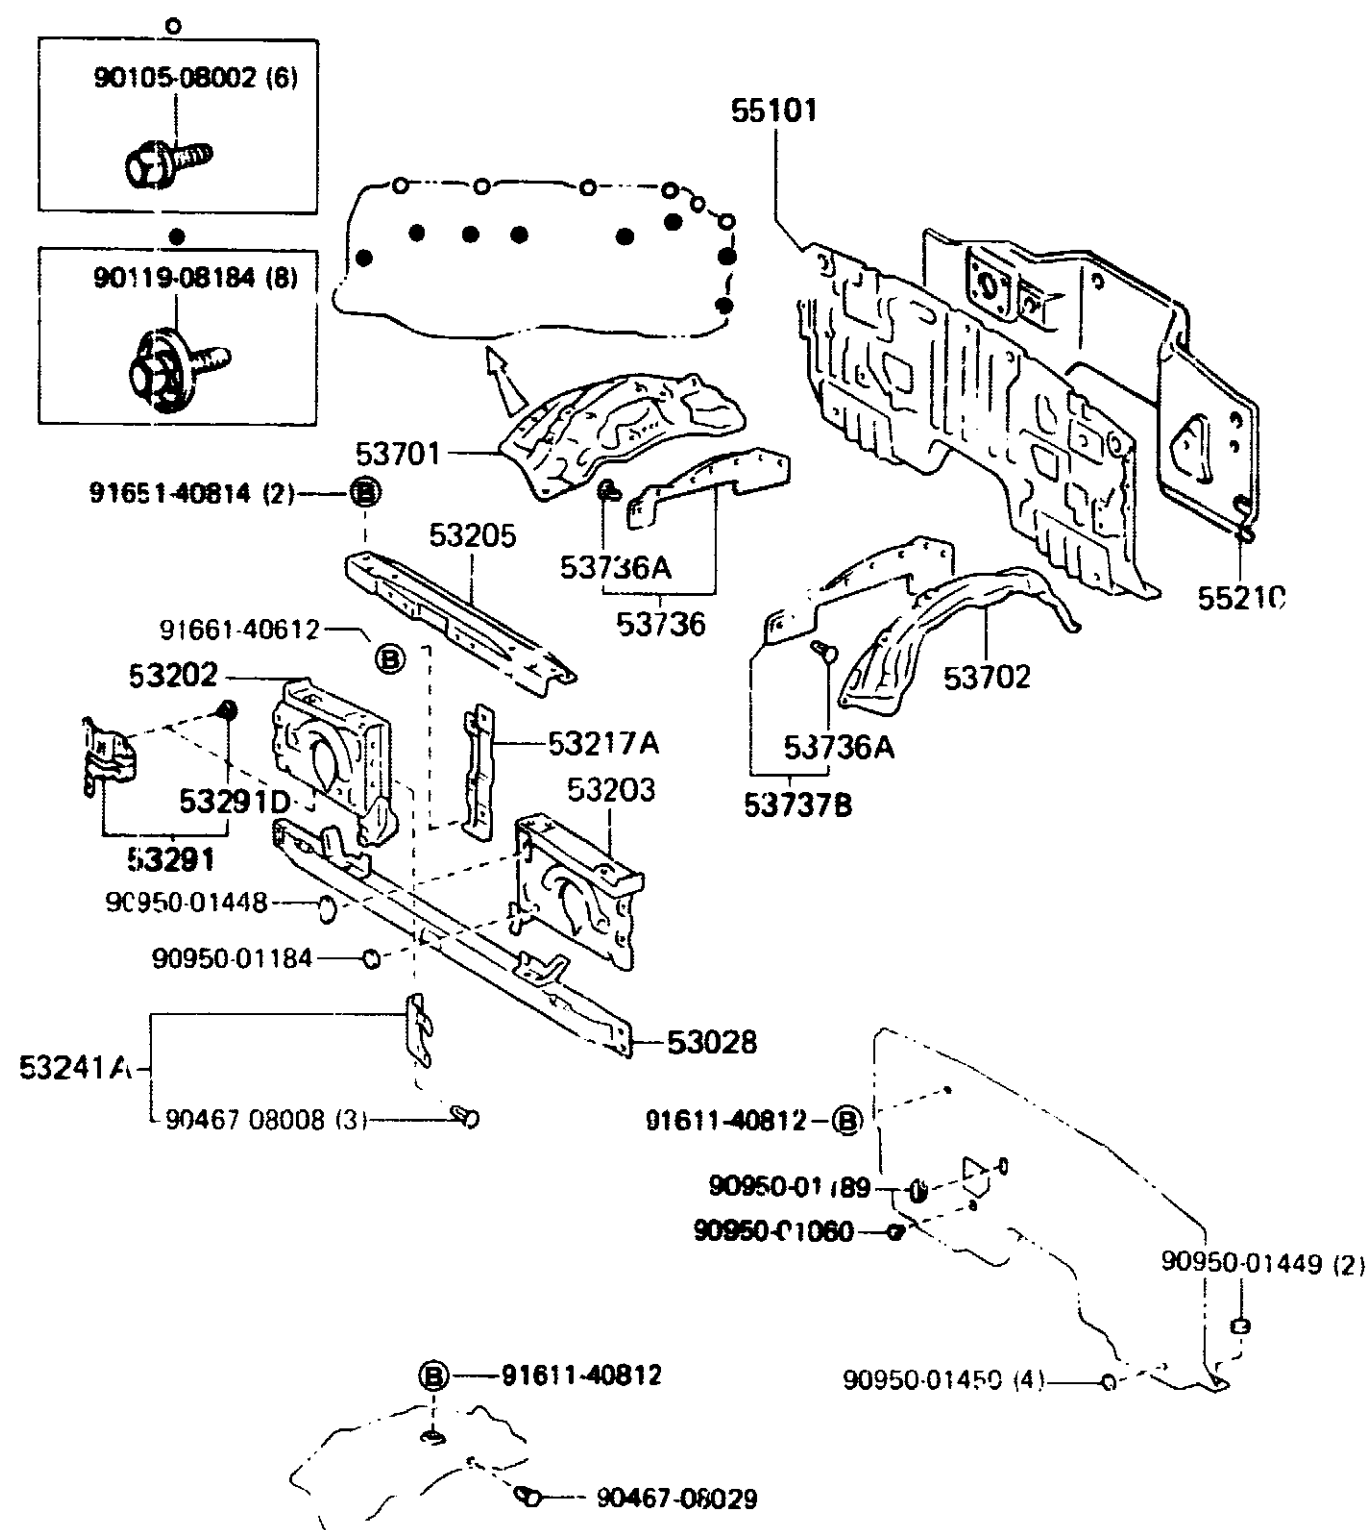

MB H578-B

MBH578B

PROD. DATE	MODELS	DESCRIPTION	R / P	PART NUMBER	REV. REF. CODE	
					FROM	UP TO
FIG.	53-55 FRONT FENDER APRON & DASH PANEL					
8411-	BJ70	SUPPORT SUB-ASSY, RADIATOR, LOWER		53028-90K03-	1	81
8411-	BJ70	SUPPORT SUB-ASSY, RADIATOR, RH		53202-90K01-	1	81
8411-	BJ70	SUPPORT SUB-ASSY, RADIATOR, LH		53203-90K01-	1	81
8411-	BJ70	SUPPORT SUB-ASSY, RADIATOR, UPPER		53216-90K02-	1	81
8411-	BJ70	BRACE, HOOD LOCK SUPPORT		53217-90K02-	1	81
8411-	BJ70	GUIDE, SIDE WIND, RH		53241-90K00-	1	81
8411-	BJ70	SEAL, RADIATOR SUPPORT TO FRAME, RH		53291-90K00-	1	81
8411-	BJ70	CLIP, RADIATOR SUPPORT TO FRAME		90467-09030-	3	81
8411-8510	BJ70	APRON SUB-ASSY, FRONT FENDER, RH		# 53701-90K08- (53701-90K50-	1	81 100
8510-	BJ70			53701-90K50-	1	101
8411-8510	BJ70	APRON SUB-ASSY, FRONT FENDER, LH		# 53702-90K12- (53702-90K96-	1	81 100
8510-	BJ70			53702-90K96-		101
8411-8606	BJ70	SEAL, FRONT FENDER APRON, RH		# 53737-90K01- (53737-90K03-	1	81
8606-	BJ70			53737-90K03-	1	


FIG.58-53 FLOOR INSULATOR

2-M2

M74-13-0065

GENUINE TOYOTA PARTS

(8411-)

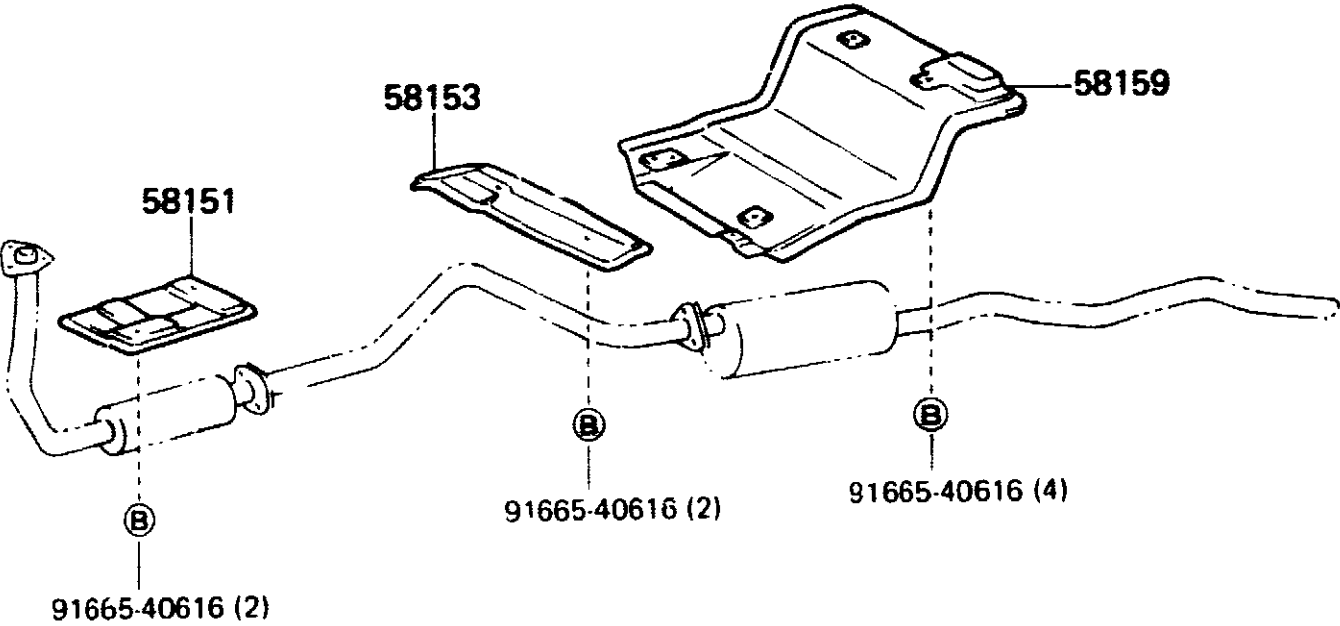



PROD.DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV.REF.CODE	
						FROM	UP TO
8411-	BJ70	FIG. 58-53 FLOOR INSULATOR					
		INSULATOR, FRONT FLOOR HEAT, NO.1					
		58151		58151-90K00-	1	81	
8411-8608	BJ70	INSULATOR, FRONT FLOOR HEAT, NO.2					
8608-	BJ70	58153		58153-90K00-	1	81	140
		58153		58153-90K01-	1	141	
8411-	BJ70	INSULATOR, MAIN MAFFLAR HEAT					
		58159		58327-90K00-	1	81	

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
	71821	SHIELD, FRONT SEAT SIDE, RH					
8411-	BJ70	GRAY		71811-90K00-03	1	81	
8411-	BJ70	BROWN		71811-90K00-06	1	81	
	71822	SHIELD, FRONT SEAT SIDE, LH					
8411-	BJ70	GRAY		71812-90K01-03	1	81	
8411-	BJ70	BROWN		71812-90K01-06	1	81	
	71950	HEADREST ASSY, FRONT SEAT					
8411-	BJ70	GRAY		71910-90K00-03	2	81	
8411-	BJ70	BROWN		71910-90K00-06	2	81	
	71956	SUPPORT, HEADREST					
8510-	BJ70	BLACK		71955-90K00-01	4	101	
	71956A	SUPPORT, FRONT SEAT HEADREST					
8411-	BJ70	W/LOCK, GRAY		71930-10060-33	2	81	
8411-	BJ70	W/LOCK, BROWN		71930-10060-36	2	81	
8411-	BJ70	W/O LOCK, GRAY		71931-10010-33	2	81	
8411-	BJ70	W/O LOCK, BROWN		71931-10010-36	2	81	
	71956B	SUPPORT, REAR SEAT HEADREST					
8510-	BJ70	W/LOCK, GRAY		71930-10060-33	2	101	
8510-	BJ70	W/LOCK, BROWN		71930-10060-36	2	101	
8510-	BJ70	W/O LOCK, GRAY		71931-10010-33	2	101	
8510-	BJ70	W/O LOCK, BROWN		71931-10010-36	2	101	
	71970	HEADREST ASSY, REAR SEAT					
8510-	BJ70	GRAY		71910-90K00-03	2	101	
8510-	BJ70	BROWN		71910-90K00-06	2	101	


PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
	72053A	LEVER SUB-ASSY, RECLINING REMOTE CONTROL					
8411-	BJ70	RH, GRAY		72053-90K00-03	1	81	
8411-	BJ70	RH, BROWN		72053-90K00-06	1	81	
8411-	BJ70	LH, GRAY		72054-90K00-03	1	81	
8411-	BJ70	LH, BROWN		72054-90K00-06	1	81	
	72053B	SPRING (FOR RECLINING REMOTE CONTROL LEVER)					
8411-	BJ70	RH		90508-16079-	1	81	
8411-	BJ70	LH		90508-16080-	1	81	
	72110E	SPRING, TENSION, NO. 1 (FOR SEAT TRACK)					
8411-	BJ70			90506-16053-	1	81	
	72110S	TRACK ASSY, RH SEAT, OUTER (FOR SEPARATE SEAT)					
8411-	BJ70			72110-90K01-	1	81	
8411-	BJ70	W/SUSPENSION SEAT		72110-90K05-	1	81	
	72120S	TRACK ASSY, LH SEAT, OUTER (FOR SEPARATE SEAT)					
8411-	BJ70			72120-90K00-	1	81	
8411-	BJ70	W/SUSPENSION SEAT		72120-90K03-	1	81	
	72130	TRACK ASSY, RH SEAT, INNER					
8411-	BJ70			72130-90K00-	1	81	
8411-	BJ70	W/SUSPENSION SEAT		72130-90K02-	1	81	
	72137	COVER, SEAT TRACK OUTER, RH					
8411-	BJ70	GRAY		72137-90K02-03	1	81	
8411-	BJ70	BROWN		72137-90K02-06	1	81	
	72137A	CLIP (FOR SEAT TRACK COVER)					
8411-	BJ70	BROWN		90467-05031-06	4	81	
8411-	BJ70	GRAY		90467-05031-13	4	81	
	72138	COVER, SEAT TRACK OUTER, LH					
8411-	BJ70	GRAY		72137-90K02-03	1	81	

(8411-8608)

(8608-)

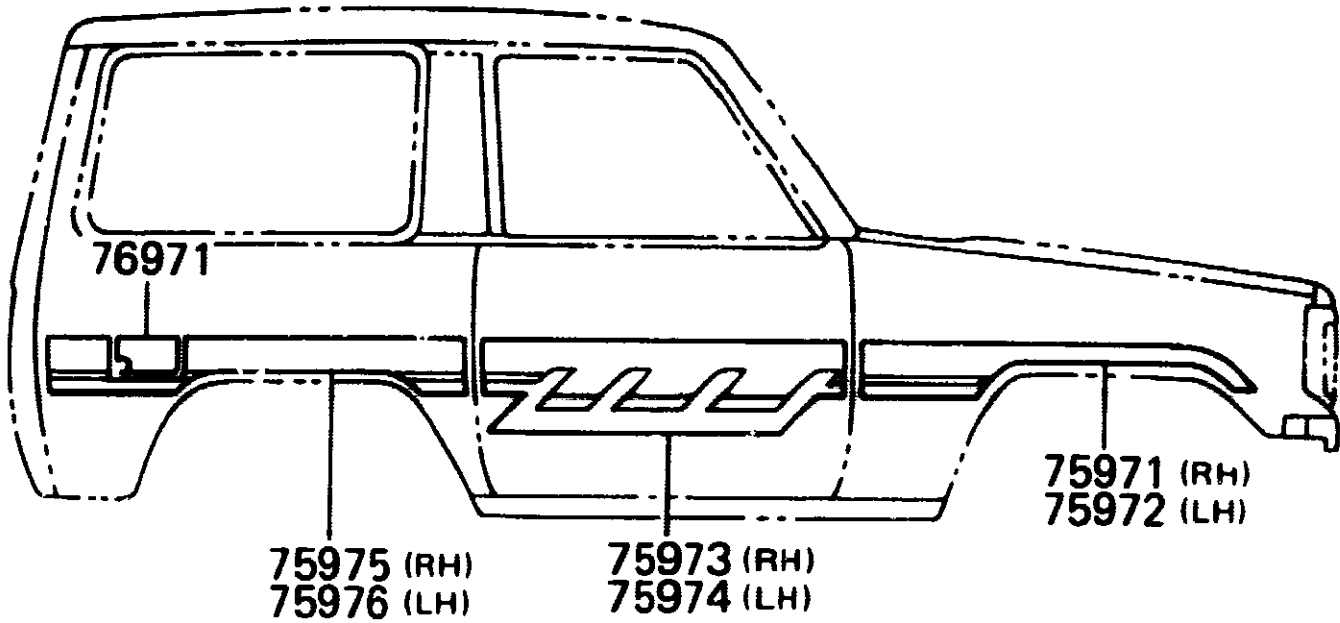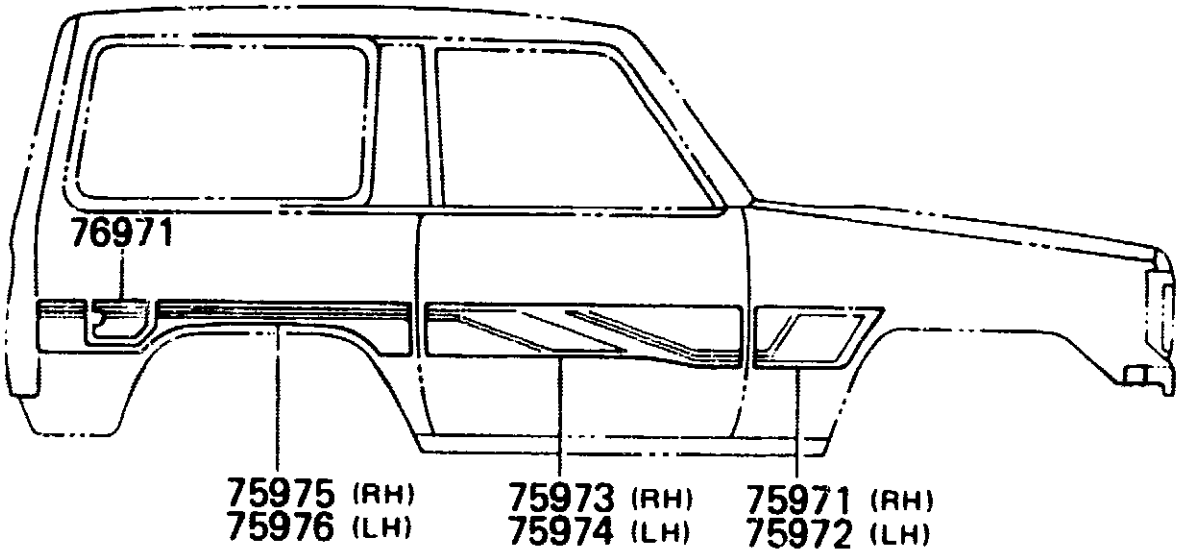

M3 K913

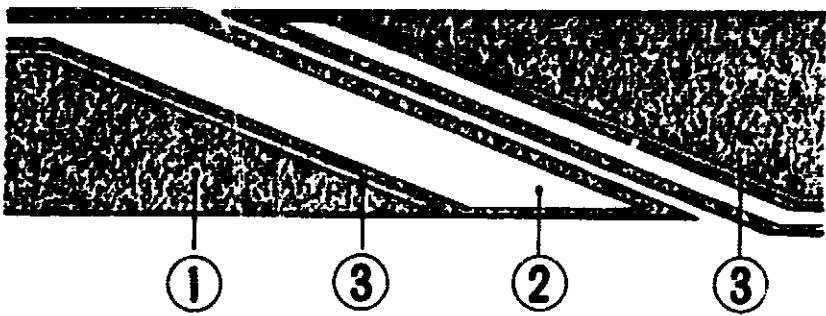


	Red	Light Green
①	Dark Blue	Dark Green
②	Red	Green
③	Light Gray	Light Gray

MB H647-B

(8411-)

GENUINE TOYOTA PARTS

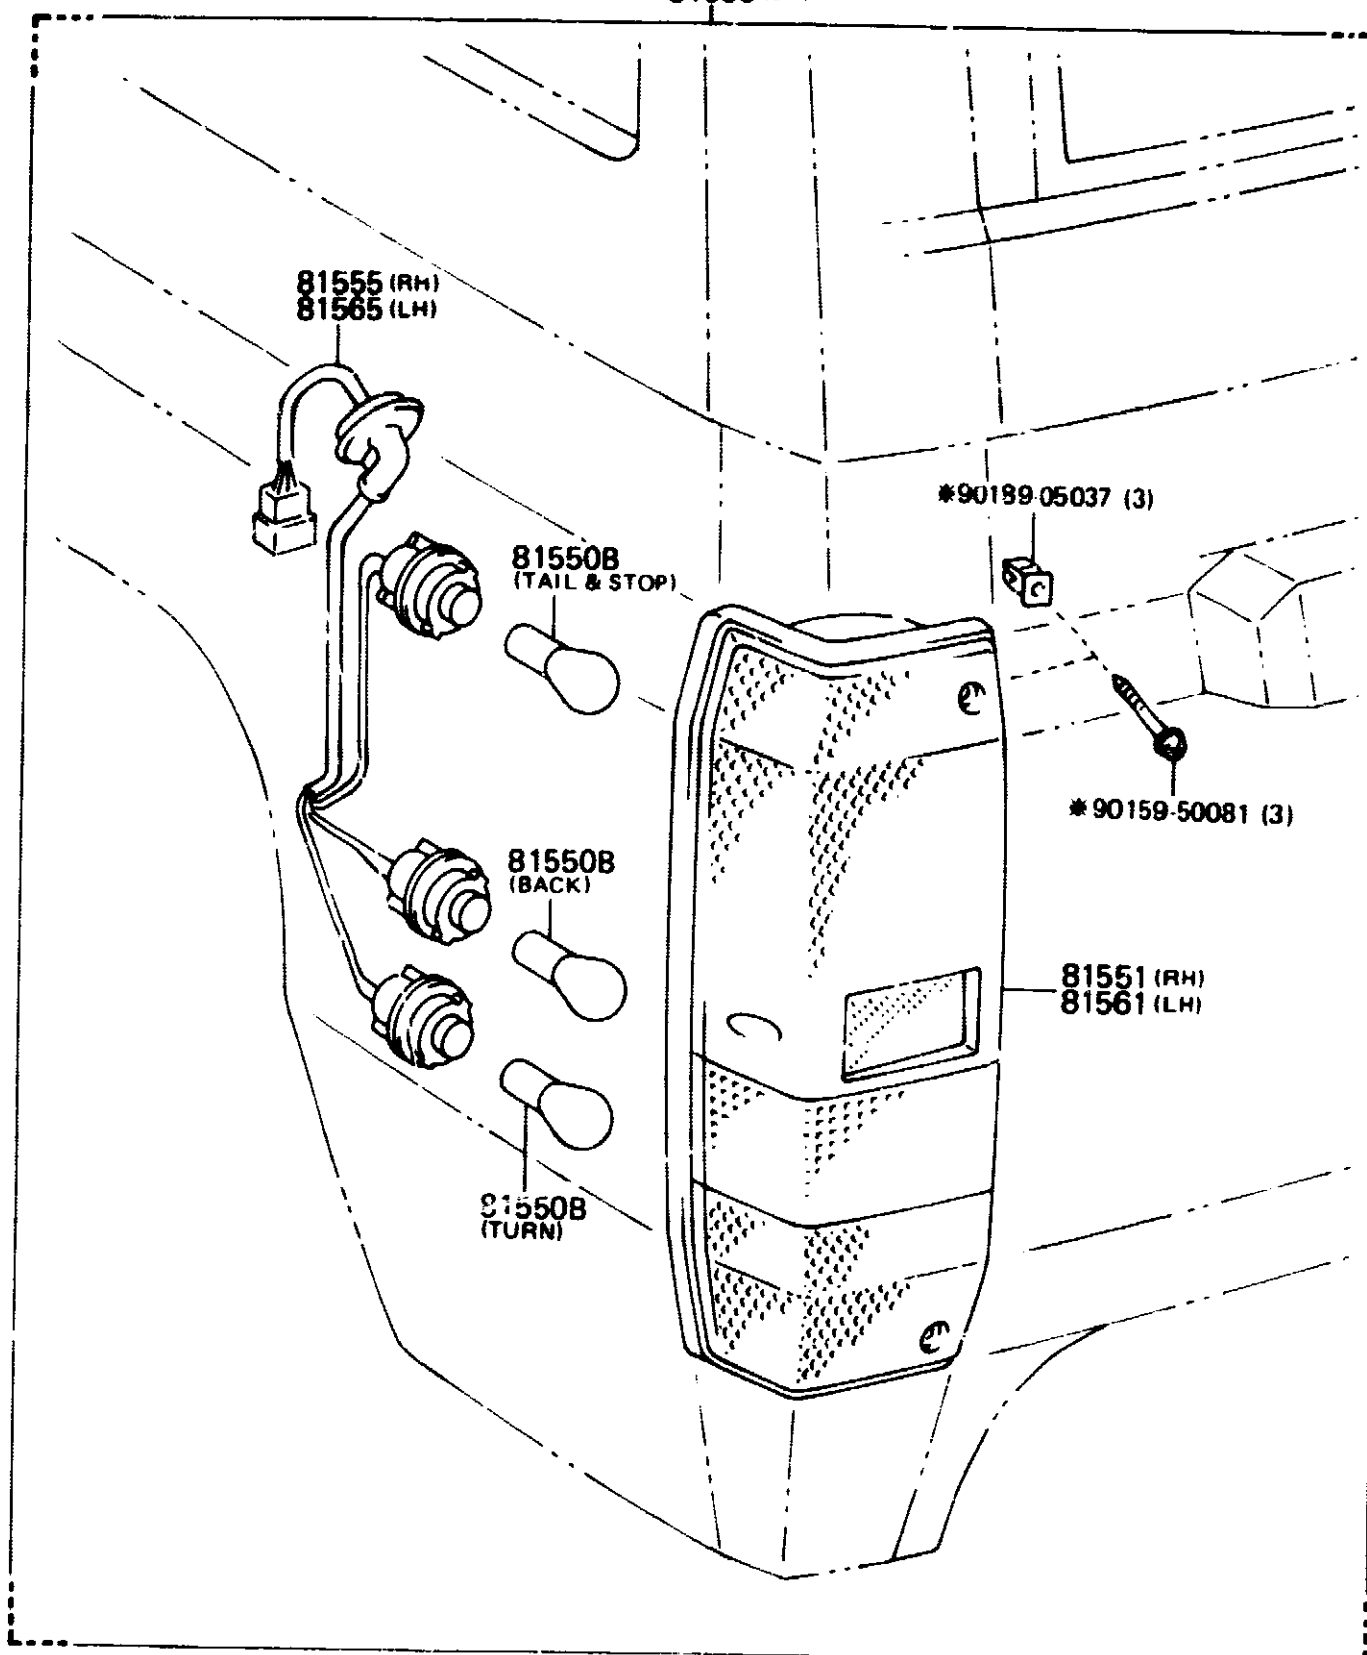81550 (RH)
81560 (LH)

*90189-05037 (3)

*90159-50081 (3)

81551 (RH)
81561 (LH)



ME G697-A

*(8510-) Excluded Out of PNC 81550, 81560

PROD. DATE	MODELS	DESCRIPTION	R/P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	81-11 REAR COMBINATION LAMP						
	+-----+ 81550	LAMP ASSY, REAR COMBINATION, RH					
8411-8510	BJ70			81550-69125-	1	81	100
8510-	BJ70			81550-90K16-	1	101	
	+-----+ 81550B	BULB (FOR REAR COMBINATION LAMP)					
8411-8510	BJ70	12V 27W(BA CK & TURN)		99132-11270-	4	81	100
8411-8510	BJ70	12V 27/8W(TAIL & STO P)		99132-21270-	2	81	100
8510-	BJ70	24V 21W(BA CK & TURN)		90981-16014-	4	101	
8510-	BJ70	24V 21/5W(TAIL & STO P)		90981-16015-	2	101	
	+-----+ 81551	LENS, REAR COMBINATION LAMP, RH					
8411-	BJ70			81551-90K02-	1	81	
	+-----+ 81555	SOCKET AND WIRE SUB-ASSY, REAR COMBINATION LAMP, RH					
8411-8510	BJ70			81555-90K02-	1	81	100
8510-	BJ70			81555-90K16-	1	101	
	+-----+ 81560	LAMP ASSY, REAR COMBINATION, LH					
8411-8510	BJ70			81560-69125-	1	81	100
8510-	BJ70			81560-90K16-	1	101	
	+-----+ 81561	LENS, REAR COMBINATION LAMP, LH					
8411-	BJ70			81561-90K02-	1	81	
	+-----+ 81565	SOCKET AND WIRE SUB-ASSY, REAR COMBINATION LAMP, LH					
8411-8510	BJ70			81555-90K02-	1	81	100
8510-	BJ70			81555-90K16-	1	101	

(8411-)



GENUINE TOYOTA PARTS

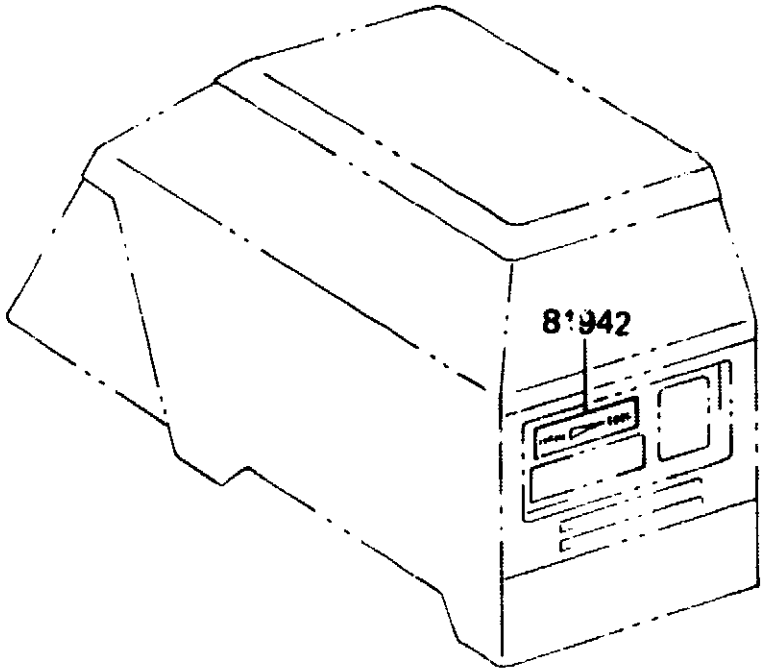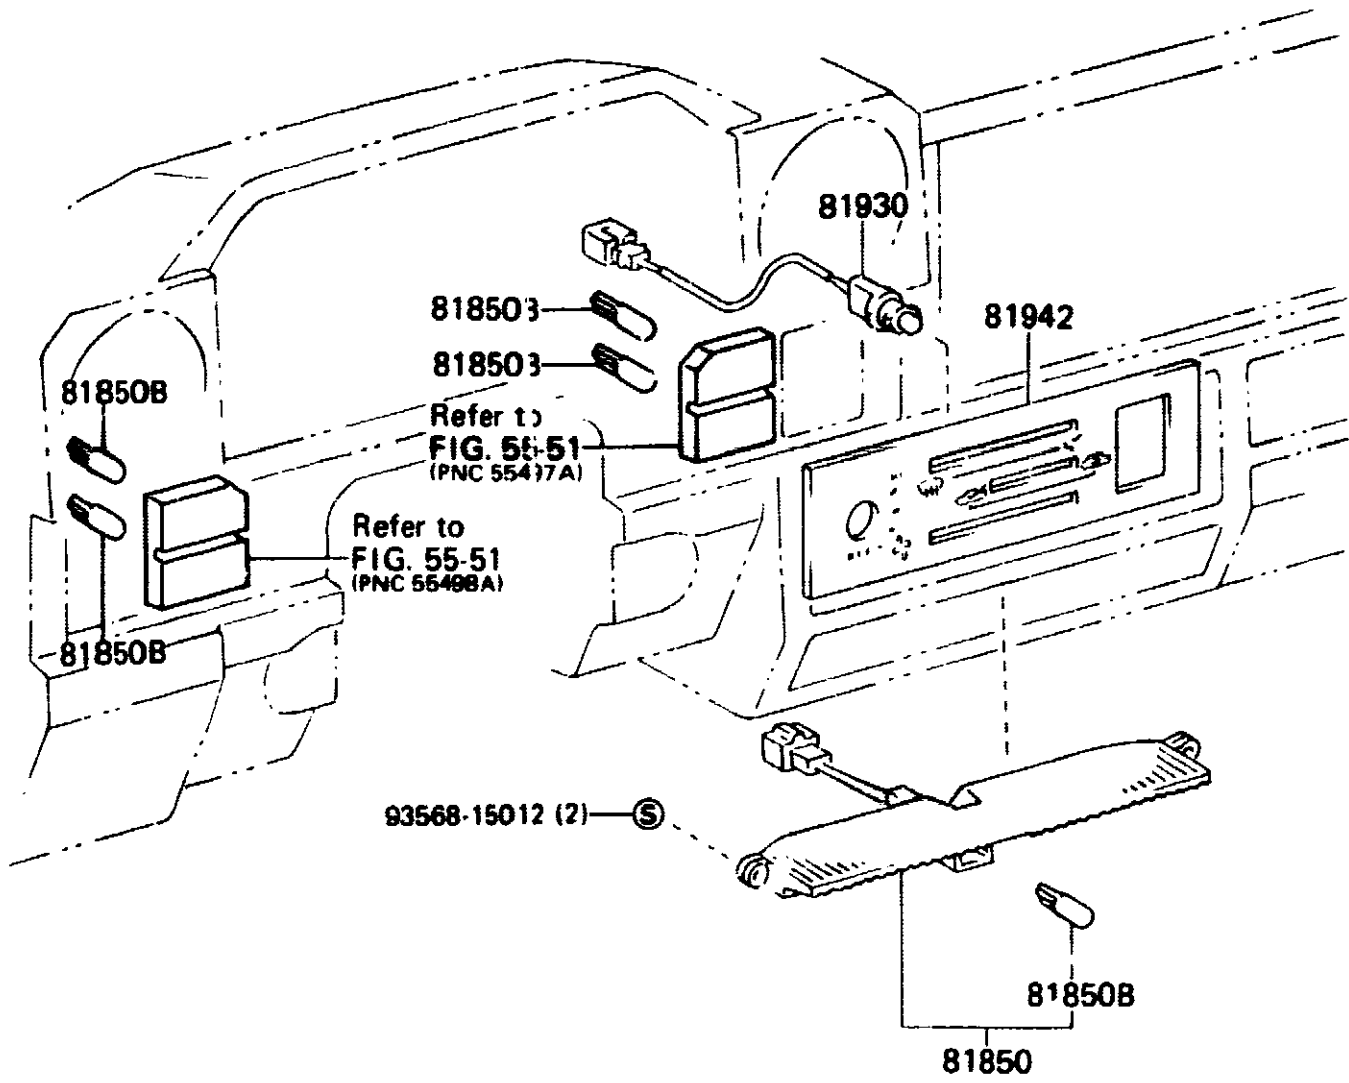

ME F432-A

PROD.DATE	M O D E L S	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	83-02 INDICATOR						
	81850	LAMP ASSY, INDICATOR					
8411-8510	BJ70			81850-90K00-	1	81	100
8510-	BJ70			81850-90K06-	1	101	
	81850B	BULB, INDICATOR LAMP					
8411-8510	BJ70	12V 3.4W		99132-12034-	5	81	100
8510-	BJ70	24V 3W		99134-12030-	4	101	
	81930	LAMP ASSY, HEATER CONTROL INDICATOR, NO.1					
8411-8510	BJ70			81930-90K00-	1	81	100
3510-	BJ70			81930-90K01-	1	101	
	81942	SHEET, HEATER CONTROL NAME					
8411-	BJ70			55519-90K01-	1	81	
8411-	BJ70	RR HEATER		86995-90K00-	1	81	

(8411-)

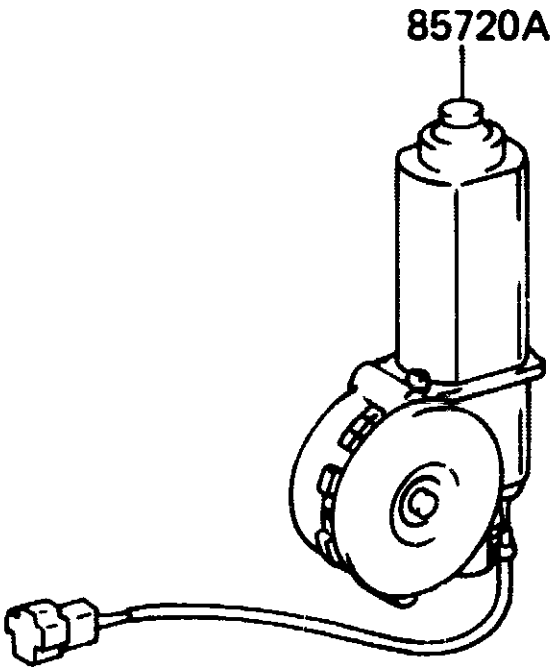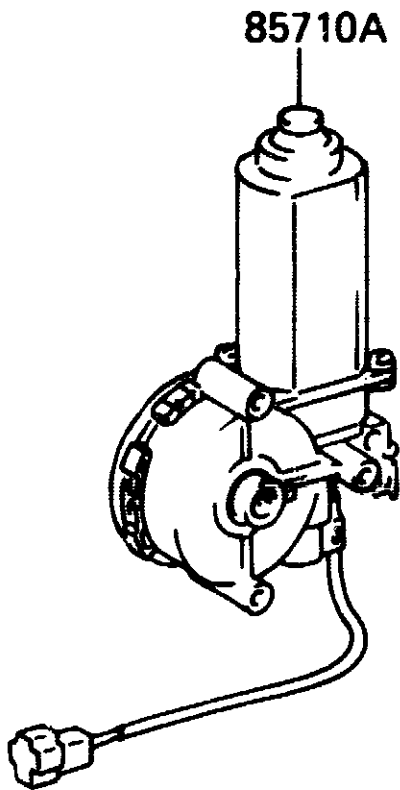

ME F319

PROD. DATE	M O D E L S	DESCRIPTION	R / P	PART NUMBER	QTY	REV. REF. CODE	
						FROM	UP TO
FIG.	85-11 DOOR MOTOR & DOOR SOLENOID						
	+-----+						
	85710A MOTOR ASSY, POWER WINDOW REGULATOR, FRONT RH						
	+-----+						
8411-8510	BJ70			85710-90K01-	1	81	100
8510-8608	BJ70			85710-90K03-	1	101	140
	+-----+						
	85720A MOTOR ASSY, POWER WINDOW REGULATOR, FRONT LH						
	+-----+						
8411-8510	BJ70			85720-90K01-	1	81	100
8510-8608	BJ70			85720-90K03-	1	101	140

PLUG - PUMP

M12

M74-26-0050

PUMP - RELAY

PART NAME

LOCATION

PLUG, ASSIST GRIP	2-E6
PLUG, ASSIST GRIP, NO.2 LH	2-F6
PLUG, ASSIST GRIP, NO.2 RH	2-E6
PLUG, BLEEDER (FOR DISC BRAKE, FRONT)	1-H10
PLUG, BLEEDER (FOR DRUM BRAKE, REAR)	1-K10
PLUG, BLEEDER (FOR RELEASE CYLINDER)	1-K5
PLUG, BREATHER (FOR FRONT AXLE)	1-H8
PLUG, BREATHER (FOR REAR AXLE)	1-C8
PLUG, BREATHER (FOR TRANSFER CASE)	1-M6
PLUG, DIAPHRAGM HOUSING SEALING SCREW	1-H4
PLUG, DOOR ASSIST GRIP	2-E6
PLUG, EXPANSION (FOR CAMSHAFT)	1-C2
PLUG, EXPANSION OR TIGHT (FOR TRANSMISSION CASE COVER)	1-G6
PLUG, FEED PUMP CHECK VALVE CHAMBER	1-J4
PLUG, FEED PUMP PISTON CHAMBER	1-J4
PLUG, HOLE (FOR REAR BRAKE)	1-K10
PLUG, INJECTION PUMP FELT PLATE	1-E4
PLUG, MASTER CYLINDER FLUID OUTLET	1-D10
PLUG, OIL PUMP RELIEF VALVE	1-E2
PLUG, RADIATOR DRAIN COCK	1-L2
PLUG, SHAFT DETENT BALL SPRING	1-F7
PLUG, STEERING GEAR HOUSING OIL	1-L9
PLUG, STRAIGHT SCREW (FOR STEERING LINK JOINT)	1-L9
PLUG, TIGHT, NO.1	1-F1
PLUG, TIGHT, NO.1 (FOR CYLINDER BLOCK)	1-H1
PLUG, TIGHT, NO.2	1-F1
PLUG, TIGHT, NO.2 (FOR CYLINDER BLOCK)	1-H1
PLUG, TIGHT, NO.3	1-F1
PLUG, TIGHT, NO.3 (FOR CYLINDER BLOCK)	1-H1
PLUG, TIGHT, NO.4	1-F1
PLUG, TIGHT, NO.4 (FOR CYLINDER BLOCK)	1-H1
PLUG, TIGHT, NO.5	1-F1
PLUG, TIGHT, NO.5 (FOR CYLINDER BLOCK)	1-I1
PLUG, W/HEAD TAPER SCREW	1-I2
PLUG, W/HEAD TAPER SCREW, NO.1	1-F1
PLUG, W/HEAD TAPER SCREW, NO.2	1-I1
PLUG, W/HEAD TAPER SCREW, NO.3	1-I1
PLUG, WATER DRAIN COCK (FOR CYLINDER BLOCK)	1-H1
PLUNGER, REVERSE & 5TH SHIFT RETURN	1-H6
PLUNGER, 1ST & 2ND SHIFT RETURN	1-H6
POCKET, FRONT DOOR TRIM, LH	2-H4
POCKET, FRONT DOOR TRIM, RH	2-H4
POCKET, QUARTER TRIM	2-C4
POINTER, TIMING	1-K1
POLE SUB-ASSY, PULL TOP ANTENNA	2-C10
PROTECTOR SUB-ASSY, FUEL TANK, NO.1	2-F7
PROTECTOR, COWL TOP VENT LOUVER	2-F2
PROTECTOR, EDGE, NO.1	2-C2
PROTECTOR, FUEL TANK INLET PIPE	2-F7
PROTECTOR, INTERMEDIATE LINK JOINT	1-A9
PROTECTOR, QUARTER INNER	2-C4
PROTECTOR, SLIDING ROOF WEATHERSTRIP, LH	2-L3
PROTECTOR, SLIDING ROOF WEATHERSTRIP, RH	2-L3
PULL ASSY, DOOR, INSIDE	2-F6
PULLER, FUSE	2-C9
PULLEY ASSY, POWER STEERING IDLE	1-E9
PULLEY, ALTERNATOR	1-J5
PULLEY, CRANKSHAFT	1-B2
PULLEY, CRANKSHAFT, NO.2	1-B2
PULLEY, FAN	1-J2
PULLEY, PARKING BRAKE SEGMENTAL	1-K10
PULLEY, VANE PUMP	1-B9
PUMP ASSY, FUEL FEED	1-J4

PART NAME

LOCATION

PUMP ASSY, INJECTION	1-C4
PUMP ASSY, VACUUM	1-M3
PUMP ASSY, VANE	1-B9
PUMP ASSY, WATER	1-I2
PUMP KIT, WATER	1-I2
PUMP SUB-ASSY, PRIMING	1-J4
PUSH ROD SUB-ASSY, BOOSTER	1-Q10
RACK, CONTROL	1-D4
RADIATOR ASSY	1-L2
RADIATOR ASSY, HEATER	2-H10
RAIL SUB-ASSY, SLIDING ROOF GUIDE, LH	2-L3
RAIL SUB-ASSY, SLIDING ROOF GUIDE, RH	2-L3
RAIL, ROOF SIDE, INNER, LH	2-F3
RAIL, ROOF SIDE, INNER RH	2-F3
RAIL, ROOF SIDE, OUTER LH	2-F3
RAIL, ROOF SIDE, OUTER RH	2-F3
RECEIVER ASSY, RADIO	2-A10
RECEIVER, TRANSFER OIL (FOR TRANSFER IDLER GEAR)	1-C7
RECEIVER, TRANSFER OIL, NO.1	1-M6
RECEIVER, TRANSFER OIL, NO.2	1-M6
RECEPTACLE ASSY, FRONT ASH	2-I6
RECEPTACLE ASSY, REAR ASH	2-I6
REFLECTOR, WARNING LAMP, LH	2-D2
REFLECTOR, WARNING LAMP, RH	2-D2
REGISTER ASSY, INSTRUMENT PANEL, NO.1	2-D2
REGISTER ASSY, INSTRUMENT PANEL, NO.2	2-D2
REGISTER ASSY, INSTRUMENT PANEL, NO.3	2-D2
REGULATOR ASSY, GENERATOR	1-J3
REGULATOR SUB-ASSY, FRONT DOOR WINDOW, LH	2-A5
REGULATOR SUB-ASSY, FRONT DOOR WINDOW, RH	2-A5
REINFORCE, BELT ANCHOR TO ROOF SIDE, INNER REAR LH	2-H3
REINFORCE, BELT ANCHOR TO ROOF SIDE, INNER REAR RH	2-H3
REINFORCE, SEAT BELT ANCHOR, NO.2 UPPER LH	2-G3
REINFORCE, SEAT BELT ANCHOR, NO.2 UPPER RH	2-G3
REINFORCE, SEAT BELT ANCHORAGE TO QUARTER WHEEL HOUSE, LH	2-G3
REINFORCE, SEAT BELT ANCHORAGE TO QUARTER WHEEL HOUSE, RH	2-G3
REINFORCE, TILT STEERING SUPPORT, NO.1	1-A9
REINFORCEMENT SUB-ASSY, CLUSTER FINISH PANEL	2-C2
REINFORCEMENT, BACK DOOR OPENING, INNER LH	2-H3
REINFORCEMENT, BACK DOOR OPENING, INNER RH	2-H3
REINFORCEMENT, BACK DOOR OPENING, LOWER LH	2-H3
REINFORCEMENT, BACK DOOR OPENING, LOWER RH	2-H3
REINFORCEMENT, DUST COVER, LH	1-I10
REINFORCEMENT, DUST COVER, RH	1-I10
REINFORCEMENT, FRONT FLOOR PANEL	2-I2
REINFORCEMENT, FRONT FLOOR TO BRACE	2-I2
REINFORCEMENT, FRONT FLOOR, CENTER	2-I2
REINFORCEMENT, INSTRUMENT PANEL	2-C2
REINFORCEMENT, JACK CARRIER	2-L2
REINFORCEMENT, PARKING BRAKE BASE	2-I2
REINFORCEMENT, QUARTER LOCK PILLAR, LH	2-G3
REINFORCEMENT, QUARTER LOCK PILLAR, RH	2-G3
REINFORCEMENT, REAR FLOOR PAN	2-L2
REINFORCEMENT, REAR FLOOR PANEL, LH	2-L2
REINFORCEMENT, REAR FLOOR PANEL, RH	2-L2
REINFORCEMENT, REAR SEAT CUSHION HINGE, LH	2-L2
REINFORCEMENT, REAR SEAT CUSHION HINGE, RH	2-L2
REINFORCEMENT, ROOF PANEL	2-L3
REINFORCEMENT, ROOF PANEL, NO.2	2-L3
REINFORCEMENT, ROOF SIDE, INNER REAR, LH	2-H3
RELAY ASSY (FOR HEATER BLOWER MOTOR)	2-E9
RELAY ASSY, CHARGE LAMP	2-C9
RELAY ASSY, FUEL CONTROL	2-G9
RELAY ASSY, GLOW PLUG	2-C9

FIGURE NUMBER INDEX

LOCATION	FIG.No.	SUMMARY	LOCATION	FIG.No.	SUMMARY	LOCATION	FIG.No.	SUMMARY
		BODY GROUP						ELECTRICAL GROUP
2-A1	51-51	FRAME	2-J5	71-51	SEAT & SEAT TRACK	2-I7	81-01	HEADLAMP
2-C1	51-52	SUSPENSION CROSSMEMBER & UNDER COVER	2-C6	71-52	SEAT BELT	2-J7	81-03	FRONT TURN SIGNAL LAMP
2-D1	51-53	SPARE WHEEL CARRIER	2-E6	74-51	ARMREST & VISOR	2-L7	81-06	SIDE TURN SIGNAL LAMP
2-E1	52-51	CAB MOUNTING & BODY MOUNTING	2-G6	74-54	BATTERY CARRIER	2-M7	81-11	REAR COMBINATION LAMP
2-G1	52-52	FRONT BUMPER & BUMPER STAY	2-H6	74-55	CAUTION PLATE	2-A8	81-13	REAR LICENSE PLATE LAMP
2-H1	52-53	REAR BUMPER & BUMPER STAY	2-I6	74-56	ASH RECEPTACLE	2-B8	81-14	REAR SIDE MARKER LAMP
2-I1	53-51	RADIATOR GRILLE	2-J6	75-51	EMBLEM & NAME PLATE	2-C8	81-21	INTERIOR LAMP
2-J1	53-53	HOOD & FRONT FENDER	2-K6	75-52	MOULDING	2-D8	82-01	BATTERY & BATTERY CABLE
2-L1	53-54	HOOD LOCK & HINGE	2-M6	75-53	BODY STRIPE	2-F8	82-02	WIRING & CLAMP
2-M1	53-55	FRONT FENDER APRON & DASH PANEL	2-B7	75-54	TOOL BOX & LICENSE PLATE BRACKET	2-J8	83-01	METER
2-B2	55-51	INSTRUMENT PANEL & GLOVE COMPARTMENT	2-C7	77-51	FUEL TANK & TUBE	2-M8	83-02	INDICATOR
2-F2	55-53	COWL PANEL & WINDSHIELD GLASS	2-G7	78-51	ACCELERATOR LINK	2-A9	84-01	SWITCH & RELAY
2-G2	57-51	FLOOR MEMBER				2-G9	84-06	ELECTRONIC DIESEL INJECTION CONTROL SYSTEM
2-H2	58-51	FRONT FLOOR PANEL				2-H9	85-01	WINDSHIELD WIPER
2-K2	58-52	REAR FLOOR PANEL				2-I9	85-02	REAR WIPER
2-M2	58-53	FLOOR INSULATOR				2-J9	85-03	WINDSHIELD WASHER
2-A3	58-54	FLOOR MAT & SILENCER PAD				2-L9	85-04	REAR WASHER
2-C3	58-55	CONSOLE BOX & BRACKET				2-M9	85-11	DOOR MOTOR & DOOR SOLENOID
2-E3	61-51	SIDE MEMBER				2-A10	86-01	RADIO & TAPE PLAYER
2-I3	61-52	SIDE WINDOW				2-B10	86-02	SPEAKER
2-K3	61-53	ROOF PANEL & BACK PANEL				2-C10	86-04	ANTENNA
2-A4	61-55	REAR VENTILATOR & ROOF VENTILATOR				2-D10	86-11	HORN
2-B4	64-51	INSIDE TRIM BOARD				2-E10	87-01	MIRROR
2-D4	64-52	ROOF HEADLINING & SILENCER PAD				2-F10	87-11	HEATING & AIR CONDITIONING - SET
2-F4	67-51	FRONT DOOR PANEL & GLASS				2-G10	87-12	HEATING & AIR CONDITIONING - HEATER UNIT & BLOWER
2-J4	67-52	FRONT DOOR VENTILATOR WINDOW				2-I10	87-15	HEATING & AIR CONDITIONING - CONTROL & AIR DUCT
2-L4	67-53	FRONT DOOR LOCK & HANDLE				2-K10	87-16	HEATING & AIR CONDITIONING - WATER PIPING
2-A5	67-54	FRONT DOOR WINDOW REGULATOR & HINGE						
2-C5	67-61	BACK DOOR PANEL & GLASS						
2-F5	67-62	BACK DOOR LOCK & HINGE						
2-H5	67-65	LOCK CYLINDER SET						

LAND CRUISER (U. S. A)