

FRONT & REAR SUSPENSION

SECTION SU


CONTENTS

FRONT SUSPENSION	2		
Precautions	2		
PRECAUTIONS	2		
Preparation	2		
SPECIAL SERVICE TOOLS	2		
COMMERCIAL SERVICE TOOLS	2		
Noise, Vibration and Harshness (NVH)			
Troubleshooting	3		
NVH TROUBLESHOOTING CHART	3		
Components.....	4		
2WD MODEL.....	4		
4WD MODEL.....	5		
On-vehicle Service.....	6		
FRONT SUSPENSION PARTS	6		
FRONT WHEEL ALIGNMENT	6		
Components.....	11		
Shock Absorber	12		
REMOVAL AND INSTALLATION.....	12		
INSPECTION.....	12		
Torsion Bar Spring.....	12		
REMOVAL.....	12		
INSPECTION.....	13		
INSTALLATION AND ADJUSTMENT	13		
Stabilizer Bar	14		
REMOVAL.....	14		
INSPECTION.....	14		
INSTALLATION.....	14		
Upper Link	15		
REMOVAL.....	15		
INSTALLATION.....	15		
DISASSEMBLY.....	15		
INSPECTION.....	15		
ASSEMBLY	16		
Lower Link	16		
REMOVAL AND INSTALLATION.....	16		
INSPECTION.....	16		
Upper Ball Joint and Lower Ball Joint.....	17		
		REMOVAL AND INSTALLATION.....	17
		INSPECTION.....	17
		Service Data and Specifications (SDS).....	17
		GENERAL SPECIFICATIONS (FRONT).....	17
		WHEEL RUNOUT AVERAGE	17
		UPPER BALL JOINT	17
		LOWER BALL JOINT	17
		WHEEL ALIGNMENT (UNLADEN*1).....	18
		REAR SUSPENSION	20
		Precautions	20
		PRECAUTIONS	20
		Preparation	20
		COMMERCIAL SERVICE TOOLS.....	20
		Noise, Vibration and Harshness (NVH)	
		Troubleshooting	21
		Components.....	21
		2WD KA24DE MODEL	21
		2WD VG33E AND VG33ER MODELS	22
		4WD VG33E AND VG33ER MODELS	23
		On-vehicle Service.....	23
		REAR SUSPENSION PARTS	23
		Removal and Installation	24
		Shock Absorber	24
		REMOVAL AND INSTALLATION.....	24
		INSPECTION.....	25
		Leaf Spring	25
		REMOVAL.....	25
		INSPECTION.....	25
		INSTALLATION.....	26
		Stabilizer Bar	26
		REMOVAL.....	26
		INSPECTION.....	26
		INSTALLATION.....	26
		Service Data and Specifications (SDS).....	27
		GENERAL SPECIFICATIONS (REAR).....	27

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

FRONT SUSPENSION

Precautions

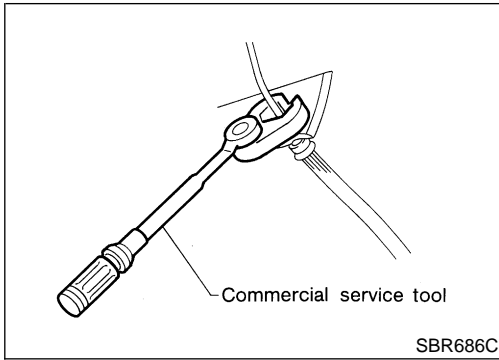

Precautions PRECAUTIONS

- When installing rubber parts, final tightening must be carried out under unladen condition* with tires on ground.
*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.
- Use flare nut wrench when removing and installing brake tubes.
- After installing removed suspension parts, check wheel alignment and adjust if necessary.
- Always torque brake lines when installing.

NGSU0001

Preparation

SPECIAL SERVICE TOOLS

The actual shapes of Kent-Moore tools may differ from those of special service tools illustrated here.

NGSU0002

Tool number (Kent-Moore No.) Tool name	Description
ST29020001 (J24319-01) Gear arm puller	<p>Removing ball joint for knuckle spindle a: 34 mm (1.34 in) b: 6.5 mm (0.256 in) c: 61.5 mm (2.421 in)</p> <p>NT694</p>
HT72520000 (J25730-B) Ball joint remover	<p>Removing tie-rod outer end a: 33 mm (1.30 in) b: 50 mm (1.97 in) r: 11.5 mm (0.453 in)</p> <p>NT546</p>
(j-45813) Front lower control arm frame bushing removal/ installation tool	<p>To replace the lower control arm frame bushing</p> <p>LSU029</p>

COMMERCIAL SERVICE TOOLS

NGSU0003

Tool name	Description
1 Flare nut crowfoot 2 Torque wrench	<p>Removing and installing each brake piping a: 10 mm (0.39 in)</p> <p>NT360</p>

FRONT SUSPENSION

Noise, Vibration and Harshness (NVH) Troubleshooting

Noise, Vibration and Harshness (NVH) Troubleshooting

=NGSU0004

NGSU0004S01

NVH TROUBLESHOOTING CHART

Use the chart below to help you find the cause of the symptom. Repair or replace parts as necessary.

Symptom		Possible Cause and SUSPECTED PARTS											Reference page														
		Improper installation, looseness	Shock absorber deformation, damage or deflection	Bushing or mounting deterioration	Parts interference	Spring fatigue	Suspension looseness	Incorrect wheel alignment	Stabilizer bar fatigue	Out-of-round	Imbalance	Incorrect air pressure	Uneven tire wear	Deformation or damage	Non-uniformity	Incorrect tire size	PROPELLER SHAFT	DIFFERENTIAL	DRIVE SHAFT	AXLE	SUSPENSION	TIRES	ROAD WHEEL	BRAKES	STEERING		
SUSPENSION	Noise	x	x	x	x	x	x										x	x	x	x		x	x	x	x	SU-4, 21	
	Shake	x	x	x	x		x										x		x	x		x	x	x	x	SU-12, 24	
	Vibration	x	x	x	x	x											x		x	x		x				SU-11, 24	
	Shimmy	x	x	x	x			x												x		x				—	
	Judder	x	x	x																	x		x			SU-11, 24	
	Poor quality ride or handling	x	x	x	x	x		x	x											x			x			SU-6	
	TIRES	Noise	x							x	x	x	x	x	x			x	x	x	x	x		x	x	x	SU-6
		Shake	x							x	x	x	x	x				x	x	x	x	x		x	x	x	SU-14
		Vibration										x															SU-6
		Shimmy	x							x	x	x	x	x	x						x		x				—
		Judder	x							x	x	x	x	x							x		x				SU-11, 24
		Poor quality ride or handling	x								x	x	x	x							x		x				SU-11, 24
ROAD WHEEL	Noise	x							x	x			x				x	x	x	x	x	x		x	x	SU-6	
	Shake	x							x	x							x	x	x	x	x	x		x	x	SU-14	
	Shimmy, Judder	x							x	x										x		x				SU-6	
	Poor quality ride or handling	x							x	x			x							x		x				—	

x: Applicable

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

FRONT SUSPENSION

Components

Components

NGSU0005


NGSU0005S01

2WD MODEL

SEC. 391•400•401

When installing rubber parts, final tightening must be carried out under unladen condition* with tires on ground.

- * Fuel, radiator coolant and engine oil full.
- Spare tire, jack, hand tools and mats in designated positions.

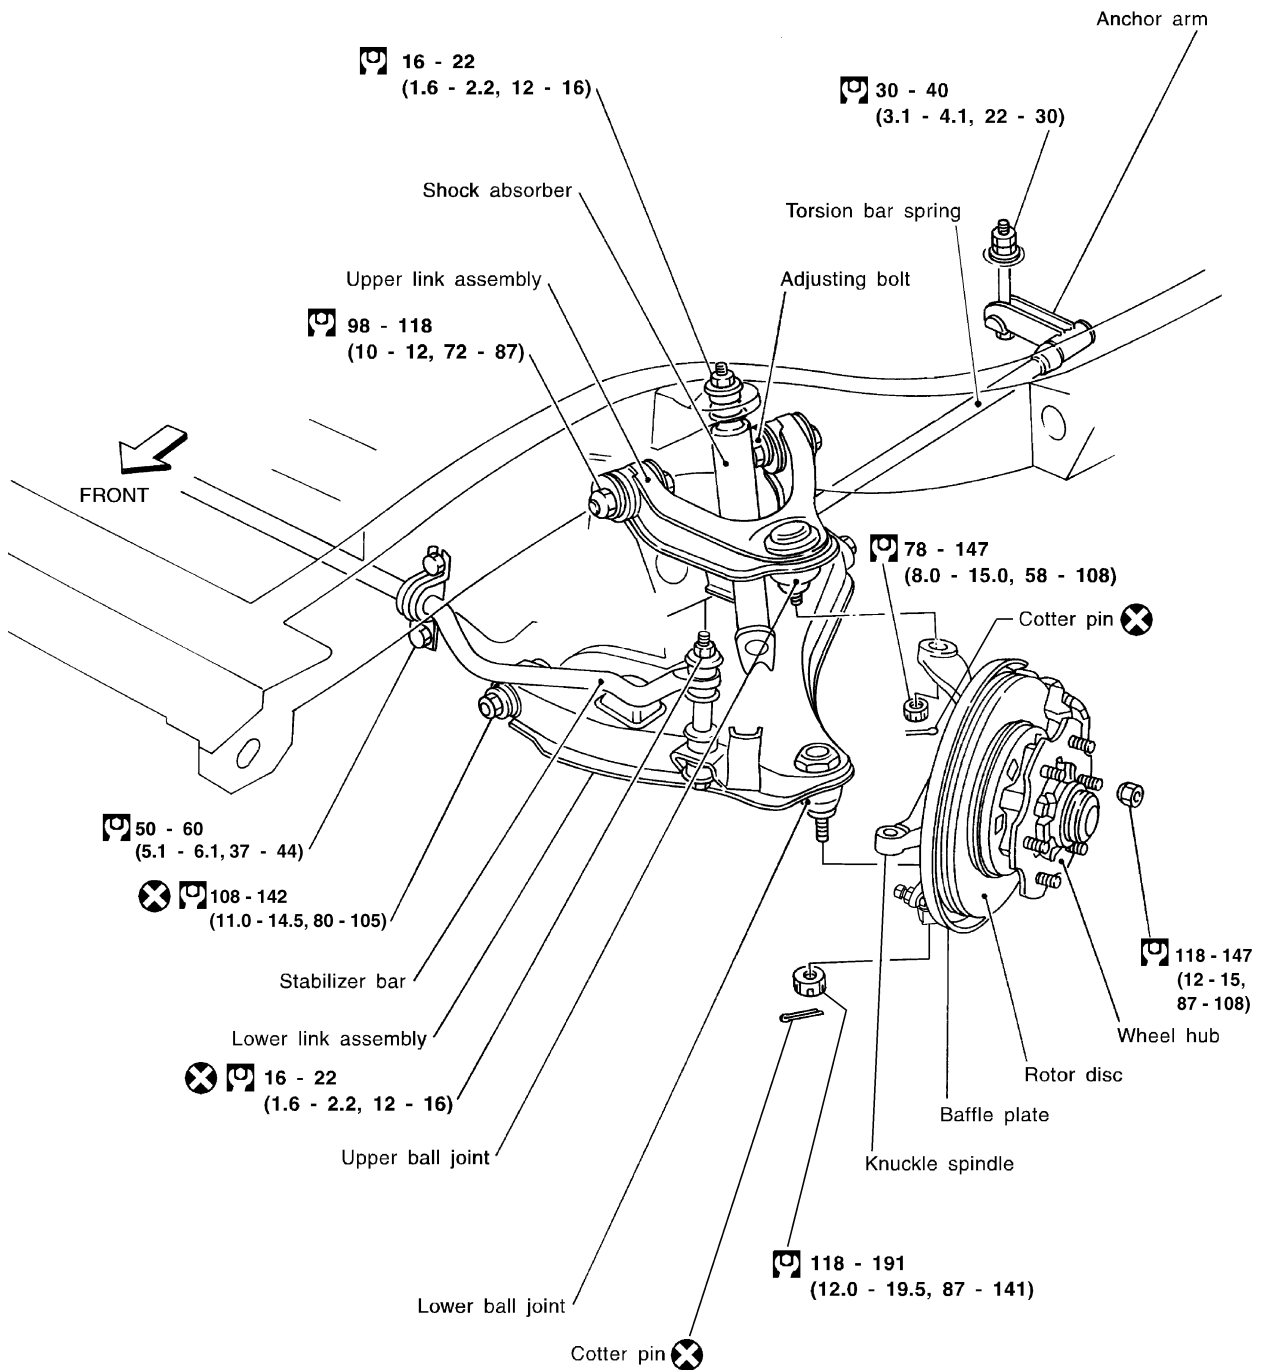

: N•m (kg-m, ft-lb)

WSU013

FRONT SUSPENSION

Components (Cont'd)


4WD MODEL

NGSU0005S02

SEC. 391•400•401

When installing rubber parts, final tightening must be carried out under unladen condition* with tires on ground.

- * Fuel, radiator coolant and engine oil full.
- Spare tire, jack, hand tools and mats in designated positions.

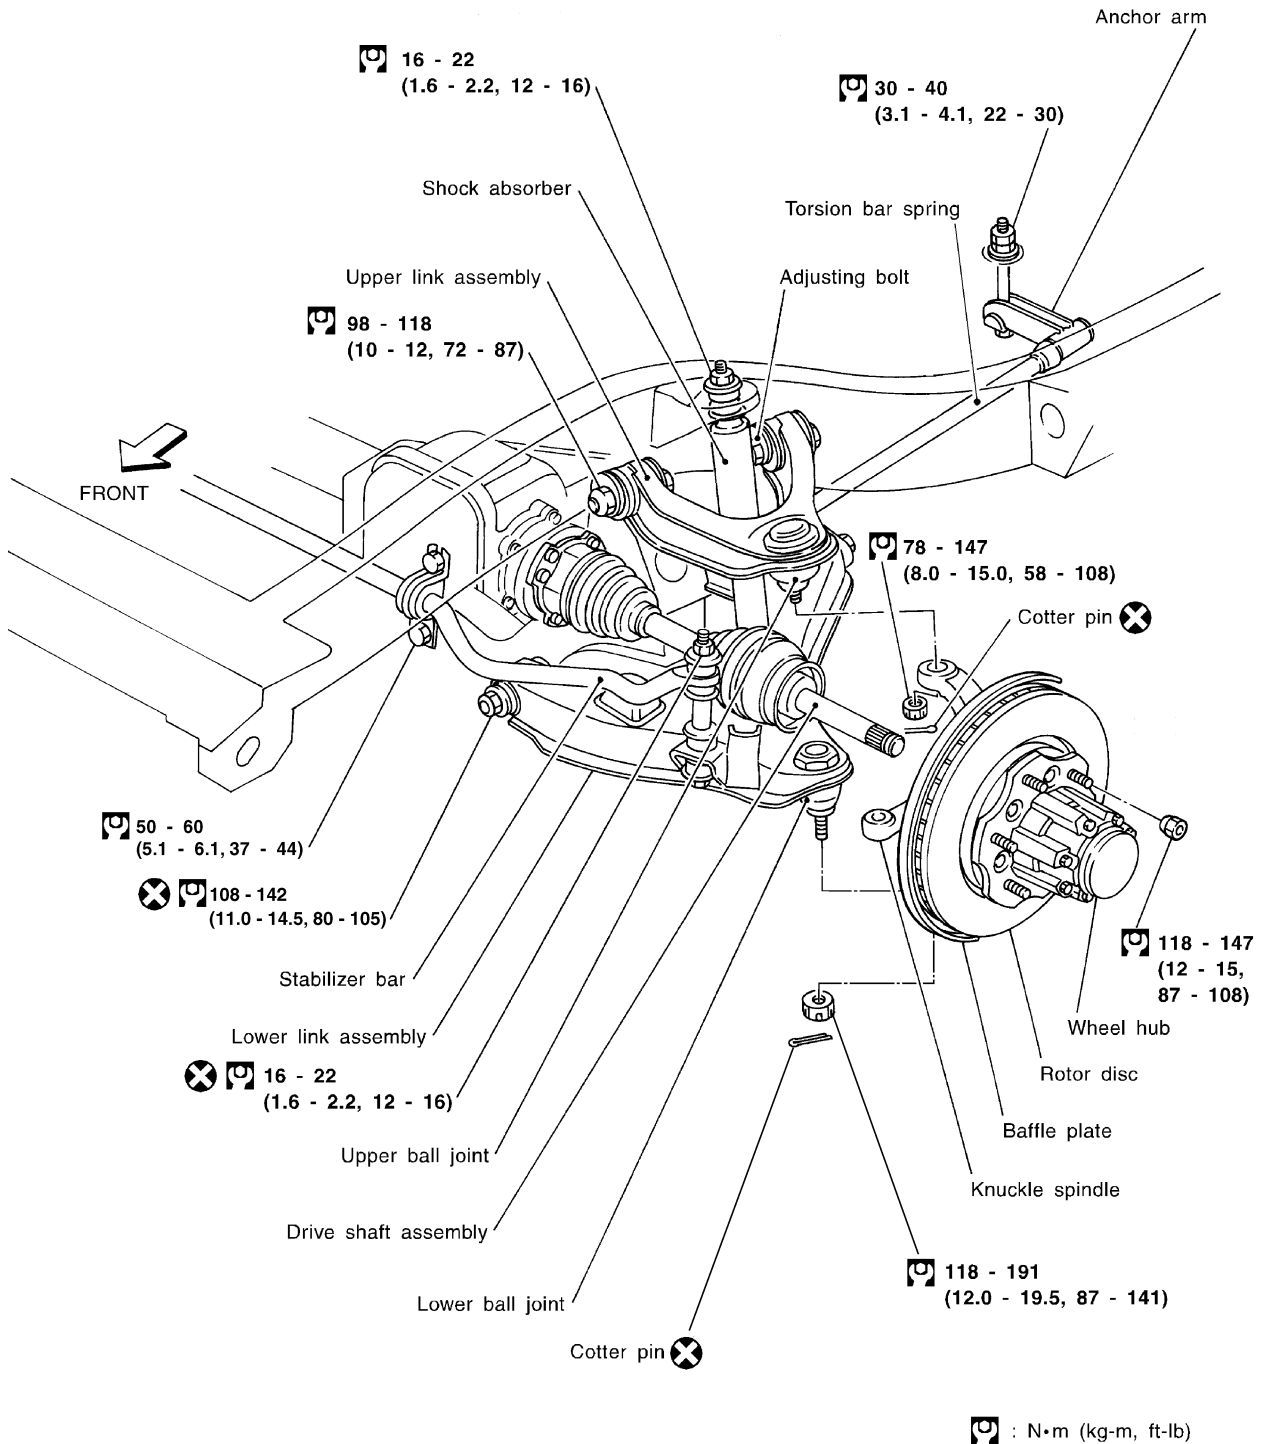

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA



SC

EL

IDX

FRONT SUSPENSION

On-vehicle Service

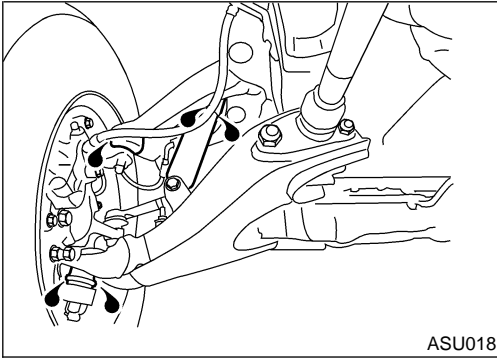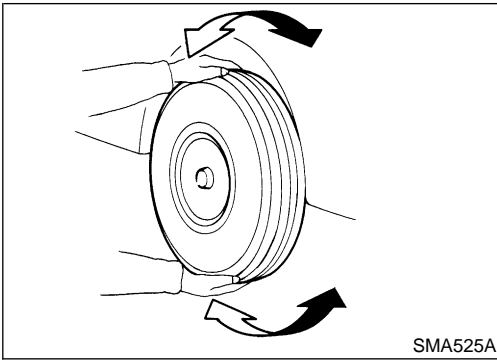


On-vehicle Service

FRONT SUSPENSION PARTS

NGSU0006

Check front suspension parts for excessive play, cracks, wear and other damage.


- Shake each front wheel to check for excessive play. If looseness is noted, adjust wheel bearing end play, then check ball joint end play. Refer to "INSPECTION", SU-17.
- Make sure that the cotter pin is inserted.
- Retighten all nuts and bolts to the specified torque.
 : Refer to "FRONT SUSPENSION", SU-11.
- Check shock absorber for oil leakage and other damage.
- Check suspension ball joint for grease leakage and ball joint dust cover for cracks and other damage.

FRONT WHEEL ALIGNMENT

NGSU0007

Before checking front wheel alignment, make a preliminary inspection (Unladen*).

*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

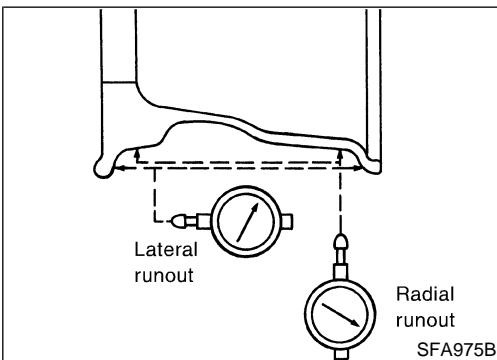


Preliminary Inspection

NGSU0007S01


1. Check tires for wear and proper inflation.
2. Check wheels for deformation, cracks and other damage. If deformed, remove wheel and check wheel runout.
 - 1) Remove tire from aluminum wheel and mount wheel on a tire balance machine.
 - 2) Set dial indicator as shown in the illustration.
Wheel runout (Dial indicator value):
Refer to "WHEEL RUNOUT AVERAGE", SU-17.
3. Check front wheel bearings for looseness.
4. Check front suspension for looseness.
5. Check steering linkage for looseness.
6. Check that front shock absorbers work properly by using the standard bounce test.

FRONT SUSPENSION

On-vehicle Service (Cont'd)

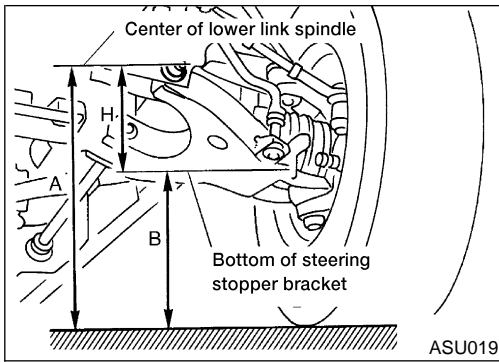

7. Check vehicle posture (Unladen): $H = A - B$ mm (in)
Refer to "2WD Model", SU-18 or "4WD Model", SU-19.
 - a. Exercise the front suspension by bouncing the front of the vehicle 4 or 5 times to ensure that the vehicle is in a neutral height attitude.
 - b. Measure wheel alignment.
Refer to "2WD Model", SU-18 or "4WD Model", SU-19.
 - c. If wheel alignment is not as specified, adjust vehicle posture.
Refer to "2WD Model", SU-18 or "4WD Model", SU-19.
 - d. Adjust wheel alignment.
Refer to "2WD Model", SU-18 or "4WD Model", SU-19.

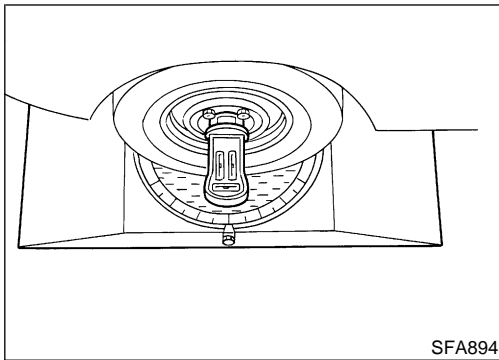


Camber, Caster and Kingpin Inclination

Before checking camber, caster or kingpin inclination, move vehicle up and down on turning radius gauge to minimize friction. Ensure that the vehicle is in correct posture.

- Measure camber, caster and kingpin inclination of both right and left wheels with a suitable alignment gauge and adjust in accordance with the following procedures.

Camber, Caster and Kingpin inclination:

Refer to "2WD Model", SU-18 or "4WD Model", SU-19.

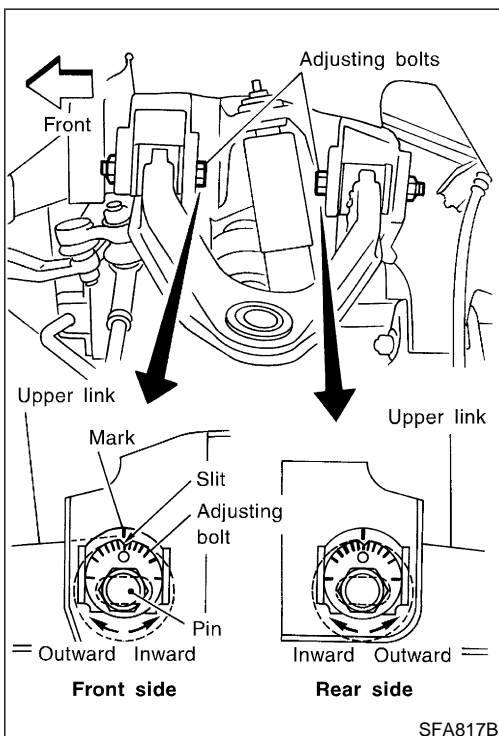


- In the following two cases, temporarily tighten the adjusting bolts while aligning the matching marks with the slits as shown in the figure at the left and measure the camber, caster and kingpin inclination:
 - a) When replacing the upper link or other suspension parts with new ones
 - b) When matching marks were not painted on adjusting bolts before suspension disassembly procedures
- If matching marks were already painted during suspension disassembly, align the matching marks with the slits, then temporarily tighten the adjusting bolts. Measure the camber, caster and kingpin inclination.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

FRONT SUSPENSION

On-vehicle Service (Cont'd)

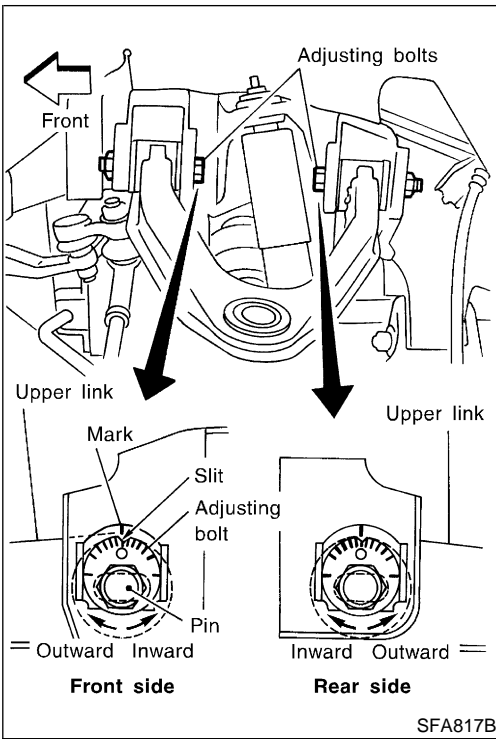

Adjustment

NGSU0007S03

- Both camber and caster angles are adjusted by adjusting bolts.
 - If the kingpin inclination is outside specifications, check the front suspension parts for wear or damage. Replace faulty parts with new ones.
- From the measured value, read the coordinate (or: graduation) at the intersecting point in the graph.
 - If the coordinate (or: graduation) at the intersecting point is positive, move the pin outward by turning the corresponding adjusting bolt by the indicated graduation.
 - If the coordinate (or: graduation) at the intersecting point is negative, move the pin inward by turning the corresponding adjusting bolt by the indicated graduation.
- Re-measure to ensure that the camber and caster are within specified tolerances.


[Example]

- Measured values corresponding with the two values indicated below: (See chart for 4WD model.)

Camber angle: $-0^{\circ}06'$ (-0.10°)

Caster angle: $2^{\circ}10'$ (2.17°)





- Apply the above two values to the graph and determine point "A".
- The coordinate (or: graduation) indicates that both the front and rear adjusting bolts must be turned outward by 3 graduations. Turn the adjusting bolts by the amount corresponding with the 3 graduations.

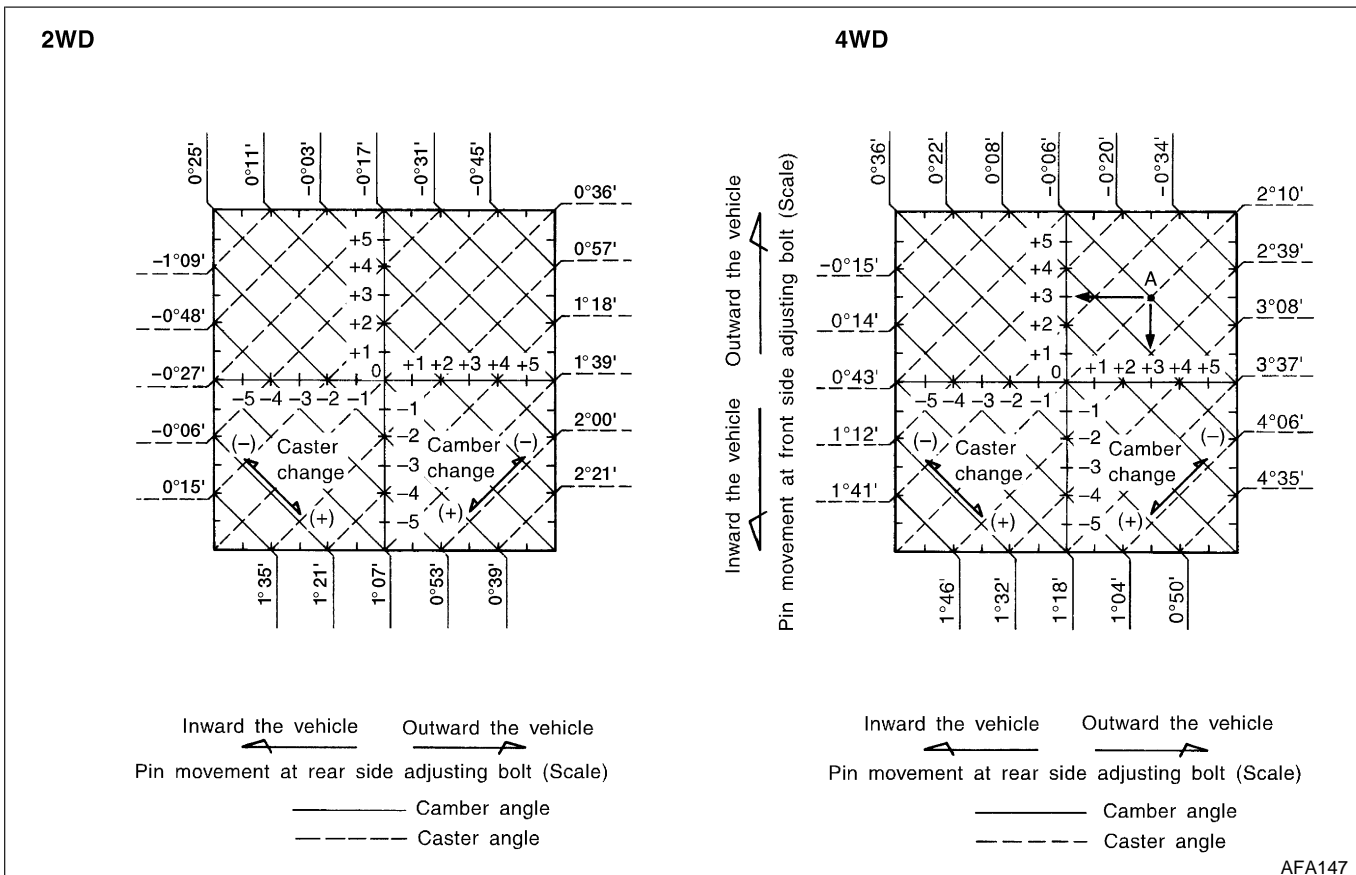

AF147

FRONT SUSPENSION

On-vehicle Service (Cont'd)

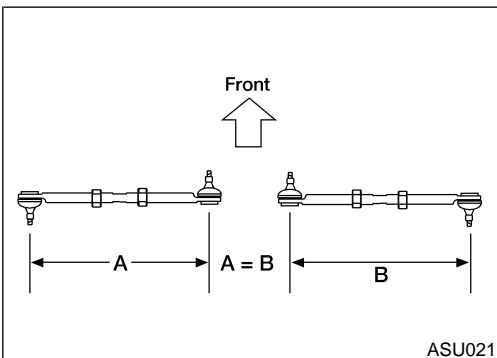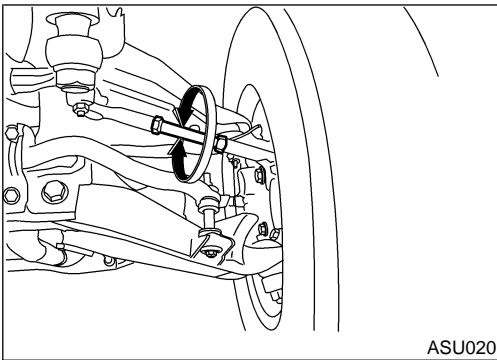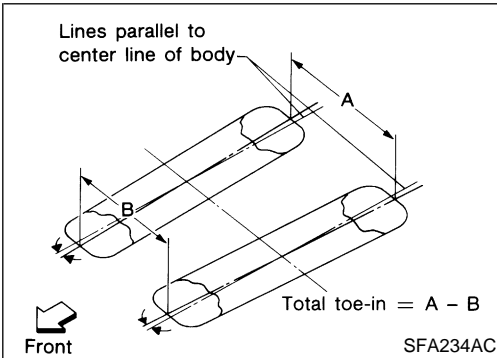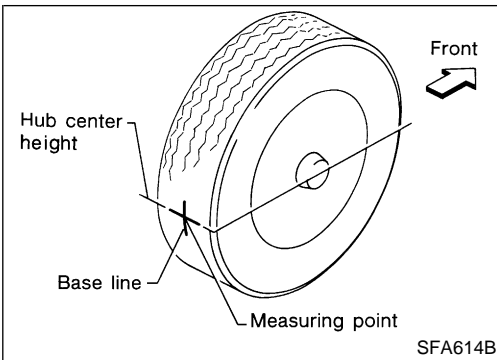

Toe-in

NGSU0007S04

Measure toe-in using the following procedure.

WARNING:

- Always perform the following procedure on a flat surface.
- Make sure that no one is in front of the vehicle before pushing it.

1. Bounce front of vehicle up and down to stabilize the posture.
2. Push the vehicle straight ahead about 5 m (16 ft).
3. Put a mark on base line of the tread (rear side) of both tires at the same height of hub center. This mark is a measuring point.
4. Measure distance "A" (rear side).
5. Push the vehicle slowly ahead to rotate the wheels 180 degrees (1/2 turn).

- If the wheels have rotated more than 180 degrees (1/2 turn), try the above procedure again from the beginning. Never push vehicle backward.

6. Measure distance "B" (front side).

Total toe-in:

Refer to "2WD Model", SU-18 or "4WD Model", SU-19.

7. Adjust toe-in by varying the length of both steering tie-rods.
 - a. Loosen lock nuts.
 - b. Adjust toe-in by turning both the left and right tie-rod tubes equal amounts.

Make sure that the tie-rod bars are screwed into the tie-rod tube more than 35 mm (1.38 in).

Make sure that the tie-rods are the same length before aligning the front end.

Standard length (A = B):


297.6 mm (11.72 in)

- c. Tighten clamp bolts or lock nuts, then torque them.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

FRONT SUSPENSION

On-vehicle Service (Cont'd)

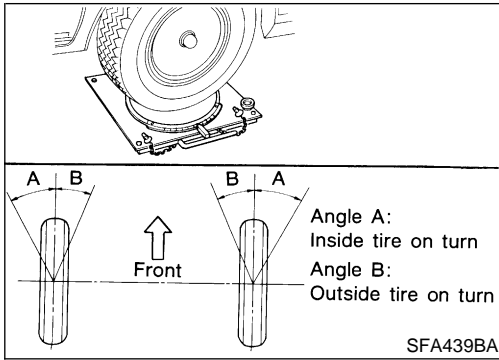


Front Wheel Turning Angle

=NGSU0007S05

1. Set wheels in straight-ahead position. Then move vehicle forward until front wheels rest properly on turning radius gauge.
 2. Rotate steering wheel all the way right and left; measure turning angle.
- On power steering models, turn steering wheel to full lock and apply force (at circumference of steering wheel) of 98 to 147 N (10 to 15 kg, 22 to 33 lb) with engine at idle.
 - **Do not hold the steering wheel at full lock for more than 15 seconds.**

Wheel turning angle (Full turn):

Refer to "2WD Model", SU-18 or "4WD Model", SU-19.

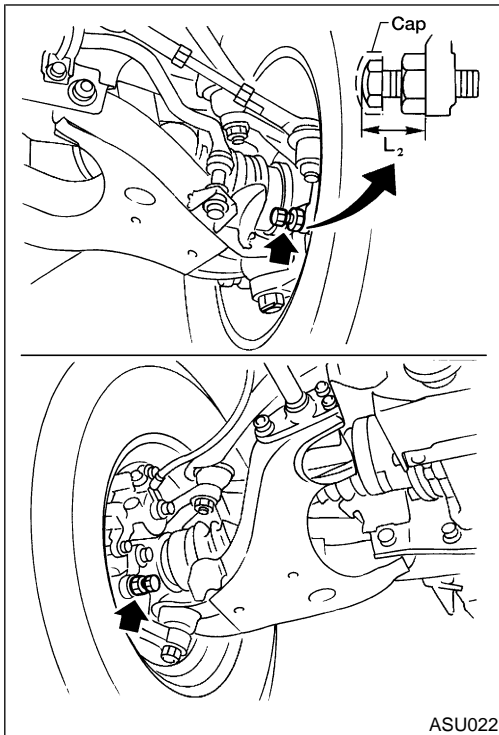

3. Adjust stopper bolt if necessary.

Standard length " L_2 "

Except P265/70R15 tire:

26.5 mm (1.043 in)

(Length before cap is mounted)

P265/70R15 tire:

30.0 mm (1.2 in)


(Length before cap is mounted)

FRONT SUSPENSION

Components

NGSU0008

Components

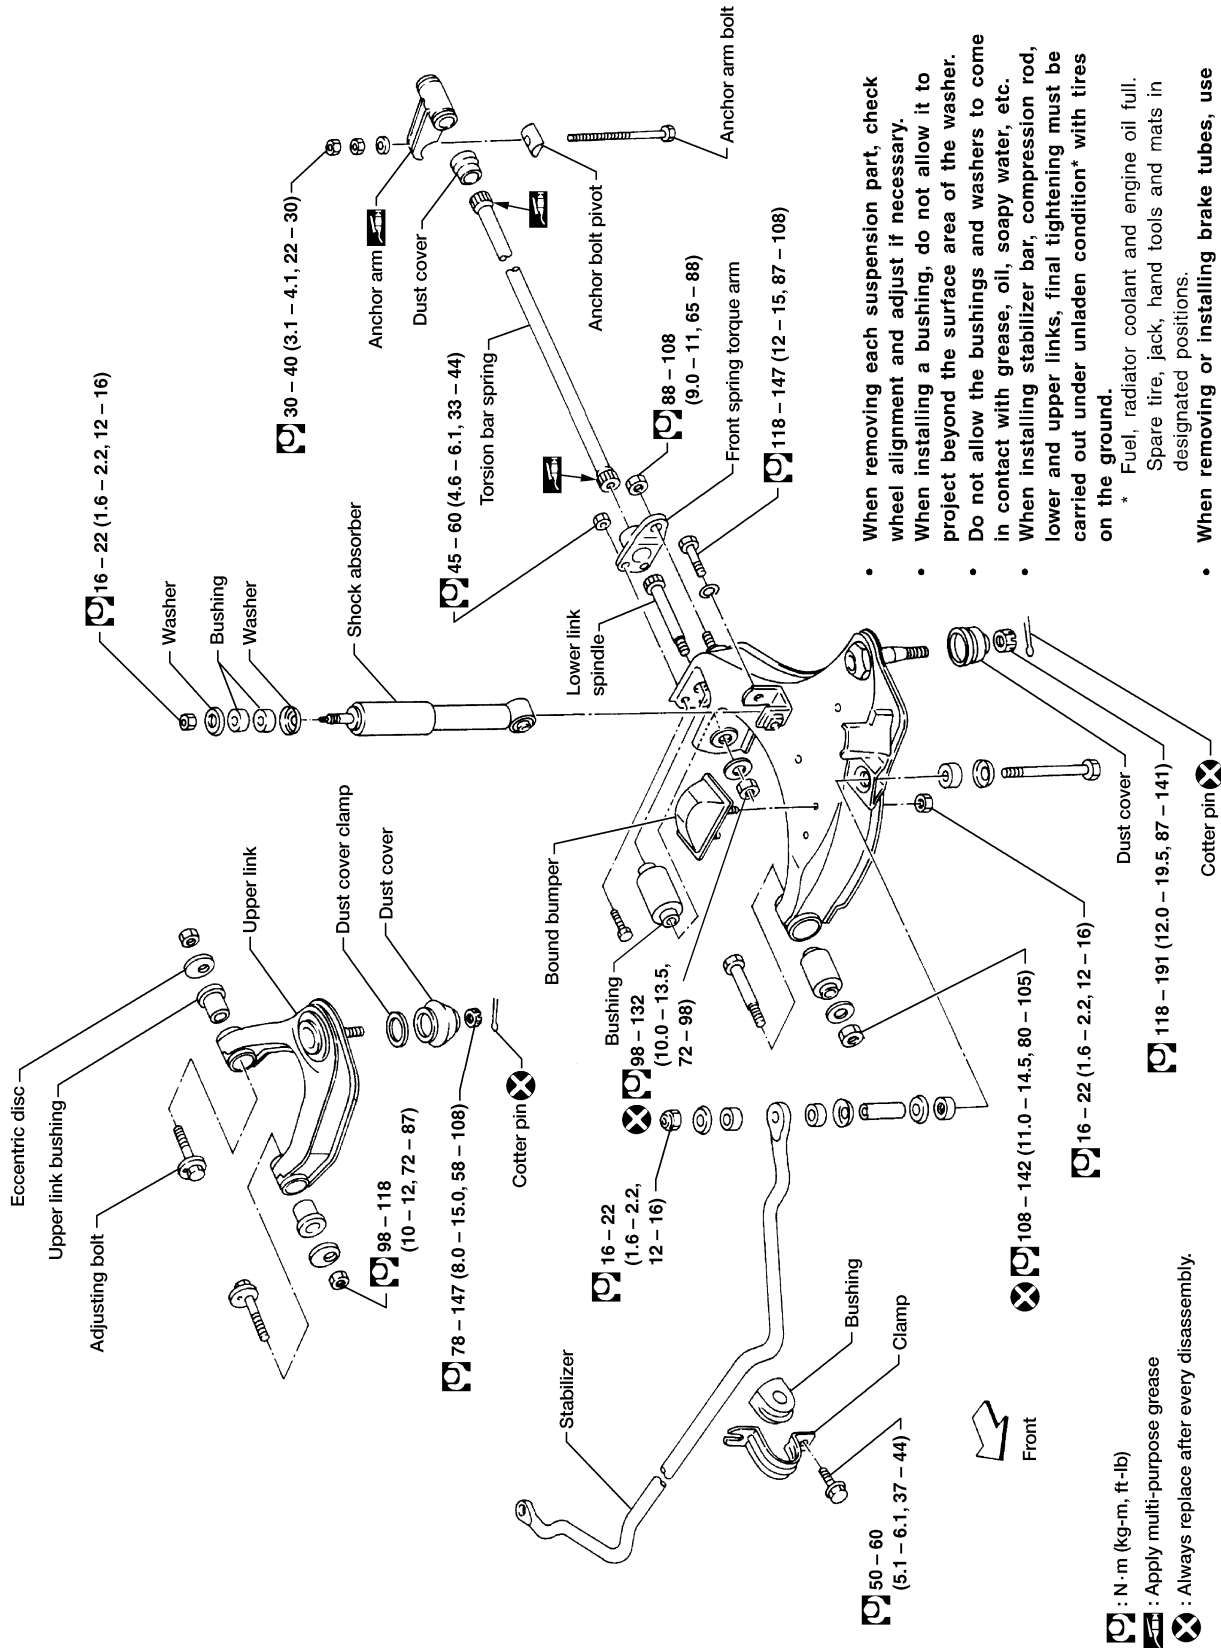

- When removing each suspension part, check wheel alignment and adjust if necessary.
 - When installing a bushing, do not allow it to project beyond the surface area of the washer.
 - Do not allow the bushings and washers to come in contact with grease, oil, soapy water, etc.
 - When installing stabilizer bar, compression rod, lower and upper links, final tightening must be carried out under unladen condition* with tires on the ground.
- * Fuel, radiator coolant and engine oil full.
Spare tire, jack, hand tools and mats in designated positions.
- When removing or installing brake tubes, use flare nut torque wrench.

Ⓜ : N·m (kg-m, ft-lb)
Ⓜ : Apply multi-purpose grease
⊗ : Always replace after every disassembly.

SEC. 401


SU-11

WSU030

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

FRONT SUSPENSION

Shock Absorber

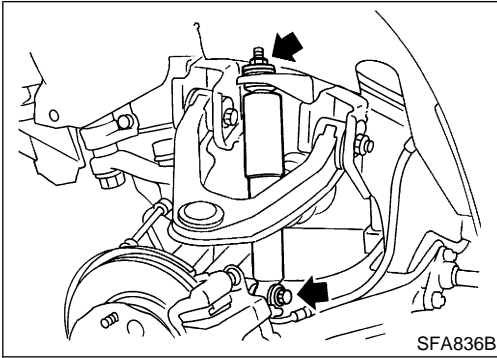

Shock Absorber REMOVAL AND INSTALLATION

NGSU0009

1. Support lower link with jack.
2. Remove bolt and nut that hold shock absorber.
3. Tighten upper nut and lower bolt to specification. Refer to "Components", SU-11.


INSPECTION

NGSU0010

Except for nonmetallic parts, clean all parts with suitable solvent and dry with compressed air.

Use compressed air to blow dirt and dust off nonmetallic parts.


- Check for oil leakage and cracks. Replace if necessary.
- Check piston rod for cracks, deformation and other damage. Replace if necessary.
- Check rubber parts for wear, cracks, damage and deformation. Replace if necessary.

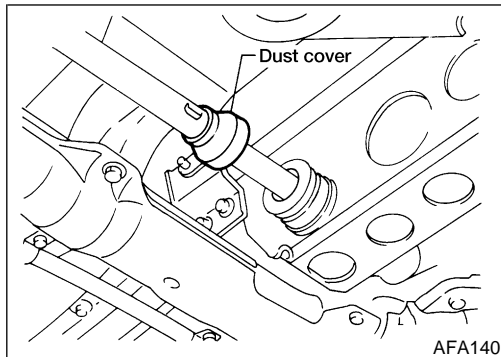

Torsion Bar Spring REMOVAL


NGSU0011

1. Move dust cover.

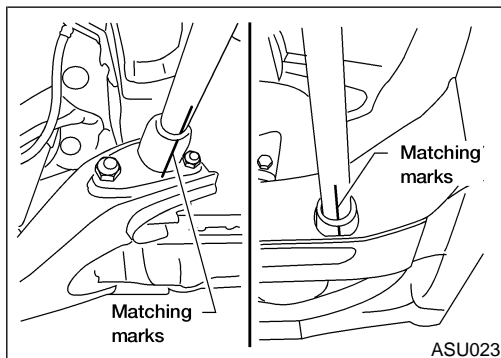

2. Paint matching marks on the torsion bar spring and the corresponding arm.

Always use paint to place the matching mark; do not scribe the affected parts.

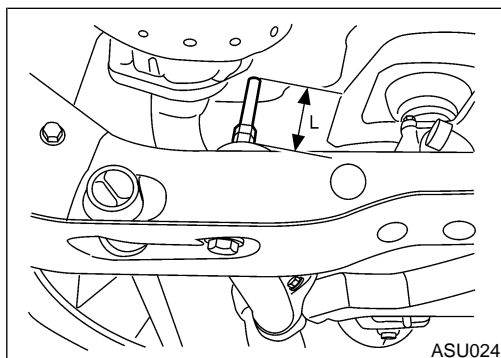


3. Measure anchor bolt protrusion "L" and remove the lock nut and adjusting nut.

Standard length "L" = 68 mm (2.68 in)

Before removing the nuts, ensure that twisting force is eliminated from the torsion bar springs.

FRONT SUSPENSION

Torsion Bar Spring (Cont'd)

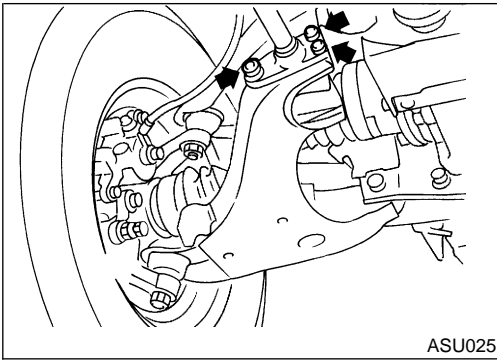

4. Remove torsion bar spring.
 - Remove torque arm fixing nuts, then withdraw torsion bar spring forward with torque arm.

GI

MA

EM

LC

INSPECTION

- Check torsion bar spring for wear, twist, bend and other damage.
- Check serrations of each part for cracks, wear, twist and other damage.
- Check dust cover for cracks.


NGSU0012

EC

FE

CL

MT

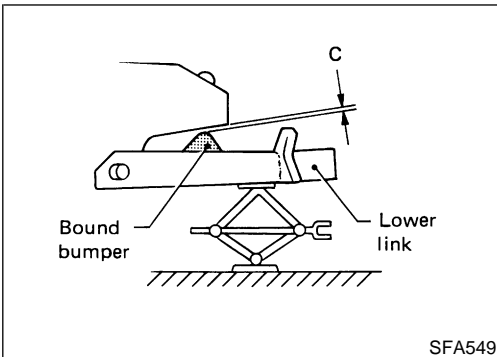

INSTALLATION AND ADJUSTMENT

Adjustment of anchor arm adjusting nut is in tightening direction only.

NGSU0013

AT

Do not adjust by loosening anchor arm adjusting nut.


1. Coat multi-purpose grease on the serration of torsion bar spring.
2. Place lower link in the position where bound bumper clearance "C" is 0.

TF

PD

Clearance "C": 0 mm (0 in)

AX

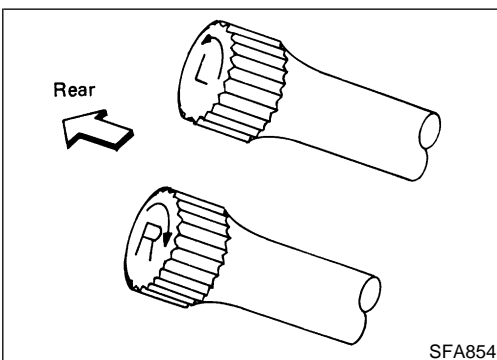

3. Install torsion bar spring with torque arm.


Be sure to install right and left torsion bar springs correctly.

SU

BR

ST

RS

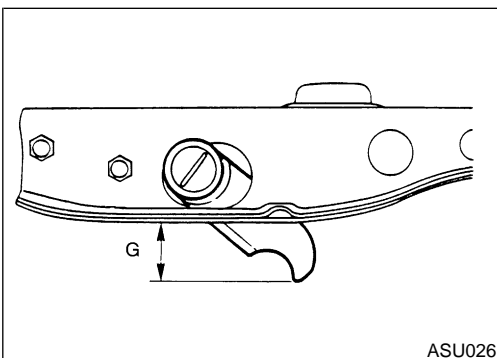

4. While aligning the anchor arm with the matching mark, install the anchor arm to the torsion bar spring.

If a new torsion bar spring or anchor arm is installed, adjust anchor arm length to the dimension indicated in the figure at the left.

BT

HA

Standard length "G":

25 - 39 mm (0.98 - 1.54 in)



SC

EL

IDX

FRONT SUSPENSION


Torsion Bar Spring (Cont'd)

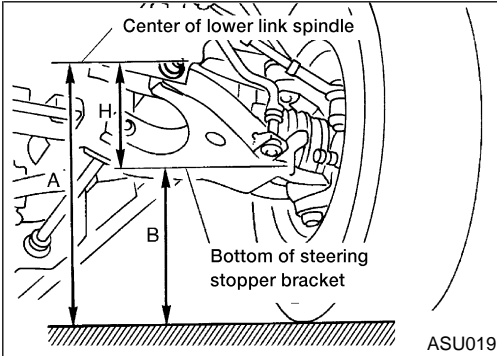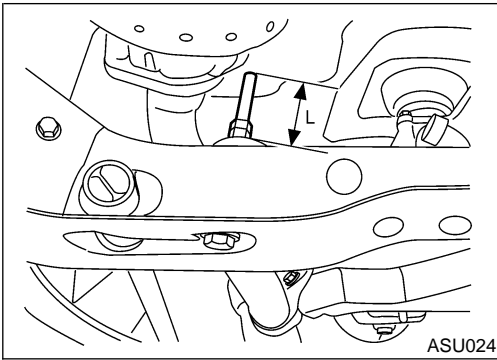

5. Tighten the adjusting nut so the torsion bar length corresponds with dimension "L" previously measured during torsion bar removal. Tighten the lock nut to specifications. If a new torsion bar spring or anchor arm is installed, tighten the adjusting nut to the dimension indicated in the figure at the left, then tighten the lock nut to specifications.

Standard length "L": 68 mm (2.68 in)

6. Bounce vehicle with tires on ground (Unladen) to eliminate friction of suspension.
 7. Measure vehicle posture "H".
 - a. Exercise the front suspension by bouncing the front of the vehicle 4 or 5 times to ensure that the vehicle is in a neutral height attitude.
 - b. Measure vehicle posture ... Dimension "H". Refer to "2WD MODEL", SU-18; or "4WD MODEL", SU-19.
- $H = A - B$ mm (in) "Unladen"**
8. If height of the vehicle is not within allowable limit, adjust vehicle posture. Refer to "2WD MODEL", SU-18; or "4WD MODEL", SU-19.
 9. Check wheel alignment if necessary. Refer to "2WD MODEL", SU-18; or "4WD MODEL", SU-19.

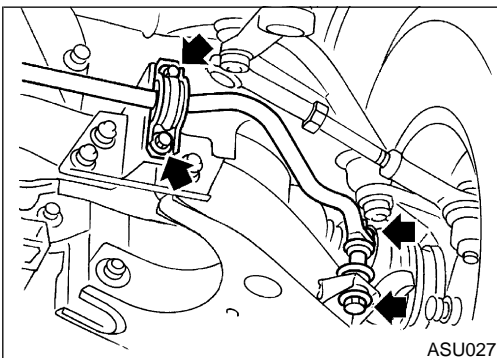

Stabilizer Bar REMOVAL

Remove stabilizer bar connecting bolts and clamp bolts.

NGSU0014

INSPECTION


- Check stabilizer bar for twist and deformation. Replace if necessary.
- Check rubber bushing for cracks, wear and deterioration. Replace if necessary.

NGSU0015

INSTALLATION

Install in the reverse order of removal. Refer to "Components", SU-11.


NGSU0016

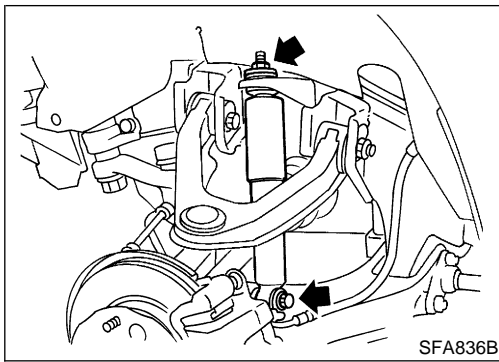


Upper Link

REMOVAL

1. Remove shock absorber. Refer to "Shock Absorber", SU-12. NGSU0017
2. Separate upper ball joint stud from knuckle spindle. GI
Support lower link with jack. MA
 Refer to AX-16, "Knuckle Spindle". EM

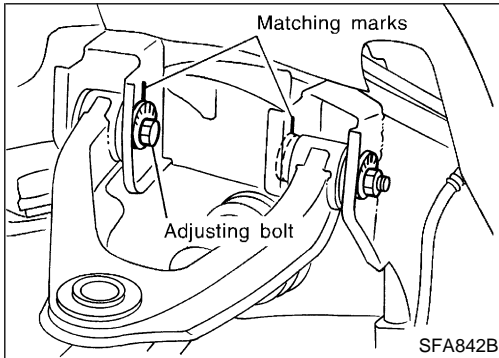

3. Put matching marks on adjusting bolts and remove adjusting bolts. LC
EC
FE
CL
MT

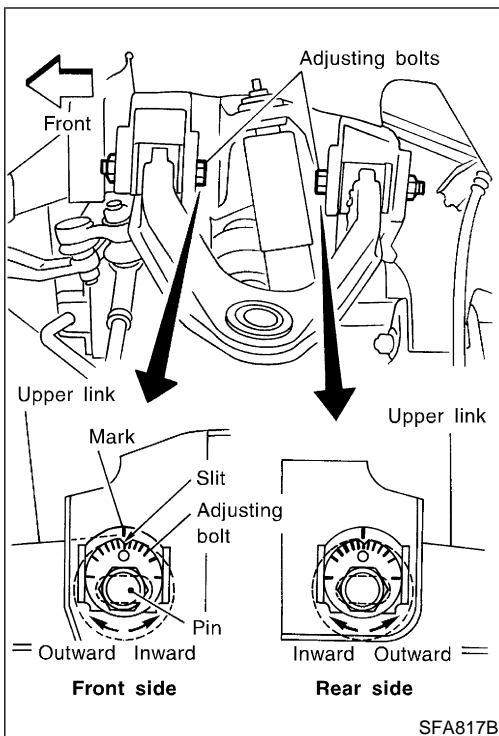

INSTALLATION


1. While aligning the adjusting bolts with the matching marks, install the upper link. NGSU0018 AT
 If a new upper link or any other suspension part is installed, align the matching mark with the slit as indicated in the figure at the left, then install the upper link. TF
 Refer to "FRONT WHEEL ALIGNMENT", SU-6. PD
2. Install shock absorber.
3. Tighten adjusting bolts under unladen condition (fuel, radiator coolant, and engine oil full; spare tire, jack, hand tools, and mats in designated positions) with tires on ground. Refer to "Components", SU-11 AX
4. After installing, check wheel alignment. Adjust if necessary. SU
 Refer to "FRONT WHEEL ALIGNMENT", SU-6.

DISASSEMBLY

- Press out upper link bushings. NGSU0019 BT


INSPECTION

- Check adjusting bolts and rubber bushings for damage. Replace if necessary. NGSU0020 HA
- Check upper link for deformation and cracks. Replace if necessary. SC

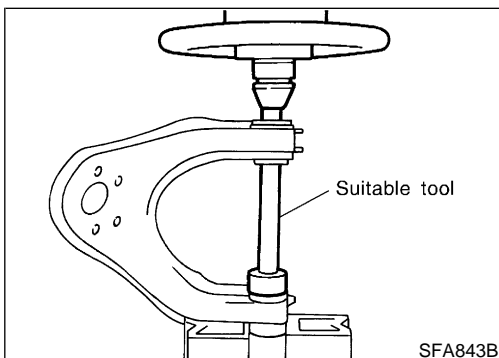

FRONT SUSPENSION

Upper Link (Cont'd)

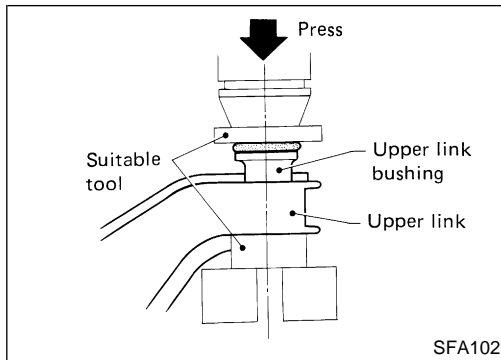


ASSEMBLY

1. Apply soapsuds to rubber bushing.
2. Press upper link bushing.

NGSU0021

Press bushing so that the flange of bushing securely contacts the end surface of the upper link collar.

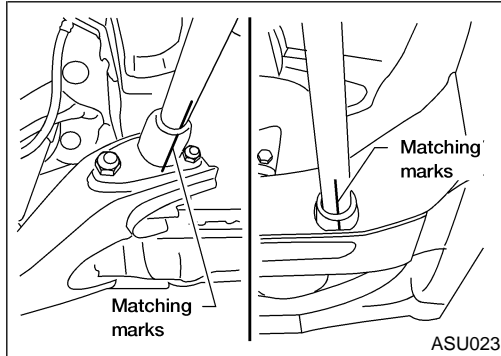

Lower Link

REMOVAL AND INSTALLATION



1. Remove torsion bar spring. Refer to "REMOVAL", SU-12.

NGSU0024


Make matching marks and measure dimension "L" when loosening adjusting nut until there is no tension on torsion bar spring.

Standard length "L": 68 mm (2.68 in)

2. Remove shock absorber lower fixing bolt.
3. Remove stabilizer bar connecting bolt.
4. Separate drive shaft from front final drive (4WD model). Refer to **AX-19**, "Drive Shaft".
5. Separate lower link ball joint from knuckle spindle. Refer to **AX-16**, "Knuckle Spindle".

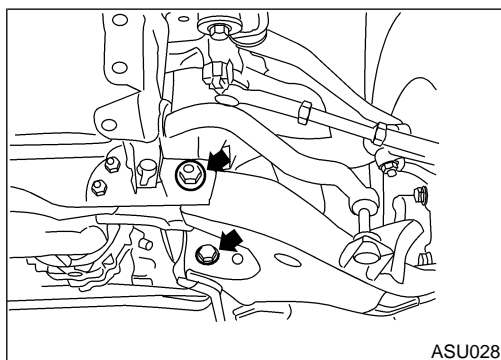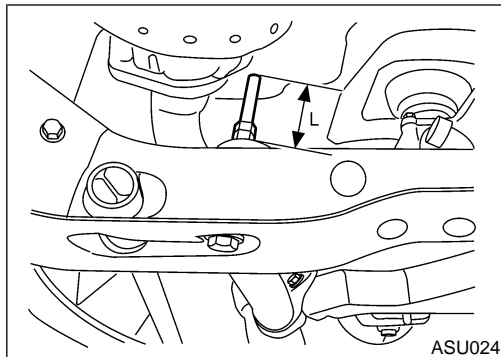

6. Remove front lower link fixing bolts.

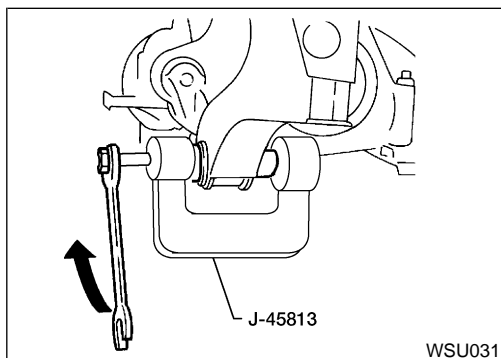

7. Remove bushing of lower link spindle from frame with Tool.
8. After installing lower link, adjust wheel alignment and vehicle height. Refer to "FRONT WHEEL ALIGNMENT", SU-6.

INSPECTION

NGSU0025

Lower Link and Lower Link Spindle

NGSU0025S01

- Check for deformation and cracks. Replace if necessary.


Lower Link Bushing

NGSU0025S02

- Check for distortion and damage. Replace if necessary.

FRONT SUSPENSION

Upper Ball Joint and Lower Ball Joint

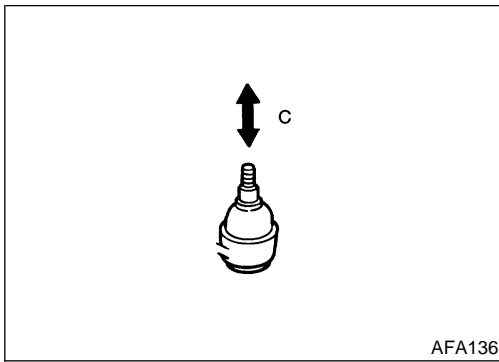

Upper Ball Joint and Lower Ball Joint REMOVAL AND INSTALLATION

Separate knuckle spindle from upper and lower links. Refer to **AX-16**, "Knuckle Spindle".

INSPECTION

- Check joints for play. If ball is worn and play in axial direction is excessive or joint is hard to swing, replace as an upper link or lower link.

Axial end play "C":

Upper link

0 mm (0 in)

Lower link

0.2 mm (0.008 in) or less

- Check dust cover for damage. Replace dust cover and dust cover clamp if necessary.

Service Data and Specifications (SDS)

GENERAL SPECIFICATIONS (FRONT)

Suspension type	Independent double wishbone torsion bar spring
Shock absorber type	Double-acting hydraulic
Stabilizer	Standard equipment

WHEEL RUNOUT AVERAGE

Wheel type	Steel		Aluminum
	Inside	Outside	
Radial runout limit mm (in)	0.8 (0.031) or less	0.4 (0.016) or less	0.3 (0.012)
Lateral runout limit mm (in)	1.0 (0.039) or less	0.9 (0.035) or less	0.3 (0.012)

UPPER BALL JOINT

Axial end play "C" mm (in)	0 (0)
----------------------------	-------

LOWER BALL JOINT

Axial end play "C" mm (in)	0.2 (0.008) or less
----------------------------	---------------------

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

FRONT SUSPENSION


Service Data and Specifications (SDS) (Cont'd)

WHEEL ALIGNMENT (UNLADEN*1) 2WD Model

-NGSU0032

NGSU0032S01

Camber Degree minute (Decimal degree)		Minimum	0°03' (0.05°)		
		Nominal	0°33' (0.55°)		
		Maximum	1°03' (1.05°)		
		Left and right difference	45' (0.75°) or less		
Caster Degree minute (Decimal degree)		Minimum	2°04' (2.07°)		
		Nominal	2°34' (2.57°)		
		Maximum	3°04' (3.07°)		
		Left and right difference	45' (0.75°) or less		
Kingpin inclination Degree minute (Decimal degree)		Minimum	10°23' (10.38°)		
		Nominal	10°53' (10.88°)		
		Maximum	11°23' (11.38°)		
Total toe-in	Distance (A - B) mm (in)	Radial tire	Minimum	3 (0.12)	
			Nominal	4 (0.16)	
			Maximum	5 (0.20)	
	Angle (left plus right) Degree minute (Decimal degree)	Radial tire	Minimum	15' (0.25°)	
			Nominal	20' (0.33°)	
			Maximum	25' (0.42°)	
Wheel turning angle	Full turn*2	Inside Degree minute (Decimal degree)		Except P265/70R15	P265/70R15
			Minimum	32°48' (32.80°)	30°48' (30.80°)
			Nominal	34°48' (34.80°)	32°48' (32.80°)
		Maximum	34°48' (34.80°)	32°48' (32.80°)	
		Outside Degree minute (Decimal degree)	Minimum	31°00' (31.00°)	28°42' (28.70°)
			Nominal	33°00' (33.00°)	30°42' (30.70°)
	Maximum		33°00' (33.00°)	30°42' (30.70°)	
	Vehicle posture	Lower arm pivot height (H) mm (in)	37.7 - 41.7 (1.484 - 1.642)		

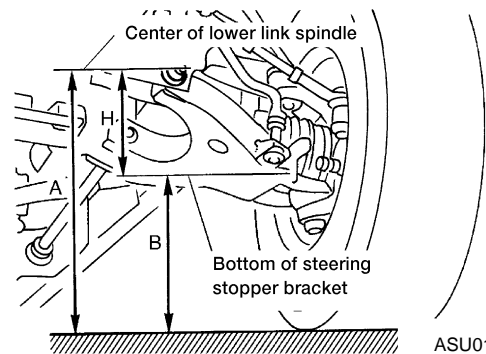

*1: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

*2: On power steering models, wheel turning force (at circumference of steering wheel) of 98 to 147 N (10 to 15 kg, 22 to 33 lb) with engine idle.


FRONT SUSPENSION

Service Data and Specifications (SDS) (Cont'd)

4WD Model

=NGSU0032S02

Camber Degree minute (Decimal degree)		Minimum	0°06' (0.10°)		GI	
		Nominal	0°36' (0.60°)			
		Maximum	1°06' (1.10°)		MA	
		Left and right difference	45' (0.75°) or less			
Caster Degree minute (Decimal degree)		Minimum	1°40' (1.67°)		EM	
		Nominal	2°10' (2.17°)			
		Maximum	2°40' (2.67°)		LC	
		Left and right difference	45' (0.75°) or less			
Kingpin inclination Degree minute (Decimal degree)		Minimum	10°18' (10.30°)		EC	
		Nominal	10°48' (10.80°)			
		Maximum	11°18' (11.30°)		FE	
Total toe-in	Distance (A – B) mm (in)	Radial tire	Minimum	3 (0.12)		
			Nominal	4 (0.16)		CL
			Maximum	5 (0.20)		
	Angle (left plus right) Degree minute (Decimal degree)	Radial tire	Minimum	15' (0.25°)		MT
			Nominal	20' (0.33°)		
			Maximum	25' (0.42°)		AT
Wheel turning angle	Full turn*2	Inside Degree minute (Decimal degree)	Except P265/70R15			
			Minimum	33°06' (33.10°)	31°00' (31.00°)	TF
			Nominal	35°06' (35.10°)	33°00' (33.00°)	
		Maximum	35°06' (35.10°)	33°00' (33.00°)	PD	
		Outside Degree minute (Decimal degree)	P265/70R15			
			Minimum	31°12' (31.20°)	29°00' (29.00°)	
Nominal	33°12' (33.20°)		31°00' (31.00°)	AX		
Maximum	33°12' (33.20°)	31°00' (31.00°)				
Vehicle posture	Lower arm pivot height (H) mm (in)		45.5 - 49.5 (1.791 - 1.949)		SU	

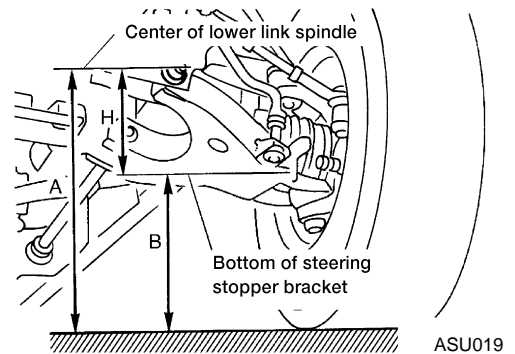


*1: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.

*2: On power steering models, wheel turning force (at circumference of steering wheel) of 98 to 147 N (10 to 15 kg, 22 to 33 lb) with engine idle.

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

REAR SUSPENSION

Precautions

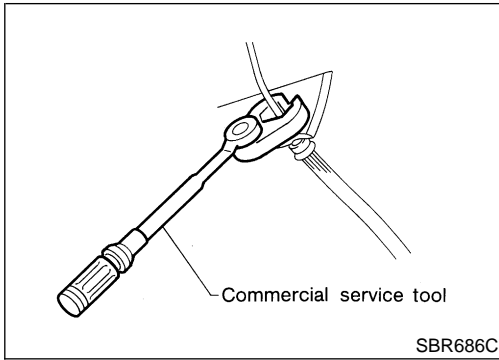


Precautions PRECAUTIONS

- When installing rubber parts, final tightening must be carried out under unladen condition* with tires on ground. NGSU0033
*: Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.
- Use flare nut wrench when removing and installing brake tubes.
- After installing removed suspension parts, check wheel alignment and adjust if necessary.
- Always torque brake lines when installing.

Preparation

COMMERCIAL SERVICE TOOLS

NGSU0035

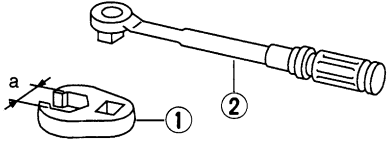Tool name	Description
1 Flare nut crowfoot 2 Torque wrench	 <p>Removing and installing each brake piping a: 10 mm (0.39 in)</p> <p>NT360</p>

REAR SUSPENSION

Noise, Vibration and Harshness (NVH) Troubleshooting

Noise, Vibration and Harshness (NVH) Troubleshooting

=NGSU0036


Refer to "Noise, Vibration and Harshness (NVH) Troubleshooting", SU-3.

Components

NGSU0037

2WD KA24DE MODEL

NGSU0037S03

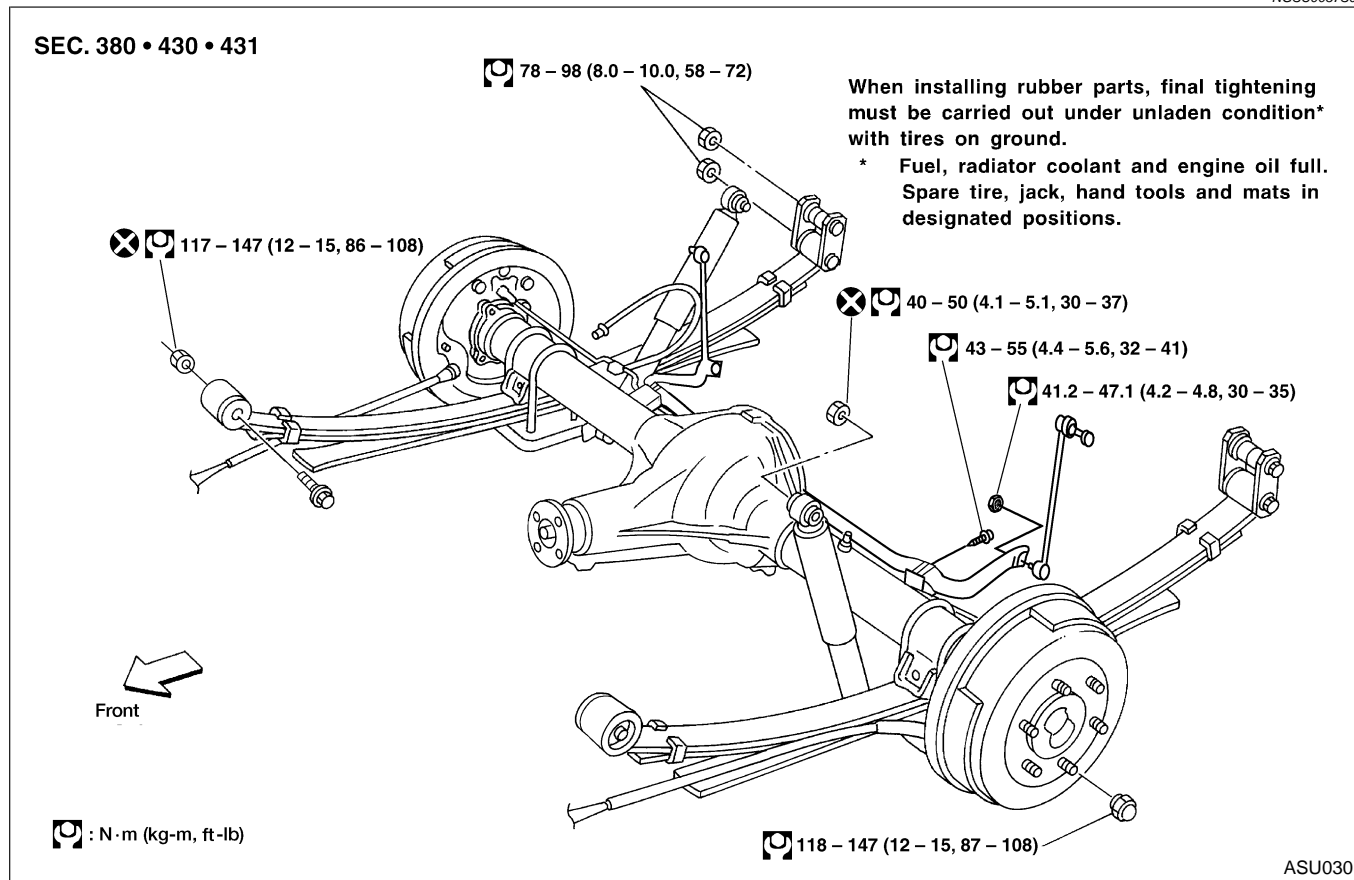

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX


REAR SUSPENSION

Components (Cont'd)

2WD VG33E AND VG33ER MODELS

NGSU0037S04

SEC. 380 • 430 • 431

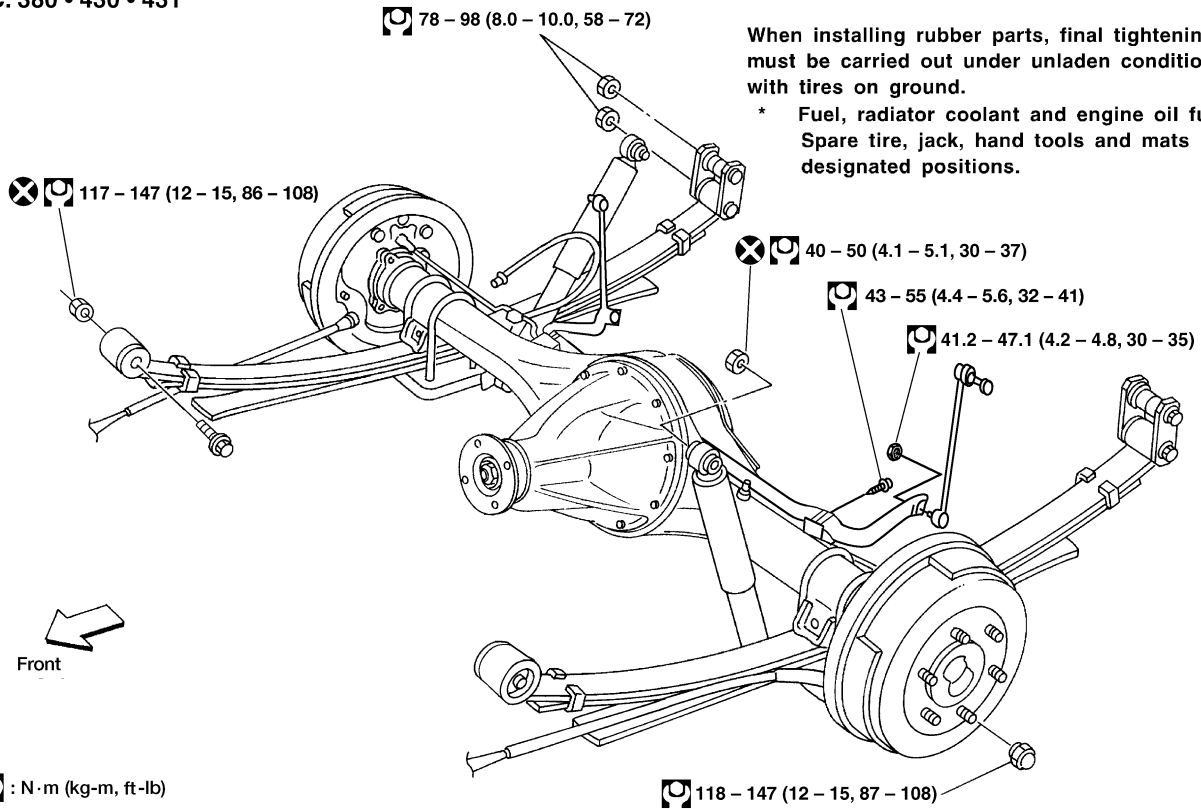



ASU038

REAR SUSPENSION

Components (Cont'd)

4WD VG33E AND VG33ER MODELS

NGSU0037S05

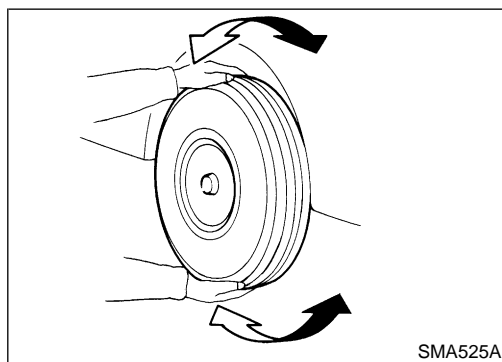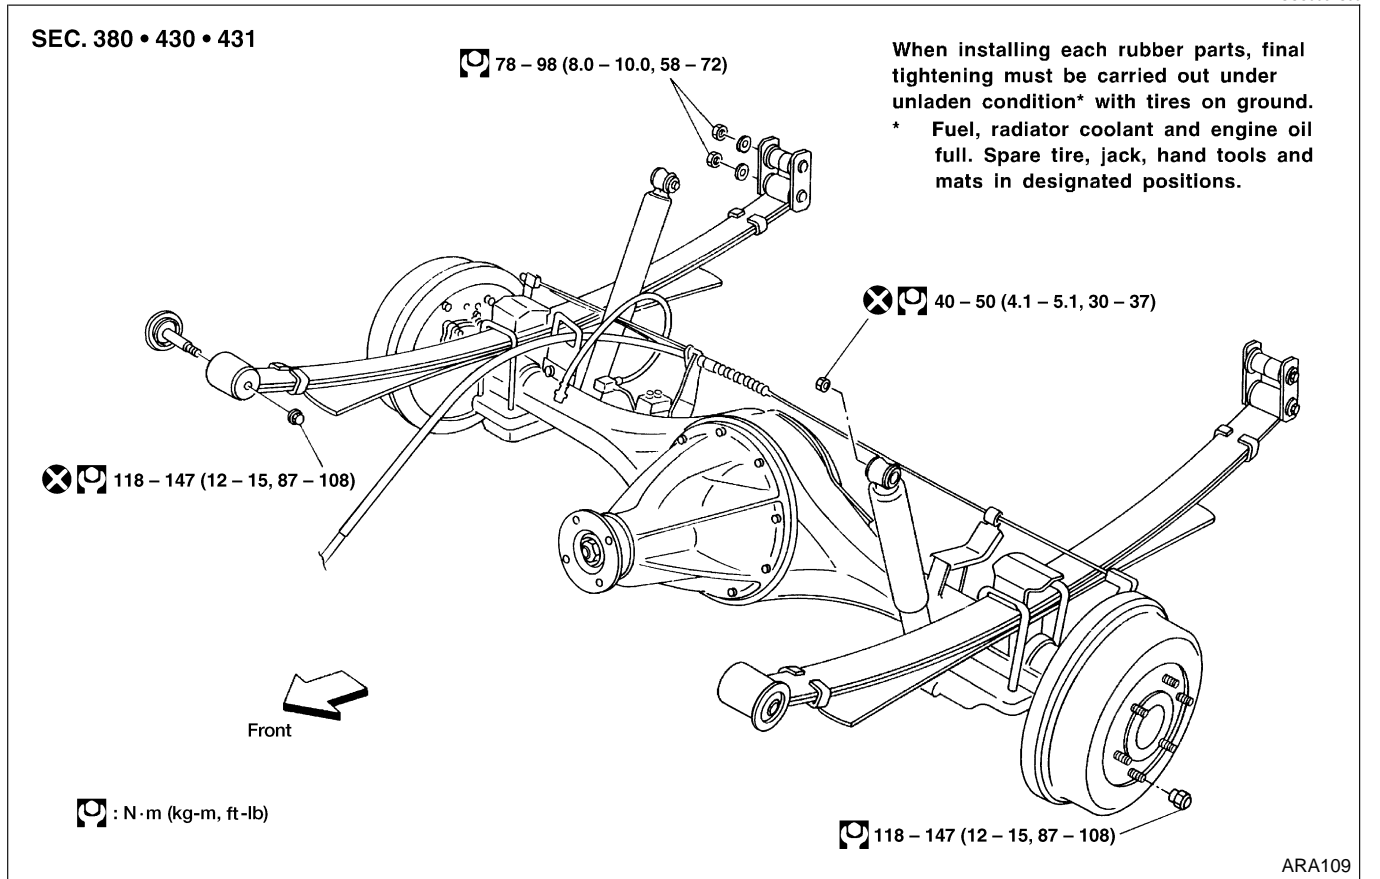


On-vehicle Service REAR SUSPENSION PARTS

NGSU0038

Check rear suspension parts for excessive play, wear and damage.


- Shake each rear wheel to check for excessive play.
- Retighten all nuts and bolts to the specified torque.
☞ : Refer to "REMOVAL AND INSTALLATION", SU-24.

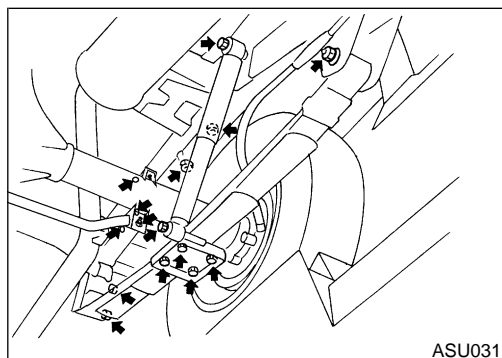

GI
MA
EM
LC
EC
FE
CL
MT
AT
TF
PD
AX
SU
BR
ST
RS
BT
HA
SC
EL
IDX

REAR SUSPENSION



On-vehicle Service (Cont'd)

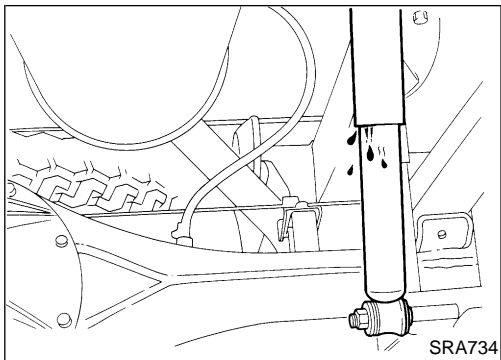

- Check shock absorber for oil leakage and other damage.
- Check shock absorber bushing for excessive wear and other damage.

Removal and Installation

NGSU0039

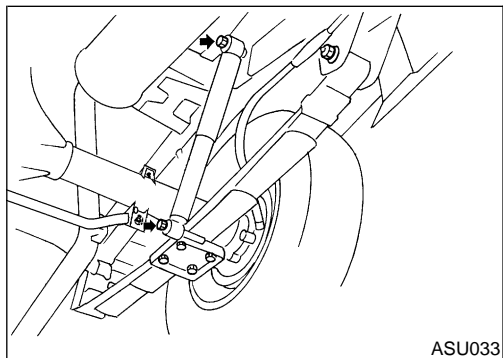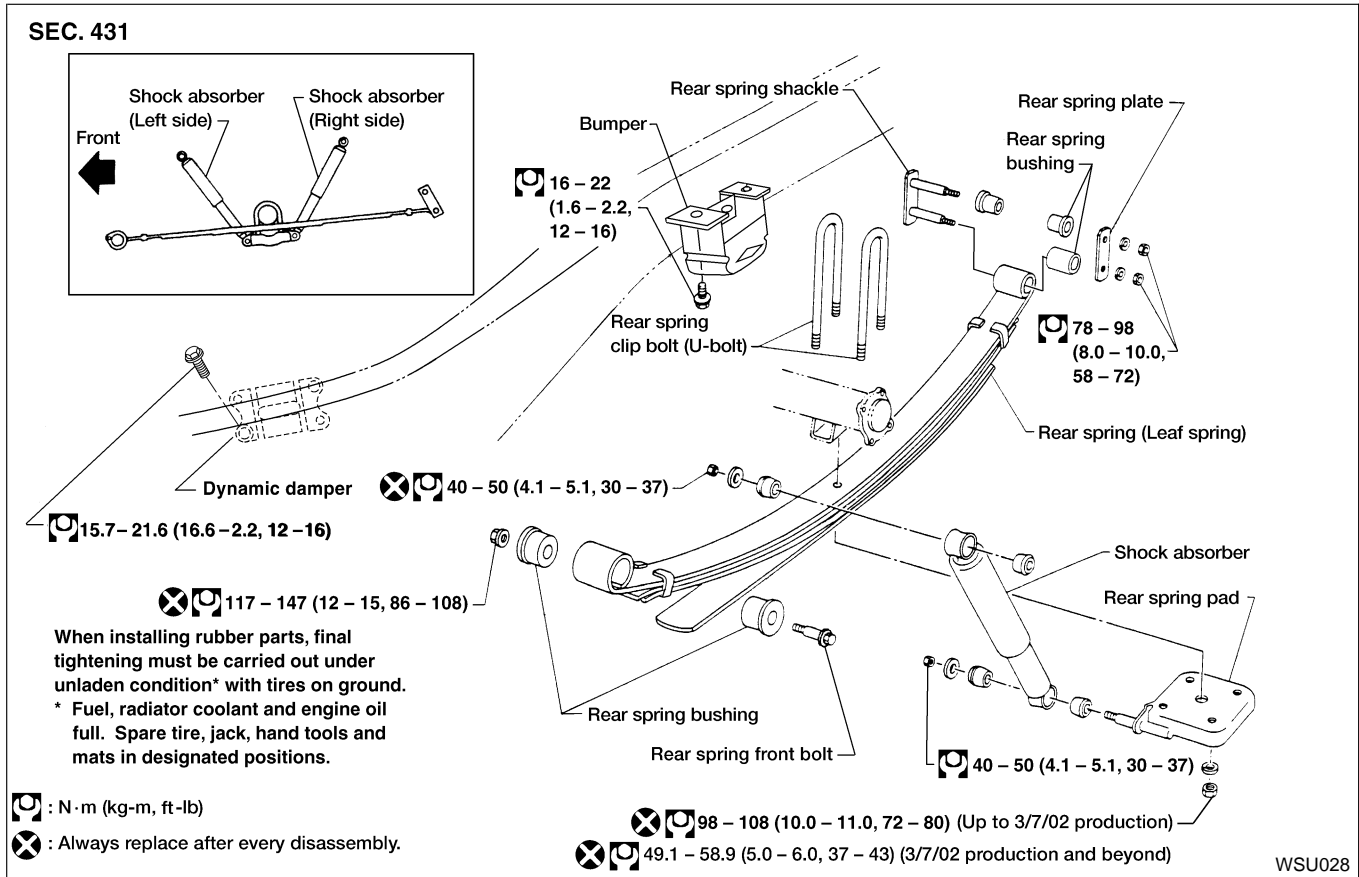

Shock Absorber REMOVAL AND INSTALLATION

NGSU0040

1. Remove shock absorber by disconnecting upper and lower end.
2. Install in reverse order of removal.

INSPECTION

NGSU0041


- If oil leakage, cracks and deformation occurs, replace shock absorber assembly.
- If rubber bushings are cracked and deformed, replace rubber bushings.

GI

MA

EM

LC

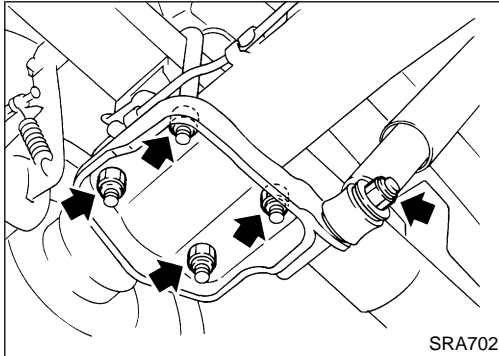

Leaf Spring REMOVAL

NGSU0042


1. Disconnect shock absorber lower end, and remove U-bolts.

EC

FE

CL

MT

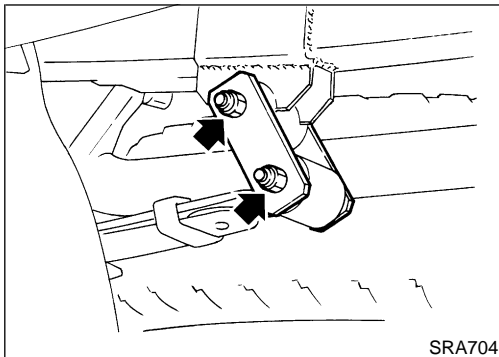


2. Remove the spring shackle.

AT

TF

PD

AX

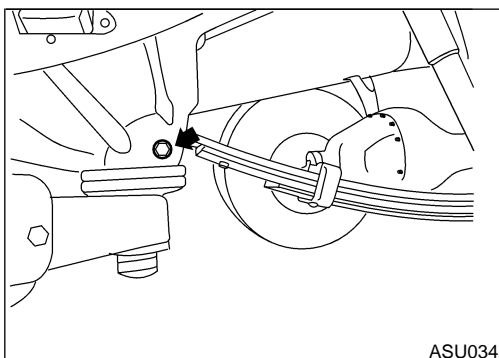


3. Remove the front pin.
4. Remove leaf spring.

SU

BR

ST

RS

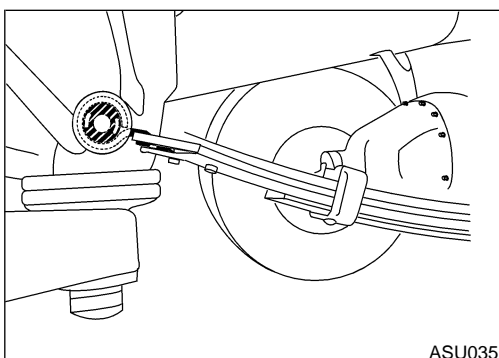

INSPECTION

NGSU0043

- Check leaf spring for cracks. Replace if necessary.
- Check front bracket and pin, shackle, U-bolts and spring pad for wear, cracks, straightness and damaged threads. Replace if necessary.
- Check all bushings for deformation and cracks. Replace if necessary.
(4WD models: Rear spring front bushing)
Make sure that front bushing is properly installed.

BT

HA





SC

EL

IDX

REAR SUSPENSION

Leaf Spring (Cont'd)

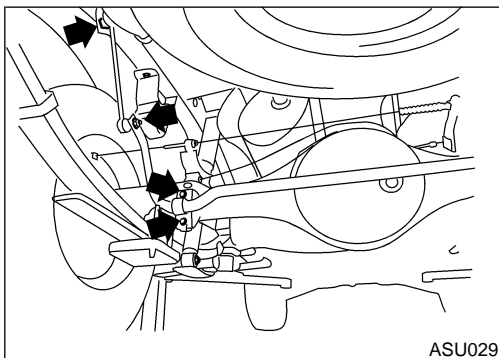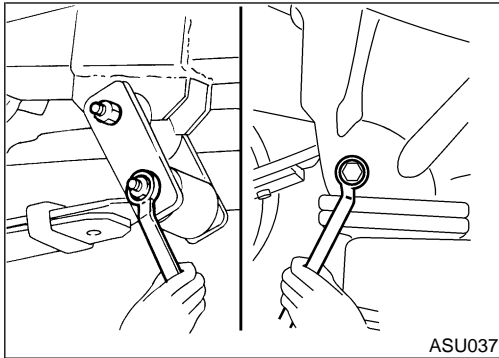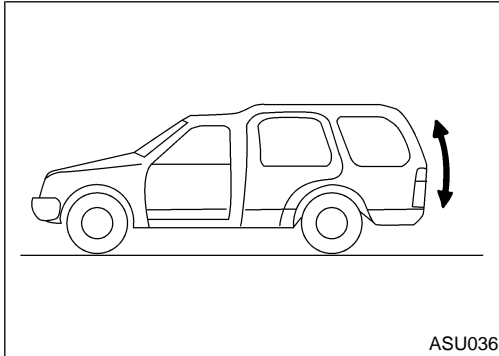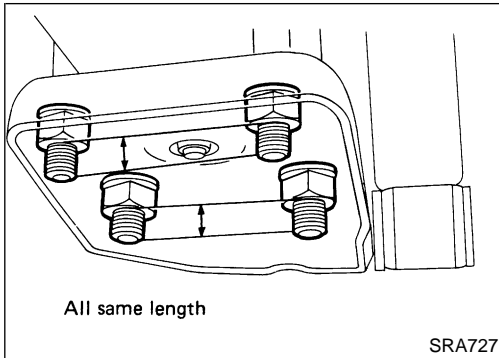

INSTALLATION

NGSU0044

1. Apply soapsuds to rubber bushing.
2. Install spring shackle and front pin, and finger tighten the nuts.
3. Install spring pad and nuts under leaf spring or axle case.
4. Tighten U-bolt mounting nuts diagonally. Refer to "Removal and Installation" SU-24.

Tighten U-bolts so that the lengths of all U-bolts under spring pad are the same.

5. Install shock absorber, and finger tighten the nuts.
6. Remove stands and bounce the vehicle to stabilize suspension. (Unladen)

7. Tighten spring shackle nuts, front pin nuts and shock absorber nuts. Refer to "Removal and Installation" SU-24.

When installing rubber parts, final tightening must be carried out under unladen condition* with tires on the ground.

*** Fuel, radiator coolant and engine oil full. Spare tire, jack, hand tools and mats in designated positions.**

Stabilizer Bar

REMOVAL

NGSU0046

Remove stabilizer bar connecting bolts and clamp bolts.

INSPECTION

NGSU0047

- Check stabilizer bar for twist and deformation.
- Check rubber bushing for cracks, wear and deterioration. Replace if necessary.

INSTALLATION

NGSU0048

Install in the reverse order of removal. Refer to "Components", SU-21.

REAR SUSPENSION

Service Data and Specifications (SDS)

Service Data and Specifications (SDS)

GENERAL SPECIFICATIONS (REAR)

NGSU0045

Suspension type	Rigid axle with semi-elliptic leaf spring
Shock absorber type	Double-acting hydraulic

GI

MA

EM

LC

EC

FE

CL

MT

AT

TF

PD

AX

SU

BR

ST

RS

BT

HA

SC

EL

IDX

NOTES